


CP1		CP2		CP3		CP4	
GND	54	GND	29	GND	-	GND	60
-	68	28	-	-	-	59	58
52	66	56	55	-	-	57	75
67	51	-	-	-	-	76	77
65	49	-	-	-	-	78	79
50	46	-	-	-	-	80	81
47	44	-	-	-	-	82	97
45	31	-	-	5	64	83	-
42	N.C.	-	N.C.	63	62	-	74
30	38	-	-	61	N.C.	73	N.C.
39	26	-	69	9	8	-	100
37	34	70	71	7	6	-	-
27	24	93	94	-	43	-	84
25	22	91	92	53	36	85	86
23	20	48	-	35	33	90	95
21	18	15	-	32	1	98	87
19	16	41	-	2	3	88	89
17	-	14	40	4	-	99	13
-	GND	GND	GND	96	GND	12	11
-	-	-	-	-	-	10	GND
RL78/D1A 100FB		RL78/D1A 100FB		RL78/D1A 100FB		RL78/D1A 100FB	

[使用方法]

[The way to use]

1. 本紙をプリントする^注
1. Print out this paper^{note}
2. 線に沿って切り取る
2. Cut off along the line
3. 図のようにはめ込む
3. Insert it as the figure

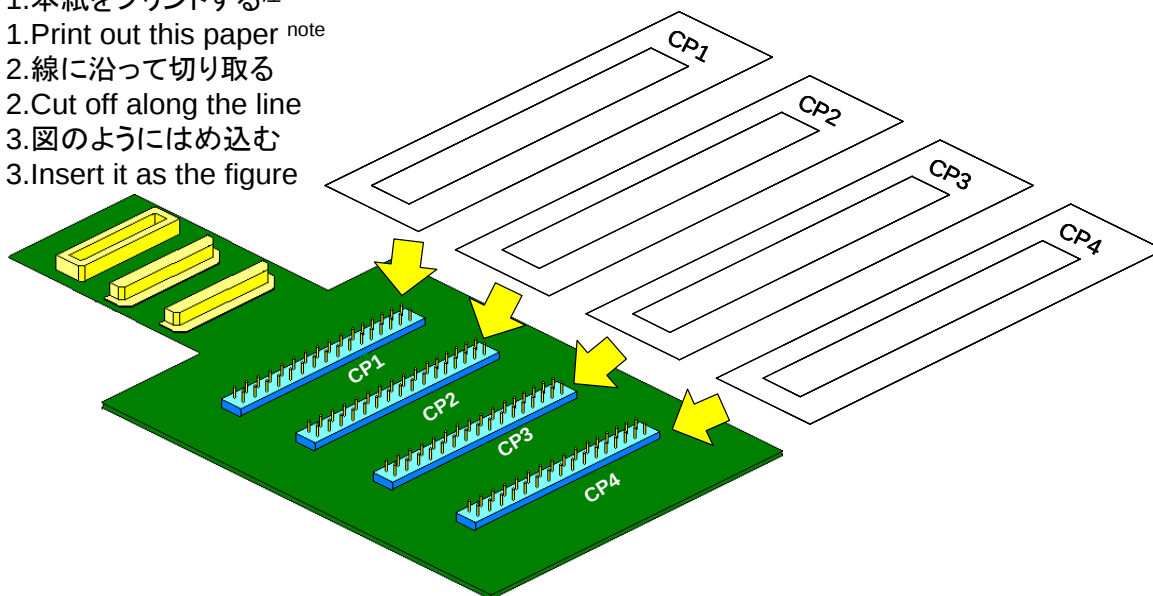

注 : プリンタにより若干寸法がずれることがあります。
 その際は印刷の倍率で調整してください。

Note : Sometimes, the size of this paper shifts a little by the printer.
 In this case, adjust for the magnification of printing.