

PEB383 Evaluation Board Release Notes (5V/Universal)

Thank you for purchasing the 5V/Universal version of the PEB383 evaluation board.

To assist with your testing of the board's features and functions, we have included a copy of the *PEB383 Evaluation Board User Manual*. For more PEB383 support resources, please see the Support section of the Tundra website.


If you have any technical questions about the PEB383 evaluation board, please submit a Technical Support Request at www.tundra.com/support/technical-support-request.

Important Instructions


1. This evaluation board is configured for 5V or Universal PCI plug-in cards only.

The plug-in cards can only be connected with their faceplate oriented the same way as the evaluation board faceplate (see the Correct diagram below). Since the evaluation board connectors are keyed for 3.3V cards, a keying adaptor is required when using a 5V keyed card.

Correct

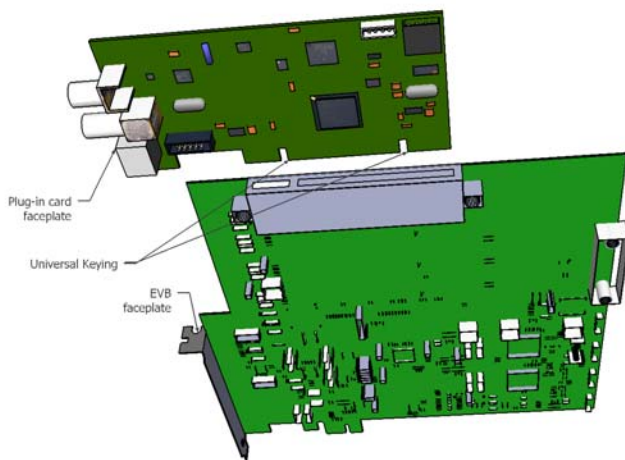


Correct

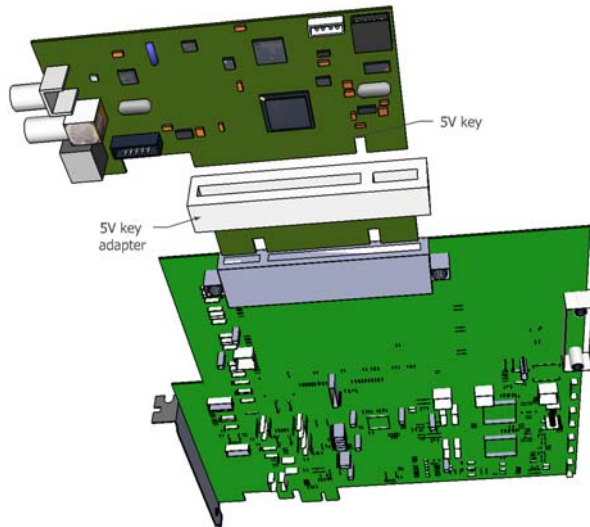

2. Do not use a 3.3V keyed card on the evaluation board. This board has been modified for 5V operation (see the following diagram).

If you need to use the evaluation board for 3.3V keyed plug-in cards, please submit a Technical Support Request at www.tundra.com/support/technical-support-request.

Incorrect

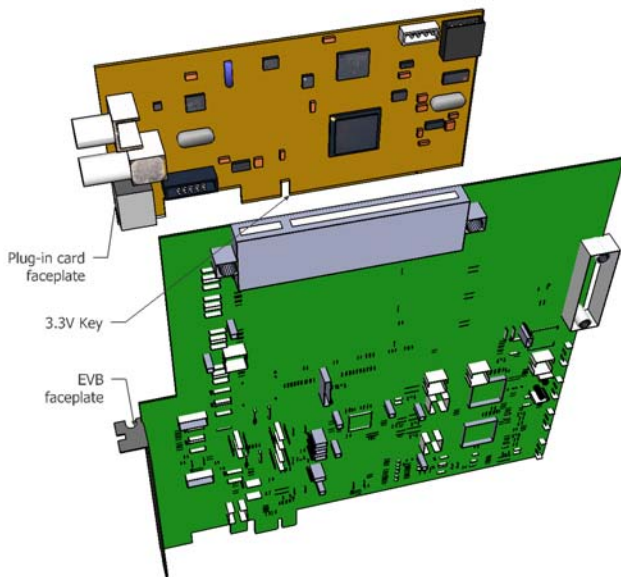

Incorrect

