







Voice RCU Dialog Semiconductor	The LEDS Indicate	the state of the RCU.
DA14585 RCU	RCU state	Indication
FE:CA:EF:BE:AD:DE -42dB	RCU connected	Green LED blinks once
	RCU disconnected	Green LED blinks 3 times
Run the app on your	RCU advertising	Red LED is on for 0.5 second every second
mobile and use the Scan	Battery low	Red LED blinks briefly every 2 seconds
	Motion active	Green LED blinks once every second
screen to select and connect your RCU.		(
□ * ₹ 44 90% □ 13:10 ■ Voice RCU Remote Control 1 2 3 4 5 6 7 8 9 PTT 0 MOUSE	E Voice RCU Remote Control	0% 0 13:10 ● ◆ ♥ 4 91% Voice RCU Dialog Semiconductor BACK ● Sound ● ↓ Sound ● ↓ Sound ● ↓ Configuration ● Information • • Disclaimer Disclaimer
Motion Mouse Off	Motion Mouse C	Dn
Press "#" on the RCU to to and KEYPAD mappings an		10USE 5 Invoke the app men and select "Sound" to test the audio functionality.

