

RA6T2 Group

MCK-RA6T2 User's Manual

Renesas RA Family RA6 Series

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (http://www.renesas.com).

Notice

- 1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
- 2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
- 3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
- 4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
- 5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
- 6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.
 - "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.
 - "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.

- 7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
- 8. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
- 9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
- 10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
- 11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
- 12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
- 13. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
- 14. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.
- (Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.
- (Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu, Koto-ku, Tokyo 135-0061, Japan

www.renesas.com

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit: www.renesas.com/contact/.

General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

- 1. Precaution against Electrostatic Discharge (ESD)
 - A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity. Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.
- 2. Processing at power-on
 - The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.
- 3. Input of signal during power-off state
 - Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.
- 4. Handling of unused pins
 - Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.
- 5. Clock signals
 - After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.
- 6. Voltage application waveform at input pin
 - Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between V_{IL} (Max.) and V_{IH} (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between V_{IL} (Max.) and V_{IH} (Min.).
- 7. Prohibition of access to reserved addresses
 - Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not guaranteed.
- 8. Differences between products
 - Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.



MCK-RA6T2 User's Manual

Contents

1.	Overview	5
1.1	Presupposition and precautions of this document	5
2.	Product Contents	6
3.	Product Order Information	6
4.	Hardware Configuration and Default Setting	7
4.1	Hardware configuration	7
4.2	Block diagram	11
4.3	Board Layout	12
4.4	Standoffs and Screws	13
4.5	Jumper pin setting	14
4.5.1	1 Inverter Board	14
4.5.2	2 CPU Board	15
4.5.3	3 Communication Board	17
4.6	Jumper resistor setting	17
4.6.1	1 CPU Board (only for RTK0EMA270C00002BJ)	17
4.7	Hardware Setup	
4.7.1	1 Board Connection	18
4.7.2	2 Power Supply	19
5.	Inverter Board Specification	21
5.1	Functions	21
5.1.1	1 Inverter control circuit block	21
5.1.2	2 Current detection circuit	22
5.1.3	3 Overcurrent detection circuit	23
5.1.4	4 Output voltage detection circuit	24
5.1.5	5 Voltage generation circuit	24
5.1.6	6 LED	25
5.1.7	7 Toggle switch and push switch	25
5.1.8	8 Variable resistor	25
5.2	Pin assignment	26
5.2.1	1 CPU board connector	26
5.2.2	2 Hall sensor signal input	28
5.2.3		
6.	CPU Board Specification	29
6.1	Functions	

6.1.1	Power supply	29
6.1.2	Onboard debugger	29
6.1.3	Inverter board connector	30
6.1.4	Serial communication	34
6.1.5	Reset circuit	34
6.1.6	LED	35
6.1.7	CAN Communication	35
6.1.8	SPI communication	36
7.	Communication Board Specification	37
7.1	Functions	37
7.1.1	Power supply	37
7.1.2	USB communication	37
7.1.3	Serial communication	37
8.	Regulatory information	38
9.	Design and Manufacture Information	38
10. '	Website and Support	38
Dovid	sion History	30

Figure of contents

Figure 2-1 Product contents	6
Figure 4-1 MCK-RA6T2 block diagram	11
Figure 4-2 Inverter Board	12
Figure 4-3 CPU Board	12
Figure 4-4 Communication board	13
Figure 4-5 Standoffs and Screws assembly	13
Figure 4-6 Default jumper pin setting	14
Figure 4-7 Default jumper pin setting of CPU board	16
Figure 4-8 Default jumper pin setting of communication board	17
Figure 4-9 Board connection	18
Figure 4-10 Power supply from DC jack	19
Figure 4-11 Power supply from terminal block	19
Figure 4-12 Power supply from USB connector	20
Figure 5-1 Illustration of inverter control circuit block	21
Figure 5-2 Current detection circuit	22
Figure 5-3 Overcurrent detection circuit	23
Figure 5-4 Output voltage detection circuit	24
Figure 6-1 Connection for CPU board and inverter board	34

Table of contents

Table 4-1 MCK-RA6T2 specification (1/4)	7
Table 4-2 MCK-RA6T2 specification (2/4)	8
Table 4-3 MCK-RA6T2 specification (3/4)	9
Table 4-4 MCK-RA6T2 specification (4/4)	10
Table 4-5 Jumper pin setting of inverter board	14
Table 4-6 Jumper pin setting of CPU board	15
Table 4-7 Jumper pin setting of communication board	17
Table 4-8 Jumper resistor setting	17
Table 4-9 Power supply and driving voltage generation	20
Table 5-1 Voltage generation	24
Table 5-2 LED	25
Table 5-3 Toggle switch and push switch	25
Table 5-4 Variable resistance specification	25
Table 5-5 CPU board connector (CN3)	26
Table 5-6 CPU board connector (CN4)	27
Table 5-7 Connector for hall sensor signal input (CN6) pin assignment	28
Table 5-8 Connector for encoder/inductive position sensor signal input (CN5) pin assignment	28
Table 6-1 1st Inverter board connector (CN4) pin assignment	30
Table 6-2 1st Inverter board connector (CN5) pin assignment	30
Table 6-3 2nd Inverter board connector (CN7) pin assignment	31
Table 6-4 2nd Inverter board connector (CN6) pin assignment	31
Table 6-5 1st Inverter board connector (CN4) pin assignment	32
Table 6-6 1st Inverter board connector (CN5) pin assignment	32
Table 6-7 2nd Inverter board connector (CN7) pin assignment	33
Table 6-8 2nd Inverter board connector (CN6) pin assignment	33
Table 6-9 SCI connector (CN10) pin assignment	34
Table 6-10 LED pin assignment 1	35
Table 6-11 LED pin assignment 2	35
Table 6-12 CAN communication pin assignment (CN8)	35
Table 6-13 SPI communication pin assignment (CN9)	36
Table 7-1 SCI connector (CN5) pin assignment	37
Table 7-2 SCI connector (CN4) pin assignment	37

1. Overview

MCK-RA6T2 is a motor control evaluation kit. By using this product, motor control with RA6T2 can be performed easily.

MCK-RA6T2 has characteristics shown below.

- (1) Supports Brushless DC motor.
- (2) Supports 1-/2-/3-shunt current detection.
- (3) Supports Motor Control Development Support Tool (Renesas Motor Workbench).
- (4) Provides overcurrent protection function using overcurrent detection circuit.

There are two versions of the MCK-RA6T2 (Version 1 and Version 2), each with a different circuit diagram and terminal configuration. The model names for each are as follows:

Version 1 Model: RTK0EMA270S00020BJ Version 2 Model: RTK0EMA270S00021BJ

1.1 Presupposition and precautions of this document

- 1. Experience of using tools: This document assumes that the user has used terminal emulation program of Integrated Development Environment (IDE) such as e² studio before.
- 2. Knowledge about the development subject: This document assumes that the user has a basic knowledge to modify the sample project regarding MCU and embedded system.
- 3. Before using this product, wear an antistatic wrist strap. If you touch this product with static charge on your body, a device failure may occur, or operation may become unstable
- 4. All screen shots provided in this document is for reference. Actual screen displays may differ depending on the software and development tool version which you use.

2. Product Contents

This kit consists of the following parts.

- 1. Inverter Board (RTK0EM0000B12020BJ) x1
- 2. CPU Board (Version 1: RTK0EMA270C00000BJ)

(Version 2 : RTK0EMA270C00002BJ) x1

- 3. Communication Board (RTK0EMXC90Z00000BJ) x1
- 4. Brushless DC Motor (R42BLD30L3) x1
- 5. Communication Cable x1
- 6. USB Cable x2
- 7. Screw x12
- 8. Standoff x12

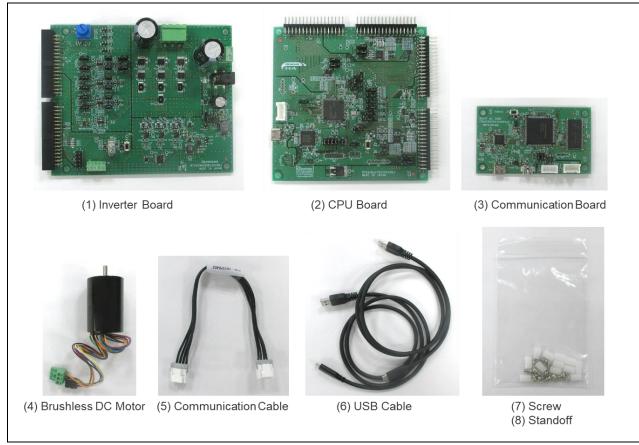


Figure 2-1 Product contents

RENESAS

3. Product Order Information

Product number to order MCK-RA6T2: Version 1: RTK0EMA270S00020BJ Version 2: RTK0EMA270S00021BJ

4. Hardware Configuration and Default Setting

4.1 Hardware configuration

MCK-RA6T2 consists of the inverter board, the CPU board and the communication board. Specifications as a kit and for the relevant boards are listed below.

Table 4-1 MCK-RA6T2 specification (1/4)

Item	Specification		
Kit product name	MCK-RA6T2		
Kit product No.			
	Version 2 : RTK0EMA270S00021BJ		
Kit configuration	Inverter Board	RTK0EM0000B12020BJ	
	CPU Board	Version 1 : RTK0EMA270C00000BJ	
		Version 2 : RTK0EMA270C00002BJ	
	Communication Board	RTK0EMXC90Z00000BJ	
	Brushless DC Motor	R42BLD30L3 (MOONS')	
		Rated voltage : 36[V]	
		Rated current : 1.67[A]	
Isolation	Inverter board - CPU board : Non-isola	ted	
	Communication board - CPU board : Is	olated	
External view			
	Note: The actual p	roduct may differ from this photo.	
Board size	Inverter board : 133 mm (W) x 109 mm	<u> </u>	
CPU board : 109 mm (W) x 109 mm (L)			
	Communication board : 89 mm (W) x 5		
Operating temperature	Room temperature		
Operating humidity	No condensation allowed	No condensation allowed	
EMC Directive	EN61326-1 : 2021		
LIVIC DIFECTIVE	LIN01320-1.2021		
LIVIO DIFECTIVE	EMI : Class A		

Table 4-2 MCK-RA6T2 specification (2/4)

Item	Specification		
Product name	Inverter board		
Board part No.	RTK0EM0000B12020BJ		
External view	Note: The actual product may differ from this photo.		
Power supply	2 ways • From DC jack or Power supply connector (DC 12~48V) *1		
Rated output current	From CPU board (DC 5V) AC 10 A (RMS value) *2		
Switching frequency	20 kHz (typical)		
Current detection method	1- / 2- / 3-shunt detection		
Shunt resistor	10 mohm		
PWM logic	Lower arm, Upper arm : Positive logic		
DC bus voltage detection (bus voltage detection)	Detection by resistance division (0 V ~ 48 V)		
3-phase output voltage detection	Detection by resistance division (0 V ~ 48 V)		
3-phase output current detection	With shunt resistor		
Overcurrent detection function	21.4 A for AVCC=3.3V 32.4 A for AVCC=5.0V		
Supporting sensor	HALL sensor, Encoder		
Connector	CPU card connector Motor connector Power input connector HALL sensor connector Encoder/Inductive position sensor connector		
Switch	Toggle switch x1 Push switch x1		
LED	LED x3 Power LED		

^{*1} The polarity of the DC jack (J1) is center positive. The compatible plug has an inner diameter of 2.1 mm and an outer diameter of 5.5 mm.

^{*2} It is strongly recommended to attach a heat sink to the MOSFET when using over 5A.

Table 4-3 MCK-RA6T2 specification (3/4)

item		Specification	
Product name		CPU Board	
Board part No.		Version 1 : RTK0EMA270C00000BJ	
		Version 2 : RTK0EMA270C00002BJ	
Compatible inve	erter board	RTK0EM0000B12020BJ	
External view		Note: The actual product may differ from this photo.	
Mounted MCU	Product group	RA6T2 group	
Wounted Woo	Product No.	R7FA6T2BD3CFP	
	CPU maximum	240MHz	
	operating frequency		
	Bit count	32 bit	
	Package / Pin number	LFQFP / 100 pin	
	RAM	64K byte	
MCU input clock		10MHz (Generate with external crystal oscillator)	
Power supply		DC 5V	
		Select one way automatically from the below	
		Power is supplied from compatible inverter board	
		Power is supplied from USB connector	
Debugger		J-Link On-Board (Onboard debugger circuit)	
Connector		Inverter board connector (2 sets)	
		USB connector for J-Link On-Board	
		SCI connector for Renesas Motor Workbench communication	
		Through hole for CAN communication	
		Through hole for SPI communication	
		20 pin through hole for Arm debugger	
Switch		MCU reset switch	
LED		User-controllable LED x6, Power LED x1	

Table 4-4 MCK-RA6T2 specification (4/4)

item		Specification	
Product name		Communication Board	
Board part No.		RTK0EMXC90Z00000BJ	
External view		S mm a series of the series of	
	In	Note: The actual product may differ from this photo.	
Mounted MCU	Product group	RX72N group	
	Product No.	R5F572NNDDFB	
	CPU maximum	240MHz	
	operating frequency		
	Bit count	32 bit	
	Package / Pin number	LFQFP / 144 pin	
	RAM	1M byte	
MCU input cloc	k	20MHz (Generate with external crystal oscillator)	
Power supply		DC 5V	
		Power is supplied from USB connector	
Connector		USB Type-C connector for PC	
		SCI connector for CPU board	
		USB miniB connector (not available for users)	
Isolation		Between SCI connector and MCU	
		Isolation device	
		Si8622BC-B-IS (Skyworks Solutions Inc.)	
		or ISO7421FED (Texas Instruments)	
Switch		MCU external reset switch	

4.2 Block diagram

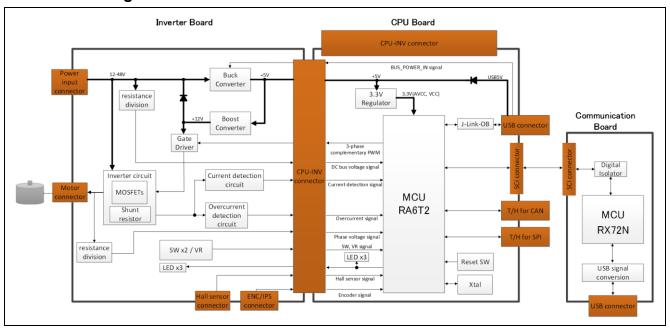


Figure 4-1 MCK-RA6T2 block diagram

4.3 Board Layout

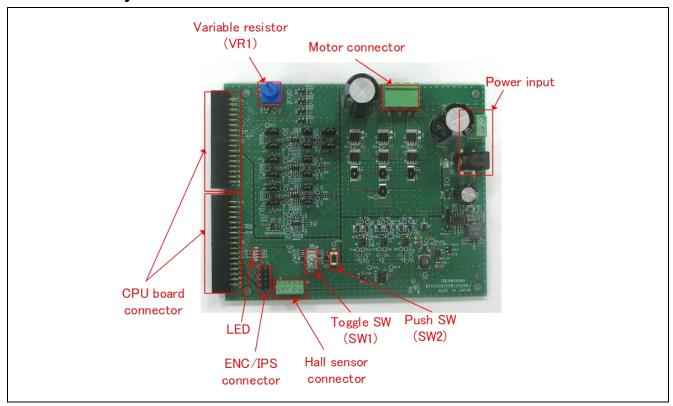


Figure 4-2 Inverter Board

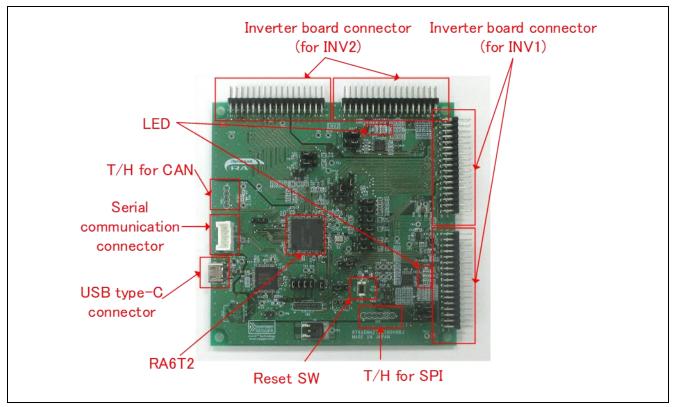


Figure 4-3 CPU Board

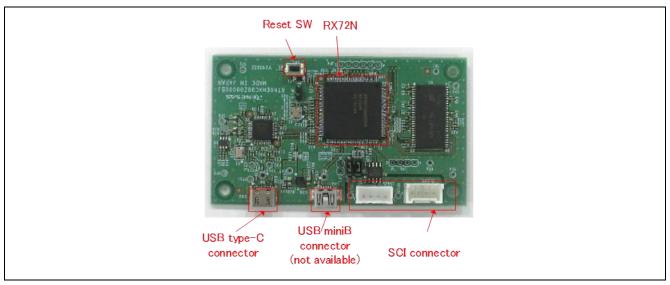


Figure 4-4 Communication board

4.4 Standoffs and Screws

Before using this product, assemble the included standoffs and screws as shown below.

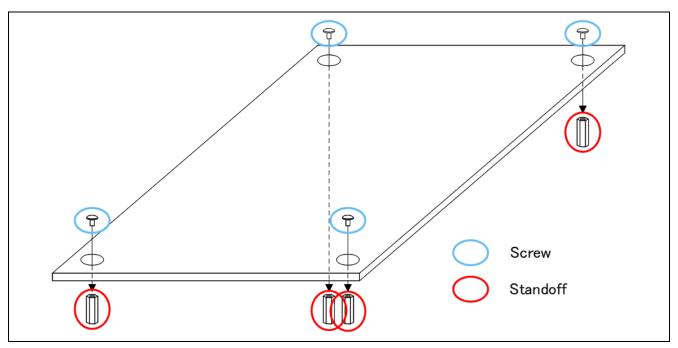


Figure 4-5 Standoffs and Screws assembly

4.5 Jumper pin setting

4.5.1 Inverter Board

Default settings and functions of the jumper pins (JP1~JP15) are as follows.

Table 4-5 Jumper pin setting of inverter board

Jumper pin	Default setting	Function
JP1	2-3pin short	1-2pin short : Disable 5V regulator 2-3pin short : Enable 5V regulator
JP2, JP3, JP4, JP6, JP12, JP13	2-3pin short	1-2pin short : Disable current detection amplifiers 2-3pin short : Enable current detection amplifiers
JP5, JP7, JP9, JP10, JP14, JP15	1-2pin short	1-2pin short : Current detection amplifier gain = 20 1-2pin open : Current detection amplifier gain = 10
JP8, JP11	1-2pin short	1-2pin short : 2-/3-shunt current detection 2-3pin short : 1-shunt current detection

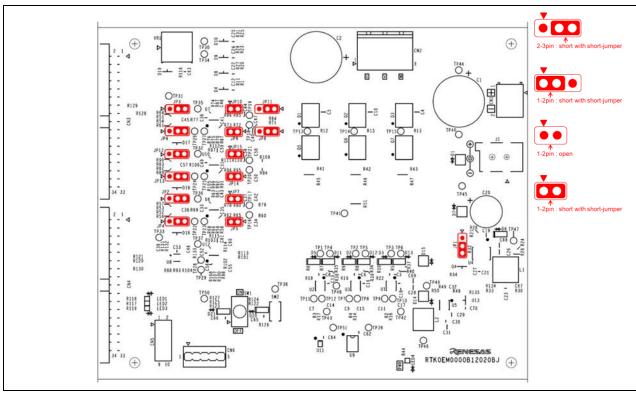


Figure 4-6 Default jumper pin setting

4.5.2 CPU Board

Default settings and functions of the jumper pins (JP1~JP25) are as follows.

Table 4-6 Jumper pin setting of CPU board

Jumper pin	Default setting	Function
JP1	2-3pin short	1-2pin short : INV1 IPS CSN_IRQN 2-3pin short : INV1 Encoder Z
JP2	2-3pin short	1-2pin short : INV2 PFC current detection (for HV INV) 2-3pin short : INV2 IPS A
JP3	2-3pin short	1-2pin short : INV2 AC input voltage detection (for HV INV) 2-3pin short : INV2 IPS A#/Encoder A#
JP4	1-2pin short	1-2pin short : INV1 HALL U 2-3pin short : INV1 IPS A
JP5	1-2pin short	1-2pin short : INV1 HALL V 2-3pin short : INV1 IPS A#/Encoder A#
JP6	1-2pin short	1-2pin short : INV2 V-phase voltage detection 2-3pin short : INV2 IPS B
JP7	2-3pin short	1-2pin short : INV1 PFC current detection (for HV INV) 2-3pin short : INV1 IPS B
JP8	2-3pin short	1-2pin short : INV2 IPS CSN_IRQN 2-3pin short : INV2 Encoder Z
JP9	1-2pin short	1-2pin short : INV2 W-phase voltage detection 2-3pin short : INV2 IPS B#/Encoder B#
JP10	2-3pin short	1-2pin short : INV1 AC input voltage detection (for HV INV) 2-3pin short : INV1 IPS B#/Encoder B#
JP11	1-2pin open 3-4pin open 5-6pin open	
JP12	1-2pin open	1-2pin short : Disable J-Link On-Board 1-2pin open : Enable J-Link On-Board
JP13	1-2pin short 3-4pin short 5-6pin short 7-8pin short	
JP14	1-2pin short	1-2pin short : Enable RA6T2 2-3pin short : Disable RA6T2
JP15, JP16	1-2pin open	1-2pin short : Enable pull-up for I2C 1-2pin open : Disable pull-up for I2C
JP17	2-3pin short	1-2pin short : INV1 IPS A 2-3pin short : INV1 Encoder A
JP18	2-3pin short	1-2pin short : INV1 IPS B 2-3pin short : INV1 Encoder B
JP19	1-2pin short	1-2pin short : INV1 W-phase voltage detection 2-3pin short : INV1 W-phase current detection (PGAVSS)
JP20	1-2pin short	1-2pin short : INV1 V-phase voltage detection 2-3pin short : INV1 V-phase current detection (PGAVSS)
JP21	2-3pin short	1-2pin short : INV2 IPS A 2-3pin short : INV2 Encoder A
JP22	2-3pin short	1-2pin short : INV2 IPS B 2-3pin short : INV2 Encoder B
JP23, JP24, JP25	1-2pin open	1-2pin open : Enable LPF for current sensing 1-2pin short : Disable LPF for current sensing

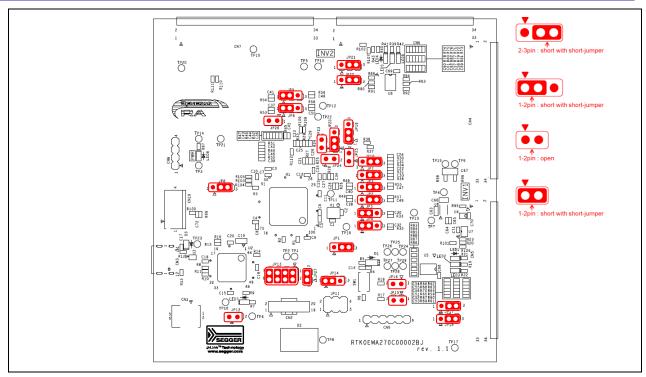


Figure 4-7 Default jumper pin setting of CPU board

4.5.3 Communication Board

Default settings and functions of the jumper pins (JP1~JP3) are as follows.

Table 4-7 Jumper pin setting of communication board

Jumper pin	Default setting	Function
JP1	1-2pin open	1-2pin short : Enable pull-up for MD port (Not available) 1-2pin open : Enable pull-up for MD port
JP2	1-2pin short	1-2pin short : Disable pull-up for GPIO(PC6) 1-2pin open : Enable pull-up for GPIO(PC6)
JP3	1-2pin short	1-2pin short : Disable pull-up for GPIO(PC5) 1-2pin open : Enable pull-up for GPIO(PC5)

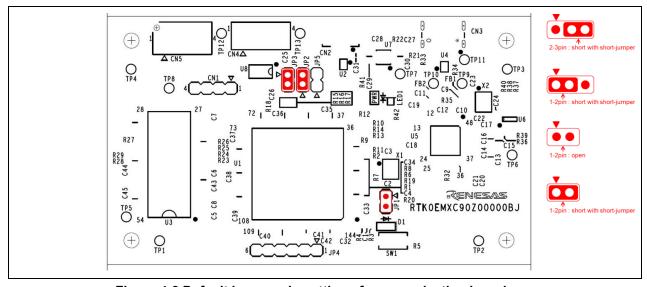


Figure 4-8 Default jumper pin setting of communication board

4.6 Jumper resistor setting

4.6.1 CPU Board (only for RTK0EMA270C00002BJ)

Default settings and functions of the jumper resistor are as follows. This setting can only be changed for the RTK0EMA270C00002BJ.

Table 4-8 Jumper resistor setting

Function	Default setting	Setting (function in use)
PFCPWM/CAN select (INV1,2)	R104,R105 mount, R3,R103 unmount	R104,R105 mount ,R3,R103 unmount: INV1 INV2 PFCPWM2 R104,R105 unmount,R3,R103 mount : CAN (CN8)
VU/HVtemp select (INV1)	R108 mount, R109 unmount	R108 mount ,R109 unmount: INV1 VU R108 unmount,R109 mount : INV1 HVtemp
VU/HVtemp select (INV2)	R110 mount, R111 unmount	R110 mount ,R111 unmount: INV2 VU R110 unmount,R111 mount : INV2 HVtemp
OC#/PFCERROR connect(INV1)	R106 unmount	R106 unmount: OC#, PFCERROR not connect R106 mount : OC#, PFCERROR connect
OC#/PFCERROR connect (INV2)	R107 unmount	R107 unmount: OC#, PFCERROR not connect R107 mount : OC#, PFCERROR connect
IU/IU(differential input) select (INV2)	R112 unmount (JP4 1-2pin short)	R112 unmount,JP4 1-2pin short: IU(single ended input AN006) R112 unmount,JP4 2-3pin short: IU(single ended input AN006) R112 mount ,JP4 Open : IU(differential input AN018-PGAVSS3)

4.7 Hardware Setup

4.7.1 Board Connection

When using this product for motor control evaluation, connect the boards as shown in Figure 4-9. Note that the connector between the CPU board and the inverter board is a tight fit, so be careful not to bend the pins when connecting or disconnecting.

Please refer to 4.7.2 for the power supply method. In Figure 4-9, the power is supplied from the AC adapter. The RA6T2 CPU board supports a maximum of two-motor control and can be connected as shown in Fig. 6.1 shown later, if you prepare an additional inverter board and motor.

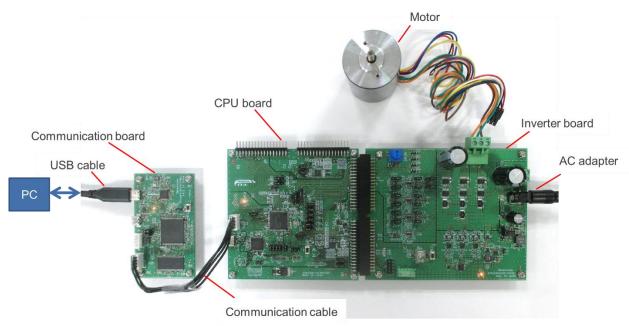


Figure 4-9 Board connection

4.7.2 Power Supply

There are three ways to supply power to the CPU board and inverter board, and the power supply for the communication board is independent of the CPU board and inverter board and is supplied at 5V from the USB connector.

(1) From DC jack

Use an AC adapter or something similar to supply power from the DC jack (J1) on the inverter board. The compatible plug has an outer diameter of 5.5 mm, an inner diameter of 2.1 mm, and a polarity of center positive. The input voltage range is 12 to 48V.



Figure 4-10 Power supply from DC jack

(2) From terminal block

Supply power from the terminal block (CN1) of the inverter board using a DC stabilized power supply or the like. The polarity should follow the silk indication ("+", "-") on the board. The input voltage range is 12 to 48V.

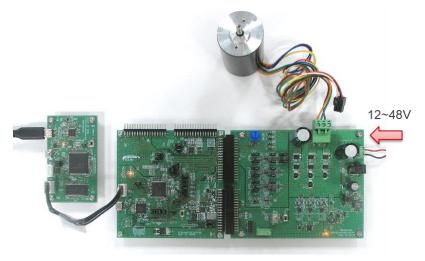


Figure 4-11 Power supply from terminal block

(3) From USB connector

5V power is supplied from the USB Type-C connector on the CPU board. Use a USB adapter capable of outputting 1A or more so that the motor can be driven sufficiently.

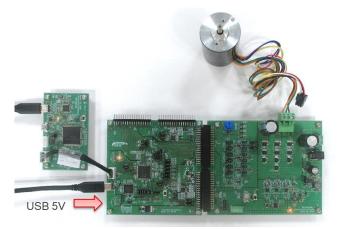


Figure 4-12 Power supply from USB connector

It is also possible to supply power from the USB connector on the CPU board and the DC jack or terminal block on the inverter board at the same time. In this case, the MCU drive voltage of 3.3V and the gate driver drive voltage are generated from the USB supply of 5V, while the motor drive voltage is supplied from the DC jack or terminal block. Please refer to Table 4-9 for the power supply conditions and each voltage generation.

Table 4-9 Power supply and driving voltage generation

			Case 1	Case 2	Case 3
Power supply	CPU board	USB 5V *1	✓	-	✓
condition	Inverter board	External power (12~48V) *2	-	✓	✓
	CPU board	I/O (VCC, 3.3V)	[A]	[B]	[A]
		BUS (5V)	[A]	[B]	[A]
	Inverter board	I/O (VCC, 3.3V)	[A]	[B]	[A]
Power source for		BUS (5V)	[A]	[B]	[A]
		Gate driver (11.4V)	[A]	[B]	[A]
		Motor drive (11.4V or 12~48V)	[A]	[B]	[B]

Power supply condition:

- √: supplied
- : not supplied

Driving voltage generation

- [A]: generated from USB 5V on CPU board
- [B]: generated from external power on inverter board

^{*1} Motor drive current of 1A or more may be required for each inverter board.

^{*2} When connecting two inverter boards to the CPU board and also inputting an external power supply to INV2, it is necessary to supply an external power supply (which can be different from INV2) to INV1 as well, or to supply USB 5V to the CPU board.

5. Inverter Board Specification

This section describes inverter board specification.

5.1 Functions

5.1.1 Inverter control circuit block

The inverter board has the inverter control circuit block which controls the motor with 6 POWER MOSFETs. POWER MOSFET is controlled with 6-phase timer output of MCU.

The inverter control circuit block outputs DC bus voltage, U, V and W phase voltage and shunt current to the connectors (CN3, CN4). By inputting these output voltages to A/D of MCU on the CPU card, analog values of the voltage and the shunt current of each phase can be measured. Refer to 5.1.2 and 5.1.4 for the current detection and the voltage detection, respectively. Also function to detect overcurrent from the input current is available. Refer to 5.1.3 for details.

An illustration of the inverter control circuit block is shown in Figure 5-1. In the actual circuit, some inputs on the A/D pins are via voltage dividers and offsets and so on. Refer to the circuit diagram for details.

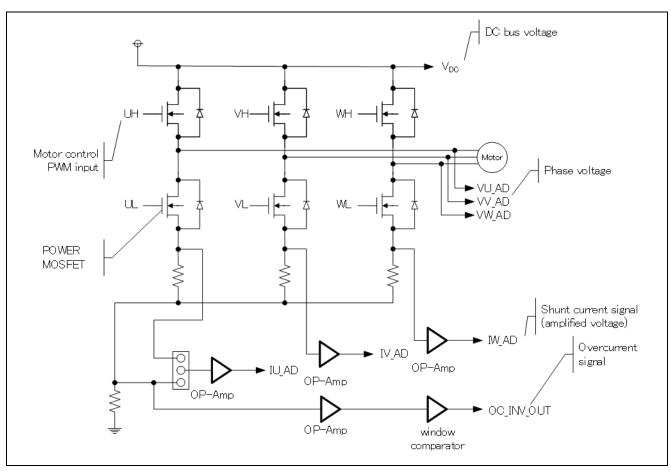


Figure 5-1 Illustration of inverter control circuit block

5.1.2 Current detection circuit

The inverter board has the current detection circuit to measure the current at the U, V and W phase. The current detection circuit uses shunt resistor at each phase. Voltage drop caused by the current flowing through the shunt resistor is amplified by the current detection amplifier to output. The default gain of the current detection amplifier is set to 20x, but the gain can be changed to 10x by setting JP5, JP7, JP9, JP10, JP14, and JP15 to open. The relationship between the current lin flowing through the shunt resistor and the voltage Vout output from the current detection circuit is shown in equations (1) and (2). In addition, by switching JP8 and JP11 to 2-3 pin short circuit, 1-shunt current detection can be supported.

Amplifier gain $10x : Vout[V] = Iin[A] \times Rs[\Omega] \times 10 + AVCC/2$ (1)

Amplifier gain 20x : $Vout[V] = Iin[A] \times Rs[\Omega] \times 20 + AVCC/2$ (2)

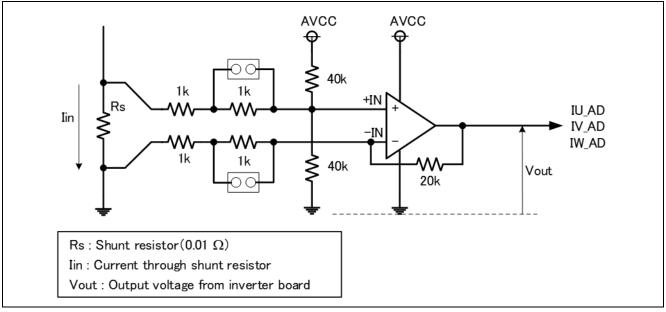


Figure 5-2 Current detection circuit

5.1.3 Overcurrent detection circuit

Detect the overcurrent from the input current, using the overcurrent detection circuit illustrated in Figure 5-3. If the current value is within the range of threshold, OC_INV_OUT is HIGH, and this changes to LOW if overcurrent is detected. Therefore, you can protect the board and motor by monitoring the over current detection signal and setting PWM signals for gate driver to LOW or Hi-Z if the over current detection signal changes to LOW. As the value of the shunt resistor Rs is 10 mohm, the threshold current for over current detection is 21.4A for AVCC=3.3V and 32.4A for AVCC=5.0V, respectively.

The overcurrent detection circuit does not directly protect the board and motor. Protect them by performing appropriate processing with equipment such as microcontroller.

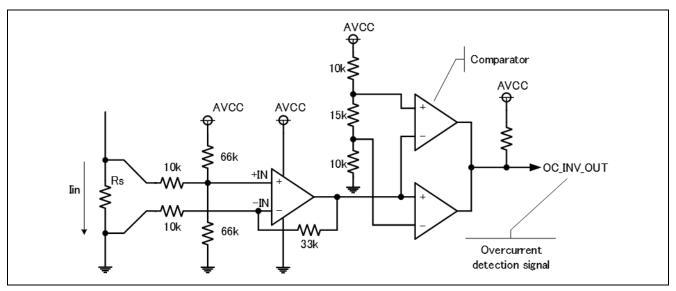


Figure 5-3 Overcurrent detection circuit

5.1.4 Output voltage detection circuit

The inverter board has the circuit that inputs bus voltage and three-phase output voltage (U, V and W phase) into the AD pin of the microcontroller through resistive voltage divider. Relation between the three-phase output voltage, the bus voltage and the detection voltage is described by the below equation (3).

$$Vout[V] = \frac{470}{10 \times 10^3 + 470} \times Vin[V] \quad (3)$$

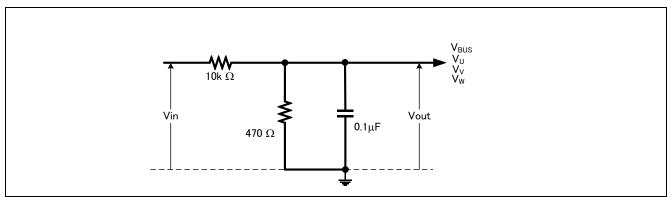


Figure 5-4 Output voltage detection circuit

5.1.5 Voltage generation circuit

On the inverter board, the gate driver voltage ("+12V" in the schematic) is generated from the 5V power supply ("+5V" in the schematic) with the boost converter. If 5V is not supplied from the CPU board, the buck converter on the inverter board generates 5V from the voltage input (12 to 48V) from the DC jack or terminal block.

Table 5-1 Voltage generation

Item	Input voltage [V]	Output voltage (TYP.) [V]	Output current (Max) [A]
5V generation	12~48	5	0.6
Gate driver voltage generation	5	11.4	-

5.1.6 LED

The inverter board has three LEDs which the user can control. The LED ON/OFF is controlled by the pin state.

Table 5-2 LED

Connector pin		LED1	LED2	LED3
CN4-18	HIGH	OFF	-	-
	LOW	ON	-	-
CN4-19	HIGH	-	OFF	-
	LOW	-	ON	-
CN4-20	HIGH	-		OFF
	LOW	-	-	ON

5.1.7 Toggle switch and push switch

The inverter board has toggle switch (SW1) and push switch (SW2). The pin voltage is controlled by the state of them.

Table 5-3 Toggle switch and push switch

Connector pin		SW1	SW2
CN4-16	HIGH	ON	=
	LOW	OFF	-
CN4-17	HIGH	-	RELEASE
	LOW	-	PUSH

5.1.8 Variable resistor

The inverter board has a variable resistor (VR1). If turning the variable resistor clockwise, terminal voltage of the variable resistor (CN3-17) becomes low. If turning it counterclockwise, the voltage becomes high.

Table 5-4 Variable resistance specification

Item	Specification
Input voltage range	0~AVCC
Variable resistor range	0~10k Ω

5.2 Pin assignment

5.2.1 CPU board connector

Table 5-5 CPU board connector (CN3)

Pin No.	Output direction	Signal
1	-	SPARE1
2	-	AGND
3	To CPU	DC bus voltage detection
4	-	AGND
5	To CPU	U-phase current detection
6	To CPU	U-phase current detection (PGAVSS)
7	To CPU	V-phase current detection
8	To CPU	V-phase current detection (PGAVSS)
9	To CPU	W-phase current detection
10	To CPU	W-phase current detection (PGAVSS)
11	To CPU	U-phase voltage detection
12	To CPU	V-phase voltage detection
13	To CPU	W-phase voltage detection
14	-	AGND
15	To CPU	VPFC_AD
16	To CPU	IPFC_AD
17	To CPU	VR1
18	-	AGND
19	-	AVCC
20	-	AVCC
21	-	AGND
22	-	AGND
23	-	VCC
24	-	VCC
25	-	DGND
26	-	DGND
27	To INV	PWM U-phase (Lower)
28	-	DGND
29	To INV	PWM U-phase (Upper)
30	-	DGND
31	To INV	PWM V-phase (Lower)
32	-	DGND
33	To INV	PWM V-phase (Upper)
34	-	DGND

Table 5-6 CPU board connector (CN4)

Pin No.	Output direction	Signal
1	To INV	PWM W-phase (Lower)
2	-	DGND
3	To INV	PWM W-phase (Upper)
4	-	DGND
5	-	SPARE2
6	-	SPARE3
7	-	SPARE4
8	-	SPARE5
9	To INV	Bus power signal from CPU board
10	To CPU	Inverter connected signal
11	To CPU	Save interlock signal
12	To CPU	Over current detection
13	To CPU	OC_PFC_OUT
14	To INV	PWM_IN
15	To INV	RELAY_IN
16	To CPU	SW1
17	To CPU	SW2
18	To INV	LED1
19	To INV	LED2
20	To INV	LED3
21	To CPU	HALL U
22	To CPU	HALL V
23	To CPU	HALL W
24	To CPU	IPS_SIO_SDA
25	To CPU	IPS_SCK_SCL
26	To CPU	IPS_CSN_IRQN/Encoder Z
27	To CPU	IPS_A/ Encoder A
28	To CPU	IPS_A#/ Encoder A#
29	To CPU	IPS_B/ Encoder B#
30	To CPU	IPS_B#/ Encoder B#
31	-	GND
32	-	GND
33	-	+5V
34	-	+5V

5.2.2 Hall sensor signal input

This product has connector for hall sensor signal input. Pin assignment of it is listed in Table 5-7.

Table 5-7 Connector for hall sensor signal input (CN6) pin assignment

Pin No.	Pin Function
1	DGND
2	+5V
3	HALL_W
4	HALL_V
5	HALL_U

5.2.3 Encoder/Inductive position sensor signal input

This product has connector for encoder/inductive position sensor signal input. Pin assignment for them is listed in Table 5-8

Table 5-8 Connector for encoder/inductive position sensor signal input (CN5) pin assignment

Pin No.	Pin function
1	VCC
2	+5V
3	CSN_IRQN/ENC_Z
4	SIO_SDA
5	SCK_SCL
6	IPS_A/ENC_A
7	IPS_A#/ENC_A#
8	IPS_B/ENC_B
9	IPS_B#/ENC_B#
10	DGND

6. CPU Board Specification

This section describes the specification of the CPU Board.

6.1 Functions

6.1.1 Power supply

When not connected to the inverter board, power should be supplied from the USB connector(CN3). When connecting to the inverter board, power supply from the USB connector or from the inverter board will be automatically selected. USB power supply has priority.

6.1.2 Onboard debugger

This product has the onboard debugger circuit, J-Link On-Board (hereinafter called "J-Link-OB"). You can write a program (firmware) of RA6T2 with it. When you write a program, connect the CPU board to PC with USB cable. J-Link-OB operates as debugger equivalent to J-Link. If connecting from Integrated Development Environment or flash programming tool (e.g. J-Flash Lite by SEGGER), set the type of debugger (tool) to "J-Link".

6.1.3 Inverter board connector

Two inverter boards can be connected to this board: the 1st inverter board is connected with CN4 and CN5, and the 2nd inverter board is connected with CN6 and CN7. The pin assignments of the connectors are shown in Table 6-1 to Table 6-8.

(1) The pin assignments (CN4 to CN7) for Version 1 (RTK0EMA270C00000BJ) are shown below.

Table 6-1 1st Inverter board connector (CN4) pin assignment

Pin No	Pin Function	RA6T2 Pin	Pin No	Pin Function	RA6T2 Pin
1	SPARE1	-	2	AGND	- (AVSS)
3	VPN	PA06/AN006	4	AGND	- (AVSS)
5	IU	PA04/AN004	6	PGAVSSU	PA05/PGAVSS2
7	IV	PA02/AN002	8	PGAVSSV	PA03/AN003
9	IW	PA00/AN000	10	PGAVSSW	PA01/AN001
11	VU	PA07/AN007	12	VV	PA03/AN003
13	VW	PA01/AN001	14	AGND	- (AVSS)
15	VAC	PB10/AN028	16	IPFC	PE15/AN027
17	VR	PB00/AN008	18	AGND	- (AVSS)
19	AVCC	- (AVCC)	20	AVCC	- (AVCC)
21	AGND	- (AVSS)	22	AGND	- (AVSS)
23	VCC	- (VCC)	24	VCC	- (VCC)
25	GND	- (VSS)	26	GND	- (VSS)
27	UN	PB05/GTIOC4B_B	28	GND	- (VSS)
29	UP	PB04/GTIOC4A_B	30	GND	- (VSS)
31	VN	PB07/GTIOC5B_B	32	GND	- (VSS)
33	VP	PB06/GTIOC5A_B	34	GND	- (VSS)

Table 6-2 1st Inverter board connector (CN5) pin assignment

Pin No	Pin Function	RA6T2 Pin	Pin No	Pin Function	RA6T2 Pin
1	WN	PB09/GTIOC6B_B	2	GND	- (VSS)
3	WP	PB08/GTIOC6A_B	4	GND	- (VSS)
5	SPARE2	-	6	SPARE3	-
7	SPARE4	-	8	SPARE5	-
9	BUS_POWER_IN	-	10	INV_CONNECTED	-
11	SAFE_LOCK	-	12	OC#	PC13/GTETRGD
13	PFCERROR	P001/IRQ2	14	PFCPWM	PB14/GTIOC1A
15	VRL	PE01	16	SW1	PD04
17	SW2	PD07	18	LED1	PD01
19	LED2	PD02	20	LED3	PD03
21	HALL_U	PC04/IRQ10_B	22	HALL_V	PC05/IRQ11_B
23	HALL_W	PB01/IRQ1_B	24	MISO0/SIO_SDA	PC11/MISOB_B
25	SCK0/SCK_SCL	PC10	26	CSN_IRQN/ENC_Z	PE00/GTETRGA
27	IPS_A	PC04	28	IPS_A#/ENC_A#	PC05/IRQ11_B
	ENC_A	PC14/GTIOC3A_D			
29	IPS_B	PE15	30	IPS_B#//ENC_B#	PB10/AN028
	ENC_B	PC15/GTIOC3B_D			
31	GND	- (VSS)	32	GND	- (VSS)
33	+5V	-	34	+5V	-

Table 6-3 2nd Inverter board connector (CN7) pin assignment

Pin No	Pin Function	RA6T2 Pin	Pin No	Pin Function	RA6T2 Pin
1	SPARE1	-	2	AGND	- (AVSS)
3	VPN	PE13/AN025	4	AGND	- (AVSS)
5	IU	PB02/AN018	6	PGAVSSU	P002/PGAVSS3
7	IV	PE08/AN020	8	PGAVSSV	-
9	IW	PE09/AN021	10	PGAVSSW	-
11	VU	PE10/AN022	12	VV	PE11/AN023
13	VW	PE12/AN024	14	AGND	- (AVSS)
15	VAC	PC03/AN015	16	IPFC	PC02/AN014
17	VR	PE14/AN026	18	AGND	- (AVSS)
19	AVCC	- (AVCC)	20	AVCC	- (AVCC)
21	AGND	- (AVSS)	22	AGND	- (AVSS)
23	VCC	- (VCC)	24	VCC	- (VCC)
25	GND	- (VSS)	26	GND	- (VSS)
27	UN	PC09/GTIOC7B_A	28	GND	- (VSS)
29	UP	PC08/GTIOC7A_A	30	GND	- (VSS)
31	VN	PA09/GTIOC8B_A	32	GND	- (VSS)
33	VP	PA08/GTIOC8A_A	34	GND	- (VSS)

Table 6-4 2nd Inverter board connector (CN6) pin assignment

Pin No	Pin Function	RA6T2 Pin	Pin No	Pin Function	RA6T2 Pin
1	WN	PA11/GTIOC9B_A	2	GND	- (VSS)
3	WP	PA10/GTIOC9A_A	4	GND	- (VSS)
5	SPARE2	-	6	SPARE3	-
7	SPARE4	-	8	SPARE5	-
9	BUS_POWER_IN	-	10	INV_CONNECTED	-
11	SAFE_LOCK	-	12	OC#	PA12/GTETRGB
13	PFCERROR	P000/IRQ0	14	PFCPWM	PB15/GTIOC1B_A
15	VRL	PD11	16	SW1	PC00
17	SW2	PC01	18	LED1	PD15
19	LED2	PC06	20	LED3	PC07
21	HALL_U	PD12/IRQ12_B	22	HALL_V	PD13/IRQ13_B
23	HALL_W	PD14/IRQ13_B	24	MISO0/SIO_SDA	PC11/MISOB_B
25	SCK0/SCK_SCL	PC10	26	CSN_IRQN/ENC_Z	PD10/GTETRGC
27	IPS_A	PC02	28	IPS_A#/ENC_A#	PC03/AN015
	ENC_A	PD08/GTIOC2A_A	PD08/GTIOC2A_A		
29	IPS_B	PE11 30		IPS_B#//ENC_B#	PE12/AN024
	ENC_B	PD09/GTIOC2B_A			
31	GND	- (VSS)	32	GND	- (VSS)
33	+5V	-	34	+5V	-

(2) The pin assignments (CN4 to CN7) for Version 2 (RTK0EMA270C00002BJ) are shown below.

Table 6-5 1st Inverter board connector (CN4) pin assignment

Pin No	Pin Function	RA6T2 Pin	Pin No	Pin Function	RA6T2 Pin
1	HVtemp	PE15/AN027(*)	2	AGND	- (AVSS)
3	VPN	PA07/AN007	4	AGND	- (AVSS)
5	IU	PA04/AN004	6	PGAVSSU	PA05/PGAVSS2
7	IV	PA02/AN002	8	PGAVSSV	PA03/AN003(*)
9	IW	PA00/AN000	10	PGAVSSW	PA01/AN001(*)
11	VU	PE15/AN027	12	VV	PA03/AN003
13	VW	PA01/AN001	14	AGND	- (AVSS)
15	VAC	PB01/AN009(*)	16	IPFC	PC05/AN011(*)
17	VR	P000/AN016	18	AGND	- (AVSS)
19	AVCC	- (AVCC)	20	AVCC	- (AVCC)
21	AGND	- (AVSS)	22	AGND	- (AVSS)
23	VCC	- (VCC)	24	VCC	- (VCC)
25	GND	- (VSS)	26	GND	- (VSS)
27	UN	PB05/GTIOC4B_B	28	GND	- (VSS)
29	UP	PB04/GTIOC4A_B	30	GND	- (VSS)
31	VN	PB07/GTIOC5B_B	32	GND	- (VSS)
33	VP	PB06/GTIOC5A_B	34	GND	- (VSS)

^(*) Exclusively assigned by jumper pin and jumper register setting

Table 6-6 1st Inverter board connector (CN5) pin assignment

Pin No	Pin Function	RA6T2 Pin	Pin No	Pin Function	RA6T2 Pin
1	WN	PB09/GTIOC6B_B	2	GND	- (VSS)
3	WP	PB08/GTIOC6A_B	4	GND	- (VSS)
5	SPARE2	-	6	PFCPWM2_1	PB12/GTIOC0A
7	SPARE4	-	8	SPARE5	-
9	BUS_POWER_IN	-	10	INV_CONNECTED	-
11	SAFE_LOCK	-	12	OC#	PC13/GTETRGD
13	PFCERROR	P001/IRQ2	14	PFCPWM	PB14/GTIOC1A
15	VRL	PE01	16	SW1	PD04
17	SW2	PD07	18	LED1	PD01
19	LED2	PD02	20	LED3	PD03
21	HALL_U	PB02/IRQ15DS	22	HALL_V	PC00/IRQ11DS
23	HALL_W	PB10/IRQ10DS	24	MISO0/SIO_SDA	PC11/MISOB_B
25	SCK0/SCK_SCL	PC10	26	CSN_IRQN/ENC_Z	PE00/GTETRGA
27	IPS_A	PB02/AN018(*)	28	IPS_A#/ENC_A#	PC00/AN012/IRQ11D
	ENC_A	PC14/GTIOC3A_D			S(*)
29	IPS_B	PC05/AN011(*)	30	IPS_B#/ENC_B#	PB01/AN009
	ENC_B	PC15/GTIOC3B_D			
31	GND	- (VSS)	32	GND	- (VSS)
33	+5V	-	34	+5V	-

^(*) Exclusively assigned by jumper pin and jumper register setting

Table 6-7 2nd Inverter board connector (CN7) pin assignment

Pin No	Pin Function	RA6T2 Pin	Pin No	Pin Function	RA6T2 Pin
1	HVtemp	PE10/AN022(*)	2	AGND	- (AVSS)
3	VPN	PE13/AN025	4	AGND	- (AVSS)
5	IU	PA06/AN006	6	PGAVSSU	P002/PGAVSS3
7	IV	PB00/AN008	8	PGAVSSV	-
9	IW	PC04/AN010	10	PGAVSSW	-
11	VU	PE10/AN022	12	VV	PE11/AN023
13	VW	PE12/AN024	14	AGND	- (AVSS)
15	VAC	PC03/AN015(*)	16	IPFC	PC02/AN014(*)
17	VR	PC01/AN013	18	AGND	- (AVSS)
19	AVCC	- (AVCC)	20	AVCC	- (AVCC)
21	AGND	- (AVSS)	22	AGND	- (AVSS)
23	VCC	- (VCC)	24	VCC	- (VCC)
25	GND	- (VSS)	26	GND	- (VSS)
27	UN	PC09/GTIOC7B_A	28	GND	- (VSS)
29	UP	PC08/GTIOC7A_A	30	GND	- (VSS)
31	VN	PA09/GTIOC8B_A	32	GND	- (VSS)
33	VP	PA08/GTIOC8A_A	34	GND	- (VSS)

(*) Exclusively assigned by jumper pin and jumper register setting

Table 6-8 2nd Inverter board connector (CN6) pin assignment

Pin No	Pin Function	RA6T2 Pin	Pin No	Pin Function	RA6T2 Pin
1	WN	PA11/GTIOC9B_A	2	GND	- (VSS)
3	WP	PA10/GTIOC9A_A	4	GND	- (VSS)
5	SPARE2	-	6	PFCPWM2_2	PB13/GTIOC0B
7	SPARE4	-	8	SPARE5	-
9	BUS_POWER_IN	-	10	INV_CONNECTED	-
11	SAFE_LOCK	-	12	OC#	PA12/GTETRGB
13	PFCERROR	PC07/IRQ7	14	PFCPWM1_2	PB15/GTIOC1B_A
15	VRL	PD11	16	SW1	PE08
17	SW2	PE09	18	LED1	PD15
19	LED2	PC06	20	LED3	PE14
21	HALL_U	PD12/IRQ12_B	22	HALL_V	PD13/IRQ13_B
23	HALL_W	PD14/IRQ13_B	24	MISO0/SIO_SDA	PC11/MISOB_B
25	SCK0/SCK_SCL	PC10	26	CSN_IRQN/ENC_Z	PD10/GTETRGC
27	IPS_A	PC02/AN014(*)	28	IPS_A#/ENC_A#	PC03/AN015
	ENC_A	PD08/GTIOC2A_A	PD08/GTIOC2A_A		
29	IPS_B	PE11/AN023(*)	30	IPS_B#/ENC_B#	PE12/AN024
	ENC_B	PD09/GTIOC2B_A			
31	GND	- (VSS)	32	GND	- (VSS)
33	+5V	-	34	+5V	-

(*) Exclusively assigned by jumper pin and jumper register setting

The connection for CPU board and inverter board is shown in Figure 6-1. Please refer to 4.7.2 for the power supply method.



(1) CPU Board + INV Board (connected with CN4, CN5)

(2) CPU Board + INV Board (connected with CN6, CN7)

(3) CPU Board + INV Board x2

Figure 6-1 Connection for CPU board and inverter board

6.1.4 Serial communication

For serial communication using Renesas Motor Workbench, the CPU board has SCI connector. Pin assignment for SCI connector is listed in Table 6-9.

Table 6-9 SCI connector (CN10) pin assignment

Pin No.	Pin Function	RA6T2 Connection Pin
1	GND	-
2	MCU RXD	PD06/RXD9_A
3	MCU TXD	PD05/TXD9_A
4	VCC	-

6.1.5 Reset circuit

This product has a reset circuit to enable power-on reset or external reset on MCU. Push the tact switch (SW1) to externally reset MCU.

6.1.6 LED

This product has six LEDs, so that they can be used for program debug and the system. LED switches on when output from the corresponding port is "LOW" and switches off when output is "HIGH". Pin assignment for corresponding LEDs is listed in Table 6-10, Table 6-11.

(1) The pin assignments LED of Version 1 (RTK0EMA270C00000BJ) are shown below.

Table 6-10 LED pin assignment 1

R/	A6T2 port	LED1	LED2	LED3	LED4	LED5	LED6
PD01	Output HIGH	OFF	-	-	-	-	-
	Output LOW	ON	-	-	-	-	-
PD02	Output HIGH	-	OFF	-	-	-	-
	Output LOW	-	ON	-	-	-	-
PD03	Output HIGH	-	-	OFF	-	-	-
	Output LOW	-	-	ON	-	-	-
PD15	Output HIGH	-	-	-	OFF	-	-
	Output LOW	-	-	-	ON	-	-
PC06	Output HIGH	-	-	-	-	OFF	-
	Output LOW	-	-	-	-	ON	-
PC07	Output HIGH	-	-	-	-	-	OFF
	Output LOW	-	-	-	-	-	ON

(2) The pin assignments LED of Version 2 (RTK0EMA270C00002BJ) are shown below.

Table 6-11 LED pin assignment 2

R/	A6T2 port	LED1	LED2	LED3	LED4	LED5	LED6
PD01	Output HIGH	OFF	-	-	-	-	-
	Output LOW	ON	-	-	-	-	-
PD02	Output HIGH	-	OFF	-	-	-	-
	Output LOW	-	ON	-	-	-	-
PD03	Output HIGH	-	-	OFF	-	-	-
	Output LOW	-	-	ON	-	-	-
PD15	Output HIGH	-	-	-	OFF	-	-
	Output LOW	-	-	-	ON	-	-
PC06	Output HIGH	-	-	-	-	OFF	-
	Output LOW	-	-	-	-	ON	-
PE14	Output HIGH	-	-	-	-	-	OFF
	Output LOW	-	-	-	-	-	ON

6.1.7 CAN Communication

This product has through holes for CAN communication. Note that CAN driver is not equipped. When using CAN communication with RTK0EMA270C00002BJ, install jumper resistors R3 and R103 and remove R104 and R105. Pin assignment for CAN communication connector is listed in Table 6-12.

Table 6-12 CAN communication pin assignment (CN8)

Pin No	RA6T2 pin
1	VCC
2	PB13/CTX0_E
3	PB12/CRX0_E
4	VSS

6.1.8 SPI communication

This product has through holes for SPI communication. Pin Assignment for SPI communication connector is listed in Table 6-13.

Table 6-13 SPI communication pin assignment (CN9)

Pin No	RA6T2 pin
1	PD00_SS0
2	PC12_MOSI0
3	PC11_MISO0/SIO_SDA
4	PC10_SCK0/SCK_SCL
5	VSS
6	VCC

7. Communication Board Specification

This section describes the specification of the communication board.

7.1 Functions

7.1.1 Power supply

Power of this product is supplied at 5V from USB connector.

7.1.2 USB communication

This product is equipped with a USB Type-C connector for communication with a PC when using Renesas Motor Workbench, etc.

7.1.3 Serial communication

This board has two SCI connectors for serial communication with the target MCU when using Renesas Motor Workbench, etc. The pin assignments are shown in Table 7-1 and Table 7-2. When using the communication cable bundled with this product, use CN5.

The serial communication connector and the MCU (RX72N) are connected via a digital isolator, so the communication board and the CPU board with the target MCU are isolated.

Table 7-1 SCI connector (CN5) pin assignment

Pin No.	Function	Note
1	VCC	
2	RXD	Connect to TXD of target MCU
3	TXD	Connect to RXD of target MCU
4	GND	

Table 7-2 SCI connector (CN4) pin assignment

Pin No.	Function	Note
1	VCC	
2	RXD	Connect to TXD of target MCU
3	TXD	Connect to RXD of target MCU
4	GND	

8. Regulatory information

This is a 'Class A' (EN 61326-1: 2021) equipment. This equipment can cause radio frequency noise when used in the residential area. In such cases, the user/operator of the equipment may be required to take appropriate countermeasures under his responsibility.

9. Design and Manufacture Information

You can obtain information on the design and manufacture of this product from renesas.com.

10. Website and Support

In order to learn, download tools and documents, apply technical support for RA family MCU and its kit, visit the below Web site.

- · RA Product Information renesas.com/ra
- · Renesas Support renesas.com/support

Revision History

Rev.	Date	Description	
		Page	Summary
1.00	August 3, 2021	-	First edition
1.10	March 31, 2022	31	Modified Table 6-5
1.20	April 21, 2022	9	Revised Table 4-4
1.30	October 28, 2022	24	Revised Table 5-3
1.40	June 8, 2023	29	Revised Table 6-2
1.50	December 20, 2023	7, 22 27	Corrected overcurrent threshold (21.4A for AVCC=3.3V, 32.4A for AVCC=5.0V)
			Corrected a typo (CN7 → CN5)
1.60	May 21, 2025	-	Support MCK-RA6T2 Version 2

MCK-RA6T2 User's Manual

Publication Date: Rev 1.60 May 21, 2025

Published by: Renesas Electronics Corporation

MCK-RA6T2 User's Manual

