

QCIOT-013-28022POCZ

QCIOT-013 Digital Power Monitor Board

The QCIOT-013 Digital Power Monitor (DPM) Board demonstrates the functionality and performance of the ISL28022 Digital Power Monitor. The ISL28022 is used to measure the current and voltage through the shunt resistor to determine the power on the line. The design of the DPM board is generic so that the customer can embed the monitor into their specific application.

The board provides a standard Pmod™ Type 6A (extended I²C) connection for the onboard sensor to plug into any required MCU evaluation kit with a matching connector. The QCIOT-013 board features Pmod connectors on both sides of the board to allow additional Type 6/6A boards to connect in a daisy-chained solution with multiple devices on the same MCU Pmod connector.

The software support included with the Renesas IDE (e² studio) allows for code generation to connect the device and the MCU so that development time is significantly reduced. With its standard connector and software support, the QCIOT-013 board is ideal for the Renesas Quick-Connect IoT to rapidly create an IoT system.

Features

- 0V to 60V bus voltage sense range
- Variable current sense range with on-board shunt resistor or external shunt resistor
- 16-bit $\Sigma\Delta$ ADC monitors current and voltage
- System voltage/current monitoring with efficiency reporting
- Overvoltage/undervoltage and current fault monitoring
- Standardized type 6A Pmod connector supports I²C/SMBUS extended interface
- Dual connectors allow pass-through signals for daisy-chained solution
- Software support in e² studio minimizes development time with one-click code generation

Board Contents

- QCIOT-013 Digital Power Monitor Board

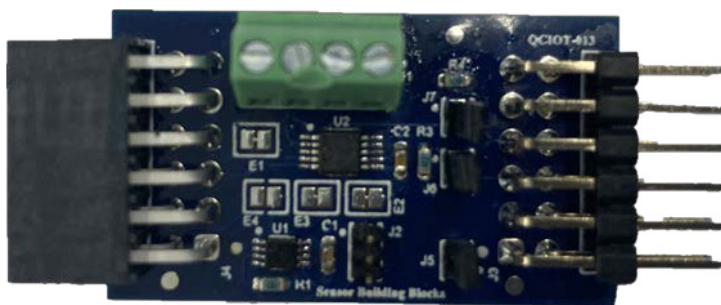


Figure 1. QCIOT-013 Digital Power Monitor Board Image

Contents

- 1. Functional Description 3
 - 1.1 Operational Characteristics 3
 - 1.2 Setup and Configuration 5
- 2. Board Design 7
 - 2.1 Schematic Diagrams 8
 - 2.2 Bill of Materials 10
 - 2.3 Board Layout 11
- 3. Software Design 12
 - 3.1 Project Code Structure 12
 - 3.2 Software Module Overview 15
 - 3.3 User Settings 19
 - 3.4 Board Test 20
- 4. Ordering Information 27
- 5. Revision History 27

1. Functional Description

The QCIOT-013 DPM Board is intended as a quick-connect prototyping solution for a digital power monitoring. This board can enable the designer to quickly evaluate applications where higher voltage and current require monitoring. The QCIOT-013 board can measure voltages in the presence of common-mode voltages ranging 0V to 60V, and it can measure the variable input current and power consumption. The board can also report diagnostics by configuring the fault thresholds of the bus voltage and shunt voltage.

Figure 2 highlights the main parts of the system:

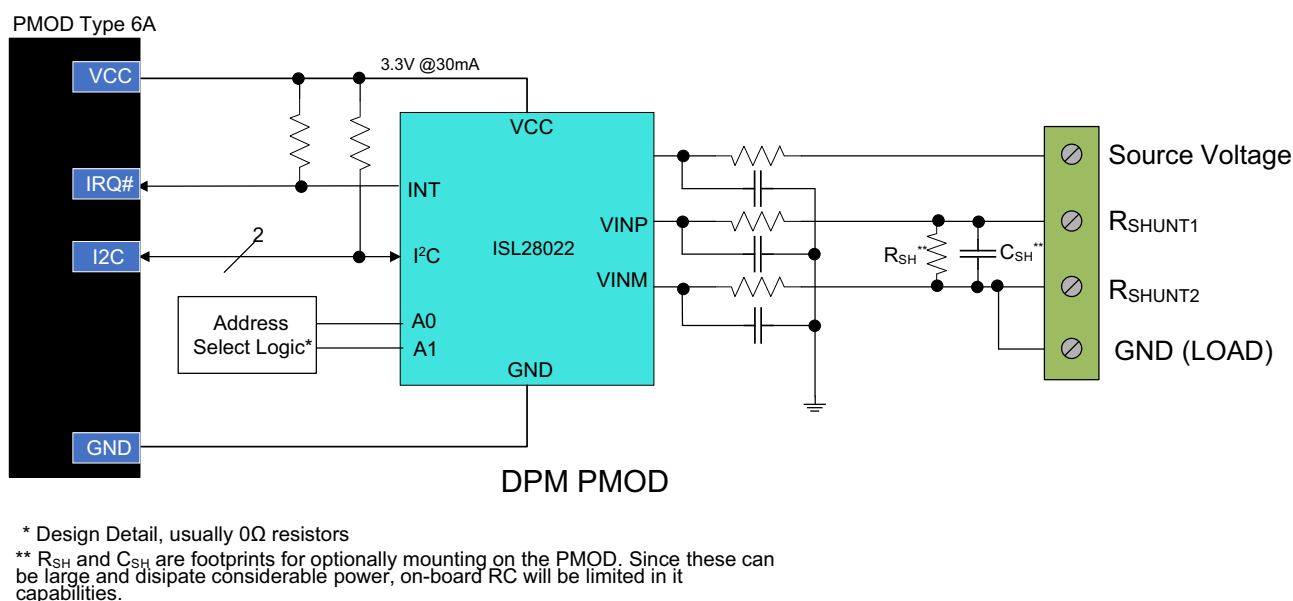


Figure 2. QCIOT-013 Digital Power Monitor Board Block Diagram

The following details the building block of the QCIOT-013 DPM Board and its functionality:

- ISL28022 – Bidirectional high-side and low-side digital current sense and voltage monitor with a serial interface. The device monitors shunt and bus voltage, and provide calculated current and power as a digital number. The ISL28022 provides an accuracy of less than 0.3% for both voltage and current monitoring.

1.1 Operational Characteristics

The QCIOT-013 Board can be used as a starting point for DC power distribution, whether in high voltage industrial or battery powered applications.

The board has been designed to the following specifications:

- Input voltage range = 0V - 60V
- Voltage measuring error < 0.3%
- Current measuring error < 0.3%

1.1.1 Input Bus Voltage Measurement

The ISL28022 measures bus voltage and current sequentially. It consists of a two-channel analog front end multiplexer, a 16-bit sigma delta ADC and digital signal processing/serial communication circuitry. The selection to the input of the ADC is either a single-ended VBUS measurement or a fully differential measurement across a shunt resistor.

The ISL28022 can monitor supplies from 0V to 60V while operating on a chip supply ranging from 3V to 5.5V. The measurable bus voltage range, 16V, 32V, or 60V, can be set by the Configuration register.

The bus voltage can be calculated by the [Equation 1](#).

$$(EQ. 1) \quad V_{bus} = \left[\sum_{n=2}^{15} (Bit_n \cdot Bit_Weight_n) \right] \cdot V_{bus_LSB}$$

[Equation 1](#) is the mathematical equation for converting the binary VBUS value to a decimal value. N is the bit number. The LSB value V_{bus_LSB} of the bus voltage measurement equals 4mV across all settings.

1.1.2 Current Measurement

The ISL28022 is capable of measuring bidirectional currents while monitoring the bus voltage. The ISL28022 requires an external shunt resistor to enable current measurements. The shunt resistor translates the bus current to a voltage. The ISL28022 measures the voltage across the shunt resistors and reports the measured value out digitally through an I²C interface. The stored current sense resistor value allows the ISL28022 to output the current value to an external digital device.

Either the onboard shunt resistor or external shunt resistor can be used for current measurement on the QCIOT-013 board. The onboard shunt resistor is not populated by default.

1.1.2.1 Shunt Resistor Selection

In choosing a sense resistor, the following resistor parameters must be considered: the resistor value, resistor temperature coefficient, and the resistor power rating.

Refer to the Shunt Resistor Selection section in the *ISL28022 Datasheet* for more detail.

The max measured current is limited by the shunt voltage range selection, shunt resistor value, and resistor power rating. **Warning:** With the QCIOT-013 board, if you choose to use the onboard resistor, the maximum measured current is 3A, so a current above 3A might damage the board.

1.1.2.2 Current Measurement

The full-scale current range can be calculated using [Equation 2](#). R_{shunt} is the value of the shunt resistor. V_{shunt_FS} is the full-scale setting that is required. In most cases, the DPM is programmed to the PGA full-scale range (320mV, 160mV, 80mV, and 40mV).

$$(EQ. 2) \quad Current_{FS} = \frac{V_{shunt_FS}}{R_{shunt}}$$

From the current full-scale range, the current LSB is calculated using [Equation 3](#). Current full-scale is the outcome from [Equation 2](#). ADC_{res} is the resolution of shunt voltage reading. The value is determined by the SADC setting in Configuration register.

$$(EQ. 3) \quad Current_{LSB} = \frac{Current_{FS}}{ADC_{res}}$$

From [Equation 3](#), the calibration register value is calculated using [Equation 4](#). The resolution of the math that is processed internally in the DPM is 4096 or 12 bits of resolution. The V_{shunt} LSB is set to 10μV. [Equation 4](#) yields a 16-bit binary number that can be written to the calibration register.

$$(EQ. 4) \quad CalReg_{val} = Integer \left[\frac{Math_{res} \cdot V_{shunt_LSB}}{Current(t_{LSB} \cdot R_{shunt})} \right]$$

When the calibration register (05h) is programmed, the output current is calculated using [Equation 5](#):

$$(EQ. 5) \quad \text{Current} = \left[\sum_{n=0}^{15} (\text{Bit}_n \cdot \text{Bit_Weight}_n) \right] \cdot \text{Current}_{\text{LSB}}$$

1.1.3 Power measurement

The Power register only has meaning if the calibration register (05h) is programmed. The units for the power register are in watts. The power is calculated using [Equation 6](#):

$$(EQ. 6) \quad \text{Power} = \left[\sum_{n=0}^{15} (\text{Bit}_n \cdot \text{Bit_Weight}_n) \right] \cdot \text{Power}_{\text{LSB}} \cdot 5000$$

Bit is the returned value of each bit from the power register either 1 or a 0. The weight of each bit is represented with 1,2,4... n is the bit number. The power LSB is calculated from [Equation 7](#):

$$(EQ. 7) \quad \text{Power}_{\text{LSB}} = \text{Current}_{\text{LSB}} \cdot \text{Vbus}_{\text{LSB}}$$

If VBUS range, BRNG, is set to 60V, the power equation in [Equation 6](#) is multiplied by 2.

1.1.4 Fault Monitoring

The ISL28022 can set thresholds for overvoltage and undervoltage of the bus voltage. With the known shunt resistor, the current threshold can be set by programming the overvoltage and undervoltage threshold register.

Measurement readings exceeding the respective VSHUNT or VBUS threshold, either above or below, set a register flag and perhaps an external interrupt depending on the configuration of the Interrupt Enable bit (INTREN) in register 09h.

1.2 Setup and Configuration

Required or Recommended User Equipment – The following additional lab equipment is required for using the board (and is sold separately):

- Renesas Fast Prototyping Board: FPB-RA4E1
- USB micro-B cable (provided with FPB board)
- USB port isolator (Optional, sold by third party supplier)
- PC running Windows 10/11 with at least one USB port.
- DC Power supply (0 to 60V output)
- Shunt resistor and load resistor

Required or Recommended software

- Renesas Flexible Software Package v4.5.0 platform installation:
 - e2 studio 2023-01 or later
 - FSP 4.5.0 or later
 - GCC Arm Embedded 10.3.1 (10 2021.10) or later
- Sample code files (available on the web page for this device on the Renesas Website)

1.2.1 Software Installation and Usage

Visit the Renesas website for the latest version of the e2 studio [installer](#). The minimum FSP version supporting the QCIOT-013 board is FSP 4.5.0.

1.2.2 Kit Hardware Connections

Follow these procedures to set up the kit (see [Figure 3](#)).

1. Ensure that the MCU development kit in use has two Type 6A Pmods.
 - a. For FPB-RA4E1, two Pmods are available, PMOD1 and PMOD2.
 - b. For the kit other than FPB-RA4E1, if no Type 6A Pmod is available, ensure that the kit can use the US082-INTERPEVZ interposer board. Insert the board into the MCU connector before adding any sensor boards.
2. Ensure that the pin12 of Pmod is 3.3V, which is requested by QCIOT-013.
 - a. For FPB-RA4E1 and FPB-RA6E1, the Pin 12 of Pmod is 5V by default. The trace jumper E1 should be short and E2 should be open to get 3.3V on Pmod1.
 - b. For some evaluation boards, the Pin 12 of Pmod is 3.3V by default. No change is required. Check the user manual before using it.
3. Mount the J4, J5, and J6 jumpers on QCIOT-013.
 - a. Only one set of I²C pull-up resistors should be used on the bus. If multiple Pmod connected boards are used, only one board should have the jumpers present.
 - b. If multiple modules use the IRQ# line on the PMOD, only one pull-up jumper should be present.
 - c. MCU kits typically do not have pull-up resistors present on the bus lines, but ensure to check for them.
4. Connect the current shunt resistor (see the section [Shunt Resistor Selection](#)).
 - a. If you choose to use the onboard resistor Rs, which is not populated, be aware that the max input current is 3A.
 - b. If you choose to use the external shunt resistor, connect the terminal of shunt resistor to VINP and VINM of J1 using wires or terminal pins. If using wires, ensure the wire gauge is a sufficient thickness to carry the operating current load.
5. Turn off your power source to be measured. Next, connect the measured power source to VBUS and GND of screw terminal connector J1. VBUS should be between 0V to 60V.
Max current load:
 - a. If you choose to use the onboard resistor Rs, the max input current should be less than 3A.
 - b. If you choose to use the external shunt resistor, the max input current is decided by the shunt resistor.
6. Short VBUS pin and VINP pin using wires. Ensure the wire gauge is a sufficient thickness to carry the operating current load.
7. Plug in the QCIOT-013 Board to PMOD1 connector of FPB4AE1. Be careful to align Pin 1 on the power board and MCU kit.
8. Connect FPB board with computer with USB micro-B cable. The USB isolator is recommended to protect your computer's USB port.
9. The device is now ready to be used in the system. (See [User Settings](#) for board test.)

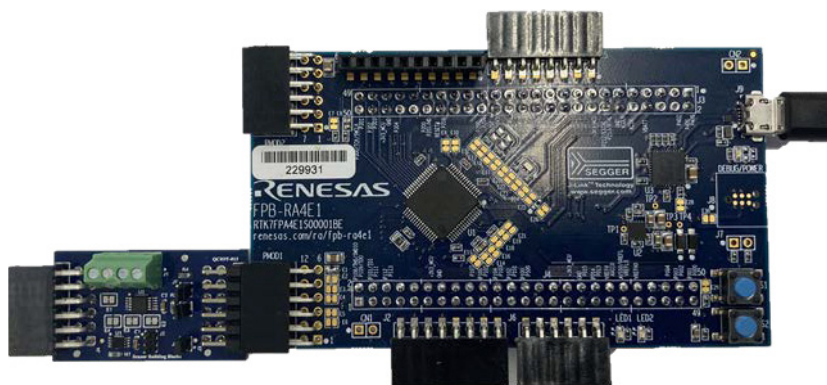


Figure 3. QCIOT-013 Power Monitor Board with FPB-RA4E1 MCU Kit

1.2.3 I²C Address Select

The QCIOT-013 board has a default I²C address of 1000 000 for binary, 0x40 for the 7-bit address. If this is in conflict with another device on the I²C line, the user can change the I²C address by changing E1 and E2 on the board. To change the address, bridge or cut E1 and E2.

E1	E2	A1	A0	7 Bits Slave Address
Short	Short	0	0	0x40(default)
Short	Open	0	1	0x41
Open	Short	1	0	0x44
Open	Open	1	1	0x45

For details on I²C addresses, refer to the I²C Slave Addresses table in the *ISL28022 Datasheet*.

2. Board Design



Figure 4. QCIOT-013 Power Monitor Board Image (Top)

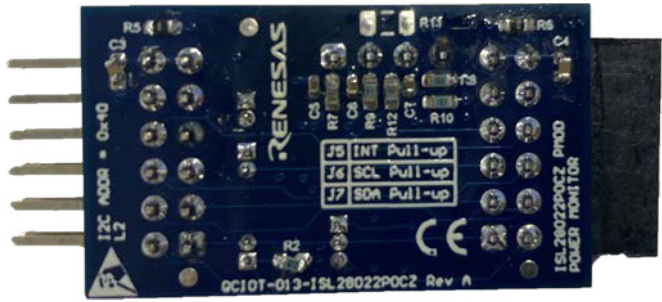


Figure 5. QCIOT-013 Power Monitor Board Image (Bottom)

2.1 Schematic Diagrams

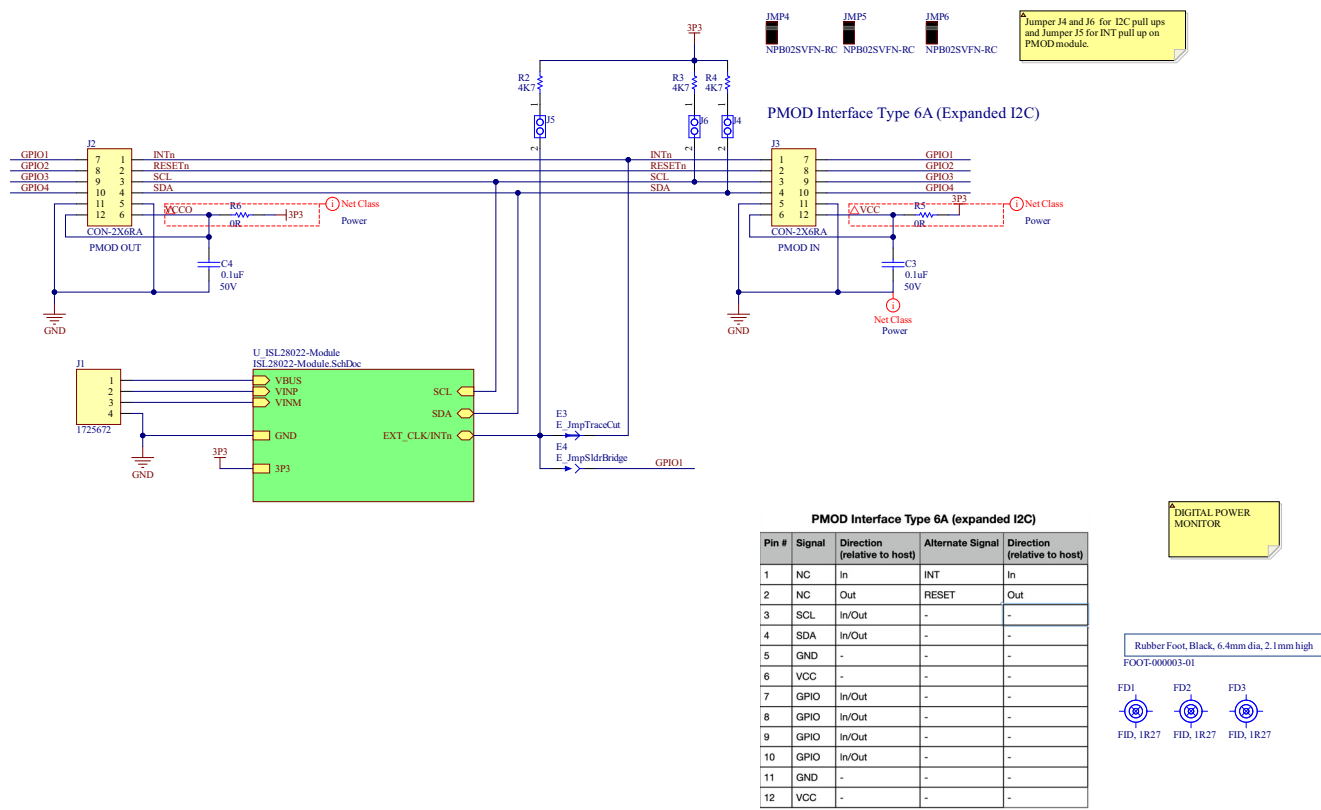


Figure 6. QCIOT-013 Power Monitor Board Schematic

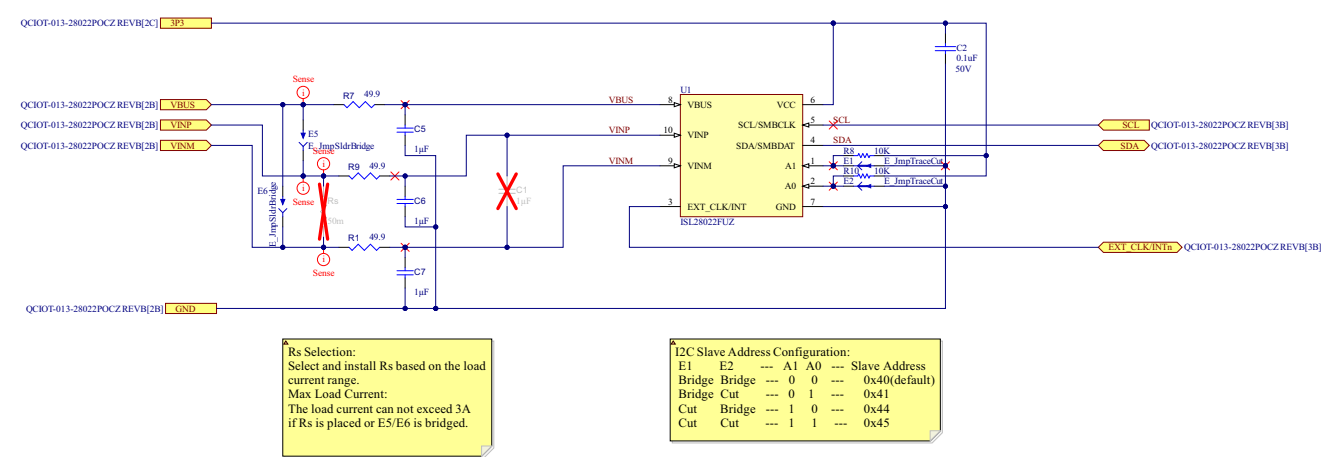


Figure 7. ISL28022 Digital Power Monitor Schematic

2.2 Bill of Materials

Qty	Reference Designator	Description	Manufacturer	Manufacturer Part Number
3	C2, C3, C4	Capacitor, 0.1 μ F, 50V, SM	Yageo	CC0603KRX7R9BB104
3	C5, C6, C7	Ceramic Capacitor, Multilayer, Ceramic, 100V, 10% +Tol, 10% -Tol, X7S, 22% TC, 1 μ F, Surface Mount, 0805	TDK	CGA4J3X7S2A105K125AE
1	FOOT1	Foot, Rubber, Self-adhesive, Black, 6.4mm dia, 2.1mm tall	Bumper Specialties	BS25BL07X30RP
1	J1	Connector, 1x4, 2.54mm, RA, Terminal Block, TH	Phoenix Contact	1725672
1	J2	Connector, 2x6, 0.1", PMOD, Socket, Right Angle	Samtec	SSW-106-02-F-D-RA
1	J3	Connector, 2x6, 0.1", PMOD, Header, Right Angle, Unshrouded	Harwin	M20-9950645
3	J4, J5, J6	Jumper, 1x2, 0.05" Pitch	Sullins	GRPB021VWVN-RC
3	JMP4, JMP5, JMP6	2 C, Closed Top, .050" CC; No Mounting, 105 C, Nylon 66; Phos Bronze, Gold Flash	Sullins	NPB02SVFN-RC
3	R1, R7, R9	Fixed Resistor, Metal Glaze/thick Film, 0.1W, 49.9 Ω , 75V, 1% +/-Tol, 100ppm/Cel, Surface Mount, 0603	Vishay Dale	CRCW060349R9FKEC
3	R2, R3, R4	Resistor, 4.7K Ω , 1/8W, 1%, SM	KOA Speer	RK73H1JTDD4701F
2	R5, R6	Resistor, 0 Ω , 1/8W, 1%, SM	KOA Speer	RK73Z1JTDD
2	R8, R10	Resistor, 10K Ω , 1/8W, 1%, SM	KOA Speer	RK73H1JTDD1002F
1	U1	Power Monitor, 16-bit Sigma-Delta ADC, I ² C/SMBus Interface, SM	Renesas	ISL28022FUZ

2.3 Board Layout

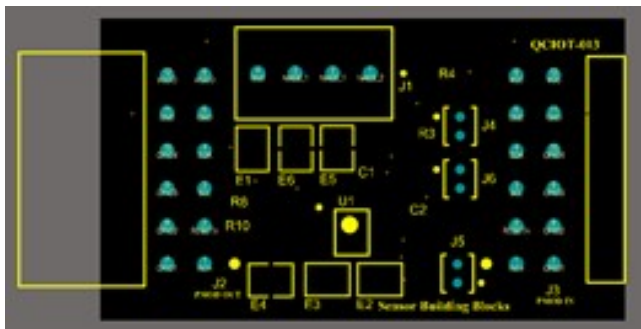


Figure 8. Top Overlay

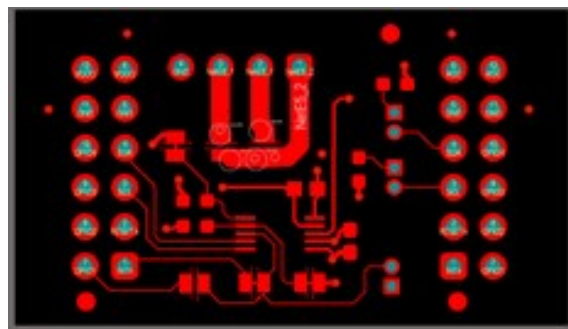


Figure 9. Top Layer

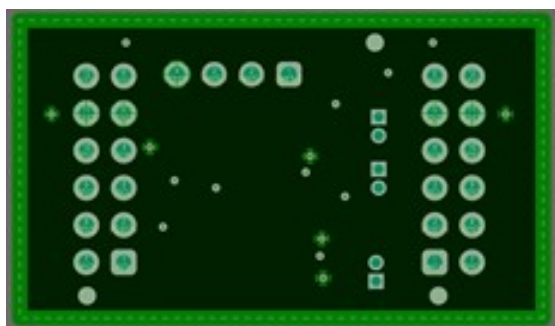


Figure 10. Layer 2 (GND)

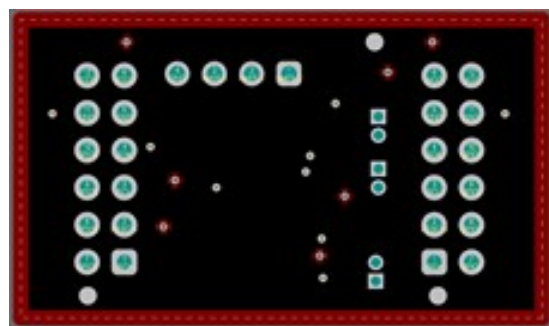


Figure 11. Layer 3 (Signal)

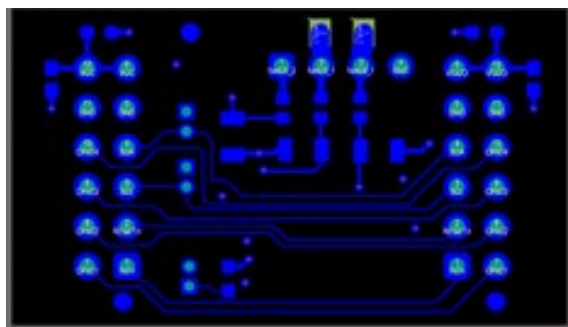


Figure 12. Bottom Layer

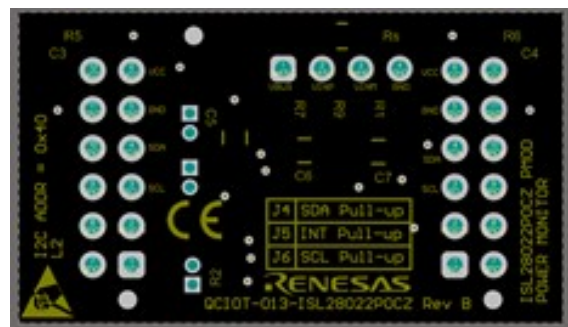


Figure 13. Bottom Overlay

3. Software Design

The following sections give an overview of the software implementation for the QCIOT-013 Digital Power Monitor Board, which is based on the Renesas RA Family's Flexible Software Package (FSP). These sections detail the project's code structure, the system's software modules, and the main system flow. The application-level code is based on FreeRTOS, which allows two threads to be implemented, the ISL28022 and BLE threads. The Bluetooth connection is available so that users can use the Renesas mobile application to connect, read, and control the DPM device.

3.1 Project Code Structure

The Quick Connect DPM project is designed to be a highly modular solution that can be easily configured independently of other modules (if required) or ported to other end applications.

The project is split into two main parts:

- ISL28022 driver – Device driver code for power monitoring that includes the I²C communications driver.
- Application code – Main system code that enables the driver code and implements system flow.

The driver module contains the C source files and header files. The specific user configurations is included in the application code. Refer to the [User Settings](#) section for details regarding user configurations.

Figure 14 shows the structure of the project in e² studio.

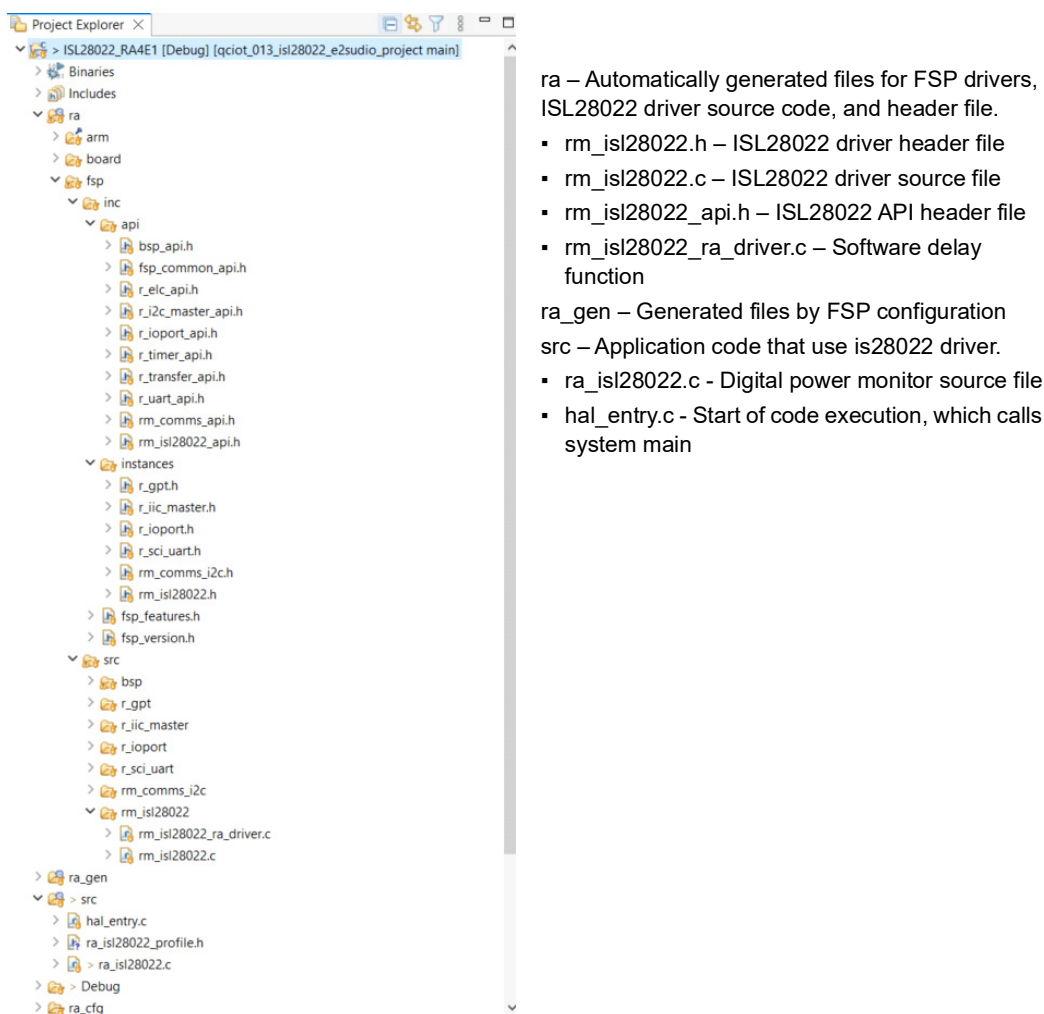


Figure 14. ISL28022 Project Structure

- `qe_gen/ble` – Automatically generated files from QE for BLE tool.
- `ra/fsp` – Automatically generated files for FSP drivers and isl28022 driver source code and header file.
 - `inc/api/r_ble_api.h` – Automatically generated file, Bluetooth API header file
 - `inc/api/r_ble_abs_api.h` – Automatically generated file, Bluetooth API header file
 - `inc/instances/r_ble_abs.h` – Automatically generated file, Bluetooth header file
 - `inc/api/rm_isl28022_api.h` – ISL28022 API header file
 - `inc/instances/rm_isl28022.h` – ISL28022 driver header file
 - `src/rm_ble_abs_gtl` – BLE lower layer drivers
 - `src/rm_isl28022/rm_isl28022.c` – ISL28022 driver source file
 - `src/rm_isl28022/rm_isl28022_ra_driver.c` – Software delay function
- `ra/renesas/wireless/da14xxx` – Automatically generated files for BLE drivers
- `ra_gen` – Generated files by FSP configuration
- `src` – Application code that uses ISL28022 driver
 - `isl28022_thread_entry.c` – ISL28022 application file
 - `ra_isl28022_profile.h` – User setting file
 - `ble_thread_entry.c` – Bluetooth application code
 - `gui_config.json` – Jason file that defines the GUI layout of the mobile application

When you click **configuration.xml** in the project and select the **Stack** tab, a stack configuration appears (Figure 15).

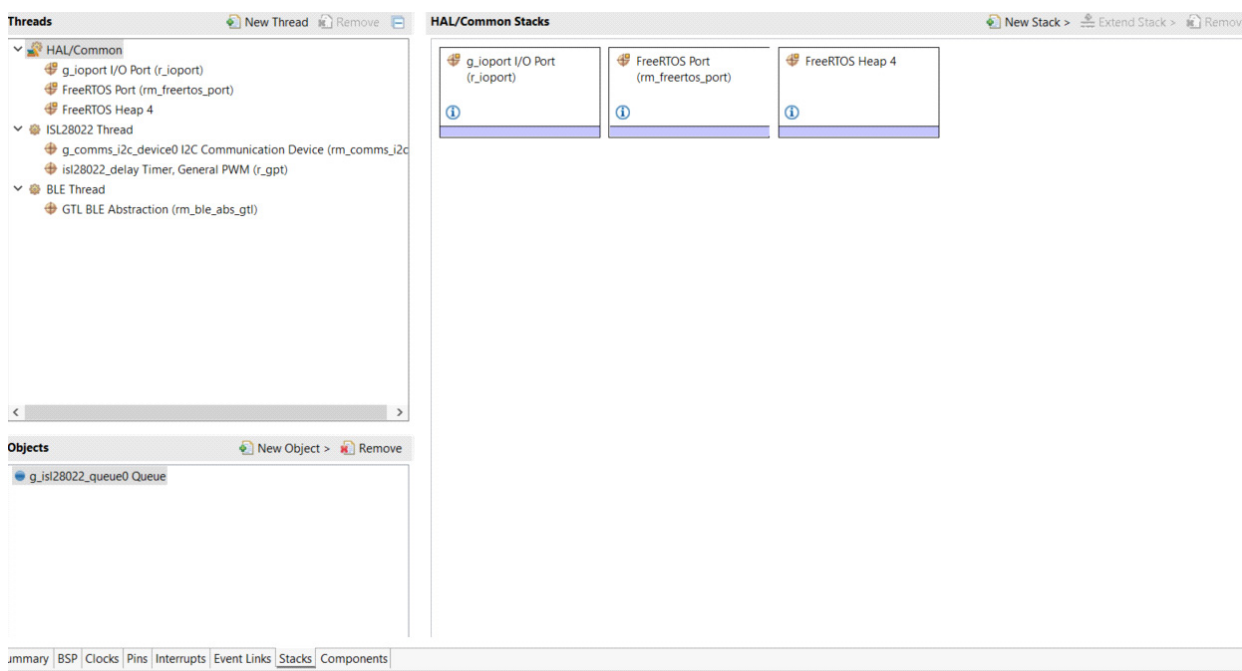


Figure 15. Stack Configuration – Hal/Common

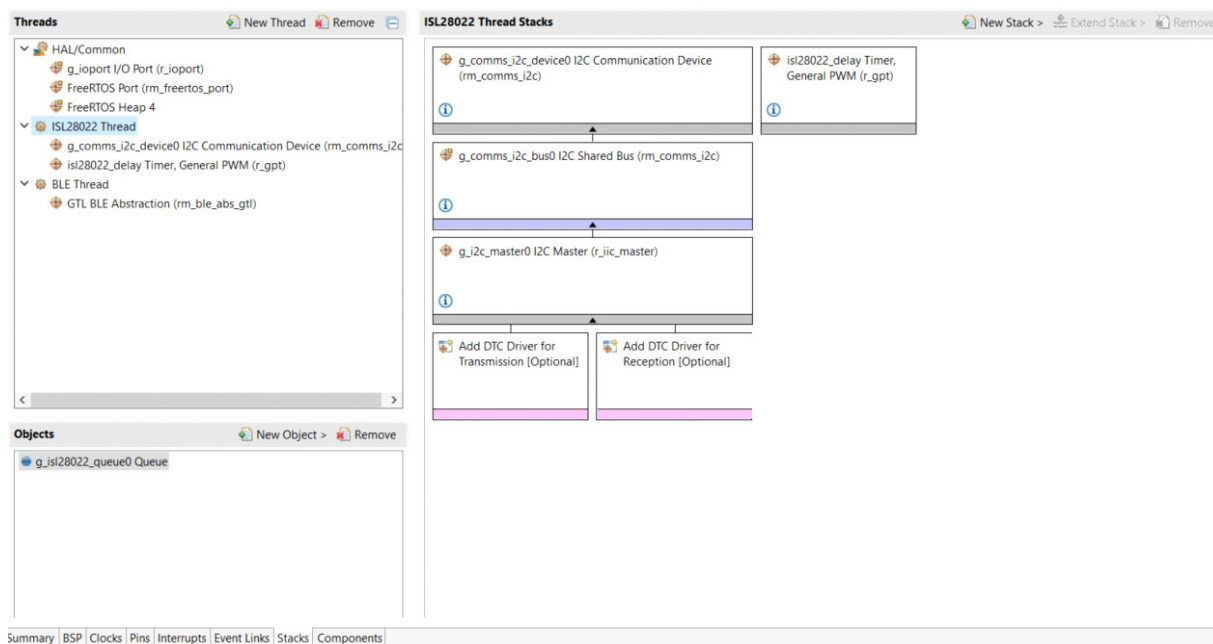


Figure 16. Stack Configuration – ISL28022 Thread Stacks

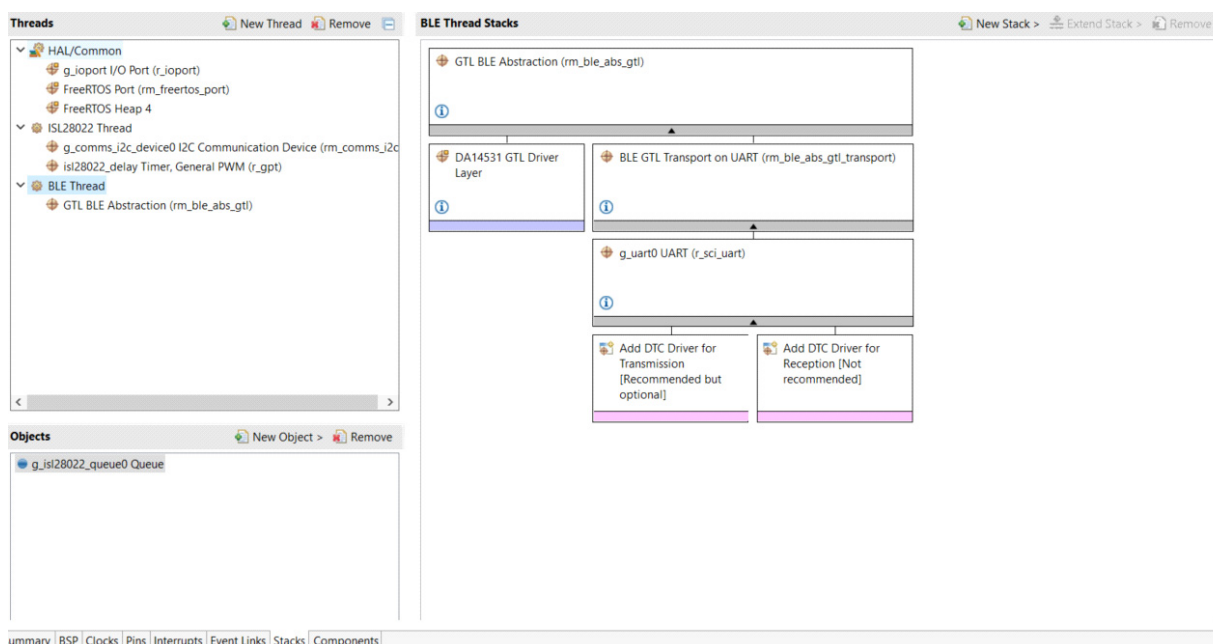


Figure 17. Stack Configuration – BLE Thread Stacks

Figure 18 shows the general code structure in terms of its dependencies. Execution begins in the main function (main.c) initiating an application flow that creates and starts two threads. The ISL28022 DPM driver module is called in isl28022_thread, and the Bluetooth communication is handled in ble_thread. All associated header files reference the lower-level Flexible Software Package (FSP) drivers.

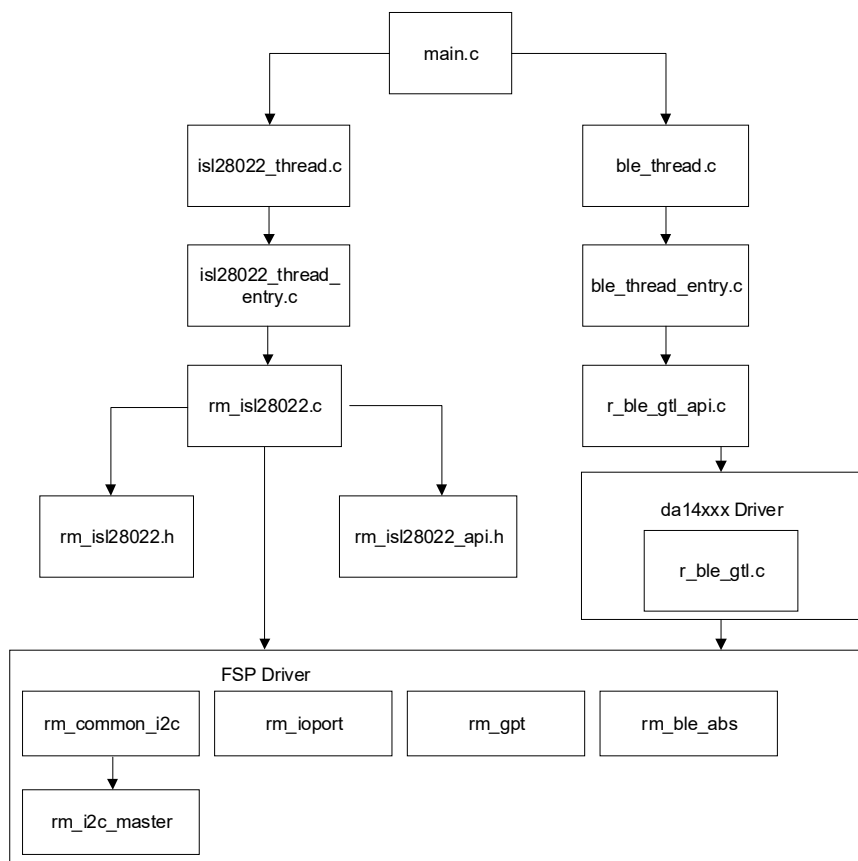


Figure 18. Code Dependency Graph

3.2 Software Module Overview

With a focus on the ISL28088 thread that contains the main system algorithm and is described in the main system flow, this module is responsible for initializing and setting up the driver that is used in the main algorithm. Also, this module makes calls to the other modules to initialize and setup. After initialization, this module is responsible for monitoring the system, displaying faults (if any), and shutting down the system in the event of faults. This module also keeps a continuous check of the I²C connection. The algorithm is responsible for initializing and setting up DPM module.

3.2.1 ISL28022 Thread

The ISL28022 driver is a device driver that can monitor the current and voltage in the system for added protection. This module is responsible for initializing the FSP I²C driver and setting up the DPM device with the user-configured settings.

After setup, the module provides the following features:

- Performing various device commands (software reset and others)
- Reading the bus voltage and shunt voltage
- Reading the current and power and auxiliary side voltage
- Detect device faults (overvoltage, undervoltage, and others)
- Reading from and writing to all device registers
- Calibrate the module.
- Enable and disable the interrupt pin.

3.2.2 Algorithm Flowchart

Figure 19 describes the algorithm at a high level.

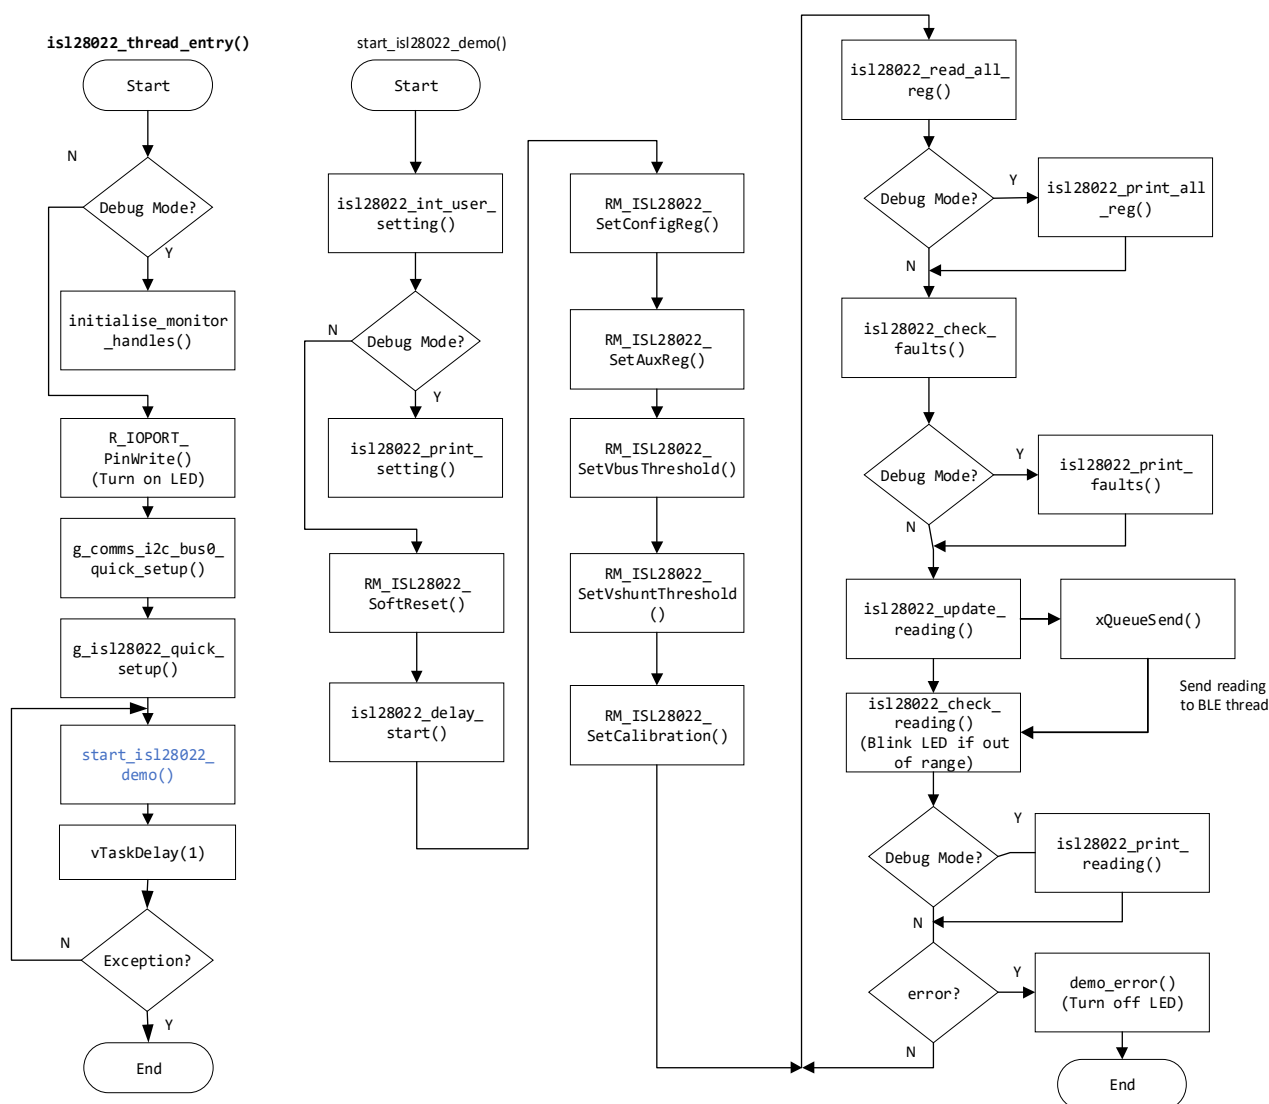


Figure 19. Algorithm Flowchart

The I²C bus is opened by `g_comms_i2c_bus0_quick_setup()`. Then, the ISL28022 instance is opened by `g_isl28022_quick_setup()`. If the device is opened successfully, LED1 and LED2 turn on.

The user setting should be initialized by user first. ISL28022 is configured by `RM_ISL28022_SetConfigReg()`, `RM_ISL28022_SetAuxReg()`, `RM_ISL28022_SetVbusThreshold()` and `RM_ISL28022_SetVshuntThreshold()`.

The main program loops continuously to get the DPM readings by `isl28022_update_reading()` function calls. The Vbus, Vshunt, Current, and power are displayed in the Renesas Debug Virtual Console if in debug mode.

The loop checks the fault status by using `isl28022_check_faults()`. If any faults such as bus voltage overvoltage, bus voltage undervoltage (or other) occur, the faults are displayed in the Renesas Debug Virtual Console if in debug mode causing LED2 to turn off.

The loop checks the reading by using `isl28022_check_reading()`. LED2 will be blinking if the Vbus voltage and Current are out of the range of the user setting (see [User Settings](#)).

The functions outlined in [Figure 19](#) are described as follows:

isl28022_thread_entry ()

- Call initialise_monitor_handles() function
- Call g_comms_i2c_bus0_quick_setup()
- Call g_isl28022_quick_setup()
- initialise_monitor_handles ()
 - This function must be called at the beginning of the code to enable the debug console.
 - Call this function if only in debug mode.
- g_comms_i2c_bus0_quick_setup()
 - Open I2C driver, this must be done before calling any COMMS API.
- g_isl28022_quick_setup()
 - Open ISL28022 dpm instance, this must be done before calling any ISL28022 API.
 - Open timer instance.

start_isl28022_demo ()

- Call isl28022_init_user_setting()
- Call isl28022_print_setting()
- Call isl28022_read_all_reg()
- Call isl28022_print_all_reg()
- Call isl28022_check_faults()
- Call isl28022_print_faults()
- Call isl28022_update_reading()
- Call isl28022_check_reading()
- Call isl28022_print_reading()
- Call RM_ISL28022_SoftReset()
- Call isl28022_delay_start()
- Call RM_ISL28022_SetConfigReg()
- Call RM_ISL28022_SetAuxReg()
- Call RM_ISL28022_SetVbusThreshold()
- Call RM_ISL28022_SetVshuntThreshold()
- Call RM_ISL28022_SetCalibration()
- Call demo_err()
- isl28022_init_user_setting()
 - Initialize the global user setting with the default value
 - The user settings are mode, shunt resistor value, bus voltage full scale, shunt volage full scale, bus ADC resolution, shunt ADC resolution, bus volage max threshold, bus volage min threshold, shunt voltage max threshold, shunt volage min threshold, interrupt pint configuration, external clock configuration.
- isl28022_print_setting()
 - Continuously check for IIC connection Print the setting to Renesas Debug Virtual Console.
- isl28022_read_all_reg()
 - Read all register of ISL28022.
- isl28022_print_all_reg ()
 - Print the value of all register of ISL28022 to Renesas Debug Virtual Console.

- `isl28022_check_faults()`
 - Check the faults status of ISL28022.
- `isl28022_print_faults()`
 - Print the faults status of ISL28022 to Renesas Debug Virtual Console.
- `isl28022_update_reading()`
 - Read Vbus, Vshunt, Current and Power etc.
- `isl28022_check_reading ()`
 - Check if the reading of Vbus, Vshunt, Current and Power is within the range that user set up. If not, blink the LED2.
- `isl28022_print_reading ()`
 - Print the Vbus, Vshunt, Current and Power of ISL28022 to Renesas Debug Virtual Console.
- `isl28022_delay_start()`
 - Start the software delay.
- `RM_ISL28022_SoftReset ()`
 - Soft reset the ISL28022 by configuring the Bit15 of Configuration register.
- `RM_ISL28022_SetConfigReg()`
 - Write CONFIGURATION register of ISL28022 with the user setting.
- `RM_ISL28022_SetAuxReg()`
 - Write AUX register of ISL28022 with the user setting.
- `RM_ISL28022_SetVbusThreshold()`
 - Set the threshold of Vbus of ISL28022 by writing the BUS VOLTAGE THRESHOLD register
- `RM_ISL28022_SetVshuntThreshold()`
 - Set the threshold of the shunt voltage of ISL28022 by writing the SHUNT VOLTAGE THRESHOLD register
- `RM_ISL28022_SetCalibration()`
 - Calibrate ISL28022.
 - Must be done before reading Current and Power.

3.2.3 Hierarchy Chart

Figure 20 outlines the hierarchy of function calls.

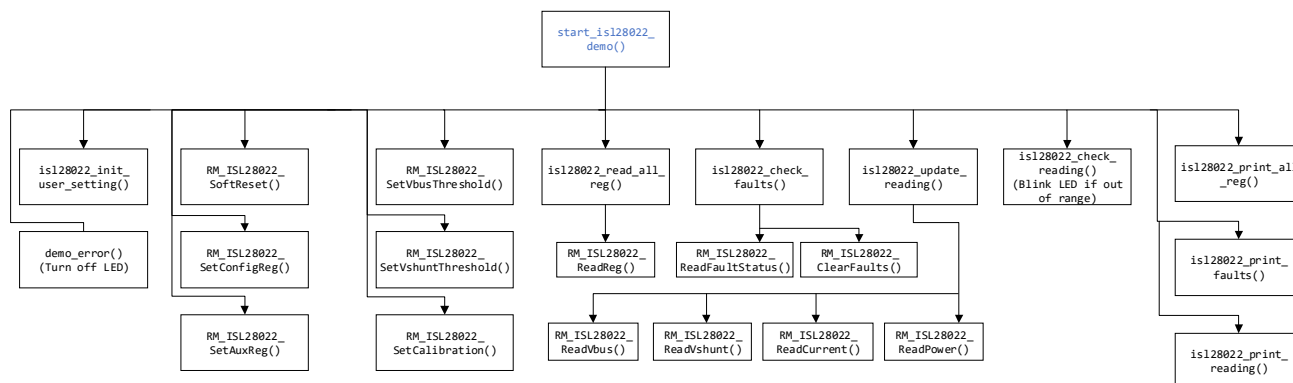


Figure 20. Function Call Hierarchy

3.3 User Settings

3.3.1 Configure DPM

This section outlines all the configurable user settings in the demo project. Configurable settings are mainly included in the profile header for the DPM. These configurations are defined macros with the `_USER` suffix. The list of user configurable settings for the DPM device is not exhaustive; the most used settings are included in the Profile headers, but all register settings in the DPM setup functions can also be adjusted directly. Refer to the datasheet for guidance on register settings and values.

Note: The user will require an E2 emulator to make changes to the project.

```

1 2
2 3
3 4
4 5
5 6
6 7
7 8
8 9
9 10
10 11
11 12
12 13
13 14
14 15
15 16
16 17
17 18
18 19
19 20
20 21
21 22
22 23
23 24
24 25
25 26
26 27
27 28
28 29
29 30
30 31
31 32
32 33
33 34
34 35
35 36
36 37
37 38
38 39
39 40
40 41
41 42
42 43
43 44
44 45
45 46
46 47
47 48
48 49
49 50
50 51
51 52
52 53
53 54
54 55
55 56
56 57
57 58
58 59
59 60
60 61
61 62
62 63
63 64
64 65
65 66
66 67
67 68
68 69
69 70
70 71
71 72
72 73
73 74
74 75
75 76
76 77
77 78
78 79
79 80
80 81
81 82
82 83
83 84
84 85
85 86
86 87
87 88
88 89
89 90
90 91
91 92
92 93
93 94
94 95
95 96
96 97
97 98
98 99
99 100
100 101
101 102
102 103
103 104
104 105
105 106
106 107
107 108
108 109
109 110
110 111
111 112
112 113
113 114
114 115
115 116
116 117
117 118
118 119
119 120
120 121
121 122
122 123
123 124
124 125
125 126
126 127
127 128
128 129
129 130
130 131
131 132
132 133
133 134
134 135
135 136
136 137
137 138
138 139
139 140
140 141
141 142
142 143
143 144
144 145
145 146
146 147
147 148
148 149
149 150
150 151
151 152
152 153
153 154
154 155
155 156
156 157
157 158
158 159
159 160
160 161
161 162
162 163
163 164
164 165
165 166
166 167
167 168
168 169
169 170
170 171
171 172
172 173
173 174
174 175
175 176
176 177
177 178
178 179
179 180
180 181
181 182
182 183
183 184
184 185
185 186
186 187
187 188
188 189
189 190
190 191
191 192
192 193
193 194
194 195
195 196
196 197
197 198
198 199
199 200
200 201
201 202
202 203
203 204
204 205
205 206
206 207
207 208
208 209
209 210
210 211
211 212
212 213
213 214
214 215
215 216
216 217
217 218
218 219
219 220
220 221
221 222
222 223
223 224
224 225
225 226
226 227
227 228
228 229
229 230
230 231
231 232
232 233
233 234
234 235
235 236
236 237
237 238
238 239
239 240
240 241
241 242
242 243
243 244
244 245
245 246
246 247
247 248
248 249
249 250
250 251
251 252
252 253
253 254
254 255
255 256
256 257
257 258
258 259
259 260
260 261
261 262
262 263
263 264
264 265
265 266
266 267
267 268
268 269
269 270
270 271
271 272
272 273
273 274
274 275
275 276
276 277
277 278
278 279
279 280
280 281
281 282
282 283
283 284
284 285
285 286
286 287
287 288
288 289
289 290
290 291
291 292
292 293
293 294
294 295
295 296
296 297
297 298
298 299
299 300
300 301
301 302
302 303
303 304
304 305
305 306
306 307
307 308
308 309
309 310
310 311
311 312
312 313
313 314
314 315
315 316
316 317
317 318
318 319
319 320
320 321
321 322
322 323
323 324
324 325
325 326
326 327
327 328
328 329
329 330
330 331
331 332
332 333
333 334
334 335
335 336
336 337
337 338
338 339
339 340
340 341
341 342
342 343
343 344
344 345
345 346
346 347
347 348
348 349
349 350
350 351
351 352
352 353
353 354
354 355
355 356
356 357
357 358
358 359
359 360
360 361
361 362
362 363
363 364
364 365
365 366
366 367
367 368
368 369
369 370
370 371
371 372
372 373
373 374
374 375
375 376
376 377
377 378
378 379
379 380
380 381
381 382
382 383
383 384
384 385
385 386
386 387
387 388
388 389
389 390
390 391
391 392
392 393
393 394
394 395
395 396
396 397
397 398
398 399
399 400
400 401
401 402
402 403
403 404
404 405
405 406
406 407
407 408
408 409
409 410
410 411
411 412
412 413
413 414
414 415
415 416
416 417
417 418
418 419
419 420
420 421
421 422
422 423
423 424
424 425
425 426
426 427
427 428
428 429
429 430
430 431
431 432
432 433
433 434
434 435
435 436
436 437
437 438
438 439
439 440
440 441
441 442
442 443
443 444
444 445
445 446
446 447
447 448
448 449
449 450
450 451
451 452
452 453
453 454
454 455
455 456
456 457
457 458
458 459
459 460
460 461
461 462
462 463
463 464
464 465
465 466
466 467
467 468
468 469
469 470
470 471
471 472
472 473
473 474
474 475
475 476
476 477
477 478
478 479
479 480
480 481
481 482
482 483
483 484
484 485
485 486
486 487
487 488
488 489
489 490
490 491
491 492
492 493
493 494
494 495
495 496
496 497
497 498
498 499
499 500
500 501
501 502
502 503
503 504
504 505
505 506
506 507
507 508
508 509
509 510
510 511
511 512
512 513
513 514
514 515
515 516
516 517
517 518
518 519
519 520
520 521
521 522
522 523
523 524
524 525
525 526
526 527
527 528
528 529
529 530
530 531
531 532
532 533
533 534
534 535
535 536
536 537
537 538
538 539
539 540
540 541
541 542
542 543
543 544
544 545
545 546
546 547
547 548
548 549
549 550
550 551
551 552
552 553
553 554
554 555
555 556
556 557
557 558
558 559
559 560
560 561
561 562
562 563
563 564
564 565
565 566
566 567
567 568
568 569
569 570
570 571
571 572
572 573
573 574
574 575
575 576
576 577
577 578
578 579
579 580
580 581
581 582
582 583
583 584
584 585
585 586
586 587
587 588
588 589
589 590
590 591
591 592
592 593
593 594
594 595
595 596
596 597
597 598
598 599
599 600
600 601
601 602
602 603
603 604
604 605
605 606
606 607
607 608
608 609
609 610
610 611
611 612
612 613
613 614
614 615
615 616
616 617
617 618
618 619
619 620
620 621
621 622
622 623
623 624
624 625
625 626
626 627
627 628
628 629
629 630
630 631
631 632
632 633
633 634
634 635
635 636
636 637
637 638
638 639
639 640
640 641
641 642
642 643
643 644
644 645
645 646
646 647
647 648
648 649
649 650
650 651
651 652
652 653
653 654
654 655
655 656
656 657
657 658
658 659
659 660
660 661
661 662
662 663
663 664
664 665
665 666
666 667
667 668
668 669
669 670
670 671
671 672
672 673
673 674
674 675
675 676
676 677
677 678
678 679
679 680
680 681
681 682
682 683
683 684
684 685
685 686
686 687
687 688
688 689
689 690
690 691
691 692
692 693
693 694
694 695
695 696
696 697
697 698
698 699
699 700
700 701
701 702
702 703
703 704
704 705
705 706
706 707
707 708
708 709
709 710
710 711
711 712
712 713
713 714
714 715
715 716
716 717
717 718
718 719
719 720
720 721
721 722
722 723
723 724
724 725
725 726
726 727
727 728
728 729
729 730
730 731
731 732
732 733
733 734
734 735
735 736
736 737
737 738
738 739
739 740
740 741
741 742
742 743
743 744
744 745
745 746
746 747
747 748
748 749
749 750
750 751
751 752
752 753
753 754
754 755
755 756
756 757
757 758
758 759
759 760
760 761
761 762
762 763
763 764
764 765
765 766
766 767
767 768
768 769
769 770
770 771
771 772
772 773
773 774
774 775
775 776
776 777
777 778
778 779
779 780
780 781
781 782
782 783
783 784
784 785
785 786
786 787
787 788
788 789
789 790
790 791
791 792
792 793
793 794
794 795
795 796
796 797
797 798
798 799
799 800
800 801
801 802
802 803
803 804
804 805
805 806
806 807
807 808
808 809
809 810
810 811
811 812
812 813
813 814
814 815
815 816
816 817
817 818
818 819
819 820
820 821
821 822
822 823
823 824
824 825
825 826
826 827
827 828
828 829
829 830
830 831
831 832
832 833
833 834
834 835
835 836
836 837
837 838
838 839
839 840
840 841
841 842
842 843
843 844
844 845
845 846
846 847
847 848
848 849
849 850
850 851
851 852
852 853
853 854
854 855
855 856
856 857
857 858
858 859
859 860
860 861
861 862
862 863
863 864
864 865
865 866
866 867
867 868
868 869
869 870
870 871
871 872
872 873
873 874
874 875
875 876
876 877
877 878
878 879
879 880
880 881
881 882
882 883
883 884
884 885
885 886
886 887
887 888
888 889
889 890
890 891
891 892
892 893
893 894
894 895
895 896
896 897
897 898
898 899
899 900
900 901
901 902
902 903
903 904
904 905
905 906
906 907
907 908
908 909
909 910
910 911
911 912
912 913
913 914
914 915
915 916
916 917
917 918
918 919
919 920
920 921
921 922
922 923
923 924
924 925
925 926
926 927
927 928
928 929
929 930
930 931
931 932
932 933
933 934
934 935
935 936
936 937
937 938
938 939
939 940
940 941
941 942
942 943
943 944
944 945
945 946
946 947
947 948
948 949
949 950
950 951
951 952
952 953
953 954
954 955
955 956
956 957
957 958
958 959
959 960
960 961
961 962
962 963
963 964
964 965
965 966
966 967
967 968
968 969
969 970
970 971
971 972
972 973
973 974
974 975
975 976
976 977
977 978
978 979
979 980
980 981
981 982
982 983
983 984
984 985
985 986
986 987
987 988
988 989
989 990
990 991
991 992
992 993
993 994
994 995
995 996
996 997
997 998
998 999
999 1000
1000 1001
1001 1002
1002 1003
1003 1004
1004 1005
1005 1006
1006 1007
1007 1008
1008 1009
1009 1010
1010 1011
1011 1012
1012 1013
1013 1014
1014 1015
1015 1016
1016 1017
1017 1018
1018 1019
1019 1020
1020 1021
1021 1022
1022 1023
1023 1024
1024 1025
1025 1026
1026 1027
1027 1028
1028 1029
1029 1030
1030 1031
1031 1032
1032 1033
1033 1034
1034 1035
1035 1036
1036 1037
1037 1038
1038 1039
1039 1040
1040 1041
1041 1042
1042 1043
1043 1044
1044 1045
1045 1046
1046 1047
1047 1048
1048 1049
1049 1050
1050 1051
1051 1052
1052 1053
1053 1054
1054 1055
1055 1056
1056 1057
1057 1058
1058 1059
1059 1060
1060 1061
1061 1062
1062 1063
1063 1064
1064 1065
1065 1066
1066 1067
1067 1068
1068 1069
1069 1070
1070 1071
1071 1072
1072 1073
1073 1074
1074 1075
1075 1076
1076 1077
1077 1078
1078 1079
1079 1080
1080 1081
1081 1082
1082 1083
1083 1084
1084 1085
1085 1086
1086 1087
1087 1088
1088 1089
1089 1090
1090 1091
1091 1092
1092 1093
1093 1094
1094 1095
1095 1096
1096 1097
1097 1098
1098 1099
1099 1100
1100 1101
1101 1102
1102 1103
1103 1104
1104 1105
1105 1106
1106 1107
1107 1108
1108 1109
1109 1110
1110 1111
1111 1112
1112 1113
1113 1114
1114 1115
1115 1116
1116 1117
1117 1118
1118 1119
1119 1120
1120 1121
1121 1122
1122 1123
1123 1124
1124 1125
1125 1126
1126 1127
1127 1128
1128 1129
1129 1130
1130 1131
1131 1132
1132 1133
1133 1134
1134 1135
1135 1136
1136 1137
1137 1138
1138 1139
1139 1140
1140 1141
1141 1142
1142 1143
1143 1144
1144 1145
1145 1146
1146 1147
1147 1148
1148 1149
1149 1150
1150 1151
1151 1152
1152 1153
1153 1154
1154 1155
1155 1156
1156 1157
1157 1158
1158 1159
1159 1160
1160 1161
1161 1162
1162 1163
1163 1164
1164 1165
1165 1166
1166 1167
1167 1168
1168 1169
1169 1170
1170 1171
1171 1172
1172 1173
1173 1174
1174 1175
1175 1176
1176 1177
1177 1178
1178 1179
1179 1180
1180 1181
1181 1182
1182 1183
1183 1184
1184 1185
1185 1186
1186 1187
1187 1188
1188 1189
1189 1190
1190 1191
1191 1192
1192 1193
1193 1194
1194 1195
1195 1196
1196 1197
1197 1198
1198 1199
1199 1200
1200 1201
1201 1202
1202 1203
1203 1204
1204 1205
1205 1206
1206 1207
1207 1208
1208 1209
1209 1210
1210 1211
1211 1212
1212 1213
1213 1214
1214 1215
1215 1216
1216 1217
1217 1218
1218 1219
1219 1220
1220 1221
1221 1222
1222 1223
1223 1224
1224 1225
1225 1226
1226 1227
1227 1228
1228 1229
1229 1230
1230 1231
1231 1232
1232 1233
1233 1234
1234 1235
1235 1236
1236 1237
1237 1238
1238 1239
1239 1240
1240 1241
1241 1242
1242 1243
1243 1244
1244 1245
1245 1246
1246 1247
1247 1248
1248 1249
1249 1250
1250 1251
1251 1252
1252 1253
1253 1254
1254 1255
1255 1256
125
```

The user settings and their usage are outlined in the [Table 1](#). The user can adjust these values to fit the end application. *Note:* Some register settings adhere to multiple settings, and those settings are not fully listed. Refer to the datasheet for more information.

Table 1. User Settings

Name	Usage	Default Value
ISL28022_RSHUNT_OHM_USER ^[1]	Shunt resistance value in Ω s	25
ISL28022_VSHUNT_MAX_THRESHOLD_V_USER	Overvoltage threshold of shunt voltage in volt	0.32
ISL28022_VSHUNT_MIN_THRESHOLD_V_USER	Undervoltage threshold of shunt voltage in volt	-0.32
ISL28022_VBUS_MAX_THRESHOLD_V_USER	Overvoltage threshold of bus voltage in volt	60
ISL28022_VBUS_MIN_THRESHOLD_V_USER	Undervoltage threshold of bus voltage in volt	0
ISL28022_CONFIG_MODE_USER	Select Shunt voltage and/or bus voltage for ADC; set up the power mode and ADC mode	Shunt and bus voltage, continuous
ISL28022_VBUS_FULL_SCALE_USER	Bus voltage full scale	320mV
ISL28022_VSHUNT_FULL_SCALE_USER	Shunt voltage full-scale range	60V
ISL28022_AUX_INT_PIN_EN_USER	Enable or disable interrupt pin	Enable
ISL28022_AUX_INT_PIN_FORCE_USER	Force interrupt pin active or not	Non active
ISL28022_AUX_EXTCLK_EN_USER	Enable or disable external clock	Disable
ISL28022_AUX_EXTCLK_DIV_USER	External clock divider	No divider

1. The ISL28022_RSHUNT_OHM_USER value should match your chosen shunt resistor.

3.4 Board Test

3.4.1 Set Up the Boards and Cable

Verify that you have followed the procedure in [Setup and Configuration](#).

3.4.2 Program the Development Board and Run Example Code in Debug Mode

1. Open the sample project in e2studio.

2. From the menu bar, select **Run > Debug Configuration**.

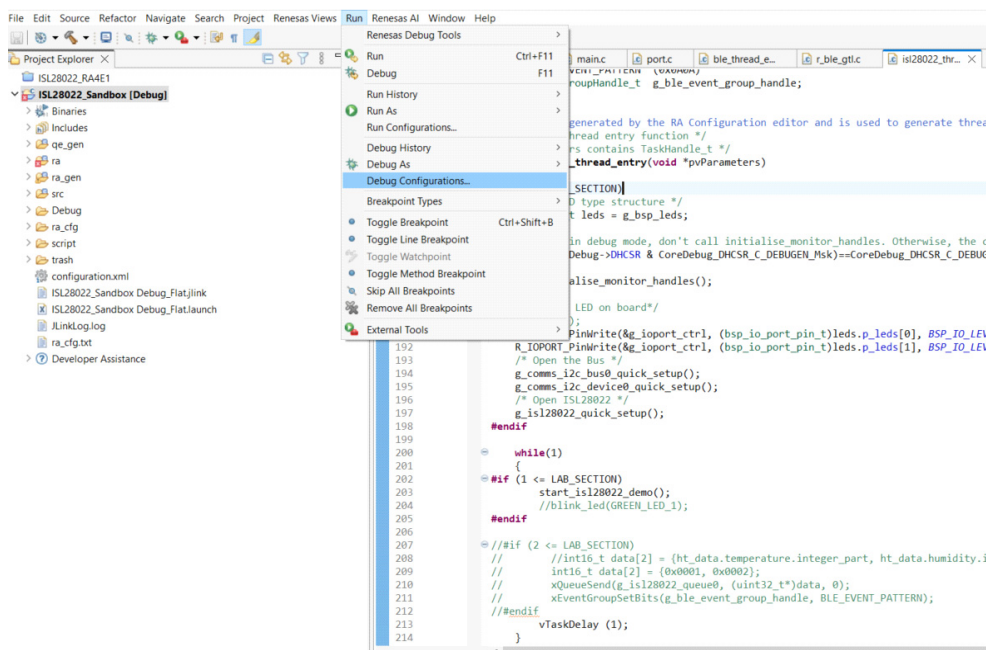


Figure 22. Debug Configuration

3. In **Renesas GDB Hardware Debugging**, select **isl28022_Sandbox_Debug**.

4. Click the **Debug** button. The code enters debug mode (see Figure 24).

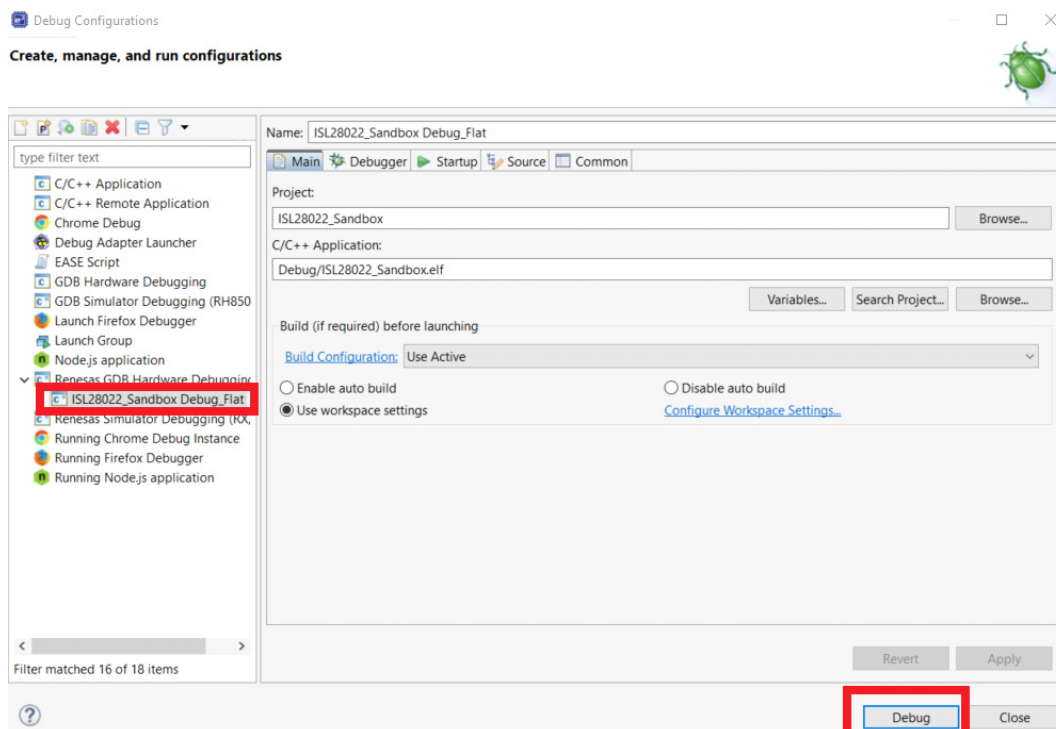


Figure 23. Starting Debug Mode

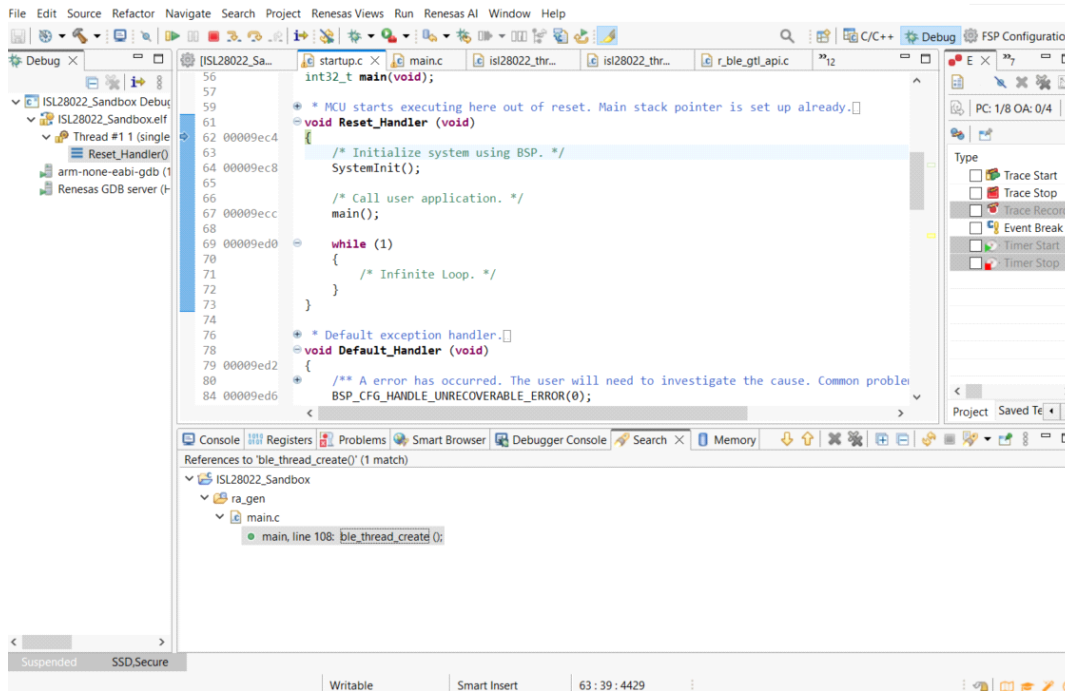


Figure 24. Entering Debug Mode

- From the menu bar, select **Renesas Views > Debug > Renesas Debug Virtual Console**.

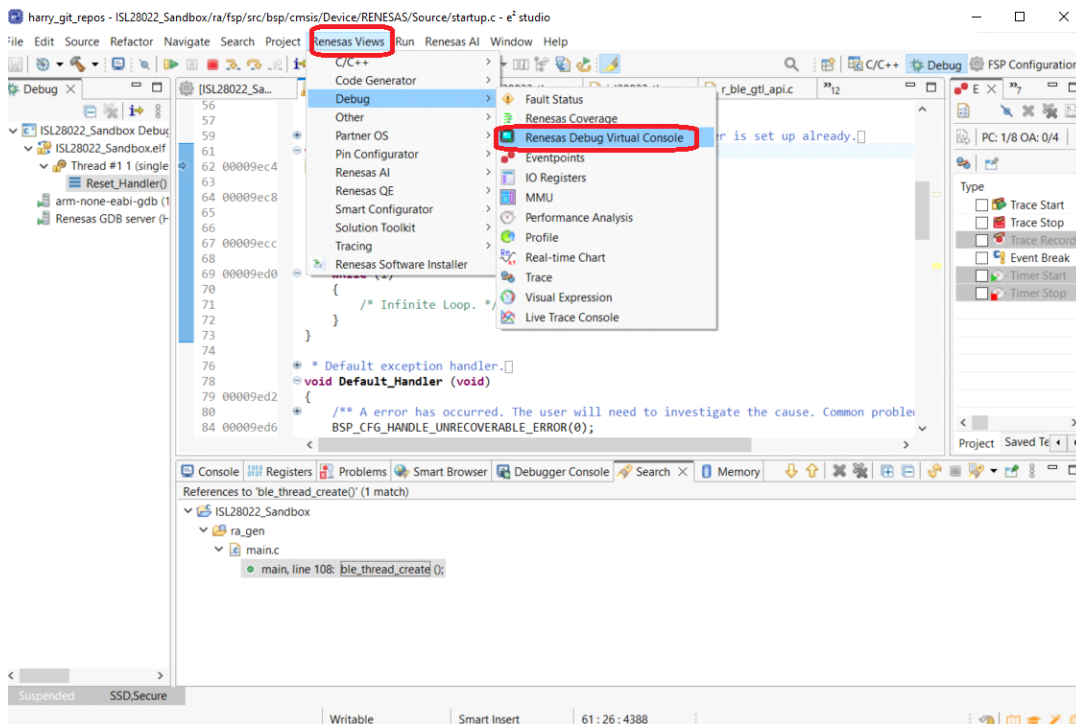


Figure 25. Opening the Virtual Console

a. The Renesas Debug Virtual Console appears.

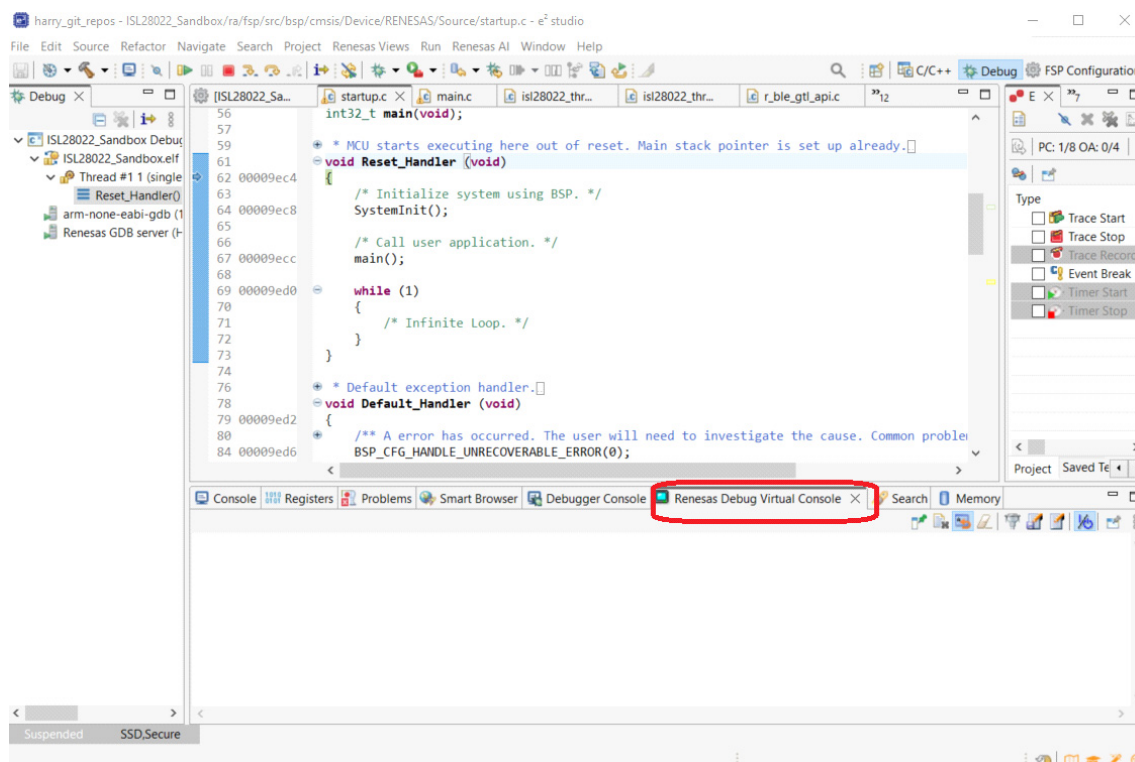


Figure 26. Renesas Debug Virtual Console

6. When you click , the debug information appears in the Renesas Debug Virtual Console window.

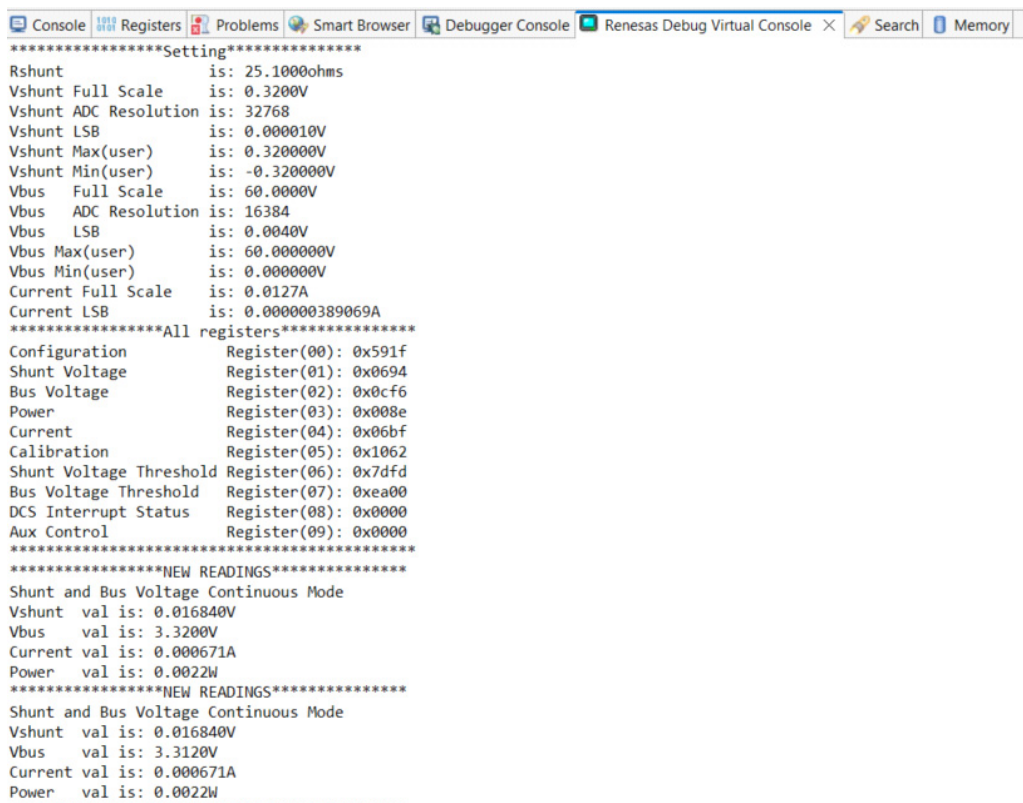


Figure 27. Debug Information

3.4.3 Quick-Connect Sandbox Application

When you program the FPB board, you can read the V_{BUS} voltage and current on a smart device with the BLE connection.

The following hardware is required.

- Renesas Bluetooth Pmod Board, US159-DA14531EVZ (sold separately)
 - iOS or Android smart device (such as a smartphone or tablet)
1. Plug in the Bluetooth Pmod Board, US159-DA14531EVZ, to the PMOD2 connector of FPB-RA4E1.

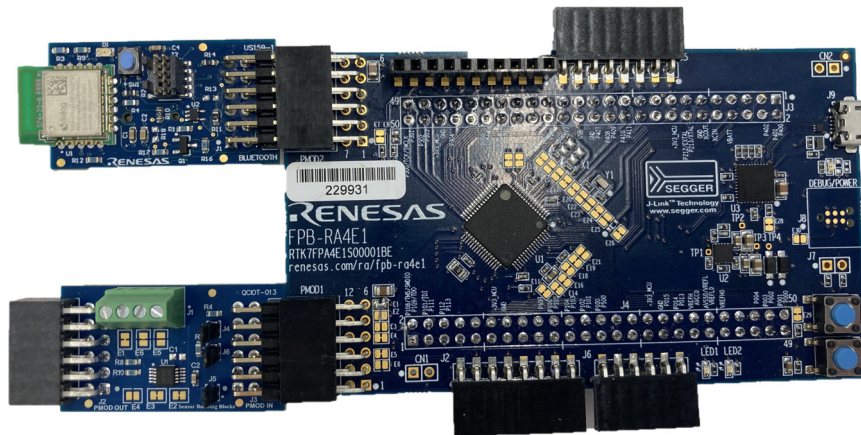


Figure 28. QCIOT-013 Power Monitor Board with FPB-RA4E1 MCU Kit

2. Install the Renesas Quick-Connect Mobile Sandbox Application (version 1.2.0 or later) on a smart device.
 - a. Download the app from either the Play Store (Android) or App Store (iOS). Search for QC Sandbox or use the following barcodes:



Android



iOS

Figure 29. QR Codes for Android and iOS

3. Start the application. A scan automatically begins for Bluetooth LE devices.
4. Scroll the list to find and select your device.

5. Click the **Connect** button.

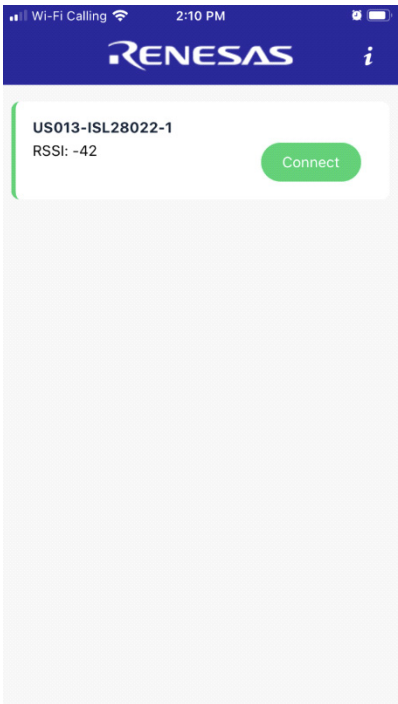


Figure 30. Quick-Connect Sandbox GUI

a. Measurements appear for BusVoltage and Current(A).

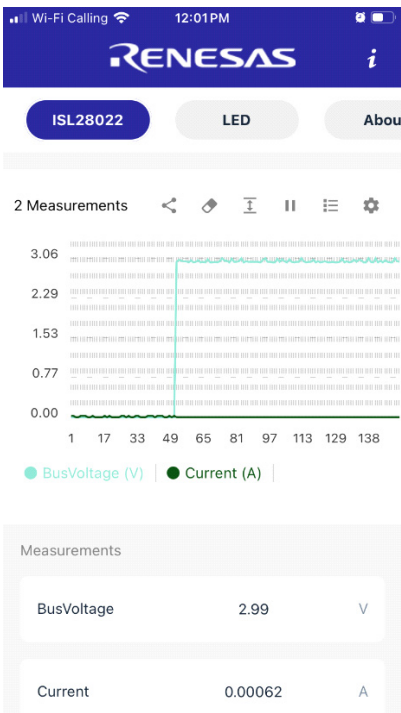


Figure 31. Bus Voltage and Current Reading

- b. If Current(A) does not appear, go to the setting by pressing the list icon, and check BusVoltage and Current.

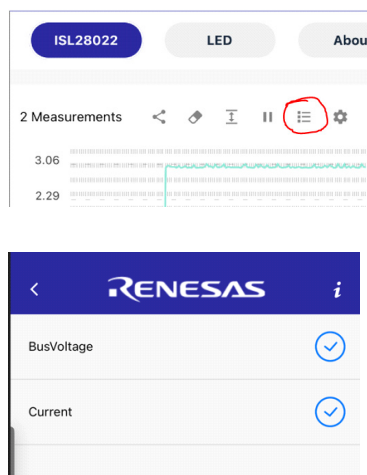


Figure 32. Enabling BusVoltage and Current Display

4. Ordering Information

Part Number	Description
QCIOT-013-28022POCZ	QCIOT Digital Power Monitor Pmod Board

5. Revision History

Revision	Date	Description
1.01	Mar 25, 2024	Updated Page 1. Updated section 1.2 Setup and Configuration. Added section 3.4 Board Test.
1.00	Dec 15, 2023	Initial release

IMPORTANT NOTICE AND DISCLAIMER

RENESAS ELECTRONICS CORPORATION AND ITS SUBSIDIARIES ("RENESAS") PROVIDES TECHNICAL SPECIFICATIONS AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT OF THIRD-PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for developers who are designing with Renesas products. You are solely responsible for (1) selecting the appropriate products for your application, (2) designing, validating, and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements. These resources are subject to change without notice. Renesas grants you permission to use these resources only to develop an application that uses Renesas products. Other reproduction or use of these resources is strictly prohibited. No license is granted to any other Renesas intellectual property or to any third-party intellectual property. Renesas disclaims responsibility for, and you will fully indemnify Renesas and its representatives against, any claims, damages, costs, losses, or liabilities arising from your use of these resources. Renesas' products are provided only subject to Renesas' Terms and Conditions of Sale or other applicable terms agreed to in writing. No use of any Renesas resources expands or otherwise alters any applicable warranties or warranty disclaimers for these products.

(Disclaimer Rev.1.01 Jan 2024)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,
Koto-ku, Tokyo 135-0061, Japan
www.renesas.com

Contact Information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit www.renesas.com/contact-us/.

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.