

RL78/F25

Renesas Solution Starter Kit Capacitive Touch Evaluation System User's Manual

16-Bit Single-Chip Microcontrollers

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (<http://www.renesas.com>).

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
8. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
13. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
14. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,
Koto-ku, Tokyo 135-0061, Japan

www.renesas.com

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:
www.renesas.com/contact/.

General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

1. Precaution against Electrostatic Discharge (ESD)

A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity. Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.

2. Processing at power-on

The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.

3. Input of signal during power-off state

Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.

4. Handling of unused pins

Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.

5. Clock signals

After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.

6. Voltage application waveform at input pin

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between V_{IL} (Max.) and V_{IH} (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between V_{IL} (Max.) and V_{IH} (Min.).

7. Prohibition of access to reserved addresses

Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not guaranteed.

8. Differences between products

Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

How to Use This Manual

1. Purpose and Target Readers

This is a manual for users to understand the outline and hardware functions of the RL78/F25 Capacitive Touch Evaluation System (RTK7F125FPST0000BJ). This manual is intended for users who use this CPU board. A basic knowledge of electric circuits, logical circuits, and MCUs is necessary in order to use this manual.

Particular attention should be paid to the precautionary notes when using the manual. These notes occur within the body of the text, at the end of each section, and in the Usage Notes section.

The revision history summarizes the locations of revisions and additions. It does not list all revisions. Refer to the text of the manual for details.

Renesas RTK7F125FPST0000BJ Disclaimer

By using this RTK7F125FPST0000BJ, the User accepts the following terms, which are in addition to, and control in the event of disagreement, with Renesas' General Terms and Conditions available at <https://www.renesas.com/en-us/legal/disclaimer.html>.

The RTK7F125FPST0000BJ is not guaranteed to be error free, and the entire risk as to the results and performance of the RTK7F125FPST0000BJ is assumed by the User. The RTK7F125FPST0000BJ is provided by Renesas on an "as is" basis without warranty of any kind whether express or implied, including but not limited to the implied warranties of good workmanship, fitness for a particular purpose, title, merchantability, and non-infringement of intellectual property rights. Renesas expressly disclaims any implied warranty.

Renesas does not consider the RTK7F125FPST0000BJ to be a finished product and therefore the RTK7F125FPST0000BJ may not comply with some requirements applicable to finished products, including, but not limited to recycling, restricted substances and electromagnetic compatibility regulations. Refer to Certifications section, for information about certifications and compliance information for the RTK7F125FPST0000BJ. It is the kit User's responsibility to make sure the kit meets any local requirements applicable to their region.

Renesas or its affiliates shall in no event be liable for any loss of profit, loss of data, loss of contract, loss of business, damage to reputation or goodwill, any economic loss, any reprogramming or recall costs (whether the foregoing losses are direct or indirect) nor shall Renesas or its affiliates be liable for any other direct or indirect special, incidental or consequential damages arising out of or in relation to the use of this RTK7F125FPST0000BJ, even if Renesas or its affiliates have been advised of the possibility of such damages.

Renesas has used reasonable care in preparing the information included in this document, but Renesas does not warrant that such information is error free nor does Renesas guarantee an exact match for every application or parameter to part numbers designated by other vendors listed herein. The information provided in this document is intended solely to enable the use of Renesas products. No express or implied license to any intellectual property right is granted by this document or in connection with the sale of Renesas products. Renesas reserves the right to make changes to specifications and product descriptions at any time without notice. Renesas assumes no liability for any damages incurred by you resulting from errors in or omissions from the information included herein. Renesas cannot verify, and assumes no liability for, the accuracy of information available on another company's website.

Precautions

This Evaluation Kit is only intended for use in a laboratory environment under ambient temperature and humidity conditions. A safe separation distance should be used between this and any sensitive equipment. Its use outside the laboratory, classroom, study area, or similar such area invalidates conformity with the protection requirements of the Electromagnetic Compatibility Directive and could lead to prosecution.

The product generates, uses, and can radiate radio frequency energy and may cause harmful interference to radio communications. There is no guarantee that interference will not occur in a particular installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off or on, you are encouraged to try to correct the interference by one or more of the following measures:

- Ensure attached cables do not lie across the equipment.
- Reorient the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Power down the equipment when not in use.
- Consult the dealer or an experienced radio/TV technician for help.

Note: It is recommended that wherever possible shielded interface cables are used.

The product is potentially susceptible to certain EMC phenomena. To mitigate against them it is recommended that the following measures be undertaken:

- The user is advised that mobile phones should not be used within 10 m of the product when in use.
- The user is advised to take ESD precautions when handling the equipment.

The Evaluation Kit does not represent an ideal reference design for an end product and does not fulfill the regulatory standards for an end product.

Safety Items

Definitions of Symbols

A variety of symbols are used in this document and on the product itself to prevent in advance danger to you the user or any third parties and to prevent in advance damage to any physical property.

This section, Safety Items, presents these symbols and their meanings. It also presents safety notes to assure that this produce is used safely and correctly.

This product should only be used after fully understanding the material presented in this section.



Warning

Warning items indicate things that, if not avoided, could lead to death or serious injury.



Caution

Caution items indicate both latent dangers that can lead to minor or moderately severe injury and latent dangers that can lead to property damage if not avoided.

In addition to the above two markings, the following are displayed at the same time if appropriate.


[Important] Indicates a point that can lead to equipment failure or malfunction if incorrectly set when setting up this product.

A triangular mark  indicates a warning or caution.

Example:



Electrical Shock Hazard

The  mark indicates something that is forbidden.

Example:



Do Not Disassemble

Warning



Warning

Handling related warnings:



Do not disassemble or modify this product. Renesas does not guarantee this product if it has been disassembled or modified.

The power supply for this product can be selected to be either the USB bus or a DC jack. A jumper is used to select the power supply.

If, during either use or storage of this product, any abnormality in the product itself (including abnormal odors, heating, color changes, or shape changes to the product itself) are observed, disconnect the USB cable and power supply cable immediately.

Installation:



Do not install this equipment in a location that has a high humidity or where water or other fluids could get on it. This equipment may be damaged if water or other fluids could get on it.

Ambient temperature:



The upper limit for the ambient temperature under which this product may be used is 35°C.

This maximum rated ambient temperature must not be exceeded.

Caution

Caution

Handling related cautions:

Use the antistatic band. Failure to do so could cause malfunction or unstable motion or be damaged Internal components.

This product must be handled carefully. Do not drop, knock over, or apply any strong mechanical shocks to this product.



When connecting or disconnecting cables from this product, hold the parts of the cable intended to be grasped (such as the plugs) and avoid putting stress on the cable. Do not pull on this product when it is connected to a communications cable or user system connection cable. Stress on the cable can result in internal disconnections in the cable. When connecting a cable to a connector, be careful not to insert the plug in the reverse orientation. Reverse insertion can result in damage to this product itself or to connected equipment.

The power supply for this product can be selected from two options (the DC jack or the USB cable). The jumper JP2 (on the top side of the circuit board) is used to select the power supply. Always check the jumper position before connecting a power source. An incorrect jumper position can result in damage to this product or the PC connected over the USB cable.

Do not handle this product with wet hands. This can lead to failure of the product.

Transport methods:



When transporting this product, use the product's packing box and cushioning materials and ship it with precision equipment handling. If the products packing is insufficient, it may be damaged during shipping.

If it must be transported by some other method, pack it carefully as precision equipment. When packing this product, always use the antistatic pouch included with this product. If some other pouch is used, damage to the product may be caused by electrostatic discharge.

Abnormal operation:



If operation of this product becomes abnormal due to interference from, for example, external noise, apply the following procedure.

1. Turn off the power.
2. Wait 10 seconds and then turn the power back on.

Disposal:





When disposing of this product, handle it as industrial waste according to all applicable laws.



European Union regulatory notices:

The WEEE (Waste Electrical and Electronic Equipment) regulations put responsibilities on producers for the collection and recycling or disposal of electrical and electronic waste. Return of WEEE under these regulations is applicable in the European Union only. This equipment (including all accessories) is not intended for household use. After use the equipment cannot be disposed of as household waste, and the WEEE must be treated, recycled and disposed of in an environmentally sound manner. Renesas Electronics Europe GmbH can take back end of life equipment, register for this service at ["http://www.renesas.eu/weee"](http://www.renesas.eu/weee).

Electromagnetic Environment

 Electromagnetic Environment	
	<ul style="list-style-type: none"> • This product generates electromagnetic emissions in an industrial environment. Use in a residential environment may affect other equipment. • This product requires special EMC precautions and should be used in accordance with the EMC information provided below.

EMI: Electro Magnetic Interference			
Standard		Level	Guidance for EMC protection
Test Item	EN 55011 :2016/A1:2017/A2:2021	Group1 Class A	This product has no intentional external emissions, but internal RF emissions may affect nearby electromagnetically sensitive electronic equipment.
Radiated Emissions			
Conducted Emissions			

EMS: Electro Magnetic Susceptibility			
Standard		Level	Guidance for EMC protection
Radio Frequency Electromagnetic Field	EN IEC 61000-4-3: 2020	A* ¹	<p>This product is intended for use in electromagnetic environments in industrial settings. The user of the product should pay particular attention to the following electromagnetic immunity.</p> <ul style="list-style-type: none"> • Power supply quality • Protection against static electricity • Protection against external high-power radio waves • Protection against external magnetic fields
Electrical Fast Transient / Burst	EN 61000-4-4: 2012	B* ²	
Surge	EN 61000-4-5: 2014/A1:2017	B* ³	
Conducted Disturbance, Induced by Radio Frequency	EN 61000-4-6:2014	A* ⁴	
Power Frequency Magnetic Field	EN 61000-4-8: 2010	A* ⁵	
Voltage Dips and Interruptions	EN IEC 61000-4-11: 2020	B or C* ⁶	

^{*1} Test Condition of Radio Frequency Electromagnetic Field

Test Level	Dwell Time	Modulation	Frequency Step	Antenna Polarization	Result
3V/m (80MHz – 1.0GHz)	1.0sec	1kHz AM 80%	1.0%	Horizontal / Vertical	Pass
3V/m (1.4GHz – 6.0GHz)					Pass

^{*2} Test Condition of Electrical Fast Transient / Burst

Test Level	Wave Form	Repetition Frequency	Testing Duration	Result
±1.0kV	Rise time: 5.0nsec Pulse Duration: 50nsec	5kHz	60sec	Pass
		100kHz		Pass

^{*3} Test Condition of Surge

Test Level	Wave form Specification	Phase Angle	Result
±0.5kV	Front time: 1.2 / 8.0 µsec Time to half value: 50 / 20 µsec	0°, 90°, 180°, 270°	Pass
			Pass

^{*4} Test condition of Conducted Disturbance, Induced by Radio Frequency

Test Level	Dwell Time	Modulation	Frequency Step	Result
3V (0.15MHz – 80MHz)	1.0 sec	1kHz AM 80%	1.0%	Pass

^{*5} Test Condition of Power Frequency Magnetic Field

Test Level	Applied Power Frequency	Test Duration	Result
3A/m (rms)	50Hz	60sec	Pass
	60Hz		Pass

^{*6} Test Condition of Voltage Dips and Interruptions

Test Item	Test Level	Duration	Phase Angle	Result
Voltage Dips	0%	0.5 cycles	0°, 180°	Pass
		1.0 cycles		Pass
	70%	25 cycles		Pass
Voltage Interruptions	0%	250 cycles		Pass

Table of Contents

1.	Overview.....	1
1.1	Purpose.....	1
1.2	Main Characteristics and Functions.....	1
1.3	Board Specifications	2
1.4	Regulatory Compliance Notices	3
1.4.1	European Union Regulatory Notices.....	3
2.	CPU Board.....	4
2.1	System Block Diagram.....	4
2.2	Product Configuration	5
2.3	Hardware Details	6
2.3.1	Default Jumper and Slide Switch Settings	6
2.3.2	Power Supply	7
2.3.3	Clock Circuit	8
2.3.4	Reset Circuit and On-chip Debug Interface	9
2.3.5	Push Switch and LED Specifications	10
2.3.6	USB Serial Conversion	11
2.3.7	Regarding CPU Board Modifications	11
2.3.8	CTSU Correction Function Circuit.....	11
2.3.9	Expansion Connector Specifications	12
2.3.10	Application Header Specifications	13
3.	Application Board (Self-capacitance electrode board)	14
3.1	Board Layout.....	14
3.2	Application Headers.....	14
4.	Reference Materials.....	16
5.	Additional Information	17

RL78/F25

Capacitive Touch Evaluation System User's Manual

1. Overview

1.1 Purpose

The RL78/F25 Capacitive Touch Evaluation System (RTK7F125FPST0000BJ) is a kit created for evaluating the RL78/F25 Capacitive Touch Sensing Unit (CTSUS). This manual describes the RL78/F25 Capacitive Touch Evaluation System's hardware.

1.2 Main Characteristics and Functions

The main functions of the RL78/F25 Capacitive Touch Evaluation System are as follows:

- Renesas Microcontroller programming and debugging
 - E2/E2 Lite debugger connector
- General purpose switches and LEDs
- Capacitive Touch Sensor (CTSUSLa)
 - 31 channels available
- Connects to Renesas Capacitive Touch Evaluation System Application Board (option)
 - Includes self-capacitance touch electrode application board

1.3 Board Specifications

Table 1-1 CPU Board Specifications

Item	Specifications
Model name	RTK7F125FPCT0000BJ
MCU	Model No.: R7F125FPL
	Package: 100-pin LQFP
	On-chip memory: ROM 512 KB, RAM 40 KB, Data flash memory 16 KB
	High-speed on-chip oscillator (f_{IH}): Max. 40 MHz
Input clock	Main clock: 2 MHz to 20 MHz (option)
	Sub clock: 32.768 KHz (option)
Power supply	Operation voltage: 3.3 V to 5.0 V <ul style="list-style-type: none"> DC jack: 7 V to 12 V (+/- 5 %) USB bus powered (VBUS): 5 V
Debug interface	Renesas Electronics E2/E2 Lite 14-pin box header
Slide switch	Selecting board functions: 2 pole × 2
Push switches	Reset switch × 1
	User switches × 2
LEDs	Power status: Red × 1
	User LEDs: Green × 2
USB serial conversion interface	Connector: USB Type C
	Driver: FT234XD USB serial IC (manufactured by FTDI)
Application board interface (GPIO)	2.54 mm pitch, 16 pins × 1 (CN1)
Application board interface (CTSU)	2.54 mm pitch, 40 pins × 1 (CN2)
MCU interface	2.54 mm pitch, 28 pins × 2 (CN6, CN7: option)
Current consumption	500 mA or less (Total value when all interfaces are used)
Operating temperature range	When operating: 10 to 35 [°C], In storage: - 10 to 50 [°C] (no condensation)
Board dimensions (L × W × H)	89 mm × 95 mm × 18 mm (including connectors)

Table 1-2 Application Board Specifications

Item	Specifications
Model name	RTK0EG0019B01002BJ
Self-capacitance detection touch electrodes	<ul style="list-style-type: none"> Buttons: 3 Wheel (4-electrode configuration): 1 Sliders (5-electrode configuration): 1
Touch electrode shields	1 shield each for button, wheel, and slider areas
LEDs	16
Renesas MCU Cap Touch CPU board interface	<ul style="list-style-type: none"> 2.54 mm pitch, 16 pins × 1 (CN1) 2.54 mm pitch, 40 pins × 1 (CN2)
Overlay panel	2mm-thick acrylic panel
Current consumption	500 mA or less
Operating temperature range	When operating: 10 to 35 [°C], In storage: - 10 to 50 [°C] (no condensation)
Board dimensions (L × W × H)	110 mm × 116 mm × 11 mm (including connectors)

1.4 Regulatory Compliance Notices

1.4.1 European Union Regulatory Notices

This product complies with the following EU Directives. (These directives are only valid in the European Union.)

CE Certifications:

- Electromagnetic Compatibility (EMC) Directive 2014/30/EU
EN IEC 61326-1: 2021 Group1 Class A

WARNING:	This is a Class A product. This equipment can cause radio frequency noise when used in the residential area. In such cases, the user/operator of the equipment may be required to take appropriate countermeasures under his responsibility.
-----------------	--

- Information for traceability
 - Authorised representative
 - Name: Renesas Electronics Corporation
 - Address: Toyosu Foresia, 3-2-24, Toyosu, Koto-ku, Tokyo 135-0061, Japan
 - Manufacturer
 - Name: Renesas Electronics Corporation
 - Address: Toyosu Foresia, 3-2-24, Toyosu, Koto-ku, Tokyo 135-0061, Japan
 - Person responsible for placing on the market
 - Name: Renesas Electronics Europe GmbH
 - Address: Arcadiastrasse 10, 40472 Dusseldorf, Germany
 - Trademark and Type name
 - Trademark: Renesas
 - Product name: RL78/F25 Group Capacitive Touch Evaluation System
 - Type name: RTK7F125FPST0000BJ

Environmental Compliance and Certifications:

- Waste Electrical and Electronic Equipment (WEEE) Directive 2012/19/EU

2. CPU Board

2.1 System Block Diagram

Figure 2-1 shows the system block diagram of the CPU board.

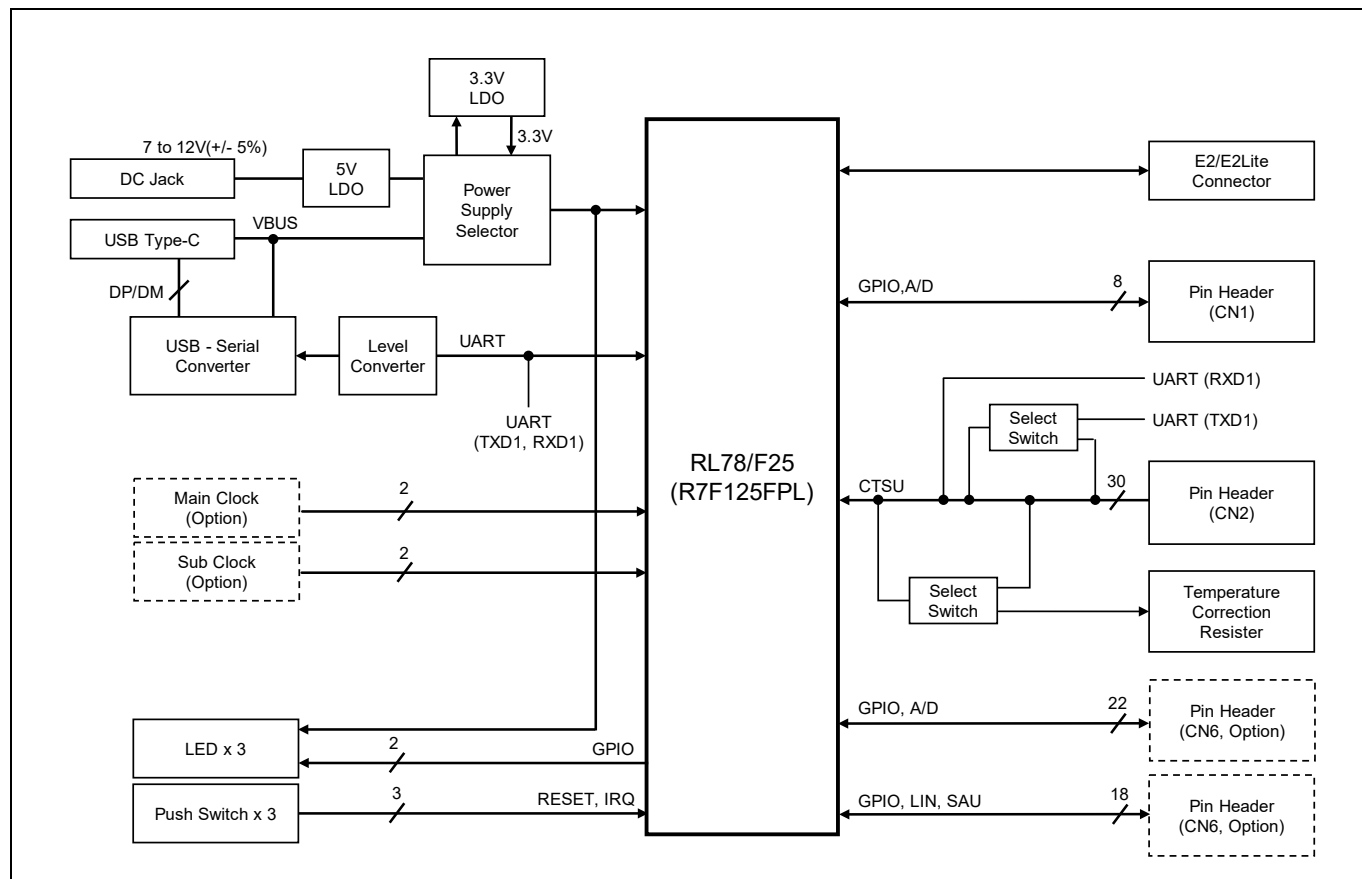


Figure 2-1. System Block Diagram

2.2 Product Configuration

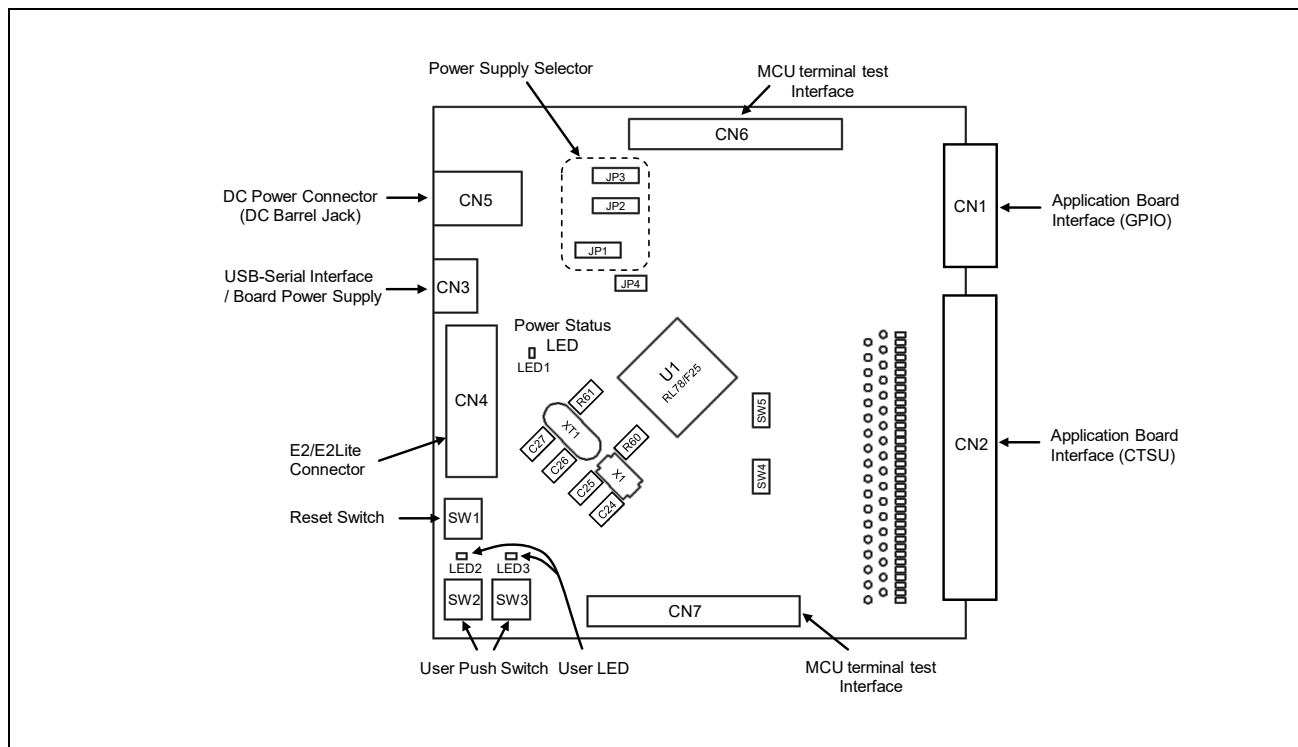


Figure 2-2. RL78/F25 Cap Touch CPU System Board (Top side)

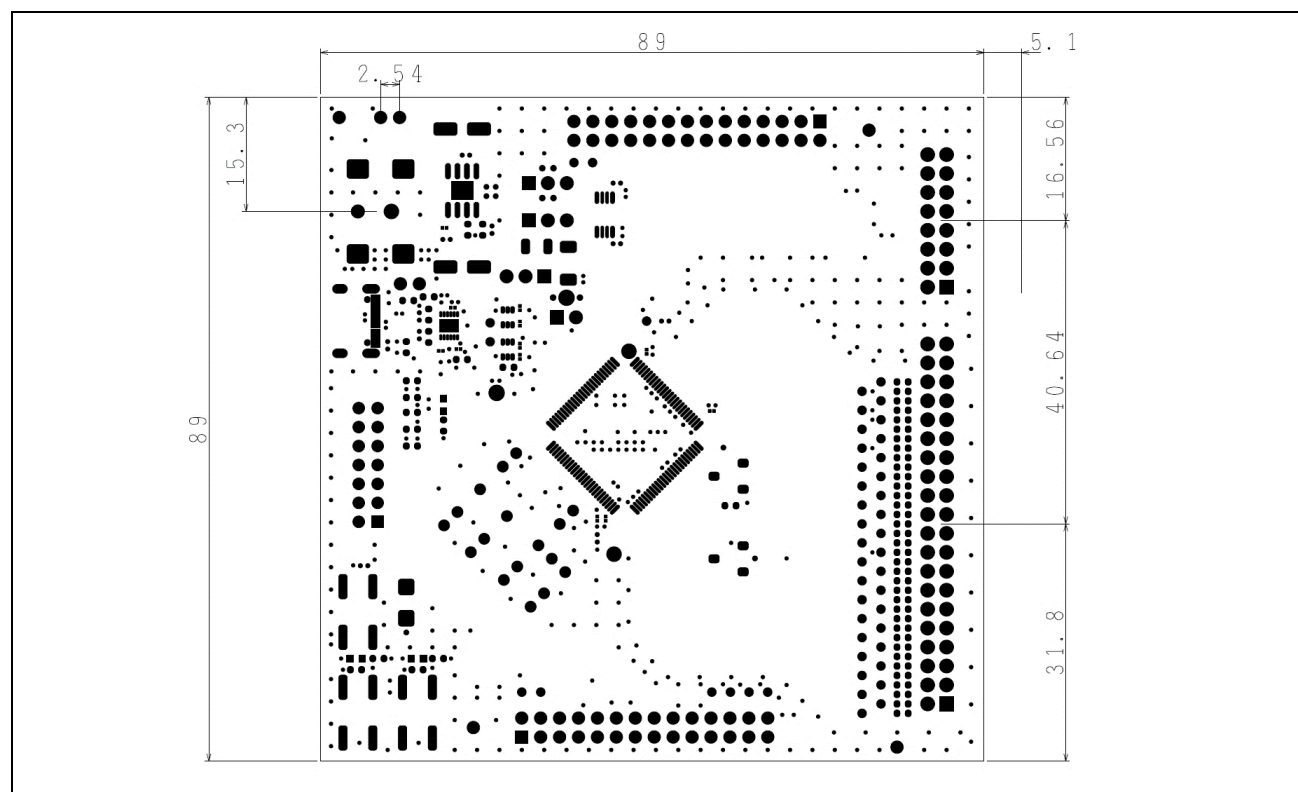


Figure 2-3. RL78/F25 Cap Touch CPU System Board Dimensions

2.3 Hardware Details

2.3.1 Default Jumper and Slide Switch Settings

Figure 2-4 shows the default positions of the jumpers and slide switches.

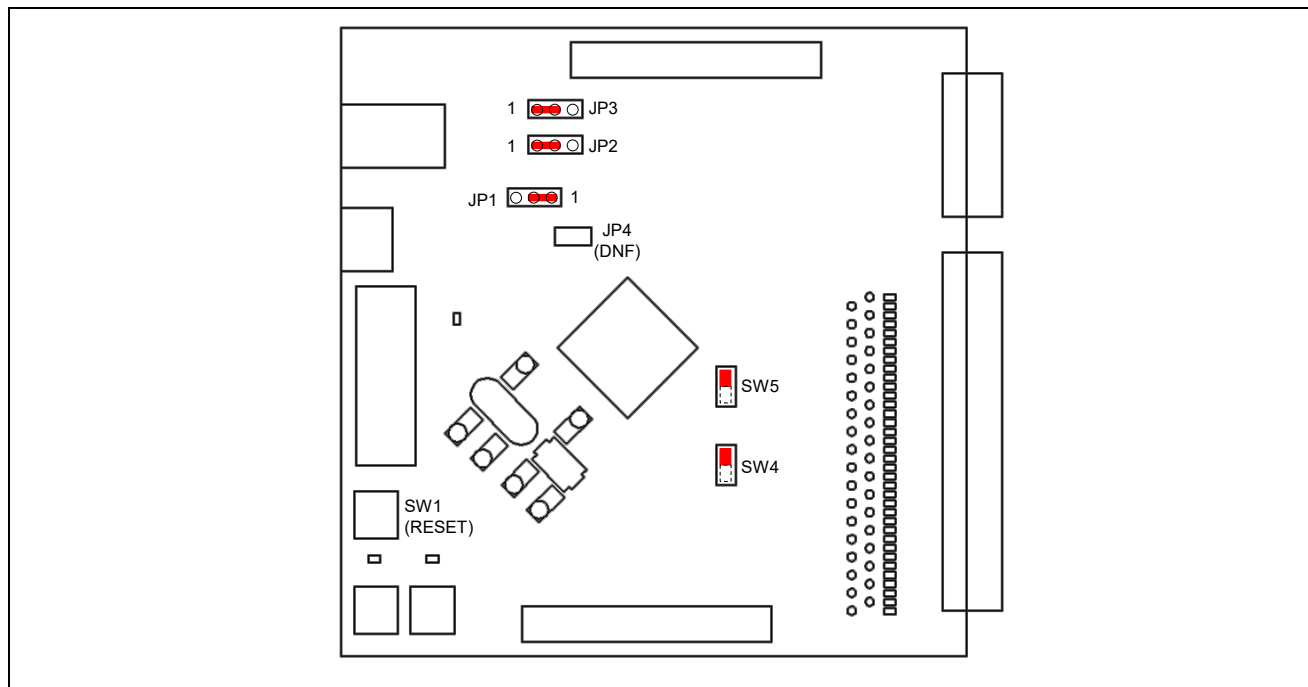


Figure 2-4. Default Jumper Positions

Table 2-1 Default Jumper and Slide Switch Settings

Reference	Overview	Default state	Description
JP1	Power supply (USB or DC jack)	Supplies USB power to board	2.3.2 Power Supply
JP2, 3	Use of LDO (3.3 V)	LDO not used	
SW4	Select the function of 42-pin of RL78/F25 (TS11 or (TXD1))	(TXD1) (Used for USB serial conversion)	2.3.6 USB Serial Conversion
SW5	TS15 pin of RL78/F25 connection destination (pull-down or CN2)	Connect to CN2	2.3.8 CTSU Correction Function Circuit

2.3.2 Power Supply

Table 2-2 provides the power supply jumper settings. Figure 2-5 the power source system diagram. Use jumpers (JP1, 2, 3, and 4) to select the power supply to be used. This CPU board can be supplied with power by USB or a 2.1mm DC barrel jack connector (center: + pin).

Table 2-2 Power Supply Source Jumper Settings

Reference	Jumper setting	Default setting (X)	Description
JP1	Shorted Pin 1-2	X	Select USB power supply for CPU board power supply
	Shorted Pin 2-3		Select DC jack (CN5) power supply for CPU board power supply
JP2, JP3	Shorted Pin 1-2	X	Select JP1 power supply for CPU board power supply
	Shorted Pin 2-3		Select LDO (3.3 V) for CPU board power supply
JP4 / PAD1	Shorted	X	Provides board power to the MCU
	Open		MCU current consumption measurement setting

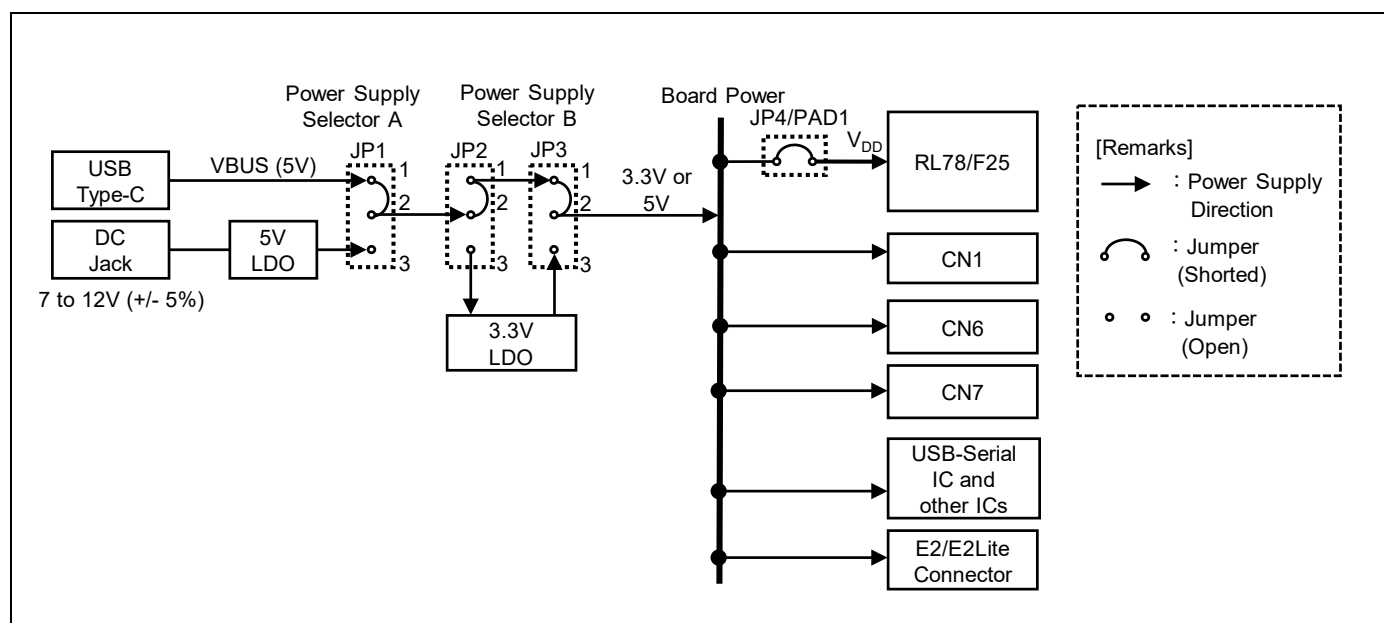


Figure 2-5. Power Supply System Diagram

2.3.3 Clock Circuit

This CPU board does not have an oscillator mounted on X1 and XT1. This CPU board is equipped with a socket so that an oscillator circuit can be mounted if necessary. In addition, the capacitors and resistors in the clock circuit are implemented via sockets as shown in Figure 2-6. The initial implementation of these pins is in the unused pin processing state. When using an external oscillator, please change these as well.

Table 2-3 Clock Circuit Specifications

Reference	Function	Default state	Frequency	Socket type
X1	Main clock	Not mounted	2 to 20 MHz	3-pin (2.54 mm pitch)
XT1	Sub clock	Not mounted	32.768 kHz	2-pin (5.08 mm pitch)

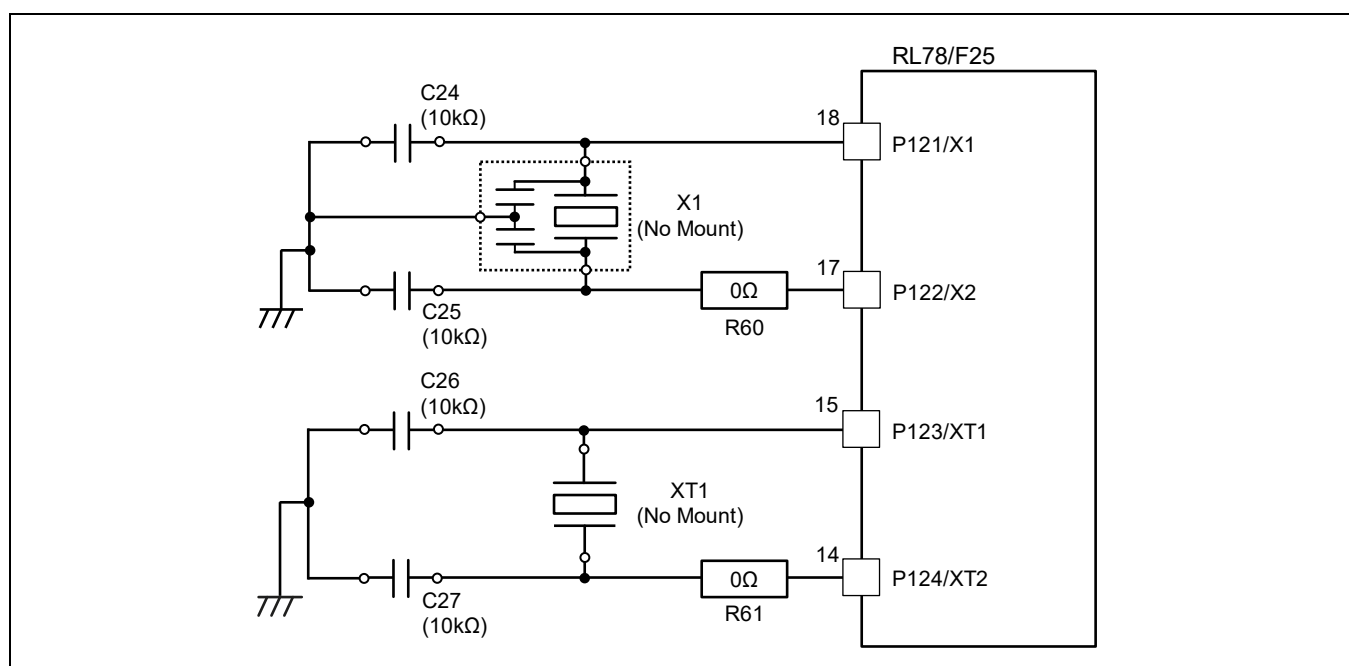


Figure 2-6. Clock Circuit

2.3.4 Reset Circuit and On-chip Debug Interface

This CPU board can generate a reset signal using the reset switch (SW1) on the CPU board.

This CPU board provides E2/E2 Lite emulator connector (14-pin box connector) for the debug interface.

Figure 2-7 shows the connection diagram between RL78/F25 product and debug interface connector (CN4).

For details on the debug interface, see [2] in "4. Reference Materials".

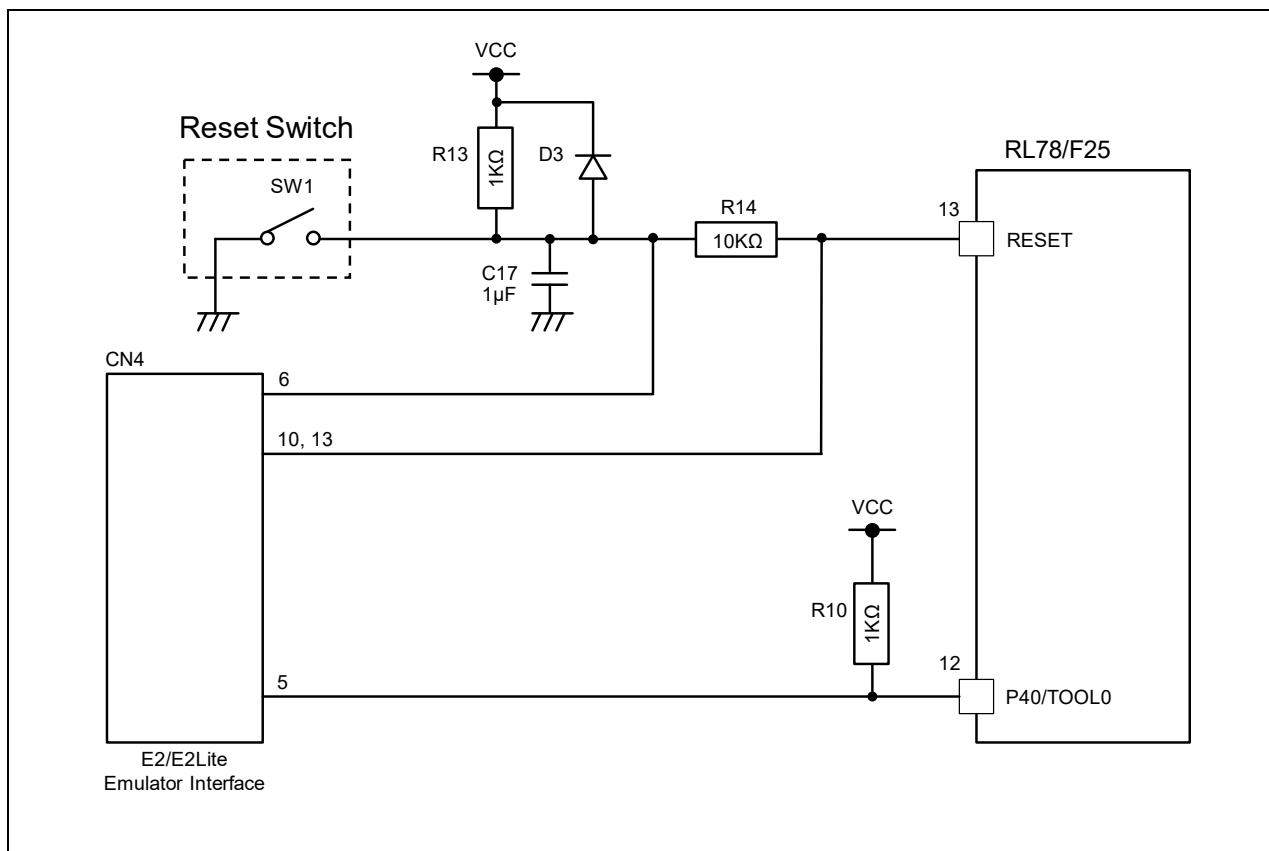


Figure 2-7. Reset Circuit and Debug Interface

2.3.5 Push Switch and LED Specifications

Table 2-4 Push Switch Specifications

Switch	Connection to MCU	Function
SW1 (Reset)	RESET	Resets the MCU.
SW2	P137/INTP0	User controllable switch.
SW3	P31/(INTP2)	User controllable switch.

Table 2-5 LED Specifications

LED	Connection to	Function	Color
LED1 (Power)	VCC	Power supply status	Red
LED2	P106	User controllable LED	Green
LED3	P107	User controllable LED	Green

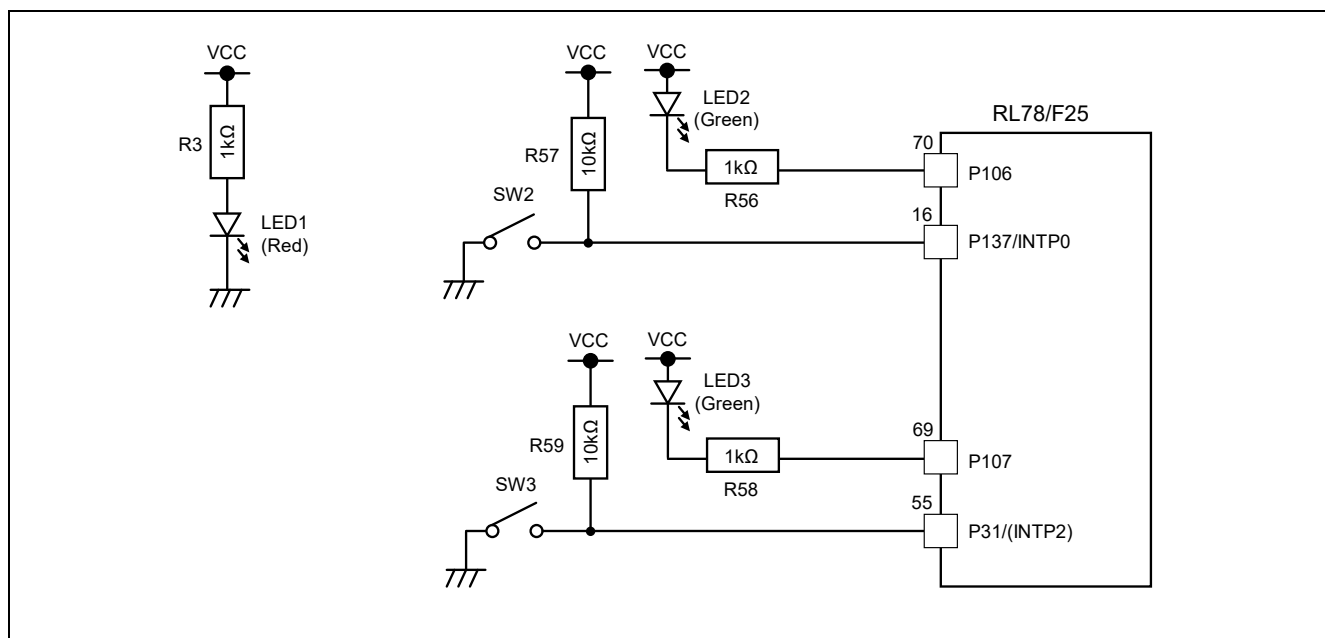


Figure 2-8. Push Switch and LED Circuit

2.3.6 USB Serial Conversion

The RL78/F25 Cap Touch Evaluation System Board is equipped with USB serial IC FT234XD (FTDI Ltd.) for USB serial conversion. The FT234XD is connected to the RL78/F25 serial array unit (SAU).

Table 2-6 MCU Port Used for USB Serial Conversion

Signal name	MCU control pin	Function
TXD1	P74/(TXD1)/TS11	UART1 transmit data signal (TXD1)
RXD1	P75/(RXD1)/TS10	UART1 receive data signal (RXD1)

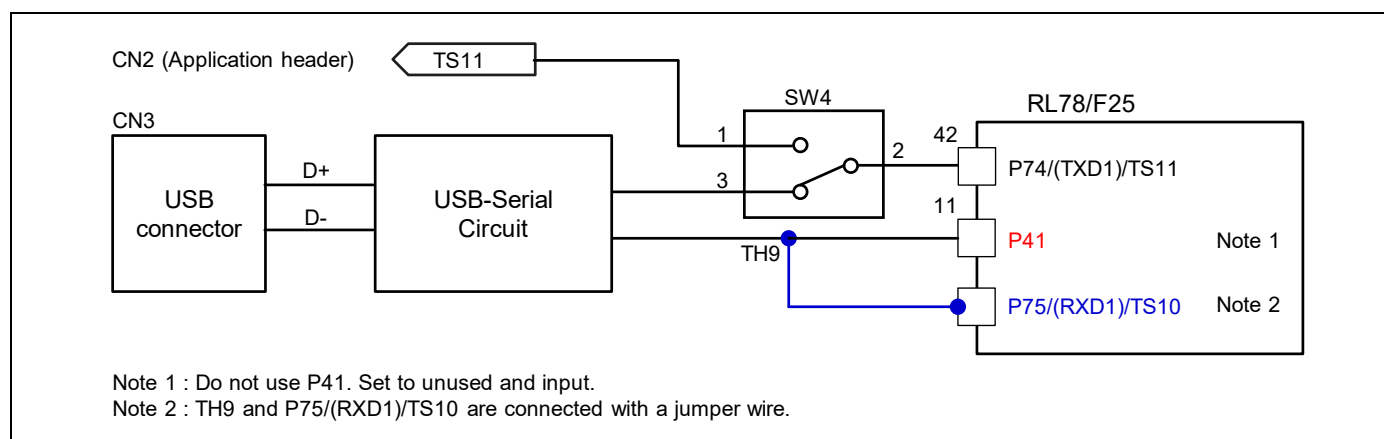


Figure 2-9. Interface Between MCU and USB Serial Conversion Circuit

2.3.7 Regarding CPU Board Modifications

This CPU board has the following two modifications done on it when shipped. When using this board, please keep these modifications on.

(1) Modification for USB serial conversion circuit

1 jumper wire (back side), resistor (R44) not mounted.

(2) Modification to suppress the voltage rise rate when the power supply is started

Add a ceramic capacitor ($47 \mu\text{F} \times 1$) between pins 15 to 16 of CN1.

2.3.8 CTSU Correction Function Circuit

This circuit is designed to improve the accuracy of capacitance measurement using the CTSU. This function requires separate control software. When using as a normal CTSU pin, set SW5 position to 2-3 short.

Table 2-7 Selection Switch for CTSU Correction Function Circuit (TS15 connection)

Reference	Position	Default setting (X)	Function
SW5	(2-3 pin)	X	Connect to CN2 (Select touch function)
	(1-2 pin)		Pull-down at 10 kΩ (Select the CTSU correction function)

2.3.9 Expansion Connector Specifications

On this CPU board, the pins of MCU (RL78/F25) are connected to connectors CN6 and CN7. The CN6 and CN7 connectors are not mounted when the product is shipped.

Table 2-8 Expansion Connector (CN6)

Pin	MCU Signal	Remarks	Pin	Port	Remarks
1	V _{DD} (VCC)		2	V _{SS} (GND)	
3	P80/ANI0/ANO0		4	P81/ANI1	
5	P82/ANI2/IVCMP00		6	P83/ANI3/IVCMP01	
7	P84/ANI4/IVCMP02		8	P85/ANI5/IVREF0/IVCMP03	
9	P86/ANI6		10	P87/ANI7	
11	P90/ANI8		12	P91/ANI9	
13	P92/ANI10		14	P93/ANI11	
15	P94/ANI12		16	P95/ANI13	
17	P96/ANI14		18	P97/ANI15	
19	P100/ANI16		20	P101/ANI17	
21	P102/ANI18		22	P103/ANI19	
23	P104/ANI20		24	P105/ANI21	
25	—	Note 1	26	—	Note 1
27	V _{DD} (VCC)		28	V _{SS} (GND)	

Note 1: Pins 25 and 26 of CN6 are not connected. There is a test pin (through holes) for connecting jumper wires.

Table 2-9 Expansion Connector (CN7)

Pin	MCU Signal	Remarks	Pin	Port	Remarks
1	V _{DD} (VCC)		2	V _{SS} (GND)	
3	—	Note 1	4	—	Note 1
5	P125/TI03/TO03/TRDIOB0/SSI01/(LRXD1)/INTP1		6	P120/TI07/TO07/(TO13)/TRDIOD0/SO01/(LTXD1)/INTP4	
7	P153		8	P152	
9	P151		10	P150	
11	P47/INTP13		12	P46/(TI12)/(TO12)	
13	P45/(TI10)/(TO10)		14	P44/(TI07)/(TO07)	
15	P43/(LRXD0)		16	P42/(LTXD0)	
17	P154/LRXD2		18	P155/LTXD2	
19	P156		20	P157	
21	P140/TRD1RES/PCLBUZ0		22	P130/RESOUT	
23	—	Note 1	24	—	Note 1
25	—	Note 1	26	—	Note 1
27	V _{DD} (VCC)		28	V _{SS} (GND)	

Note 1: Pins 3, 4, 23, 24, 25 and 26 of CN7 are not connected. There is a test pin (through holes) for connecting jumper wires.

2.3.10 Application Header Specifications

The two application headers, CN1 and CN2, can be used as interface for the user's own board.

CN1 is used for GPIO pins. For more details regarding peripheral functions not listed here, refer to the User's Manual Hardware.

CN2 is mainly used for CTSU pins. Fix the GPIO pins to low by software.

Table 2-10 Application Header Connector (CN1)

Pin	MCU Signal	Remarks	Pin	MCU Signal	Remarks
16	V _{SS} (GND)		15	V _{DD}	
14	P02/(TI06)/(TO06)		13	P01/(TI04)/(TO04)	
12	P127/(TI03)/(TO03)		11	P126/(TI01)/(TO01)	
10	—	Not connected	9	—	Not connected
8	—	Not connected	7	P30	
6	P32/TI16/TO16/INTP7		5	P03/(RTC1HZ)	
4	P00/(TI05)/(TO05)/INTP9		3	—	Not connected
2	—	Not connected	1	—	Not connected

Table 2-11 Application Header Connector (CN2)

Pin	MCU Signal	Remarks	Pin	MCU Signal	Remarks
40	—	Not connected	39	—	Not connected
38	—	Not connected	37	—	Not connected
36	P57/(TI17)/(TO17)/TS30	TS30	35	V _{SS} (GND)	
34	P56/(TI15)/(TO15)/TS29	TS29	33	V _{SS} (GND)	
32	V _{SS} (GND)		31	P55/(TI13)/(TO13)/TS28	TS28
30	P54/(TI11)/(TO11)/TS27	TS27	29	V _{SS} (GND)	
28	P10/TI13/TO13/TRJO0/ CTXD0/LTXD1/TS26	TS26	27	P11/TI12/TO12/(TRDIOB0)/ CRXD0/LRXD1/TS25	TS25
26	P13/TI04/TO04/TRDIOA0/ SDA01/LTXD0/TS24	TS24	25	P14/TI06/TO06/TRDIOC0/ SCK01/SCL01/LRXD0/TS23	TS23
24	P53/(SI01)/INTP10/TS22	TS22	23	P52/(SCK01)/(STOPST)/TS21	TS21
22	P51/(SO01)/INTP11/TS20	TS20	21	P50/(SSI01)/(INTP3)/TS19	TS19
20	P15/TI05/TO05/TRDIOA1/ (TRDIOA0)/SO00/TXD0/ RTC1HZ/TS18	TS18	19	P16/TI02/TO02/TRDIOC1/ SI00/SDA00/RXD0/TS17	TS17
18	V _{SS} (GND)		17	P17/TI00/TO00/TRDIOD1/ SSI00/INTP2/TS16	TS16
16	P70/TI15/TO15/(LTXD2)/ INTP8/TS15	TS15 (Note 1)	15	P71/TI17/TO17/(LRXD2)/ INTP6/TS14	TS14
14	P72/(CTXD0)/TS13	TS13	13	P73/(CRXD0)/TS12	TS12
12	P74/(TXD1)/TS11	TS11 (Note 2)	11	—	TS10 (Note 3)
10	P76/KR6/TS9	TS9	9	P77/INTP12/KR7/TS8	TS8
8	P67/(TI02)/(TO02)/TS7	TS7	7	P66/(TI00)/(TO00)/TS6	TS6
6	P65/(TI16)/(TO16)/TS5	TS5	5	P64/(TI14)/(TO14)/TS4	TS4
4	P63/(TO07)/(SSI00)/SDAA0/ TS3	TS3	3	P62/(TO03)/(SO00)/(TXD0)/ SCLA0/TS2	TS2
2	P61/(TO02)/(SI00)/(SDA00)/ (RXD0)/CTXD1/TS1	TS1	1	P60/(TO01)/(SCK00)/(SCL00)/ CRXD1/TS0	TS0

Note 1: The connection status changes depending on SW5. (Refer to "2.3.8 CTSU Correction Function Circuit".)

Note 2: The connection status changes depending on SW4. (Refer to "2.3.6 USB Serial Conversion".)

Note 3: R44 (resistor) is not connected because it is not mounted. (Refer to "2.3.7 Regarding CPU Board Modifications".)

3. Application Board (Self-capacitance electrode board)

3.1 Board Layout

Figure 3-1 shows the layout of the application board.

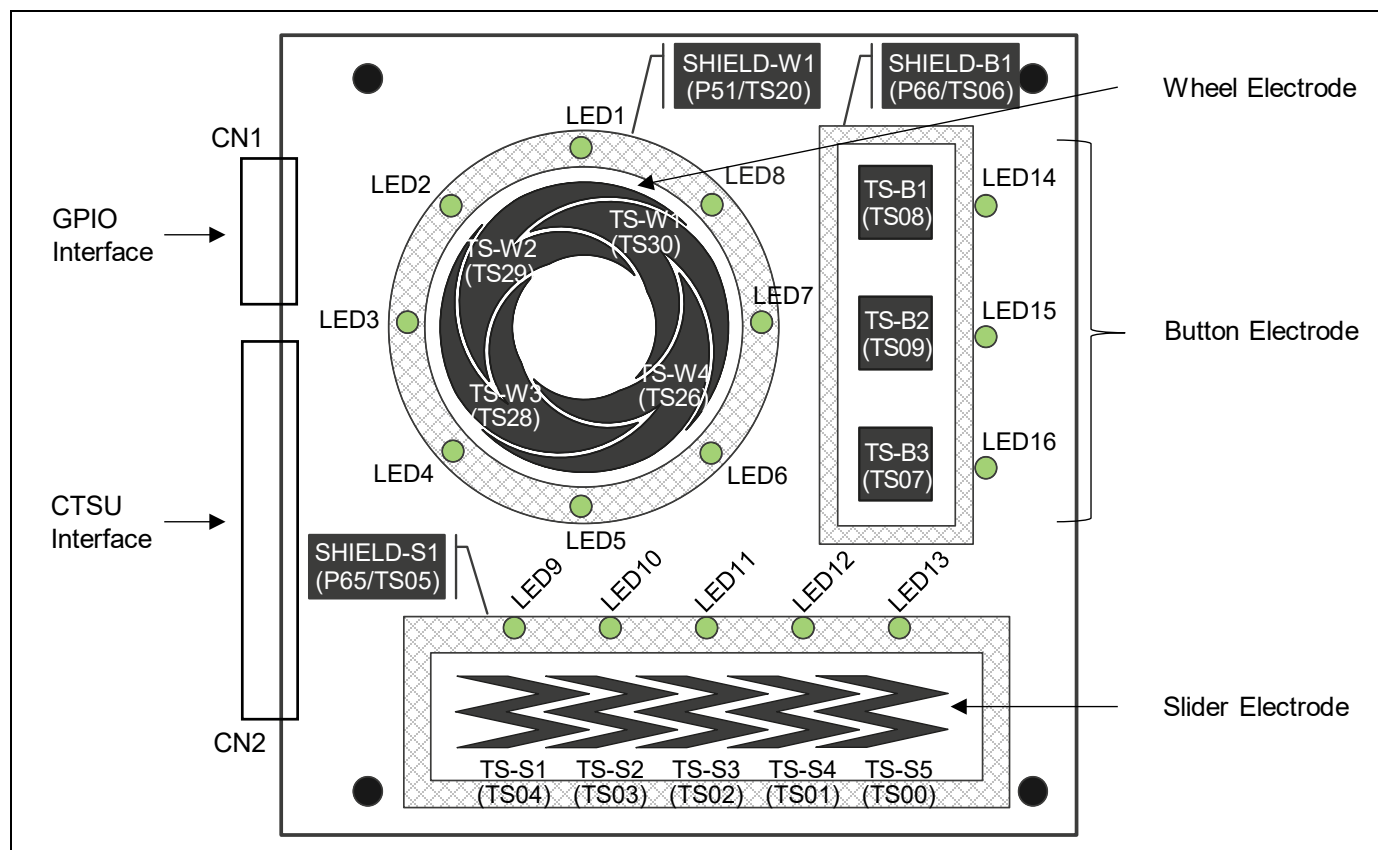


Figure 3-1. Layout of Application Board

3.2 Application Headers

Application headers (CN1, CN2) are the interface for connection to the Renesas Capacitive Touch Evaluation System CPU board. Table 3-1 lists the pin assignments for CN1. Table 3-2 lists the pin assignments for CN2.

Table 3-1 Application Header (CN1)

Pin	Function	MCU Connection	Pin	Function	MCU Connection
15	LED_VCC	V _{DD}	16	LED_VSS (GND)	V _{SS} (GND)
13	LED_ROW0	P01	14	LED_ROW1	P02
11	LED_ROW2	P126	12	LED_ROW3	P127
9	—	—	10	—	—
7	LED_COL3	P30	8	—	—
5	LED_COL1	P03	6	LED_COL2	P32
3	—	—	4	LED_COL0	P00
1	—	—	2	—	—

Remark —: Not applicable

Table 3-2 Application Header (CN2)

Pin	Touch Electrode	CTSU (RL78/F25) (Note 1)	Pin	Touch Electrode	CTSU (RL78/F25) (Note 1)
39	—	—	40	—	—
37	—	—	38	—	—
35	—	—	36	TS-W1	TS30
33	—	—	34	TS-W2	TS29
31	TS-W3	TS28	32	—	—
29	—	—	30	—	—
27	—	—	28	TS-W4	TS26
25	—	—	26	—	—
23	—	—	24	—	—
21	—	—	22	SHIELD-W1	TS20 (Note 2)
19	—	—	20	—	—
17	—	—	18	—	—
15	—	—	16	—	—
13	—	—	14	—	—
11	—	—	12	—	—
9	TS-B1	TS08	10	TS-B2	TS09
7	SHIELD-B1	TS06 (Note 2)	8	TS-B3	TS07
5	TS-S1	TS04	6	SHIELD-S1	TS05 (Note 2)
3	TS-S3	TS02	4	TS-S2	TS03
1	TS-S5	TS00	2	TS-S4	TS01

Remark —: Not applicable

Note 1: Set output of all unassigned pins to low by software.

Note 2: SHIELD-S1, SHIELD-W1 and SHIELD-B1 are shield electrodes. Set the shield electrode to active shield or the pin output of the shield signal to low by software.

Table 3-3 LED Matrix Table

	LED_COL0	LED_COL1	LED_COL2	LED_COL3
LED_ROW0	LED1	LED5	LED13	LED9
LED_ROW1	LED2	LED6	LED14	LED10
LED_ROW2	LED3	LED7	LED15	LED11
LED_ROW3	LED4	LED8	LED16	LED12

Table 3-4 LED Status and Pin Output Settings

LED condition	Condition of connected pin [LED_ROWn]	Condition of connected pin [LED_COLn]
ON	Low	High
OFF	High	Low

Remark n = 0 to 3

4. Reference Materials

- [1]. Renesas RL78/F22, F25 Group User's Manual: Hardware (R01UH1061)
- [2]. E1/E20/E2 Emulator, E2 Emulator Lite Additional Document for User's Manual (Notes on Connection of RL78 Devices) (R20UT1994)

5. Additional Information

Support

Refer to the Integrated Development Environment help menu for more information on how to use the IDE.

Refer to the RL78/F22, F25 Group User's Manual Hardware for more information on RL78/F25 MCUs.

Online technical support, information and more is available at:

<https://www.renesas.com/support/contact.html>

For general information on Renesas microcontrollers, visit : <https://www.renesas.com/>

Trademarks

All trade names and product names used in this document are trademarks or registered trademarks of their respective companies or organizations.

Copyright

All or part of this manual may be changed without notice.

Renesas Electronics Corporation holds the copyright for this document.

Reproduction, in whole or in part, without the written consent of Renesas Electronics Corporation is prohibited.

© 2025 Renesas Electronics Corporation.

Revision History	RL78/F25 Capacitive Touch Evaluation System User's Manual
------------------	--

Rev.	Date	Description	
		Page	Summary
1.00	May.31.25	—	First edition issued

RL78/F25 Renesas Solution Starter Kit
Capacitive Touch Evaluation System User's Manual

Publication Date: Rev.1.00 May.31.25

Published by: Renesas Electronics Corporation

RL78/F25

Renesas Solution Starter Kit
Capacitive Touch Evaluation System
User's Manual



Renesas Electronics Corporation

R12UZ0149EJ0100