

# User Manual

## DA9068 GUI and Evaluation Board

### UM-PM-032

#### **Abstract**

*This document describes the hardware and software used in Dialog Semiconductor to test and evaluate the DA9068 Power Management IC.*

---

---



---

**DA9068 GUI and Evaluation Board**
**Contents**

<b>Abstract</b> .....	<b>1</b>
<b>Contents</b> .....	<b>2</b>
<b>Figures</b> .....	<b>2</b>
<b>Tables</b> .....	<b>2</b>
<b>1 Terms and Definitions</b> .....	<b>3</b>
<b>2 References</b> .....	<b>3</b>
<b>3 Introduction</b> .....	<b>4</b>
<b>4 Hardware</b> .....	<b>6</b>
4.1 Power Supplies .....	8
4.2 Jumper and Link Positions .....	10
<b>5 Software Installation</b> .....	<b>15</b>
<b>6 Configuration Tab</b> .....	<b>19</b>
6.1 Configuration Tab Details.....	20
6.2 Power Sequence .....	21
6.3 Download .....	22
6.4 Menu Items .....	22
6.5 Status and Controls.....	24
6.6 Discrete Controls.....	26
6.7 Event,Status,IRQ,SYS Tab .....	26
6.8 Control Tabs.....	27
6.9 OTP Programming .....	28
6.10 OTP Programming of Further Devices.....	29
<b>Appendix A Troubleshooting</b> .....	<b>31</b>
A.1 Software Issues.....	31
A.2 Hardware Issues .....	31
<b>Revision History</b> .....	<b>32</b>

**Figures**

Figure 1: DA9068 Block Diagram.....	5
Figure 2: DA9068 Mini Board .....	6
Figure 3: Motherboard .....	7
Figure 4: Motherboard Power Configuration .....	9
Figure 5: Default Link Locations.....	14
Figure 6: Successful Installation Procedure .....	18
Figure 7: Initial Interface .....	19
Figure 8: Power Sequence Control Window .....	21
Figure 9: OTP Tab.....	28

**Tables**

Table 1: 44-179-183-02-A Mini Board Jumpers and Link Positions.....	10
Table 2: 44-179-170-01-B Motherboard Jumpers and Link Positions .....	11
Table 3: Menu Items.....	22

---

**DA9068 GUI and Evaluation Board****1 Terms and Definitions**

ADC	Analog-to-Digital Converter
EVB	EValuation Board
GPIO	General Purpose Input/Output
GUI	Graphical User Interface
LDO	Low DropOut voltage regulator
LED	Light Emitting Diode
NTC	Negative Temperature Coefficient (thermistor)
OTP	One Time Programmable (memory)
PC	Personal Computer
PCB	Printed Circuit Board
PFM	Pulse Frequency Modulation
PMIC	Power Management Integrated Circuit
PWM	Pulse Width Modulation
RTC	Real Time Clock
USB	Universal Serial Bus

**2 References**

- [1] DA9068 Datasheet, Dialog Semiconductor.

---

## DA9068 GUI and Evaluation Board

---

### 3 Introduction

The DA9068 Evaluation Board (EVB) has been designed to allow measurement and evaluation of the DA9068 PMIC.

The simple Graphic User Interface (GUI) is called Power Commander which allows the DA9068 to be controlled via a USB port of a PC.

The EVB has a large number of jumper links to enable the user to change the system configuration and to allow appropriate measurements, although, typically, few jumper links are required to be altered for standard operations of the DA9068.

The complete evaluation kit hardware comprises two PCBs:

- EVALUATION MOTHERBOARD 44-179-170-01-B (or -C)
- CUSTOMER REFERENCE BOARD 204-03-A (DA9068 mini board)

Power Commander GUI requires a PC operating Windows 2000/XP/Vista/Windows 7 with a USB1.1 or USB2 interface.

To run Power Commander under Windows Vista, set the default installation location to C:\Dialog Semiconductor\.

Note that Dialog recommends connecting the EVB to a 500 mA capable USB port as we cannot guarantee that a USB hub (set to 100 mA) is sufficient to operate the EVB correctly. See Section 4.1.

The GUI can be used to:

- configure the DA9068
- perform write and read operations to any control register
- monitor the device status

DA9068 GUI and Evaluation Board

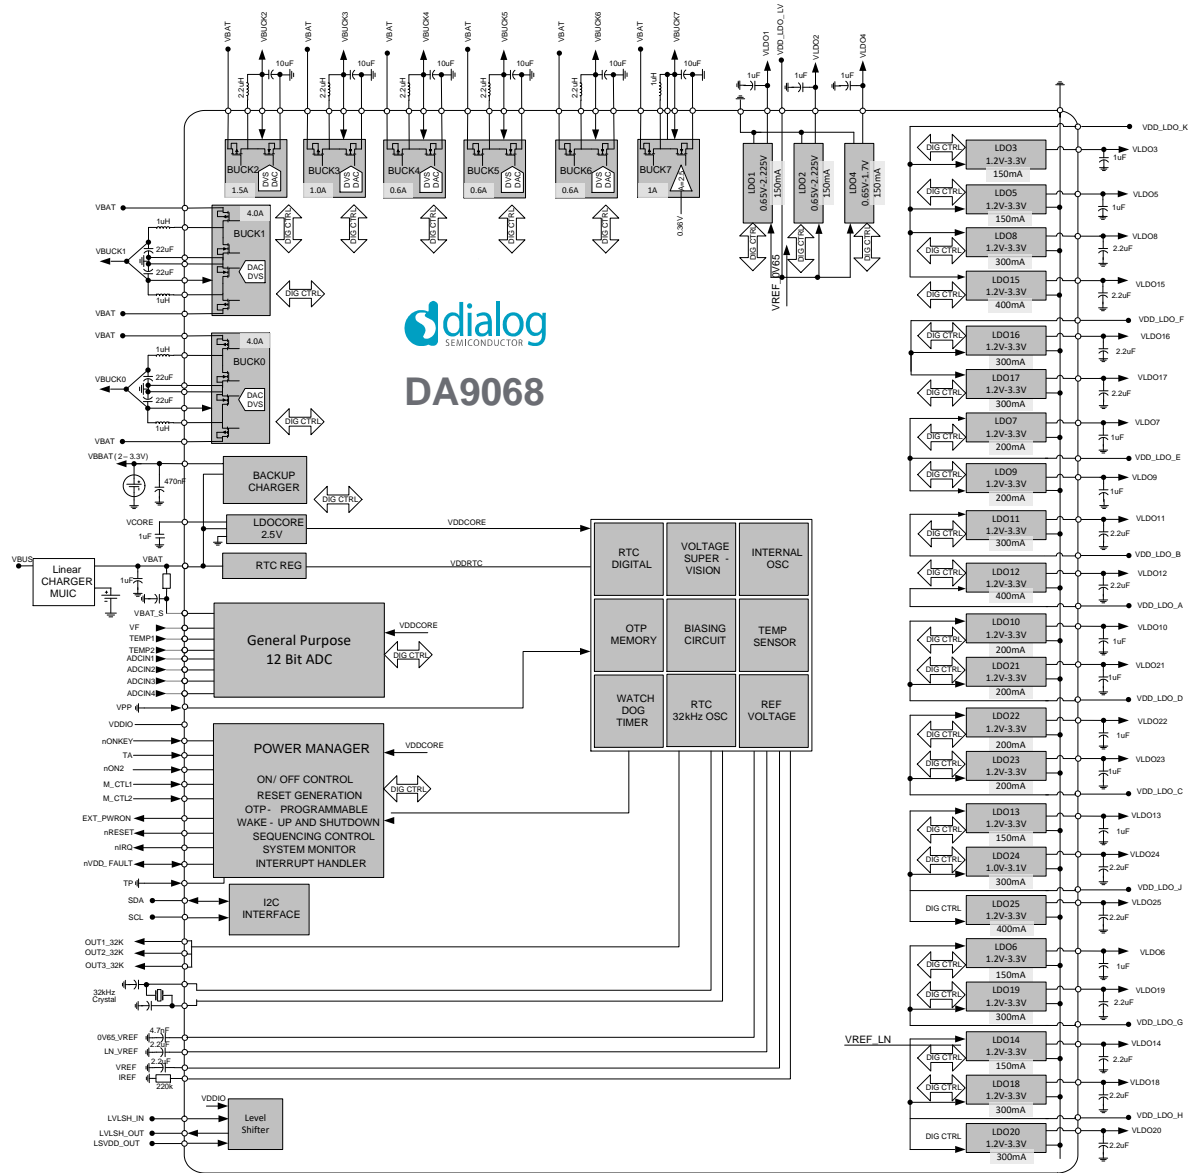


Figure 1: DA9068 Block Diagram

DA9068 GUI and Evaluation Board

### 4 Hardware

The DA9068 EVB consists of two boards:

1. A daughterboard containing the DA9068, the essential external components and headers to allow test access. This board could also be used in standalone or as a module for a customer development platform. The term daughterboard is synonymous with mini board.

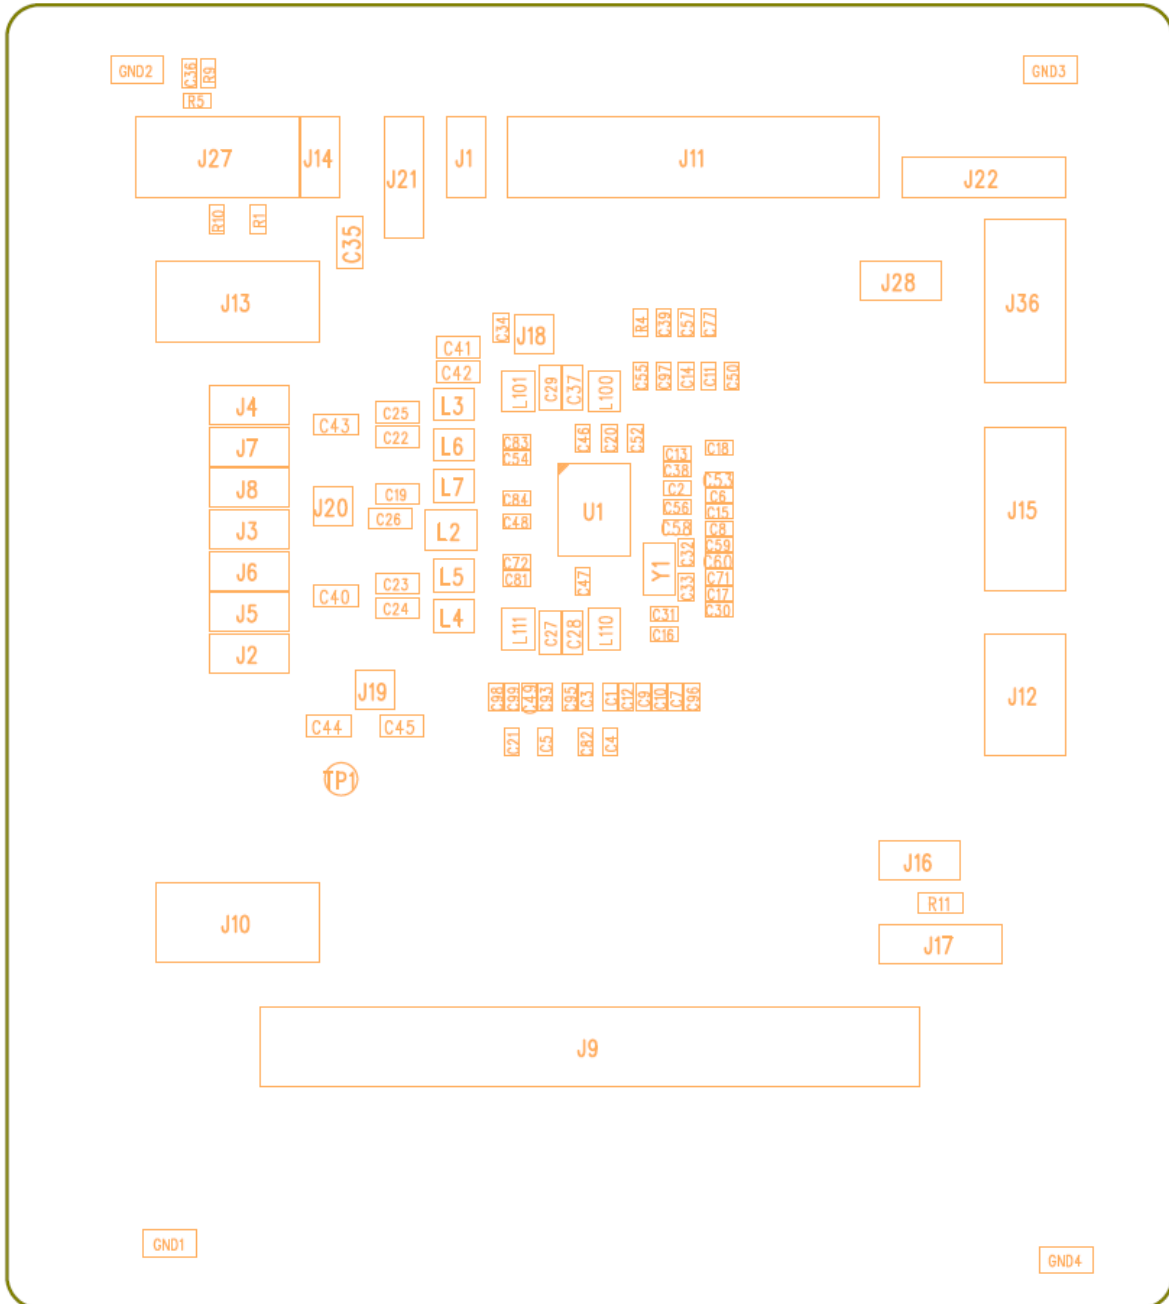


Figure 2: DA9068 Mini Board

**NOTE**  
 The EVB has been configured by default to work from the motherboard's on-board regulators.

DA9068 GUI and Evaluation Board

2. A motherboard containing many circuit blocks that allows for flexible configuration and provides test access to the DA9068. It includes:
  - a. USB Interface with Control Interface level shifters
  - b. various switches: USB reset, ONKEY, NON2, 3.3 V reset, and TP
  - c. power supply inputs (VBAT, DCIN and external +5 V (VBUS))
  - d. JTAG interface

**NOTE**

The EVB has been configured by default to rely on an external battery voltage of 3.6 V supplied via sockets J62 (VBAT) and J65 (GND). See Section 4.1 for more details.

A USB-I<sup>2</sup>C bridge is used for communication with the device, and there are a number of external active components to reduce the requirement for external circuitry.

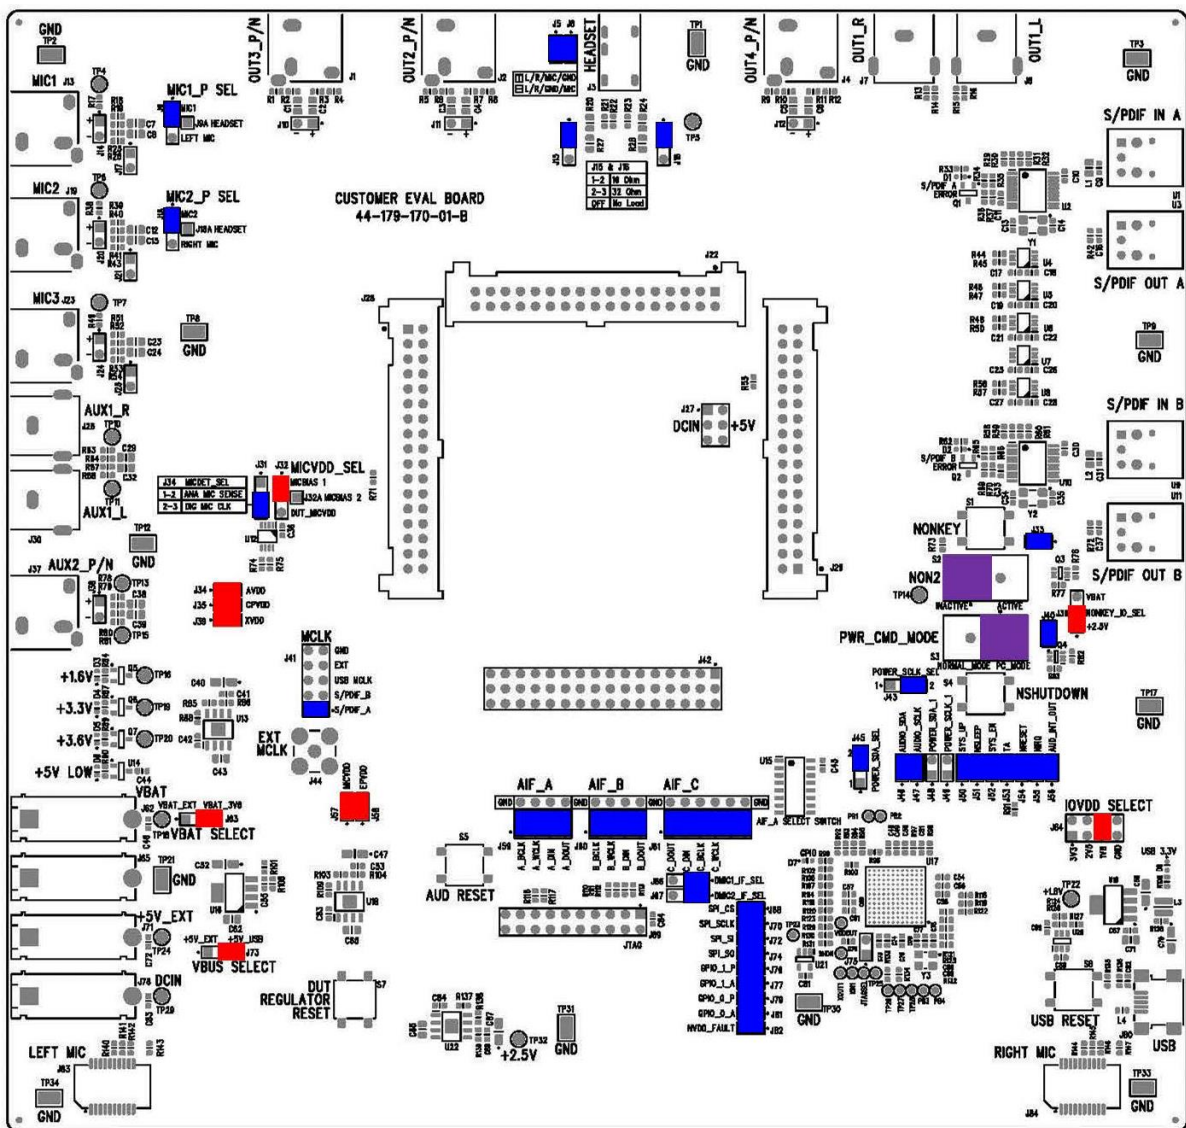


Figure 3: Motherboard

**NOTE**

The EVB also supports audio features for other products such as DA9066. These EVB features are not used for DA9068.

---

## DA9068 GUI and Evaluation Board

### 4.1 Power Supplies

The DA9068 is powered from either:

1. +5V\_DUT that can be driven from +5V\_EXT (external power supply) or +5V\_USB.
2. VBAT\_DUT that can be driven from VBAT\_EXT (external power supply) or VBAT\_3V6 (on board regulator).
3. DCIN (external power supply).

By default, the EVB is configured to require an external supply via VBAT\_EXT. **Therefore, a battery voltage, VBAT, of 3.6 V should be supplied to the motherboard via sockets J62 (VBAT) and J65 (GND).** Alternatively, the VBAT supply can be driven from the USB by setting jumper J63 to position 2-3, see [Figure 4](#). However, it should first be verified that the USB interface board can supply sufficient current.

DA9068 GUI and Evaluation Board

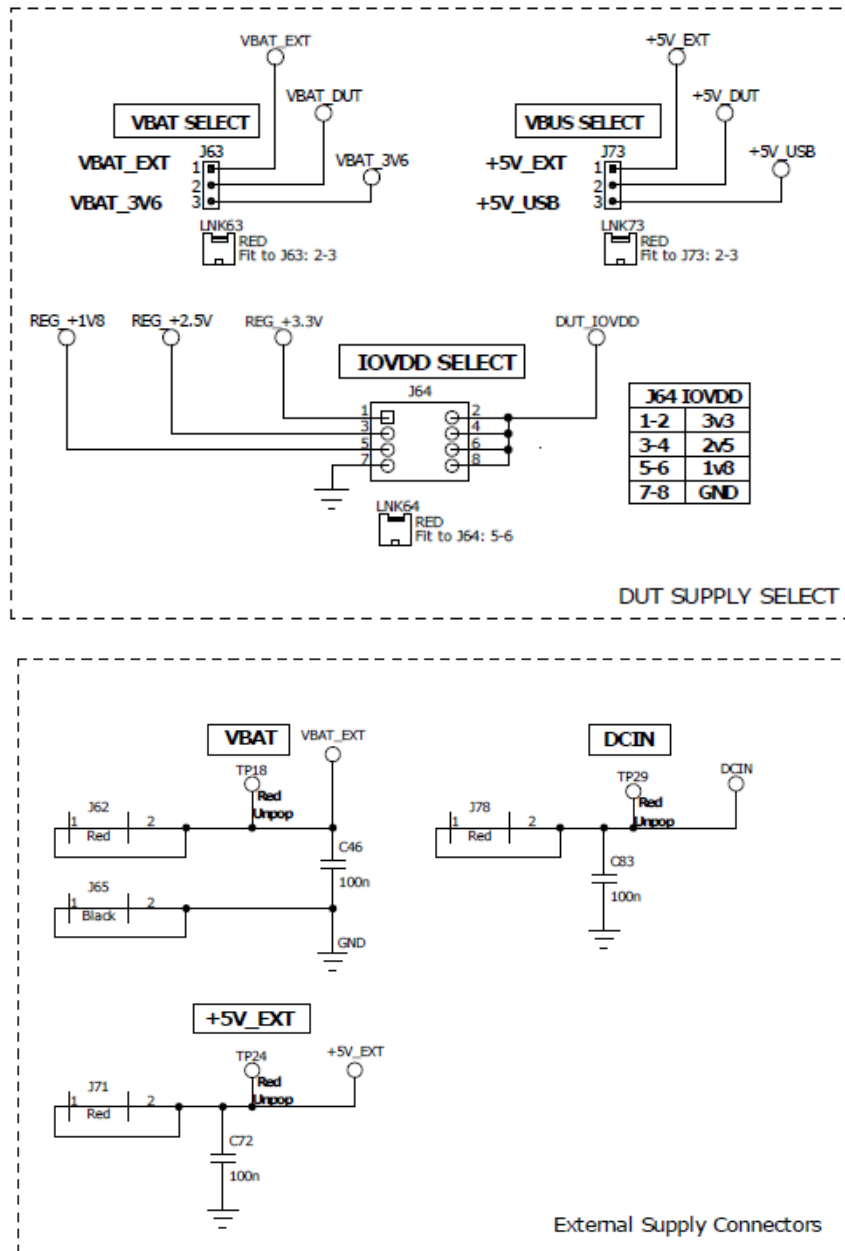


Figure 4: Motherboard Power Configuration

---



---

**DA9068 GUI and Evaluation Board**

## 4.2 Jumper and Link Positions

The mini board has the jumper and link configuration shown in [Table 1](#).

**Table 1: 44-179-183-02-A Mini Board Jumpers and Link Positions**

Jumper Number	Position	Function
J14	On, (default)	VBBAT connected to backup battery C34
J17	1-2, off	Daughterboard 1.8 V rail supplied by VBUCK4
	2-3, (default)	Daughterboard 1.8 V rail supplied by MB_VDDIO (motherboard)
J27	1-2, (default)	VBAT_S connected to VBAT
	3-4, (default)	TEMP1 connected to thermistor RT1
	5-6, (default)	TEMP2 connected to thermistor RT2
	7-8, (default)	VF connected to resistor R1
J36	1-2, (default)	ADC1 connected to GND.
	3-4, (default)	ADC2 connected to GND.
	5-6, (default)	ADC3 connected to GND.
	7-8, (default)	ADC4 connected to GND.
J28	1-2, (default)	NON2 signal connected to motherboard

## DA9068 GUI and Evaluation Board

The motherboard has the jumper and link configuration shown in [Table 2](#).

**Table 2: 44-179-170-01-B Motherboard Jumpers and Link Positions**

Jumper Number	Position	Function
J73	1-2	VBUS select: +5V_DUT connected to +5V_EXT
	2-3, (default)	VBUS select: +5V_DUT connected to +5V_USB
J63	1-2	VBAT select: VBAT_DUT connected to VBAT_EXT
	2-3, (default)	VBAT select: VBAT_DUT connected to VBAT_3V6
J63J27	1-2Off, (default)	DCIN: No connection
	1-2, 3-4, 5-6	DCIN: drives +5V_DUT
J57	On, (default)	(Not used for DA9068)
J58	On, (default)	(Not used for DA9068)
J34	On, (default)	(Not used for DA9068)
J35	On, (default)	(Not used for DA9068)
J39	On, (default)	(Not used for DA9068)
J64	1-2	Connects DUT_IOVDD to REG_+3.3 V
	3-4	Connects DUT_IOVDD to REG_+2.5 V
	5-6, (default)	Connects DUT_IOVDD to REG_+1V8
	7-8	Connects DUT_IOVDD to ground
J75	Off	Re-initialisation of the SAM3U4 Flash when fitted
J68	On, (default)	(Not used for DA9068)
J70	On, (default)	(Not used for DA9068)
J72	On, (default)	(Not used for DA9068)
J74	On, (default)	(Not used for DA9068)
J48	On, (default)	Connects DUT_POWER_SDA_1 to SAM3U4 MCU
J49	On, (default)	Connects DUT_POWER_SCLK_1 to SAM3U4 MCU
J51	On, (default)	Connects DUT_NSLEEP to SAM3U4 MCU
J52	On, (default)	Connects DUT_SYS_EN to SAM3U4 MCU
J82	On, (default)	Connects DUT_NVDD_FAULT to SAM3U4 MCU
J81	On, (default)	Connects DUT_GPIO_0_A to SAM3U4 MCU
J79	On, (default)	Connects DUT_GPIO_0_P to SAM3U4 MCU
J77	On, (default)	Connects DUT_GPIO_1_A to SAM3U4 MCU
J76	On, (default)	Connects DUT_GPIO_1_P to SAM3U4 MCU
J53	On, (default)	Connects DUT_TA to SAM3U4 MCU
J55	On, (default)	Connects DUT_NIRQ to SAM3U4 MCU
J50	On, (default)	Connects DUT_SYS_UP to SAM3U4 MCU
J56	On, (default)	(Not used for DA9068)
J54	On, (default)	Connects DUT_NRESET to SAM3U4 MCU
J33	On, (default)	Connects DUT_NONKEY to SAM3U4 MCU through level shifter
J36	1-2	NONKEY_IO_SEL: Connects level shifter to VBAT_DUT
	2-3, (default)	NONKEY_IO_SEL: Connects level shifter to REG_+2.5 V

## DA9068 GUI and Evaluation Board

Jumper Number	Position	Function
J40	On, (default)	Connects DUT_TP to SAM3U4 MCU through level shifter
J46	On, (default)	(Not used for DA9068)
J47	1-2, (default)	(Not used for DA9068)
J45	1-2	Connects DUT_POWER_SDA_1 to SAM3U4 MCU
	2-3, (default)	Connects DUT_POWER_SDA_2 to SAM3U4 MCU
J43	1-2	Connects DUT_POWER_SCLK1 to SAM3U4 MCU
	2-3, (default)	Connects DUT_POWER_SCLK_2 to SAM3U4 MCU
J59	1-2, (default)	(Not used for DA9068)
	4-5, (default)	(Not used for DA9068)
	7-8, (default)	(Not used for DA9068)
	10-11, (default)	(Not used for DA9068)
J60	1-2, (default)	(Not used for DA9068)
	4-5, (default)	(Not used for DA9068)
	7-8, (default)	(Not used for DA9068)
	10-11, (default)	(Not used for DA9068)
J61	1-2, (default)	(Not used for DA9068)
	4-5, (default)	(Not used for DA9068)
	7-8, (default)	(Not used for DA9068)
	10-11, (default)	(Not used for DA9068)
	13-14, (default)	(Not used for DA9068)
	16-17, (default)	(Not used for DA9068)
J41	1-2, (default)	(Not used for DA9068)
	3-4, off	(Not used for DA9068)
	5-6, off	(Not used for DA9068)
	7-8, off	(Not used for DA9068)
	9-10, off	(Not used for DA9068)
J9	1-2, (default)	(Not used for DA9068)
	2-3, off	(Not used for DA9068)
J17	1-2, off	(Not used for DA9068)
J14	1-2, off	(Not used for DA9068)
J18	1-2, (default)	(Not used for DA9068)
	2-3, off	(Not used for DA9068)
J21	1-2, off	(Not used for DA9068)
J20	1-2, off	(Not used for DA9068)
J25	1-2, off	(Not used for DA9068)
J24	1-2, off	(Not used for DA9068)
J31	1-2	(Not used for DA9068)
	2-3, (default)	(Not used for DA9068)

---



---

**DA9068 GUI and Evaluation Board**

Jumper Number	Position	Function
J32	1-2, (default)	(Not used for DA9068)
	2-3, off	(Not used for DA9068)
J32A	Off, (default)	(Not used for DA9068)
J66	1-2, (default)	(Not used for DA9068)
	2-3, off	(Not used for DA9068)
J67	1-2, (default)	(Not used for DA9068)
	2-3, off	(Not used for DA9068)
J38	1-2, off	(Not used for DA9068)
J16	1-2, (default)	(Not used for DA9068)
	2-3	(Not used for DA9068)
	OFF	(Not used for DA9068)
J15	1-2, (default)	(Not used for DA9068)
	2-3	(Not used for DA9068)
	OFF	(Not used for DA9068)
J5	On, (default)	(Not used for DA9068)
J6	On, (default)	(Not used for DA9068)
J11	Off	(Not used for DA9068)
J10	Off	(Not used for DA9068)
J12	Off	(Not used for DA9068)

DA9068 GUI and Evaluation Board

Figure 5 shows the default locations of all the jumper links.

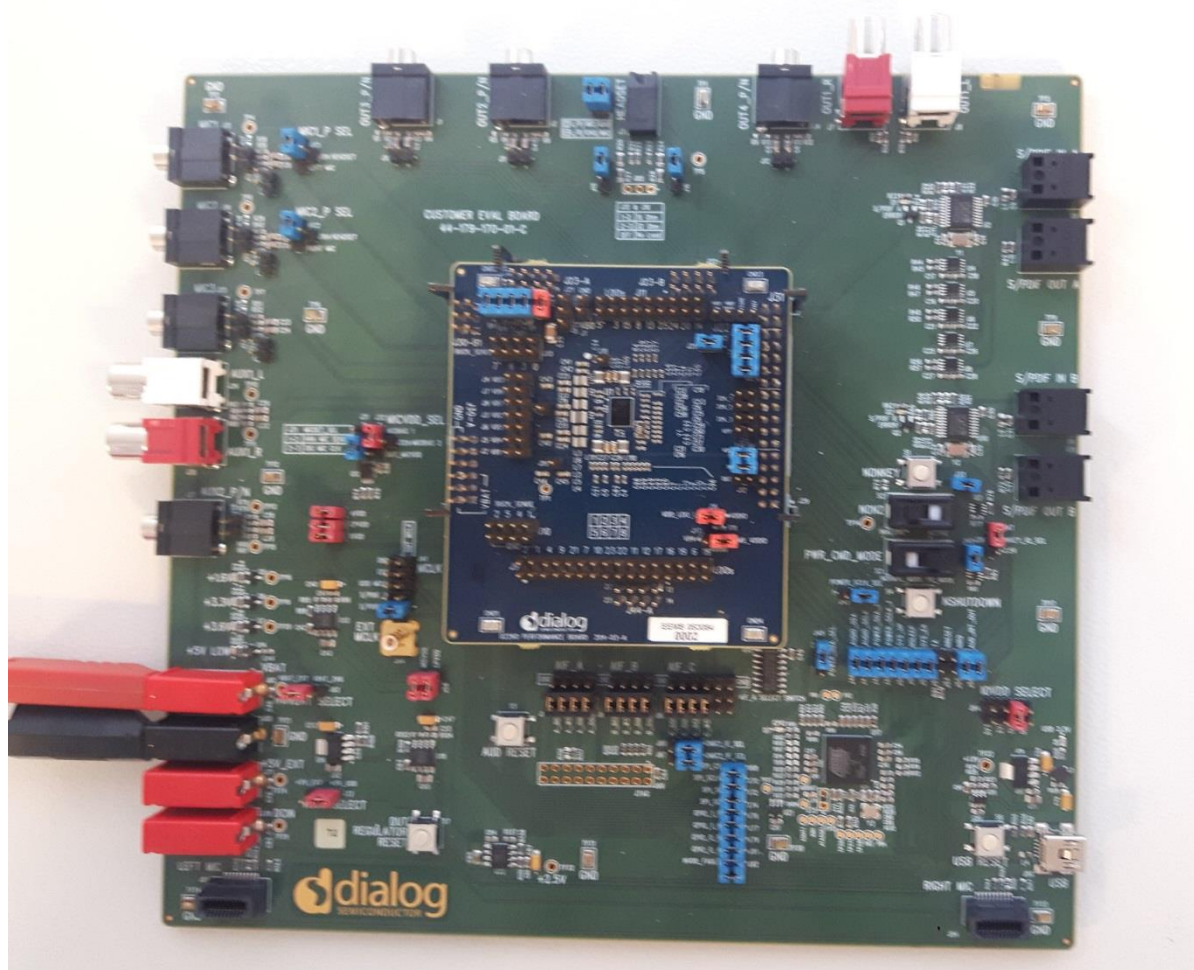



Figure 5: Default Link Locations

DA9068 GUI and Evaluation Board


## 5 Software Installation

Plug the USB stick into a spare port on your computer and run the program **setup.exe** to start the automated script. This file can be found in the Software directory.

By default, the directory C:\Dialog Semiconductor\Power Management\DA9068 is used.

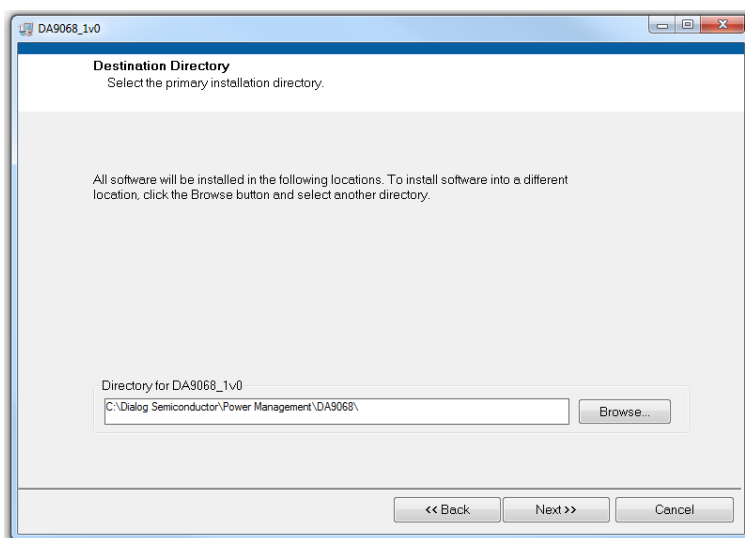


1. Click **Next** to accept the default software installation location.

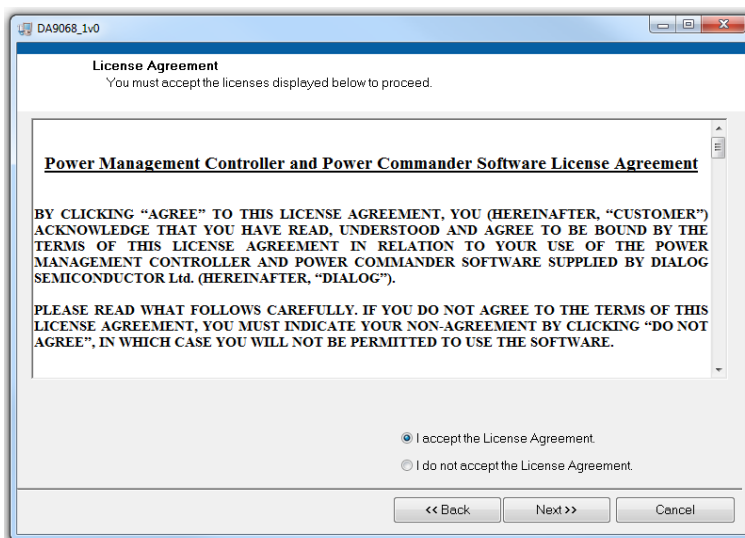


2. Click the radio button to accept the software license agreements, then **Next** twice.

## DA9068 GUI and Evaluation Board

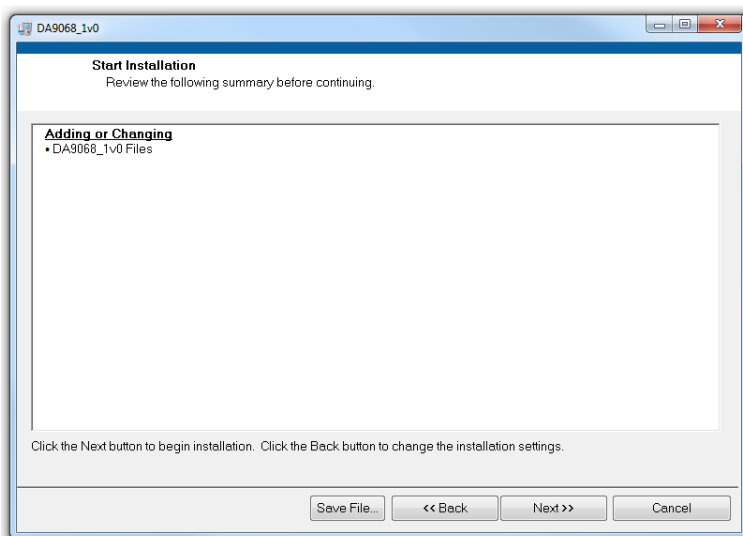

3. Click **Next** to begin the software installation.

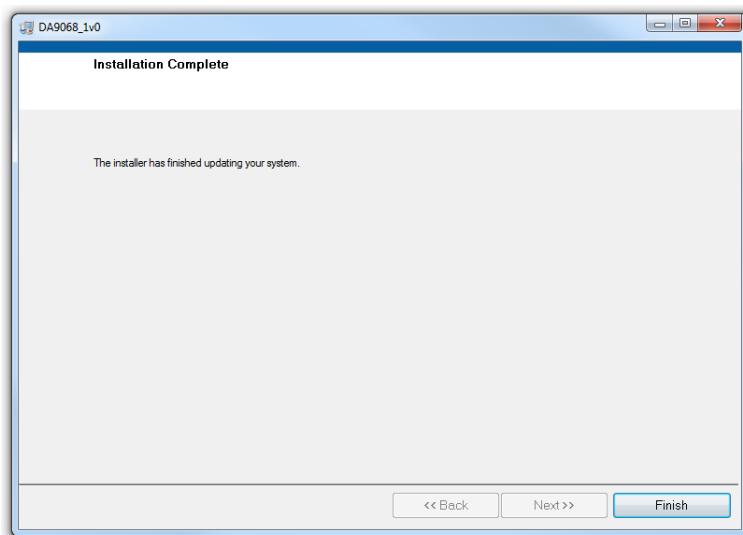


4. When the installer indicates it has finished updating, click **Finish** to complete the process.

**NOTE**



After the installation has been completed you need to restart your computer.

5. Plug in the USB cable so that Windows detects the USB device. A prompt for the drivers, which should be automatically located in the **Driver\_PID-1011** directory of the media, appears. If this does not happen automatically, open the Device Manager:

DA9068 GUI and Evaluation Board

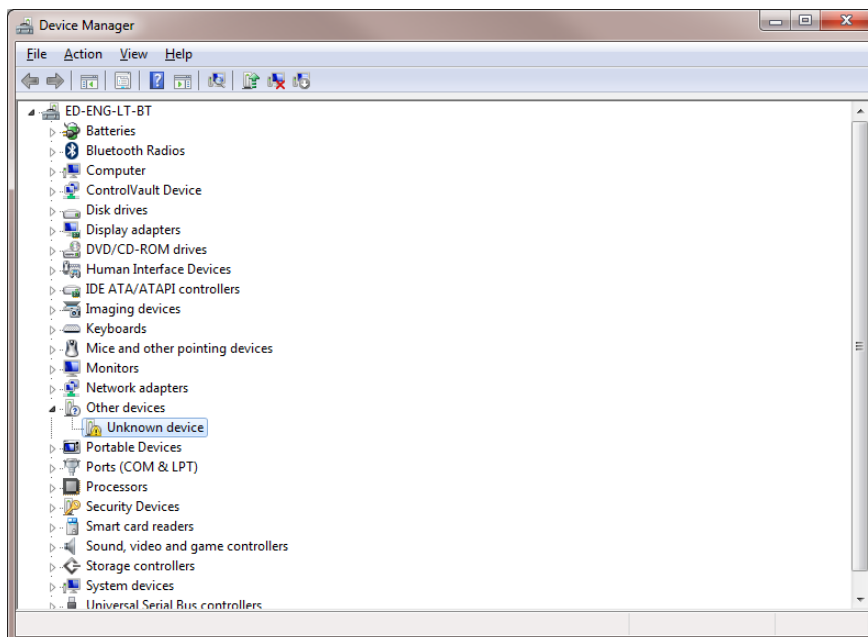


6. Double-click on the unknown Dialog device, and update the driver as shown:

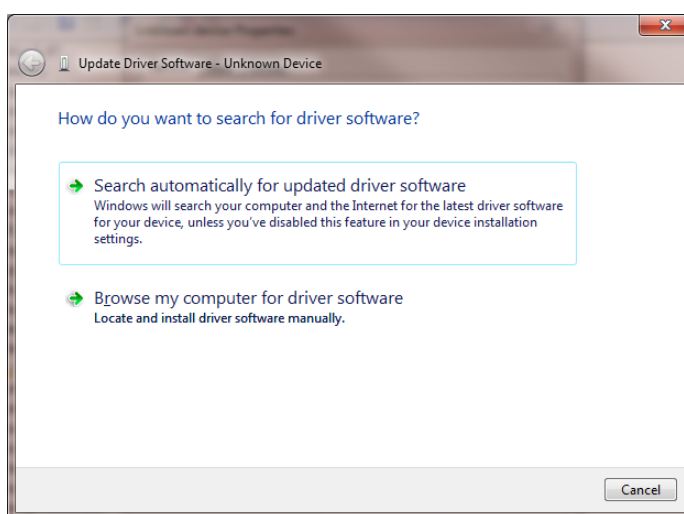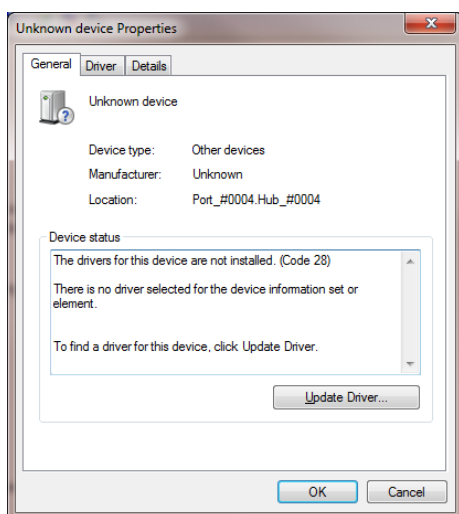


7. Click on **Update Driver** and choose **Browse my computer for driver software**.


DA9068 GUI and Evaluation Board

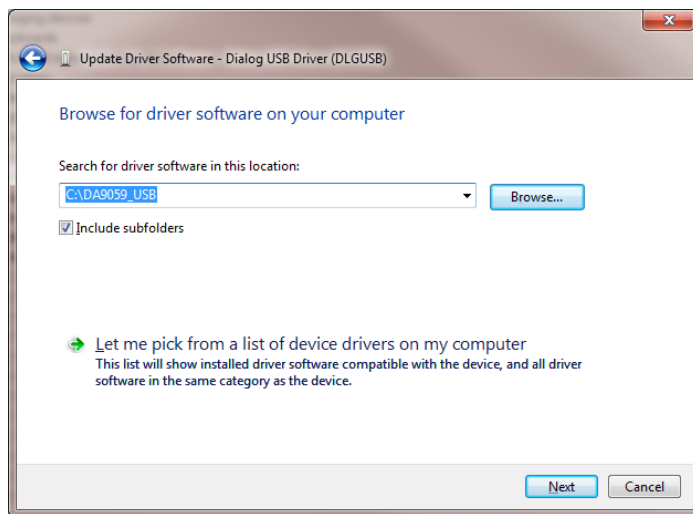

8. Click **Browse** to locate the driver in the \Software\USB\_driver folder on the memory stick.

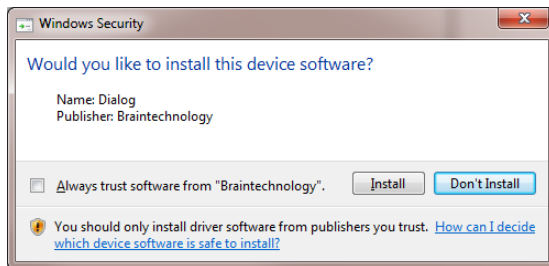

9. In the **Windows Security** dialog, click **Install**.

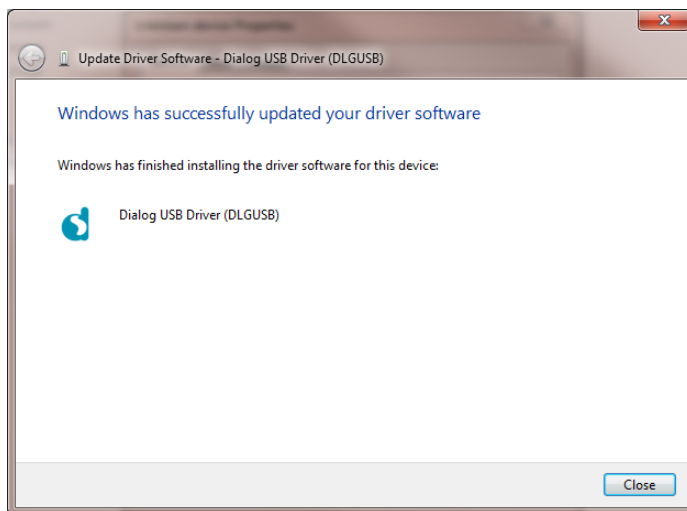

**Figure 6: Successful Installation Procedure**

The **Device Manager** tab now shows **Dialog USB Devices\Dialog USB Driver (DLGUSB)**.

DA9068 GUI and Evaluation Board

## 6 Configuration Tab

Start the DA9068 GUI program by clicking the shortcut in the **Start** menu. The best PC display resolution is 1024 x 768 pixels or higher. Font size on the PC display should be Normal (95 dpi). A display size other than the recommended setting may affect the way in which the panels appear.

Make sure that the Power Commander switch (S3) is in position **PC\_MODE** to select Power Commander mode. To start the device, plug in the USB cable. If the USB interface is correctly connected and operational, then the **USB OK?** LED is lit as shown in [Figure 7](#).

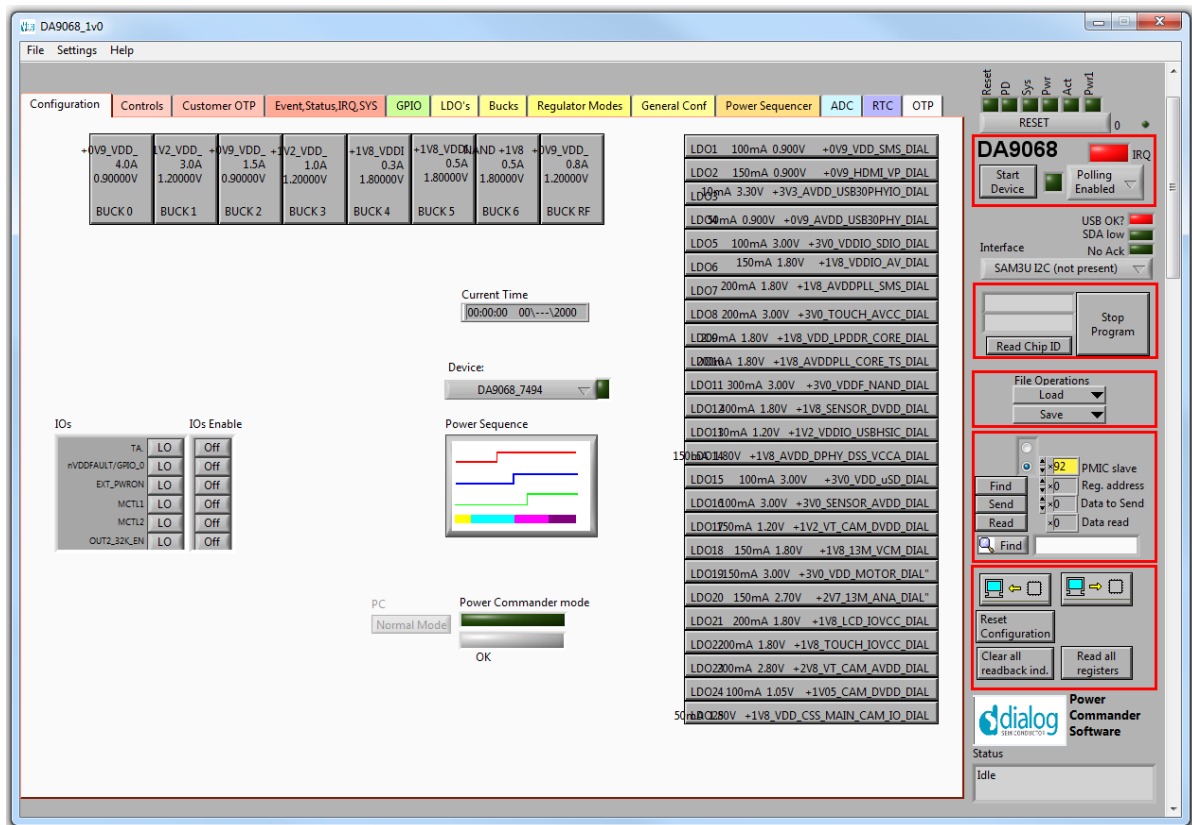


Figure 7: Initial Interface

The device is now in Power Commander mode and is waiting for the data from the template Project file (DA9068.ini) to be downloaded.

The Status LEDs at the top of the screen indicate the device status.

If the Reset LED is blinking yellow, it indicates that the device is not yet communicating via the I<sup>2</sup>C interface. See [Appendix A](#) for more details.

If **Autostart** mode is selected in Settings (default), then pressing the **Start Device** button (which puts the device directly into ACTIVE mode) sends data and pulses the **NONKEY** control.

If **Autostart** is not selected, the **Download** button will be visible. Pressing this will progress the device from RESET mode to POWERDOWN mode. Further, depending upon the programmed startup mode, the device may progress automatically to ACTIVE mode or remain in POWERDOWN until a wake-up event is received.

Pressing the **Start Device** button toggles the **NONKEY** control. **Start Device** also commences the monitoring of device status, IRQ status and RTC at one second intervals, and loads the RTC and Alarm registers with the present local time and date.

---

## DA9068 GUI and Evaluation Board

Deselecting **Autostart** allows more options for evaluating wake-up conditions, but is more complicated to use.

The command button **Stop Program** ends the DA9068 program.

### 6.1 Configuration Tab Details

This screen is used to:

- select a suitable template file for the processor
- allow modifications to regulator alias
- store the modified file as a new project name

The aim of the configuration process is to arrive at a group of setup conditions, which will be permanently programmed into the production device to allow a startup configuration.

The definition of logic interfaces, LDO and buck startup voltages and timing, ADC alarm limits, startup conditions, and so on, are all set on their respective tabs using configuration mode from the **Settings** menu.

Please note that only changes made from this Configuration tab and using configuration mode are stored in the Project file (project.ini). Changes made to other registers on different tabs are not stored in the file and are considered temporary.

After loading a project, a temporary project file temp.tmp is copied from the project and all changes are made to this temporary file. The temporary file can then be saved as a new or existing project using the **Save...** menu item.

The supplied template files are made read-only so that they cannot be inadvertently overwritten.

A project file, which is a standard Windows ini file, can be imported into the program by opening it via the **Open File** dialog. If selected, a prompt is generated to copy it into the directory **C:\Dialog Semiconductor\Power Management\DAxxxx\_Vx\data**. The copied file is then opened.


It is not recommended that the ini file be edited.

If the LED next to the **Device:** selection is amber, it indicates that there has been an unsaved change or changes to the device configuration. Select **File, Save project** or **Ctrl+S** to save the changes.



## DA9068 GUI and Evaluation Board

The Power Sequence Control window options are:

<b>Labels</b>	Switches the labels on the left hand Y-axis between alias names and regulator names.
<b>Time Scale</b>	Switches the labels on the lower X-axis between slot numbers and calculated elapsed time.
<b>SEQ_TIMER</b>	Controls the slot duration for occupied slots and dummy slots independently. The effect can be seen when Time Scale is switched to <b>Time</b> .
<b>Write Changes and Quit</b>	Stores the changes in the project file and sets the appropriate control on the panel. Note that changes are not transmitted to the device at this time; changes are transmitted only when <b>Start Device</b> is executed after powering down the device to the RESET state.
<b>Cancel and Quit</b>	Closes the panel, but does not save the result in the project file.
	Exits <b>without making any changes</b> .

### 6.3 Download

This button writes the device with all the register changes made above if Power Commander mode is set and the device is ready for the download. The device signals this by holding pin nVDD\_FAULT low.

The download is made on the currently activated port of the device overriding any programmed mode until Power Commander mode is exited.


If the **Autoboot** configuration is selected, a second download is made to place the device in ACTIVE mode. If it is not selected, it will wait in power down mode for a wake-up event. A second download is then necessary to reach ACTIVE mode.

### 6.4 Menu Items

**Table 3: Menu Items**


Menu/Submenu	Description
<b>File-&gt;</b>	
New Project	Creates a blank project, not using a template, with all registers set to zero.
Open Project	Selects a project to open. Right-clicking on a filename allows editing, copying, and pasting. Otherwise this option is the same as selecting a project from the dropdown Device selector.
Save Project	Save the current temporary file with a new name, or replaces an existing filename.
Delete Project	Deletes the selected project. This should be used with some care, and is included to allow cleanup of several trial versions.

## DA9068 GUI and Evaluation Board

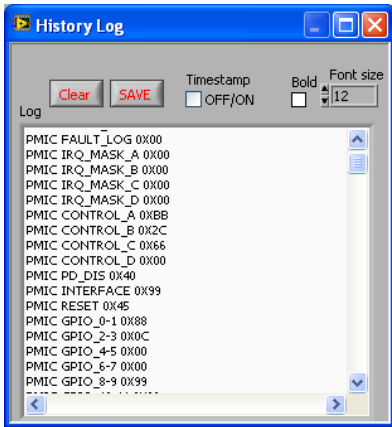Menu/Submenu	Description
Check Project	<p>This verifies that the project configuration file is complete. This includes all registers that the user may choose not to define an initial condition ("Don't care"), and GP_ID registers.</p> <p>If any are listed as missing, the most convenient method to include these is as follows:</p> <ul style="list-style-type: none"> <li>Close the message popup.</li> <li>Select <b>Change Configuration Register</b> control on white <b>Configuration</b> tab.</li> <li>Select <b>Copy Current Panel Values</b>.</li> <li>Select <b>Save and Quit</b></li> <li>From the <b>File</b> menu, select <b>Save project</b>.</li> <li>To recheck, from the <b>File</b> menu, select <b>Check Project</b>.</li> </ul>
Check Trim	<p>This feature is no longer required for DA9068 as it is a mature product. (This checks to see if trim values are stored in the device. Samples are normally delivered tested and trimmed. If this is the case, a file trim.txt is generated which ensures that correct trim values are used instead of default values for all subsequent operations. This ensures that best accuracy is achieved during evaluation.)</p>
Exit	Closes the program. If there are unsaved changes a dialog box is displayed.
<b>Settings-&gt;</b>	
Autostart	Allows single button startup of the device.
Binary Indicators	Changes all indicators from Hex to binary mode if ticked.
<b>Dialog Use-&gt;Test Pages</b>	Allows view of internal test pages (only for Dialog Semiconductor use). A password is necessary for access.
<b>Dialog Use-&gt;Ignore NVDDFAULT</b>	Allows software to operate if NVDDFAULT signal is not available on some external PCBs (only for Dialog Semiconductor use).
Reg Names in File	If activated, uses register names instead of numbers in text files.
History Log	<p>This enables a popup dialog which logs all manual and file activity. This dialog is extremely useful to capture operations for later scripting, or to verify and understand schematic operations on the codec.</p> <p>This log is interactive. Comments can be added using "/" either as separate lines or inline. Lines can be deleted or modified.</p> <p>The entire contents can be cleared or saved to a file.</p> <p>The log also receives the results from read operations in a text file.</p> <p>The History Log window can be resized and repositioned, and the font size and bold type can be selected. A timestamp is optional.</p>
	
<b>Help-&gt;</b>	
Show Context Help	Opens floating information which updates with information on each control under the mouse cursor. This should be left enabled by default to receive information and comments on all registers.
User Guide	Opens a PDF copy of this document (a suitable PDF reader must be installed).
About	Displays version information and contact details.

DA9068 GUI and Evaluation Board

6.5 Status and Controls

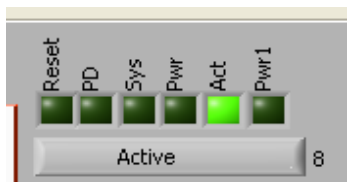

Device Status information indicates the current mode of the device. A flashing yellow indicator on Reset indicates that the status is invalid, probably due to communication not being established yet. Device status, ChipID, IRQ status, and RTC are read at one second intervals.



**Start Device**

This button initializes the device (by pulsing ONKEY low) and providing the data downloads automatically. At the end of startup, a file Host\_configuration.txt is loaded and run to emulate the host processor writing immediately to the device. Device status, ChipID, IRQ status, and RTC are read at one second intervals

**Polling Enabled**


If **disabled**, Chip ID, IRQ status and RTC readback are suppressed. This is used to force the communication over the bus to be silent. If this is set to **automatic**, the program will only poll the device while the application is the topmost window. If obscured by another program or window, polling is disabled.

**LED**

If the device is active this is green, else red.

**IRQ**


This is an indicator of interrupt status, visible from all tabs. Pressing this LED clears the interrupt events.

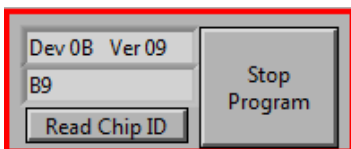

Indicates version and trim status when the device is active. When inactive, version and trim status will not be correct.


**Stop Program**

This terminates the program but leaves it inactive on the screen. If there are unsaved changes a dialog box is displayed.

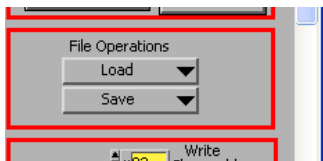


**Load:** Opens a dialog box to select, view, copy or re-name a file. **Load Codec file** opens a dialog box to allow selection of a codec setup file in the \Codec Setups directory. **Save:** Save current panel state to text file. Selecting **Save Codec file...** saves only the codec registers. Selecting **Register Dump** option saves current register values to the text file.

Note the difference between **Save** and **Register Dump**. **Save** dumps the contents of all panel controls to the file (a save state operation), while **Register Dump** reads the device contents (including status registers) into the file.

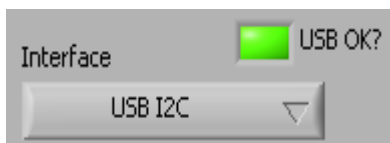

**Interface:** Select between USB I<sup>2</sup>C control, offline mode and uWire/SPI. Switching to offline, then back to USB reinitializes the USB interface. **USB OK?:** Indicates that the USB is OK and communicating.

## DA9068 GUI and Evaluation Board

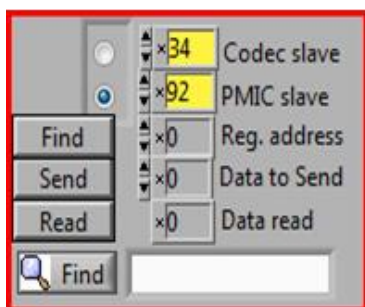

**Slave Address:** Set slave address of device. This affects all I<sup>2</sup>C communications. In Power Commander mode this should be 0x92. In normal mode it should match the port in use (Register INTERFACE).

Note that this is the 8-bit value (92h for Write, 93h for Read).


**Send:** Send a single byte data to I<sup>2</sup>C device using Slave Address, Register Address, and Data to Send.

**Read:** Read single byte data from I<sup>2</sup>C device using Slave Address, and Register Address.

**Find:** Find a control matching a full or partial register name, a control bit name, a register number (for example, R23 or 17h). Pressing **Find** repetitively steps through all matching items.

### NOTE

If **PMIC slave** address is set to a value other than the PMIC address such as 0x92, then this tool can be used to control or read any other device on the I<sup>2</sup>C bus. It can therefore be used for generic I<sup>2</sup>C debug.

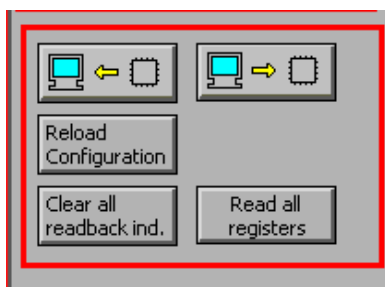

### Synchronize Panel from Device

Reads all the register contents of the device and updates the panel to match.

### Synchronize Device from Panel

Writes all the device registers to match the panel (refresh operation).

### Reload Configuration

Resets registers to values specified in configuration file for the PMIC section and default values for the codec.


### Clear all readback indicators

Sets all readback indicators to 0.

**Read All Registers:** Read all registers, comparing with the panel controls.

DA9068 GUI and Evaluation Board

6.6 Discrete Controls

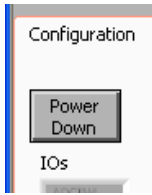

**Power Down**

Invokes a Power Down by sending DEEP\_SLEEP Register bit (CONTROL\_B bit 6) to the device.



The controls on the Configuration tab, and repeated on the GPIO and Event, Status, IRQ, SYS tabs, indicate the logic levels being applied to DA9068 by the USB interface.

The grayed-out controls are indicators. They show the level at the interface, but do not drive it.

The control is only active when the GPIO is programmed as a GPI input, or the default mode is an input.


The names of the controls are read from the alias names of the GPIO, or the GPIO number if no alias is present.

The controls will only have an effect if the appropriate jumpers on the board are in the default positions.

6.7 Event,Status,IRQ,SYS Tab

This screen indicates the status of the device, wake-up and interrupts events, and provides the ability to mask events from causing an interrupt.

Note that masking an interrupt does not prevent the event from being flagged. It is assumed that the application software will gate events with the mask register.

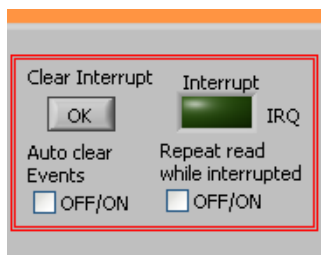

**Interrupt indicator**

This is not active if polling is disabled.

Pressing **Clear Interrupt** writes all 1s to the Event registers to clear the interrupt.

If the **Auto clear Events** control is set, this is done automatically. The Interrupt pulse is very short, but the system is ready for interrupt without manual intervention.

If the **Repeated read** control is set, the software will read event and status registers repeatedly while the **Interrupt indicator** is active.

DA9068 GUI and Evaluation Board



The Event Register is labelled with a register number in decimal and its hexadecimal equivalent.

Hex equivalent of mask register bits.

Name of mask register bits, and also event names.  
Event bit set. Press to clear and reset.

Readback of mask register, visible as hex or binary by using **Binary Indicators** in the **Settings** menu.

6.8 Control Tabs

The tabs GPIO, Customer OTP, LDOs, Bucks, Power Sequencer, ADC, and RTC, all have the same format.

Each register cluster comprises a control with a mixture of Boolean toggle buttons, multi-value ring controls, or slide controls; a hex indicator showing the total equivalent value, a readback indicator showing the current contents of the register. The readback indicator is labelled with the register number in both decimal and hex.

Readback indicators can be switched individually by clicking on the **x** to decimal, octal, hex or binary, or they may all be changed at once between hex and binary by the **View, Binary Indicators** menu item.



Hex Indicator

Boolean control Bit 7  
Boolean control Bit 6

Ring value control Bits 0-5

Readback Indicator

Changing a register control immediately sends the value to the selected register, and reads the value back again, comparing the result with the hex indicator. Note that all bits of the register are sent at once. Therefore, this does not allow changing multiple bits simultaneously.

If the readback indicator is red, it indicates that the current value does not match. This might be because the value has not been downloaded yet, or because the supply has been interrupted.

**NOTE**  
Changes made to registers on these screens are not saved into the project file, they are purely temporary changes.

DA9068 GUI and Evaluation Board

6.9 OTP Programming

The One Time Programmable (OTP) registers in the variant DA9068-00 are blank, and allows the user to set default startup and voltage settings.

All DA9068 devices, including DA9068-00 are shipped after production testing. They have been trimmed for optimized performance.

**CAUTION**

Please note that these are One Time Programming registers. Once set they cannot be erased. If mistakes are made the sample may not be usable and may need to be discarded.

The existence of Power Commander mode makes many uses of OTP programming redundant. System development can be achieved very rapidly using this mode. Programming the OTP should be the final step in verifying that a programmed part will achieve the system objectives, and that it is intended to solder the programmed part onto the final system board.

It is necessary to start up the DA9068 GUI with the board powered and a connection to the PC via the USB cable. A 7.5 V supply should also be available to connect to the VPP pin of the daughter board when programming the OTP.

*The evaluation board should be powered from an external power supply set to 3.8 V applied to the VBAT terminal during OTP programming procedures. We do not recommend self-powering of the board due to the high risk of incorrect device insertion.*

If it is decided to continue with OTP programming, the following procedure should be used.

1. From the **Configuration Panel** click the **OTP** tab.

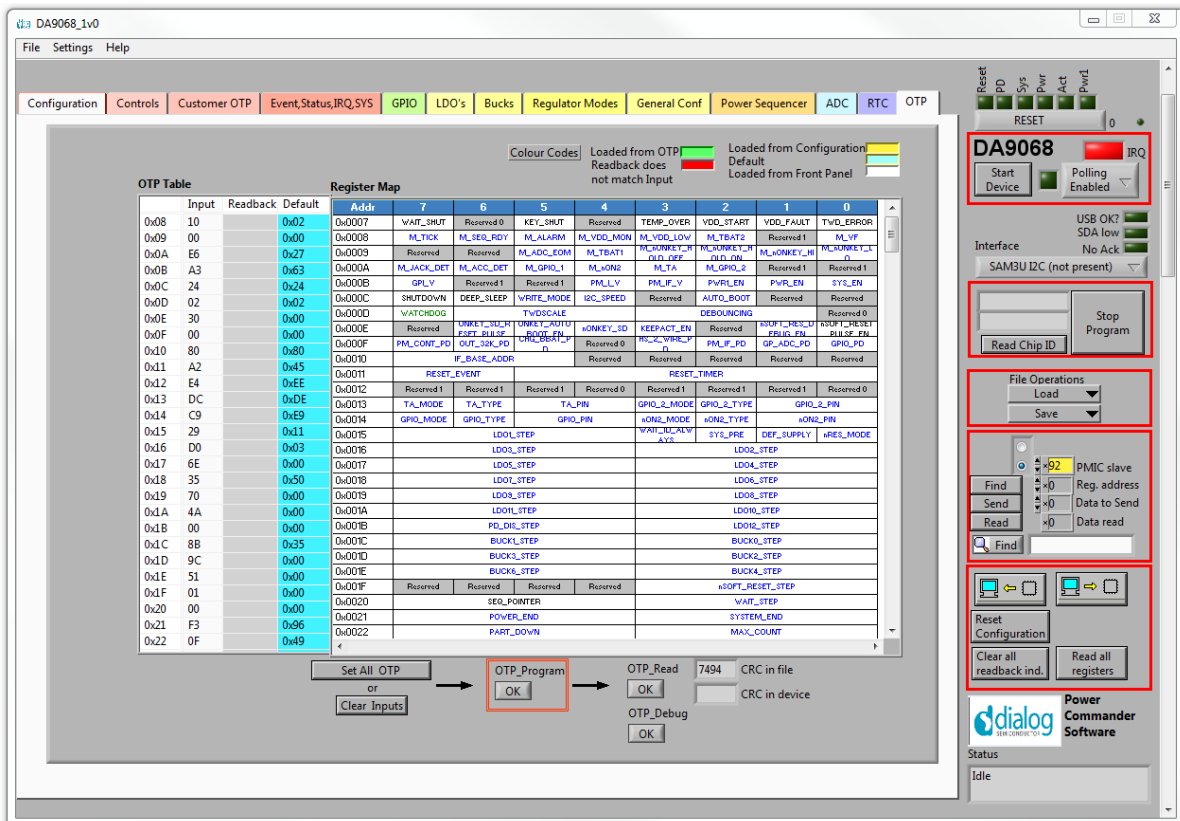


Figure 9: OTP Tab

2. Apply 7.5 V to the VPP header on the daughterboard.

## DA9068 GUI and Evaluation Board

### NOTE

The device should be in **Power Commander** mode with the slide switch in the right-hand position.

3. Press **Start Device** to initialize the device into the active mode.
4. Press **Set All OTP**.

### NOTES

This will read the configuration file, load the registers and apply defaults to the other registers (trim and internal configuration). The **Readback** column will turn green to indicate the current contents (if any) of the OTP, not the register contents.

The OTP\_CONF\_LOCK bit is treated in a special way. It is only read from OTP following a Power-On-Reset (POR). This means that immediately after programming, this bit will not show the programmed value. The GUI takes this into account when verifying that the programming has been successful. Immediately after programming **CRC in device** matches **CRC in file(unlocked)**. After power cycling the device it is possible to perform an OTP read and verify that **CRC in device** now matches **CRC in file**.

The numbers in the second column, labelled **Input**, are the register results of the device loading performed previously.

Verify that these values are correct by reference to the specification. If not, and the reason is unclear, it may be necessary to send the configuration file to Dialog Semiconductor Applications for debugging assistance.

5. Press the **OTP\_Program** button once.

If the programming has been successful, a green popup appears indicating correct programming. The value in box **CRC in device** matches the value in **CRC in file**. If it has not been successful, a red popup appears. Check first that the 7.5 V supply is present. If it was present, compare the **Input** and **Readback** columns of the table to try to ascertain the problem. Any differences will be highlighted in red. All **Readback** values should be green when programming is successful.

A few values will be light green, and have a value different from the **Input** column. This is because the device does not hold static values in the registers and they are dependent upon operating mode. Light green is still a matching value and is normal.

If any register readback values are red, it indicates that the programmed value does not match the desired value in the input column. This is normally due to one of two reasons:

1. The device has been previously programmed with a configuration different to the currently selected one.
2. One of the registers has been programmed twice, possibly during incremental programming.
  - a. Click the **OTP Read** button to allow re-reading of the registers.

## 6.10 OTP Programming of Further Devices

Having successfully followed the procedure in Section 6.9 you can continue to program another device using the following sequence:

1. Remove 7.5 V VPP supply.
2. Remove 3.8 V VBAT supply.
3. Remove programmed device.
4. Insert new blank device.
5. Apply 3.8 V VBAT supply. Ensure the supply current is <10 mA.
6. Apply 7.5 V VPP supply.
7. Click **Start Device**.
8. Select **Set All OTP**.
9. Click **OTP\_Program**.

Under some circumstances it may be desirable to perform this procedure incrementally, for instance, when all registers do not need to be programmed at the same time.

---

## DA9068 GUI and Evaluation Board

It is possible to load only a limited number of registers. If the input value is zero no change will be made.

To do this, select **Clear Inputs** instead of **Set All OTP**. This will set all registers to zero. The device may power down, but it will maintain communication and can be programmed.

Type the hex value for the register to be changed into the appropriate line on the table. If the OTP cannot be programmed to this value, due to existing content, the **Readback** box will turn red and indicate the value that will be achieved.

<b>NOTE</b>
-------------

A value of 1 cannot be reprogrammed to a 0.
---

Press **OTP\_Program** and OTP\_Read will be performed automatically.

The latest content of the OTP is displayed, which should include the modified value.

---

---

## DA9068 GUI and Evaluation Board

### Appendix A Troubleshooting

This section is an aid to resolving known issues.

#### A.1 Software Issues

The USB device should install automatically and without difficulty. Make sure that the installation finds and uses the driver contained on the USB stick.

If the program is started before the USB interface board is plugged into the evaluation board, the program defaults to the offline mode. This can be useful for learning about the software in a desk environment without the hardware attached. If the board is subsequently attached, move the Interface control to **USB**. Make sure the USB is connected and then restart the program.

The software can have unpredictable effects when used in conjunction with a USB hub. It is recommended that a direct connection is made to the USB interface board.

The software is optimized for a display resolution of 1024 x 768 pixels or greater, with fonts set to normal (96 dpi). Unpredictable display effects may occur when large fonts (120 dpi) are used. This can be changed by right-clicking on the desktop, select **Properties**. Select the **Settings** tab, select **Advanced**, then **Normal size** from the drop-down box.

If communications are apparently lost, first click the **Start Device** button. This attempts to make the device go active. Also switching the **Interface mode** to **Offline**, then back to **USB** can reinitialize the USB interface. Alternatively, unplug the USB then reconnect so that the software detects it and reinitializes.

#### A.2 Hardware Issues

Most hardware problems can be traced to incorrect jumper positions. Carefully check jumper positions, compare them with the default positions in [Figure 5](#). Use the jumper table and the board schematic as a guide to the jumper functions and locations.

Many problems can be traced to the Power Commander switch position. This should be in the right-hand position for **Power Commander mode**. Also check the position of jumper J33 (NONKEY).

## Revision History

Revision	Date	Description
1.0	26-Jul-2017	Initial version.
1.1	25-Feb-2022	Document rebranded to Renesas.

## Status Definitions

Status	Definition
DRAFT	The content of this document is under review and subject to formal approval, which may result in modifications or additions.
APPROVED or unmarked	The content of this document has been approved for publication.

---

## DA9068 GUI and Evaluation Board

---

### Important Notice and Disclaimer

RENESAS ELECTRONICS CORPORATION AND ITS SUBSIDIARIES (“RENESAS”) PROVIDES TECHNICAL SPECIFICATIONS AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES “AS IS” AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for developers skilled in the art designing with Renesas products. You are solely responsible for (1) selecting the appropriate products for your application, (2) designing, validating, and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements. These resources are subject to change without notice. Renesas grants you permission to use these resources only for development of an application that uses Renesas products. Other reproduction or use of these resources is strictly prohibited. No license is granted to any other Renesas intellectual property or to any third party intellectual property. Renesas disclaims responsibility for, and you will fully indemnify Renesas and its representatives against, any claims, damages, costs, losses, or liabilities arising out of your use of these resources. Renesas' products are provided only subject to Renesas' Terms and Conditions of Sale or other applicable terms agreed to in writing. No use of any Renesas resources expands or otherwise alters any applicable warranties or warranty disclaimers for these products.

© 2022 Renesas Electronics Corporation. All rights reserved.

(Rev.1.0 Mar 2020)

## Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu

Koto-ku, Tokyo 135-0061, Japan

[www.renesas.com](http://www.renesas.com)

### Contact Information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:

<https://www.renesas.com/contact/>

### Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

## IMPORTANT NOTICE AND DISCLAIMER

RENESAS ELECTRONICS CORPORATION AND ITS SUBSIDIARIES (“RENESAS”) PROVIDES TECHNICAL SPECIFICATIONS AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES “AS IS” AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT OF THIRD-PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for developers who are designing with Renesas products. You are solely responsible for (1) selecting the appropriate products for your application, (2) designing, validating, and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements. These resources are subject to change without notice. Renesas grants you permission to use these resources only to develop an application that uses Renesas products. Other reproduction or use of these resources is strictly prohibited. No license is granted to any other Renesas intellectual property or to any third-party intellectual property. Renesas disclaims responsibility for, and you will fully indemnify Renesas and its representatives against, any claims, damages, costs, losses, or liabilities arising from your use of these resources. Renesas' products are provided only subject to Renesas' Terms and Conditions of Sale or other applicable terms agreed to in writing. No use of any Renesas resources expands or otherwise alters any applicable warranties or warranty disclaimers for these products.

(Disclaimer Rev.1.01)

### Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,  
Koto-ku, Tokyo 135-0061, Japan  
[www.renesas.com](http://www.renesas.com)

### Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

### Contact Information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit [www.renesas.com/contact-us/](http://www.renesas.com/contact-us/).