

## RX Family

### Sensorless Vector Control of a Permanent Magnet Synchronous Motor - For MCK

---

#### Introduction

This application note is intended to explain the sample program that uses Renesas RX26T microcontroller to drive a permanent magnet synchronous motor with vector control. The current detection required for vector control is compatible with the 2-shunt method and the 1-shunt method. The target software for this application note uses the Smart Configurator tool and the components required for motor control.

This sample program supports 'QE for Motor'. Please use the workflow to develop motor software simply by following the steps.

The target software for this application note is for reference only, and we do not guarantee the operations. Only use the target software of this application note after conducting thorough evaluation in an appropriate environment.

#### Target device

Operations of the target software of this application note are checked by using the following device.

- MCU used:
- RX26T RAM64KB Version(R5F526TFCDFF)
- RX26T RAM48KB Version(R5F526TACDFM)
- RX14T(R5F514T5AGFM)

#### Target software

The following shows the target software for this application note:

(RX26T RAM64KB Version)

- RX26T\_MCBA\_MCILV1\_SPM\_LESS\_FOC\_CSP\_V110 (IDE: CS+ edition)
- RX26T\_MCBA\_MCILV1\_SPM\_LESS\_FOC\_E2S\_V110 (IDE: e<sup>2</sup> studio edition)
- RX26T\_MCBA\_MCILV1\_SPM\_LESS\_FOC\_1SHUNT\_CSP\_V110 (IDE: CS+ edition)
- RX26T\_MCBA\_MCILV1\_SPM\_LESS\_FOC\_1SHUNT\_E2S\_V110 (IDE: e<sup>2</sup> studio edition)
- RX26T\_MCBA2\_MCILV1\_SPM\_LESS\_FOC\_CSP\_V100 (IDE: CS+ edition)
- RX26T\_MCBA2\_MCILV1\_SPM\_LESS\_FOC\_E2S\_V100 (IDE: e<sup>2</sup> studio edition)
- RX26T\_MCBA2\_MCILV1\_SPM\_LESS\_FOC\_1SHUNT\_CSP\_V100 (IDE: CS+ edition)
- RX26T\_MCBA2\_MCILV1\_SPM\_LESS\_FOC\_1SHUNT\_E2S\_V100 (IDE: e<sup>2</sup> studio edition)

(RX26T RAM48KB Version)

- RX26T\_MCBC\_MCILV1\_SPM\_LESS\_FOC\_CSP\_V100 (IDE: CS+ edition)
  - RX26T\_MCBC\_MCILV1\_SPM\_LESS\_FOC\_E2S\_V100 (IDE: e<sup>2</sup> studio edition)
  - RX26T\_MCBC\_MCILV1\_SPM\_LESS\_FOC\_1SHUNT\_CSP\_V100 (IDE: CS+ edition)
  - RX26T\_MCBC\_MCILV1\_SPM\_LESS\_FOC\_1SHUNT\_E2S\_V100 (IDE: e<sup>2</sup> studio edition)
- Sensorless vector control software for Renesas Flexible Motor Control Kit & the RX26T CPU board.

- RX14T\_MCILV1\_SPM\_LESS\_FOC\_CSP\_V100 (IDE: CS+ edition)
- RX14T\_MCILV1\_SPM\_LESS\_FOC\_E2S\_V100 (IDE: e<sup>2</sup> studio edition)
- RX14T\_MCILV1\_SPM\_LESS\_1SHUNT\_FOC\_CSP\_V100 (IDE: CS+ edition)
- RX14T\_MCILV1\_SPM\_LESS\_1SHUNT\_FOC\_E2S\_V100 (IDE: e<sup>2</sup> studio edition)

Sensorless vector control software for Renesas Flexible Motor Control Kit & the RX14T CPU board.

## Contents

1. Overview.....	4
2. Development environments.....	5
2.1 Test environments.....	5
2.2 Hardware specifications.....	6
3. Quick start guide.....	12
3.1 Downloading and writing the sample program.....	12
3.2 Analyzer startup and the RMT file.....	12
3.3 List of variables for Analyzer functions.....	14
3.4 Using the RMW UI.....	15
3.5 Using the Board UI.....	19
4. Software.....	20
4.1 Software specifications.....	20
4.2 Software configuration.....	21
4.3 File and folder configuration.....	24
5. Functionality.....	27
5.1 Application layer.....	27
5.2 Manager module.....	38
5.3 Current control module.....	53
5.4 Modulation (current control module).....	67
5.5 Voltage error compensation (current control module).....	69
5.6 Inductive voltage observer (current control module).....	71
5.7 Speed control module.....	78
5.8 Magnetic flux weakening control (speed control module).....	87
5.9 Open-loop damping control (speed control module).....	88
5.10 Switching-to-sensorless control (speed control module).....	89
5.11 Driver module.....	90
5.12 Smart Configurator setting.....	95
6. Vector control algorithm.....	103
6.1 Analysis model of a permanent magnet synchronous motor.....	103
6.2 d-q axis model of a permanent magnet synchronous motor.....	104
6.3 Vector control system and controller.....	106
6.4 Control block diagram.....	112
7. Test results.....	113
7.1 Program size.....	113
7.2 CPU loading rate.....	114

7.3    Operation waveforms ..... 115

8.    Reference materials ..... 116

Revision History ..... 117

### 1. Overview

This application note is intended to explain the method of using the sample program that uses a microcontroller manufactured by Renesas to drive a permanent magnet synchronous motor with vector control. Using the sample program together with a motor control kit (Renesas Flexible Motor Control Kit) enables motor control. This sample program supports Renesas Motor Workbench, a motor control development support tool, and therefore can be used as a user interface (UI) to check the MCU internal data and to control a motor. You can use the sample program for reference purposes or for software development by checking how MCU functions are allocated, how control is loaded by interrupts, and other information in the sample program.

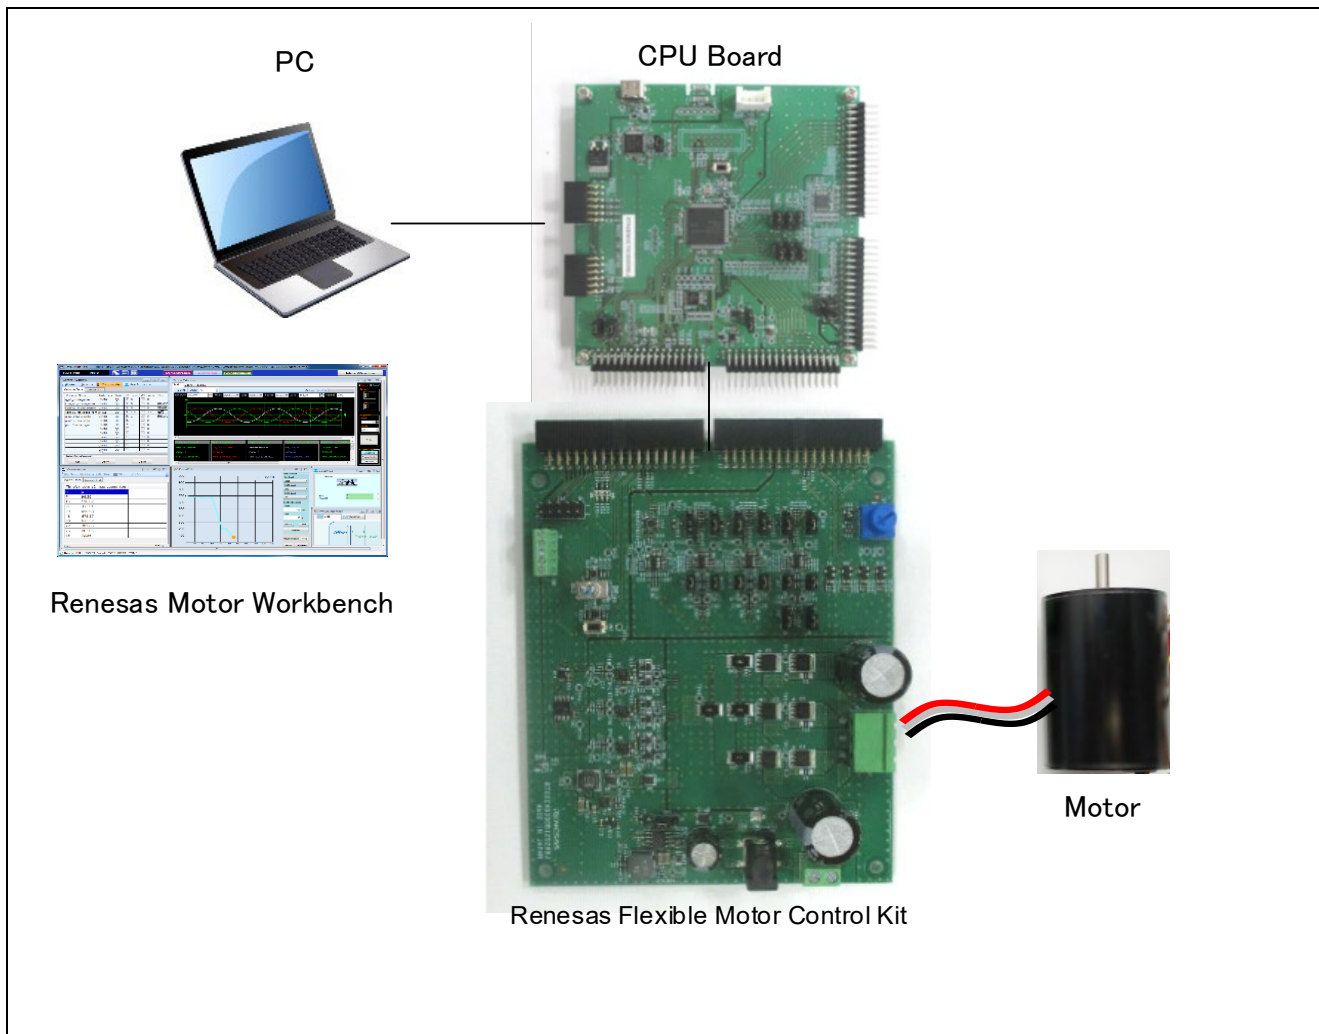


Figure 1-1 Operating environment of the sample program

## 2. Development environments

### 2.1 Test environments

Table 2-1 and Table 2-2 show the development environments for the software that this application note is applicable to.

**Table 2-1 Hardware development environment**

Category	Product used
Microcontroller / CPU board product type	RX26T RAM64KB Version (R5F526TFCDFF) / MCBA: RTK0EMXE70C00000BJ MCBA2: RTK0EMXE70C00001BJ RX26T RAM48KB Version (R5F526TACDFM) / RTK0EMXE30C00000BJ RX14T (R5F514T5AGFM) / RTK0EMXH30C00000BJ
Inverter board	Renesas MCI-LV-1 Inverter board for 48V 10A BLDC / RTK0EM0000B12020BJ
Motor	R42BLD30L3 (Manufactured by MOONS' Industries Japan Co., Ltd.)
Sensor	None

**Table 2-2 Software development environment**

IDE version	RX smart configurator	Toolchain version
CS+: V8.10.00 (RX26T RAM64KB MCBA, RX26T RAM48KB) CS+: V8.13.00 (RX26T RAM64KB MCBA2) CS+: V8.14.00 (RX14T)	Version 2.18.0 (RX26T RAM64KB MCBA, RX26T RAM48KB) Version 2.25.0 (RX26T RAM64KB MCBA2) Version 2.27.0 (RX14T)	CC-RX: V3.05.00 (RX26T RAM64KB MCBA, RX26T RAM48KB) CC-RX: V3.07.00 (RX26T RAM64KB MCBA2, RX14T)
e <sup>2</sup> studio: 2023-07 (RX26T RAM64KB MCBA, RX26T RAM48KB) e <sup>2</sup> studio: 2025-04 (RX26T RAM64KB MCBA2) e <sup>2</sup> studio: 2025-10 (RX14T)	Plug-in version of e <sup>2</sup> studio	

For the purchase or technical support of this system, contact a Renesas Electronics Corporation sales representative or an authorized Renesas Electronics Corporation product distributor.

## 2.2 Hardware specifications

### 2.2.1 Hardware configuration diagram

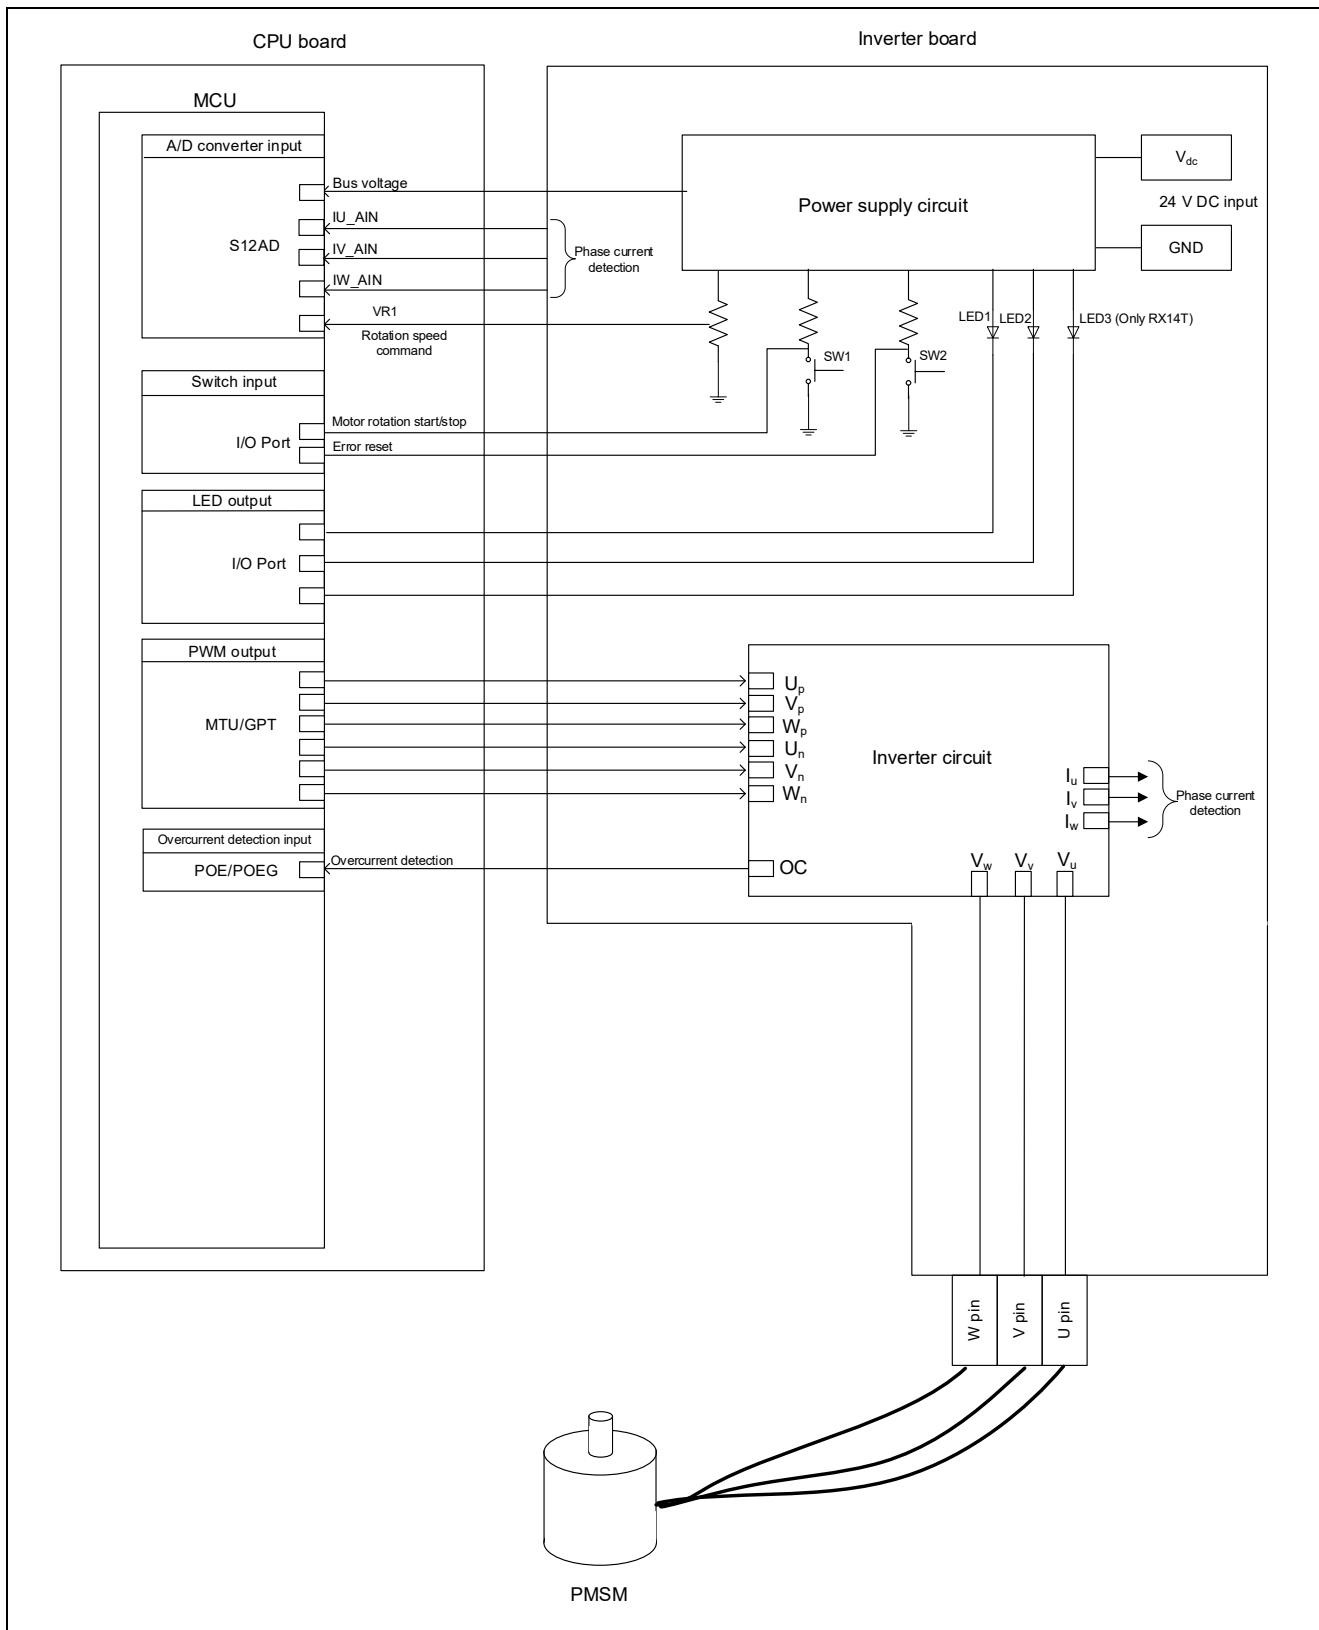


Figure 2-1 Hardware configuration diagram

### 2.2.2 Setting up RX26T/RX14T CPU board

This section describes how to install RX26T CPU board (RTK0EMXE70C00000BJ) or RX14T CPU board (RTK0EMXH30C00000BJ), which can be plugged in to MCI-LV-1. You can plug RX26T/RX14T CPU board to the side of MCI-LV-1 board. A connector for writing the sample program, a connector for MC-COM, and a PG connector for an external encoder are also provided.

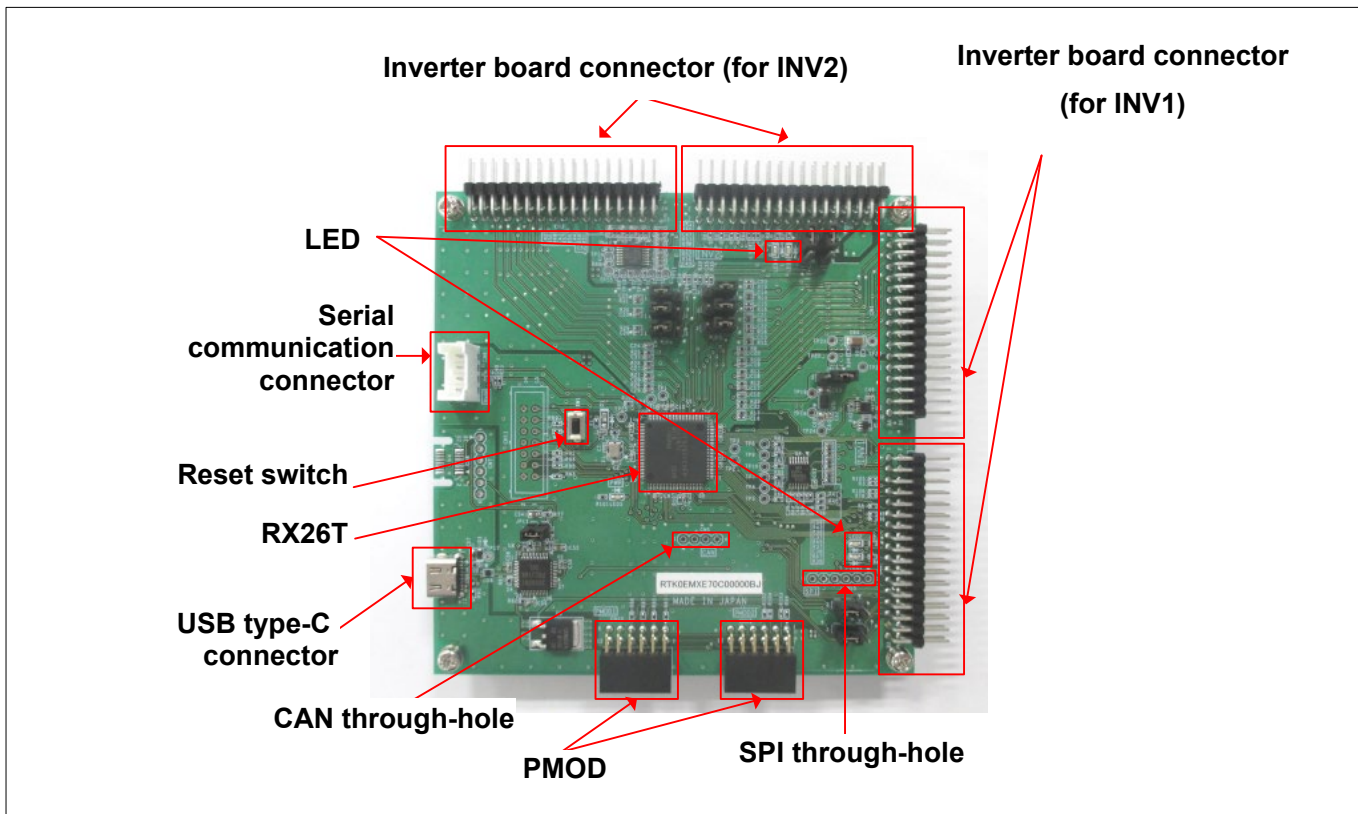


Figure 2-2 RX26T CPU board and its interface

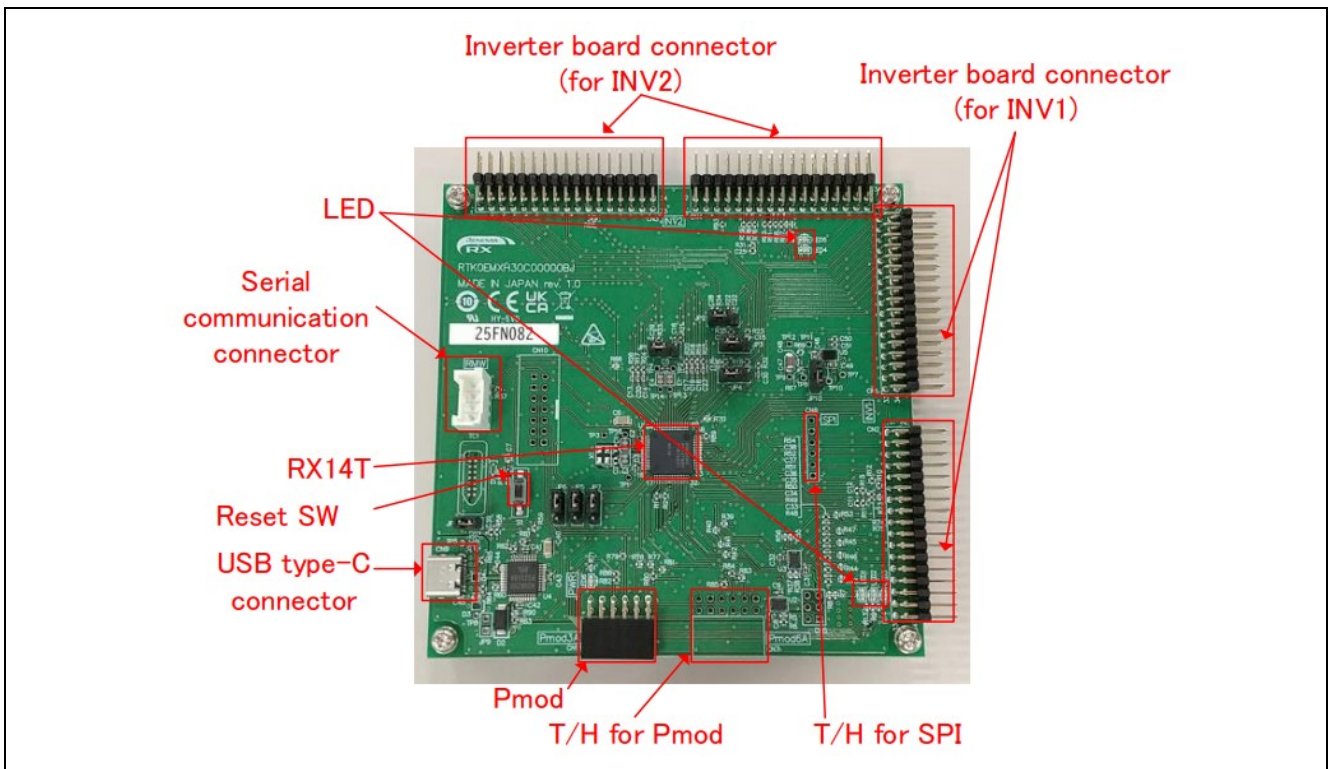


Figure 2-3 RX14T CPU board and its interface

### 2.2.3 On-board Debugger

This product is equipped with an on-board debugger circuit E2 On-Board (hereinafter referred to as E2OB), and the RX26T/RX14T program is rewritten using E2OB. When rewriting the program, open jumper JP11(RX26T)/JP8(RX14T) and connect the CPU board to PC with a USB cable. E2OB acts as a debugger equivalent to E2 emulator Lite. When connecting from an integrated development environment (e.g., e<sup>2</sup> studio) or a flash programming tool (e.g., Renesas Flash Programmer), set the debugger (tool) type to "E2 emulator Lite" at the time of configuration.

After rewriting the program, short out JP11(RX26T)/JP8(RX14T) to enable the CPU board.

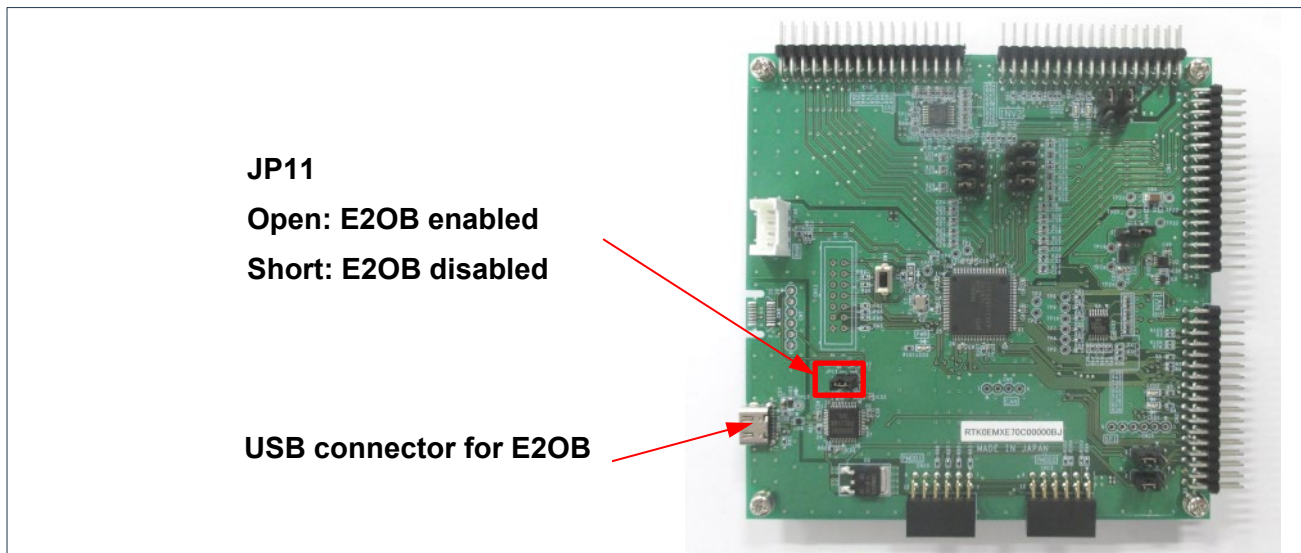


Figure 2-4 On-board debugger (RX26T)

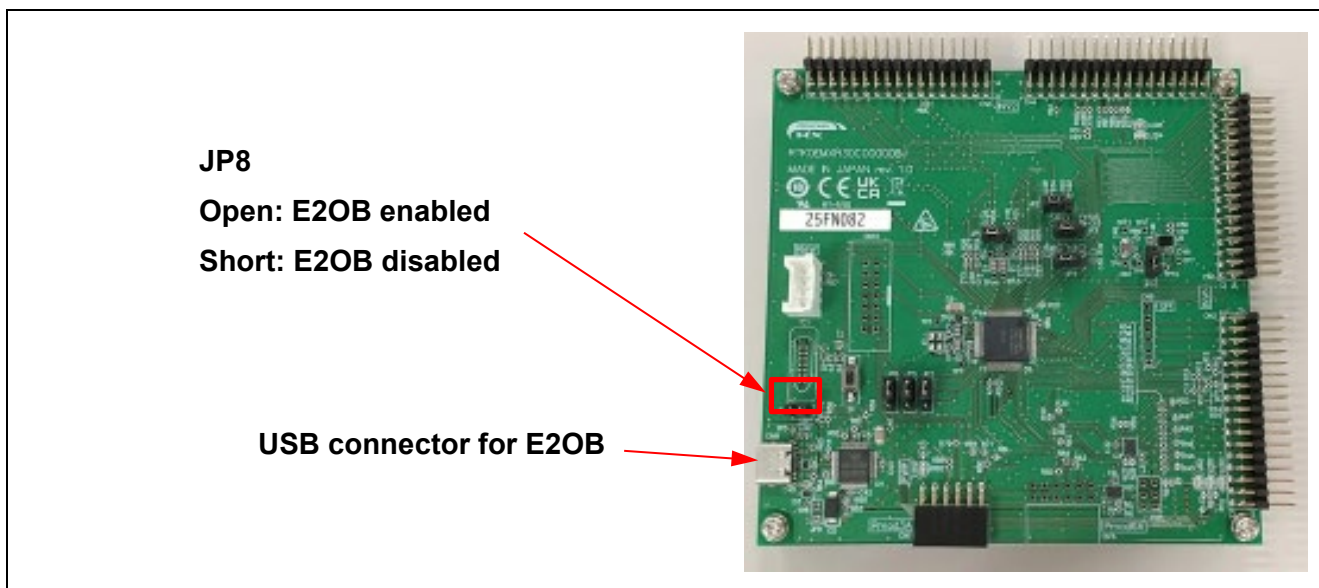


Figure 2-5 On-board debugger (RX14T)

## 2.2.4 Board user interface

Table 2-3 lists the components of the user interface of the board for this system.

**Table 2-3 Board user interface**

Item	Interface component	Function
Rotation speed	Variable resistor (VR1)	Inputs the rotation speed command value (analog value).
START/STOP	Toggle switch (SW1)	Instructs start or stop of motor rotation.
ERROR RESET	Push switch (SW2)	Instructs recovery from an error state
LED1	Orange LED	On: The motor is rotating. Off: The motor is stopped.
LED2	Orange LED	On: An error was detected. Off: The system is operating normally.
LED3	Orange LED	Not used
RESET	Push button (SW1 on the CPU board)	System reset

### 2.2.5 Peripheral functions

Table 2-4 shows allocation of input/output functions to peripheral functions that are used in this system. In the sample program, Smart Configurator is used to configure the peripheral functions. For details, see 5.12.

**Table 2-4 Input/output functions and peripheral functions**

Function	Peripheral function
Measurement of the inverter bus voltage	S12AD
Function for inputting the rotation speed command value (analog value)	S12AD
START/STOP toggle switch	I/O Port (Input)
Controlling whether to turn on LED1	I/O Port (output)
Controlling whether to turn on LED2	I/O Port (output)
Controlling whether to turn on LED3 (Only RX14T)	I/O Port (output)
Measurement of the U-phase current	S12AD
Measurement of the V-phase current (For 1 shunt detection)	S12AD
Measurement of the W-phase current	S12AD
PWM output (U <sub>p</sub> ) / "High" active	MTU
PWM output (V <sub>p</sub> ) / "High" active	MTU
PWM output (W <sub>p</sub> ) / "High" active	MTU
PWM output (U <sub>n</sub> ) / "High" active	MTU
PWM output (V <sub>n</sub> ) / "High" active	MTU
PWM output (W <sub>n</sub> ) / "High" active	MTU
PWM emergency stop input when an overcurrent is detected	POE

### 3. Quick start guide

This chapter provides a quick start guide for you to drive a motor by using Renesas Flexible Motor Control Kit and the sample program. For details about the board configuration and connection procedures of Renesas Flexible Motor Control Kit, see the MCK-RX26T User's Manual (R12UZ0111) or MCK-RX14T User's Manual (R12UZ0192). For details about how to use Renesas Motor Workbench (RMW), see the "Renesas Motor Workbench User's Manual" (R21UZ0004).

#### 3.1 Downloading and writing the sample program

After you have downloaded the sample program from our website, use an integrated development environment (IDE) or Renesas Flash Programmer to write it to the MCU on the CPU board. For details about how to write programs, see the documentation for the IDE you use or Renesas Flash Programmer.

When writing the program, it is necessary to set the JP11(RX26T)/JP8(RX14T) jumper on the CPU board to "E2OB enabled." For details on how to configure the JP11(RX26T)/JP8(RX14T) jumper, please refer to 2.2.3 On-board Debugger of this application note. Also, if you wish to run the software on the CPU board alone without using debug execution while connected to a PC after writing is complete, you must change the JP11(RX26T)/JP8(RX14T) jumper setting to "E2OB disabled "

#### 3.2 Analyzer startup and the RMT file

Use Renesas Motor Workbench, a motor control development support tool, as a user interface (for issuing the rotation start/stop command, rotation speed command, and other commands). Renesas Motor Workbench (RMW) can be downloaded from our website.

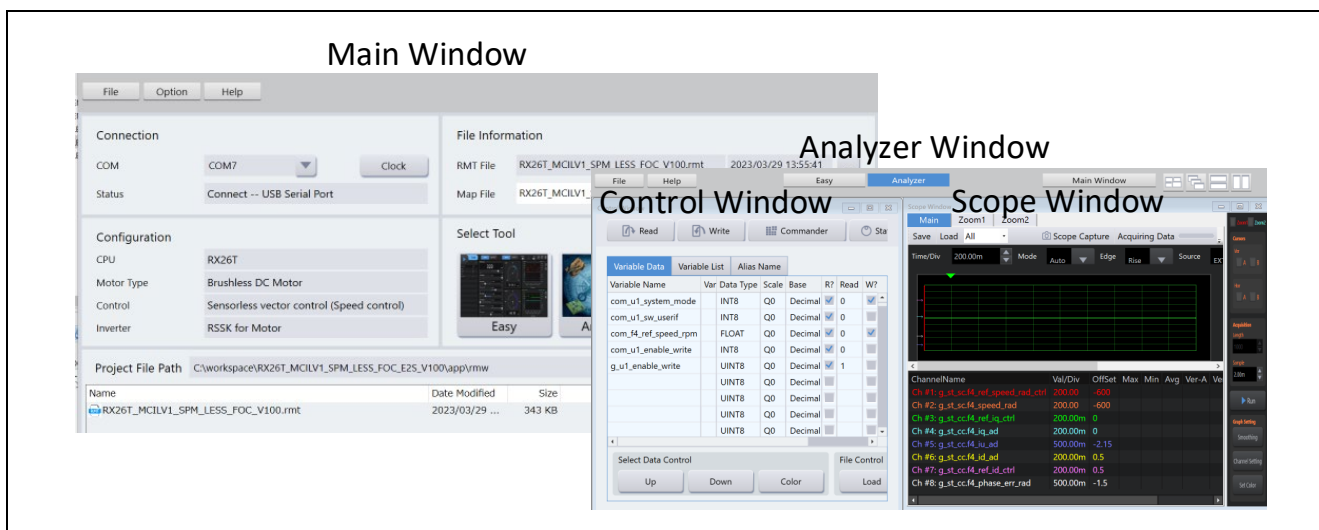



Figure 3-1 Windows of Renesas Motor Workbench

How to use Renesas Motor Workbench (motor control development support tool)



- Click the  icon to start the tool.
- On the menu bar of the Main Window, select [File] > [Open RMT File].  
The RMT file in the "rmw" folder in the project folder is loaded.
- In the [Connection] area, from the [COM] drop-down list, select the COM of the connected kit.
- In the [Select Tool] area, click the [Analyzer] button to open the Analyzer Window.
- Start driving the motor as described in Using the RMW UI. (For details, see 3.4.)

What is the RMT file?

- The RMT file is a file that stores the environmental information that was manipulated or configured by using RMW.
- If the environmental information has been saved in the RMT file, the environment can be restored with the saved information by calling the RMT file.
- If the address information of a program is changed, load the map file that was generated during program building, and then save the RMT file again.

### 3.3 List of variables for Analyzer functions

Table 3-1 lists the data input variables that are used when the RMW UI is used. The values input to these variables are applied to the corresponding variables in the motor module and then used for controlling the motor if the value written to the `com_u1_enable_write` variable matches the value of `g_u1_enable_write` variable. Note, however, that the variables indicated by an asterisk (\*) do not depend on the value of the `com_u1_enable_write` variable.

**Table 3-1 List of main input variables for Analyzer functions**

Analyzer function input variable name	Type	Description
<code>com_u1_sw_userif</code> (*)	uint8_t	Switching of the user interface 0: Uses the RMW UI. (Default) 1: Uses the Board UI.
<code>com_u1_system_mode</code> (*)	uint8_t	Managing the state 0: Stop mode 1: Run mode 3: Reset
<code>com_f4_ref_speed_rpm</code> (*)	float	Speed command value (mechanical angle) [rpm]
<code>com_u1_enable_write</code>	uint8_t	Whether to enable rewrite of variables for user entry The input data is applied if the values of this and <code>g_u1_enable_write</code> variables are the same.

Table 3-2 lists main structure variables that are often observed when driving the motor under speed control was evaluated. Use this table for reference when the waveform is to be displayed or the values of variables are to be loaded with an Analyzer function. For details about the variables that are not listed in this table, see 5.1.5.

**Table 3-2 List of main variables for sensorless speed control**

Main speed control variable name	Type	Description
<code>g_st_sensorless_vector.u2_error_status</code>	uint16_t	Error status
<code>g_st_cc.f4_id_ref</code>	float	d-axis current command value [A]
<code>g_st_cc.f4_id_ad</code>	float	d-axis current detection value [A]
<code>g_st_cc.f4_iq_ref</code>	float	q-axis current command value [A]
<code>g_st_cc.f4_iq_ad</code>	float	q-axis current detection value [A]
<code>g_st_cc.f4_iu_ad</code>	float	U-phase current detection value [A]
<code>g_st_cc.f4_iv_ad</code>	float	V-phase current detection value [A]
<code>g_st_cc.f4_iw_ad</code>	float	W-phase current detection value [A]
<code>g_st_cc.f4_vd_ref</code>	float	d-axis voltage command value [V]
<code>g_st_cc.f4_vq_ref</code>	float	q-axis voltage command value [V]
<code>g_st_cc.f4_refu</code>	float	U-phase voltage command value [V]
<code>g_st_cc.f4_refv</code>	float	V-phase voltage command value [V]
<code>g_st_cc.f4_refw</code>	float	W-phase voltage command value [V]
<code>g_st_sc.f4_ref_speed_rad_ctrl</code>	float	Speed command value (mechanical angle) [rad/s]
<code>g_st_sc.f4_speed_rad</code>	float	Speed detection value (mechanical angle) [rad/s]

### 3.4 Using the RMW UI

#### 3.4.1 Analyzer operation example

The following shows an example of using the Analyzer function to perform operations on the motor. The operations are performed from the Control Window. For details about the Control Window, see the "Renesas Motor Workbench User's Manual".

In the initial state, the control loop is set for speed control. Perform operations by referring to the procedures shown below.

(a) Start rotation of the motor

- (1) Confirm that the check boxes in the [W?] column are selected on the " com\_u1\_system\_mode" and "com\_f4\_ref\_speed\_rpm" rows.
- (2) On the "com\_f4\_ref\_speed\_rpm" row, in the [Write] column, enter the command rotation speed.
- (3) On the " com\_u1\_system\_mode" row, in the [Write] column, enter "1".
- (4) Click the [Write] button.

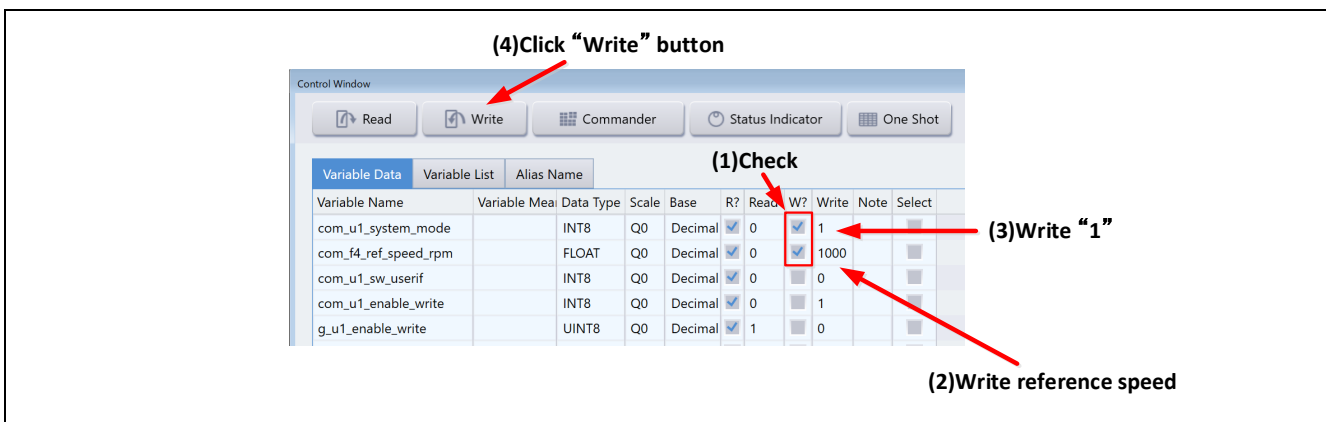


Figure 3-2 Procedure for starting rotation of the motor

(b) Stop the motor

- (1) On the " com\_u1\_system\_mode" row, in the [Write] column, enter "0".
- (2) Click the [Write] button.

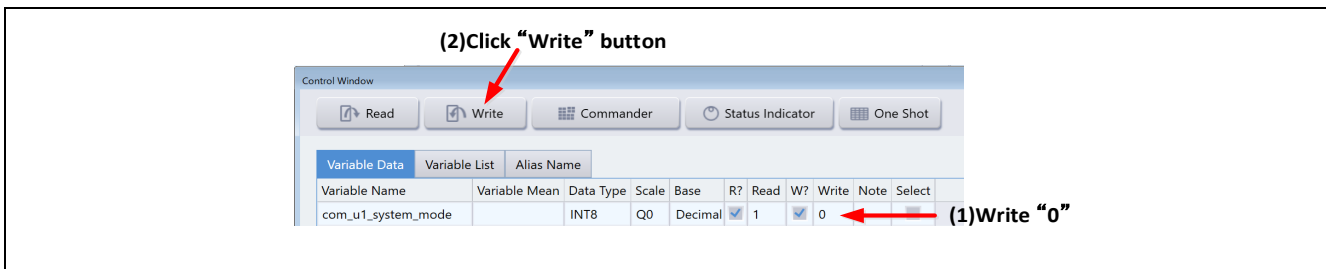


Figure 3-3 Procedure for stopping the motor

(c) What to do in case of motor stoppage (due to an error)

- (1) On the " com\_u1\_system\_mode" row, in the [Write] column, enter "3".
- (2) Click the [Write] button.



**Figure 3-4 Procedure for handling an error**

### 3.4.2 Operation example of the User Button function

The following shows an example of using the User Button function to perform operations on the motor. The user button settings used in this example are already included in the RMT file.

- Starting or stopping motor rotation by speed control  
By specifying settings as shown in Figure 3-5, each click of the button switches between starting and stopping.

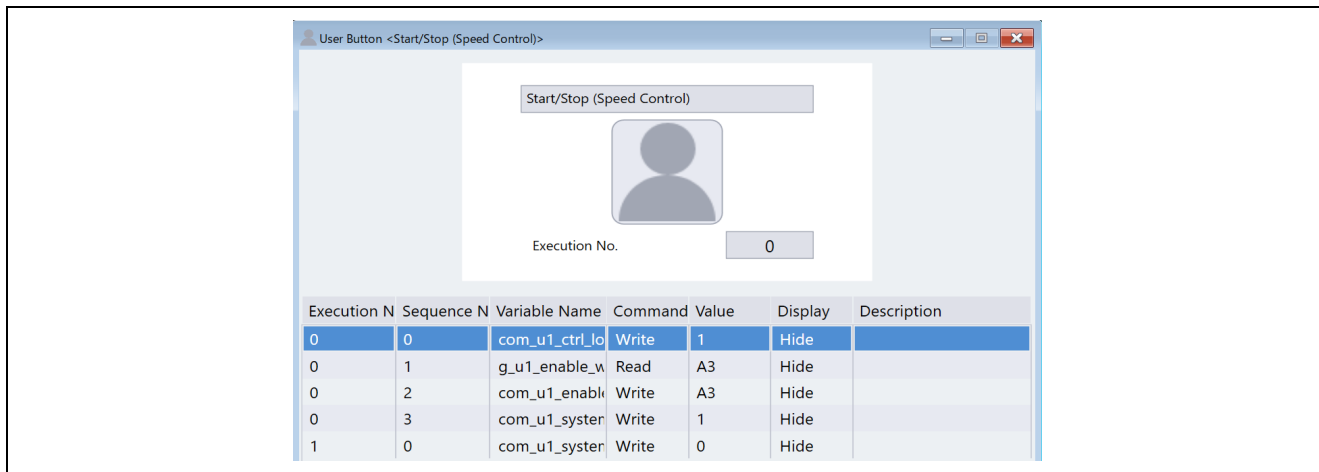


Figure 3-5 Starting or stopping motor rotation

- Changing the speed command  
By specifying settings as shown in Figure 3-6, the speed command can be changed by entering the desired information and then clicking the button.

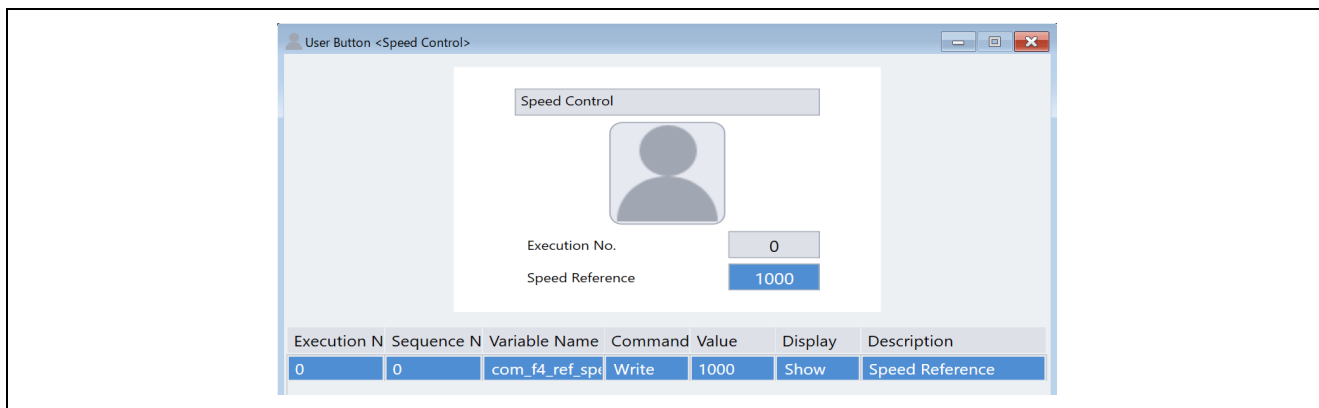



Figure 3-6 Changing the speed command

### 3.4.3 Operation example of the Commander function


Using the Commander function to perform position control

Starting Commander:


- (1) In the Control Window, click the [Commander] button.



- (2) When the Commander window appears, click the [Send Check] button, and then check the data transmission speed.

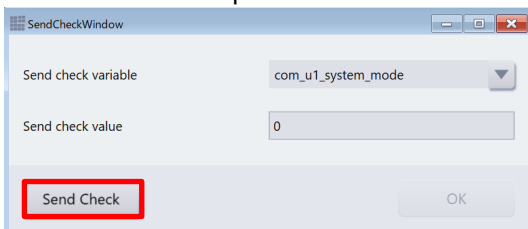


The minimum transmission time is displayed.

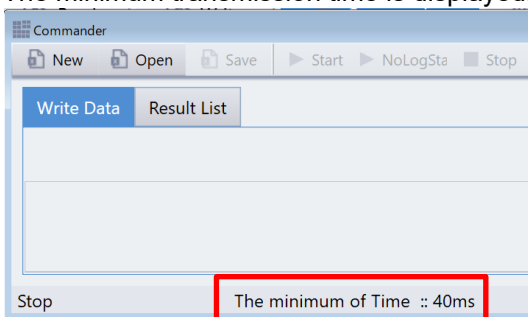

- (3) Click the [Open] button to load "Position\_test.csv". Place the system in the position control mode, write "1" to com\_u1\_system\_mode, and then click the [Write] button so that the system enters the run mode. The motor starts positioning control.

- (4) In the Commander window, click the [Start] button to start a sequence.

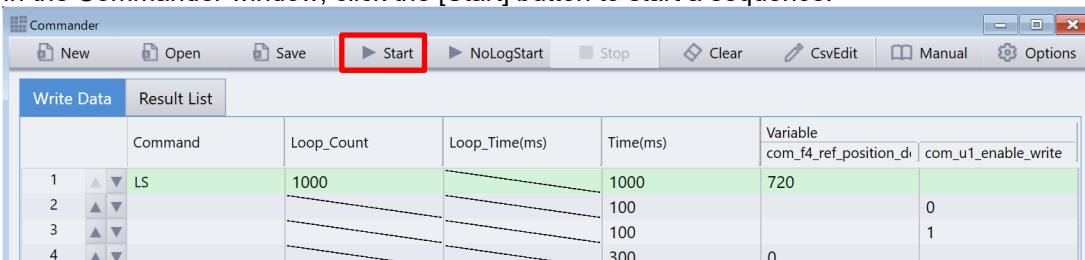

### 3.5 Using the Board UI

#### 3.5.1 Switching the user interface

In the sample program, the RMW UI has been set as the user interface. To change the user interface to the Board UI, perform the following procedure.

On the "com\_u1\_sw\_userif" row, confirm that the check mark in the [W?] column is selected, and then enter "1" in the [Write] column. Click the [Write] button.

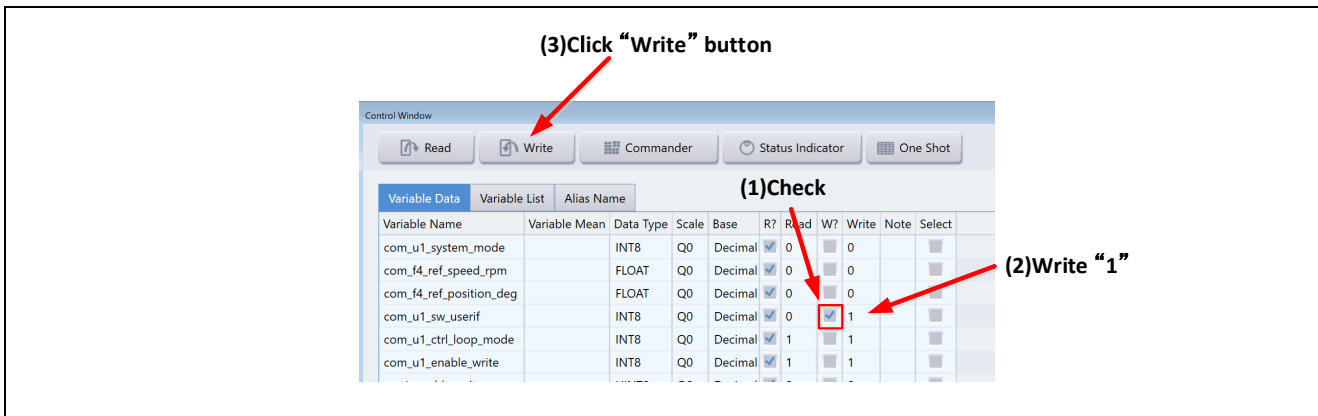


Figure 3-7 Procedure for switching the UI

#### 3.5.2 Starting or stopping the motor

If the Board UI is used, start and stop of motor rotation are controlled by the input from the SW1 switch on the inverter board (via the Board UI). A general-purpose port is assigned to the SW1. The system determines whether to start or stop motor rotation by reading a pin in the main loop. If the switch is ON, the system judges that the motor is to be started. If the switch is driven OFF, the system judges that the motor is to be stopped.

#### 3.5.3 Motor rotation speed command value

The motor rotation speed command value is determined by performing A/D conversion for the output value (analog value) of the VR1 on the inverter board. The VR1 value after A/D conversion is used as the rotation speed command value as shown in the following table.

Table 3-3 Conversion ratio of the command value

Item	Conversion ratio (<command-value>: <value-after-A/D-conversion>)	
Rotation speed command value	CW	0 to 2400 [rpm]: 07FFH to 0000H
	CCW	0 to -2400 [rpm]: 0800H to 0FFFH

## 4. Software

### 4.1 Software specifications

The following shows the basic software specifications of this system.

**Table 4-1 Basic specifications of sensorless vector control software**

Item	Description	
Control method	Vector control	
Starting/stopping motor control	Determined by the level of SW1 ("ON": start control; "OFF": stop) or input from RMW	
Rotor magnetic pole position detection	Sensorless	
Input voltage	DC 24V	
Carrier frequency (PWM)	RX26T: 20 [kHz], Carrier cycle: 50 [ $\mu$ s] RX14T (2shunt): 20 [kHz], Carrier cycle: 50 [ $\mu$ s] RX14T (1shunt): 10 [kHz], Carrier cycle: 100 [ $\mu$ s]	
Dead time	RX26T: 2 [ $\mu$ s] RX14T: 1 [ $\mu$ s]	
Current detection	1 shunt detection, 2 shunt detection	
Control cycle (current)	RX26T: 50 [ $\mu$ s] RX14T: 100 [ $\mu$ s] (1 decimation only 2shunt)	
Control cycle (speed)	RX26T: 500 [ $\mu$ s] RX14T: 1 [ms]	
Speed command value management	CW: 0 to 2400 [rpm] CCW: 0 to -2400 [rpm] When less than 600 [rpm], the motor is driven under speed open-loop control*1	
Natural frequency for each control system	Current control system: 300 [Hz] Speed control system: 3 [Hz] Inductive voltage estimation system: 1000 [Hz] Position estimation system: 20 [Hz]	
Compiler optimization settings	Optimization level	2 (-optimize = 2) (default)
	Optimization method	Optimization focusing on the code size (-size) (default)
Protection stop processing	<p>The motor control signal output (six outputs) will be deactivated when any of the following conditions are met:</p> <ol style="list-style-type: none"> <li>1. The currents of all phases exceed 3.54 [A] (RX26T), 2.4 [A] (RX14T) (checked at current control cycle).</li> <li>2. The inverter bus voltage exceeds 60 [V] (checked at current control cycle).</li> <li>3. The inverter bus voltage is less than 8 [V] (checked at current control cycle).</li> <li>4. The rotation speed exceeds 4500 [rpm] (checked at current control cycle).</li> </ol> <p>When the overcurrent detection signal (POE) from an external circuit or an output short-circuit is detected, the PWM output pin is driven to Inactive.</p>	

Note: 1. When you spin the motor with sensorless vector control, set a rotation speed command value higher than 600 [rpm].

## 4.2 Software configuration

Each sample program consists of the application layer, motor module, and Smart Configurator. The motor module performs control as requested from the application layer controlled by the user. The output from the motor module is transferred by Smart Configurator to the hardware layer.

### 4.2.1 Overall configuration

Figure 4-1 shows the overall configuration of the software.

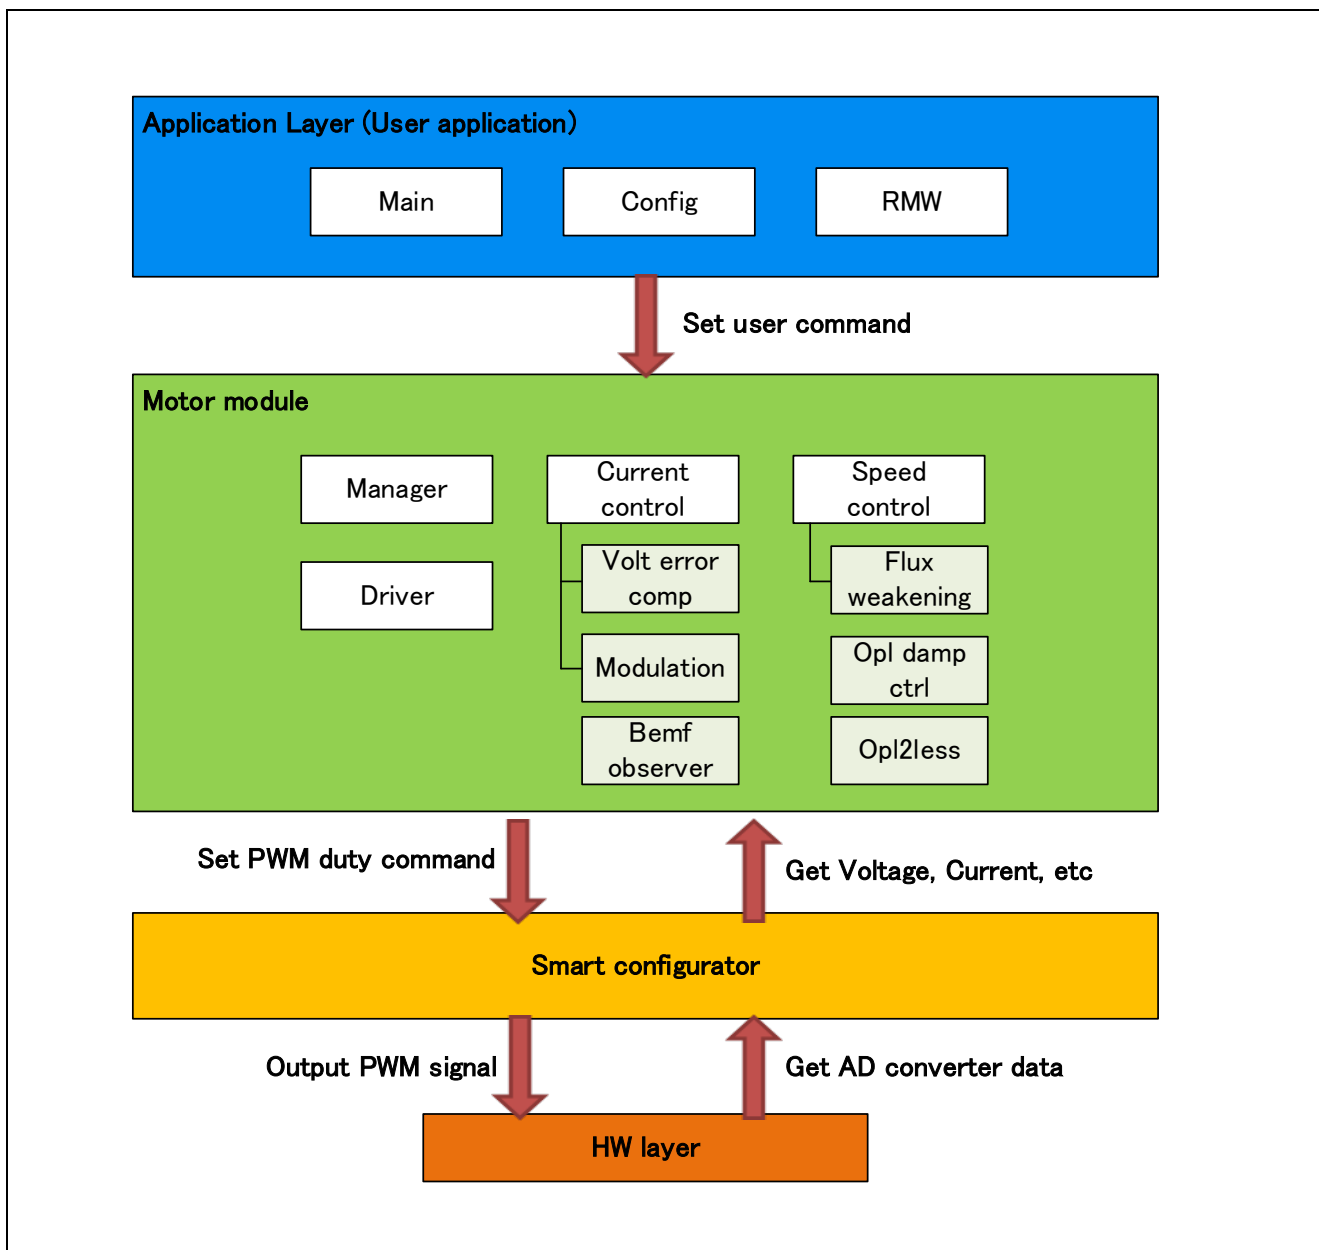


Figure 4-1 shows the overall configuration of the motor control software.

### 4.2.2 Configuration of the motor module

Figure 4-2 shows the configuration of the motor module. Table 4-2 provides a summary of each module. The manager module works as an interface between other modules and performs data acquisition and setting for the appropriate modules.

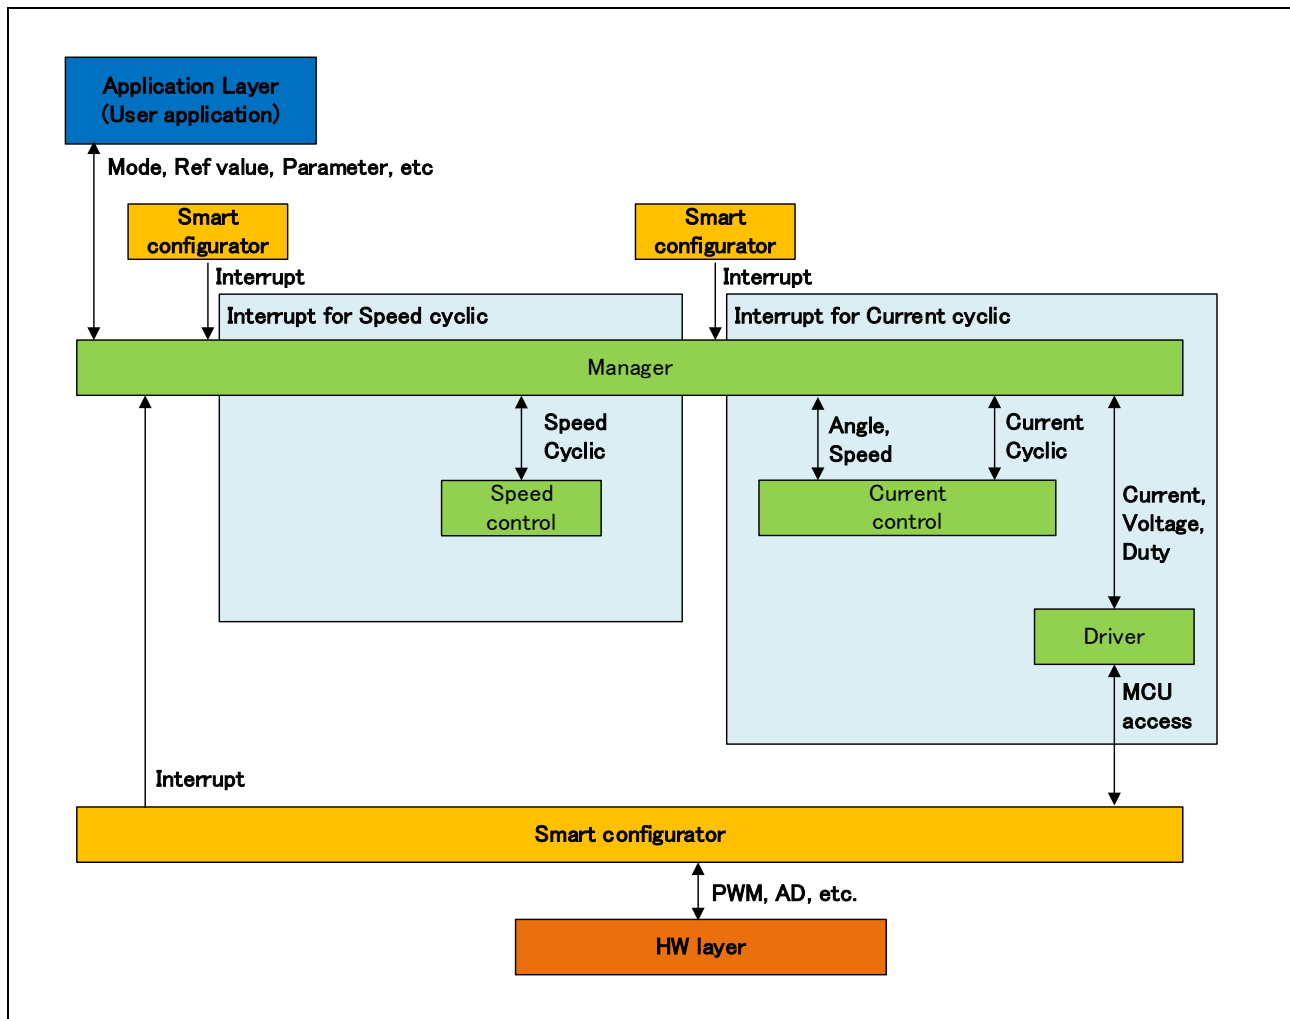


Figure 4-2 Configuration of the motor module

**Table 4-2 Module summary**

<b>Module</b>	<b>Description</b>	<b>Section</b>
Application layer	Main processing and user area	5.1
Manager module	Management of the overall sample program and interface with each module	5.2
Current control module	Module related to current control	5.3
Speed control module	Module related to speed control	5.7
Driver module	Module related to connection with Smart Configurator	5.11
Smart Configurator layer	Module related to connection with the hardware layer	5.12

### 4.3 File and folder configuration

Table 4-3 shows the folder and file configuration of the sample program.

**Table 4-3 File and folder configuration**

Folder	Subfolder	File	Remarks	
app	main	r_app_main.c/h	User main function	
	rmw	r_app_rmw.c/h	Definition of functions related to the RMW Analyzer UI	
		r_app_rmw_interrupt.c	Definition of RMW interrupt functions	
		RX26T: ICS2_RX26T.lib/h RX14T: ICS2_RX14T.lib/h	Library for RMW communication	
	board_ui	r_app_board_ui.c/h	Definition of functions related to the Board UI	
		r_app_board_ui_ctrl.h	Definition of MCU-dependent functions of the Board UI	
		RX26T: r_app_board_ui_ctrl_rx26t_mclv1.c RX14T: r_app_board_ui_ctrl_rx14t_mclv1.c	Definition of MCU-dependent functions of the Board UI	
	cfg	r_app_control_cfg.h	Configuration definition for the application layer	
	motor_module	sensorless_vector_rx	r_motor_sensorless_vector_action.c	Definition of action functions
			r_motor_sensorless_vector_api.c/h	Definition of API functions for the manager module
r_motor_sensorless_vector_manager.c/h			Definition of local functions for the manager module	
r_motor_sensorless_vector_protection.c/h			Definition of functions for the protection function	
		r_motor_sensorless_vector_statemachine.c/h	Definition of functions related to state transition	
current_rx		r_motor_current_api.c/h	Definition of API functions for the current control module	
		r_motor_current.c/h	Definition of local functions for the current control module	
		r_motor_current_modulation.c/h	Definition of functions for the modulation module	
		r_motor_current_volt_err_comp.lib/h	Definition of functions for the voltage error compensation module	
		r_motor_current_bemf_observer.lib/h	Definition of functions for the inductive voltage observer	
		r_motor_current_pi_gain_calc.c	Definition of functions for calculating the control gain of the current control module	
speed_rx		r_motor_speed_api.c/h	Definition of API functions for the speed control module	
		r_motor_speed.c/h	Definition of local functions for the speed control module	
		r_motor_speed_fluxwkn.lib/h	Definition of functions for the magnetic flux weakening module	
		r_motor_speed_opl_damp_ctrl.lib/h	Definition of functions for open-loop damping control	

Folder	Subfolder	File	Remarks
motor_module	speed_rx	r_motor_speed_opl2less.lib/h	Definition of functions for switching-to-sensorless processing
		r_motor_speed_pi_gain_calc.c	Definition of functions for calculating the control gain of the speed control module
	driver_rx	r_motor_driver.c/h	Definition of functions for the driver module
	general	r_motor_filter.c/h	Definition of general-purpose filter functions
		r_motor_pi_control.c/h	Definition functions for PI control
		r_motor_common.h	Common definition
	cfg	r_motor_inverter_cfg.h	Configuration definition for the inverter
		r_motor_module_cfg.h	Configuration definition for the control module
		r_motor_targetmotor_cfg.h	Configuration definition for the motor
		r_mtr_control_parameter.h (Only 2shunt)	Tuning Result by the Tuner functions of RMW* <sup>1</sup> (Control parameters definition)
r_mtr_motor_parameter.h (Only 2shunt)		Tuning Result by the Tuner functions of RMW* <sup>1</sup> (Motor parameters definition)	
QE_Motor			Generated files by QE for Motor
src	smc_gen	See the next table	Drivers and API functions generated by Smart Configurator

Note: 1. This file is updated when tuning is performed on QE for Motor.

Smart Configurator can be used to generate peripheral drivers easily.

Smart Configurator saves the settings information about the microcontrollers, peripheral functions, pin functions, and other items that are used for the project in a project file (\*.scfg), and references the information saved in the file. To check the settings of the peripheral functions for the sample program, see the following file:

RX26T\_xxx\_MCILV1\_SPM\_LESS\_FOC\_yyy\_Vzzz.scfg

(In the above file name, the "xxx" portion indicates the edition: MCBA indicates for RX26T RAM64KB Version and MCBC indicates for RX26T RAM48KB Version. The "yyy" portion indicates the edition: CSP indicates the CS+ edition and E2S indicates the e<sup>2</sup> studio edition. The "zzz" portion indicates the revision number.)

RX14T\_MCILV1\_SPM\_LESS\_FOC\_yyy\_Vzzz.scfg

(In the above file name, the "yyy" portion indicates the edition: CSP indicates the CS+ edition and E2S indicates the e<sup>2</sup> studio edition. The "zzz" portion indicates the revision number.)

The following table shows the configuration of the folders and files generated by Smart Configurator.

**Table 4-4 Smart Configurator folder and file configurations (Example for 2 shunt detection)**

Folder	Subfolder	2nd subfolder	File	Remarks
src	smc_gen	RX26T: Config_S12AD2	RX26T: Config_S12AD2.c/h	Definition of functions related to 12-bit ADC
		RX14T: Config_S12AD1	RX14T: Config_S12AD1.c/h	
			RX26T: Config_S12AD2_user.c	Definition of user functions related to 12-bit ADC
			RX14T: Config_S12AD1_user.c	
		Config_PORT	Config_PORT.c/h	Definition of functions related to ports
			Config_PORT_user.c	Definition of user functions related to ports
		Config_CMT0	Config_CMT0.c/h	Definition of functions related to CMT for the control interval
			Config_CMT0_user.c	Definition of user functions related to CMT for the control interval
		Config_MOTOR	Config_MOTOR.c/h	Definition of functions related to the Motor component
			Config_MOTOR_user.c	Definition of user functions related to the Motor component
		Config_IWDT	Config_IWDT.c/h	Definition of functions related to IWDT
			Config_IWDT_user.c	Definition of user functions related to IWDT
		Config_POE	Config_POE.c/h	Definition of functions related to POE
			Config_POE_user.c	Definition of user functions related to POE

In addition to the table above, the following four folders are automatically generated when Smart Configurator is used:

r\_bsp: This folder contains various BSP (Board Support Package) files. For details, see the "readme.txt" file in the "r\_bsp" folder.

general: This folder contains various files that are shared by Smart Configurator generation drivers.

r\_config: This folder contains the configuration header files for the MCU package, clocks, interrupts, and driver initialization functions that have names in the "R\_xxx\_Open" pattern.

r\_pincfg: This folder contains various files related to pin settings.

## 5. Functionality

### 5.1 Application layer

The application layer is used for selecting the user interface (UI), setting command values for controlling motor modules that use RMW, and updating parameters for control modules. Two user interfaces (configured and processed in the sample program) are used: the Board UI, which uses the switches and variable resistor on the inverter board to drive the motor, and the RMW UI, which uses RMW to drive the motor. These UIs are also used to control whether to drive or stop the motor and to set control command values.

#### 5.1.1 Functions


Table 5-1 lists the functions that are configured in the application layer.

**Table 5-1 Functions available in the application layer**

Function	Description
Main processing	Enables or disables each user command in the system.
UI processing	Selects the Board UI or RMW UI, and switches between these UIs.
Board UI processing	Obtains and sets command values for speed control.
RMW UI processing	Acquires and sets parameters (including command values).

#### 5.1.2 Module configuration diagram

Figure 5-1 shows the module configuration.

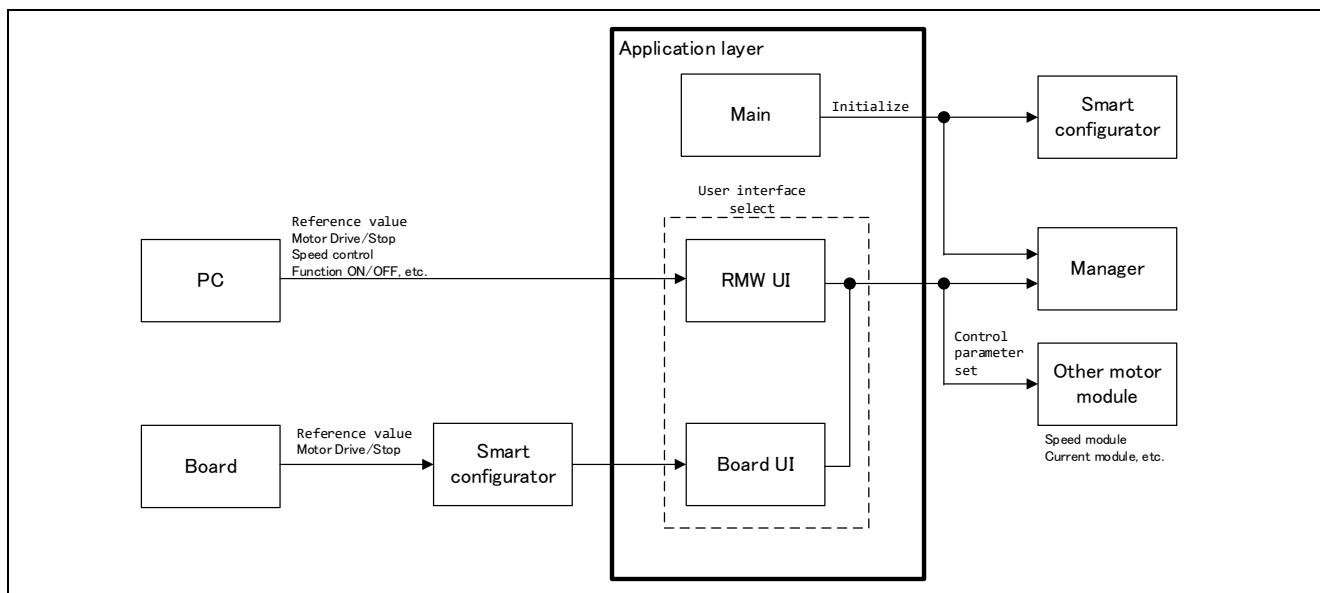

**Figure 5-1 Configuration of the application layer**

### 5.1.3 Flowcharts

#### 5.1.3.1 Main processing

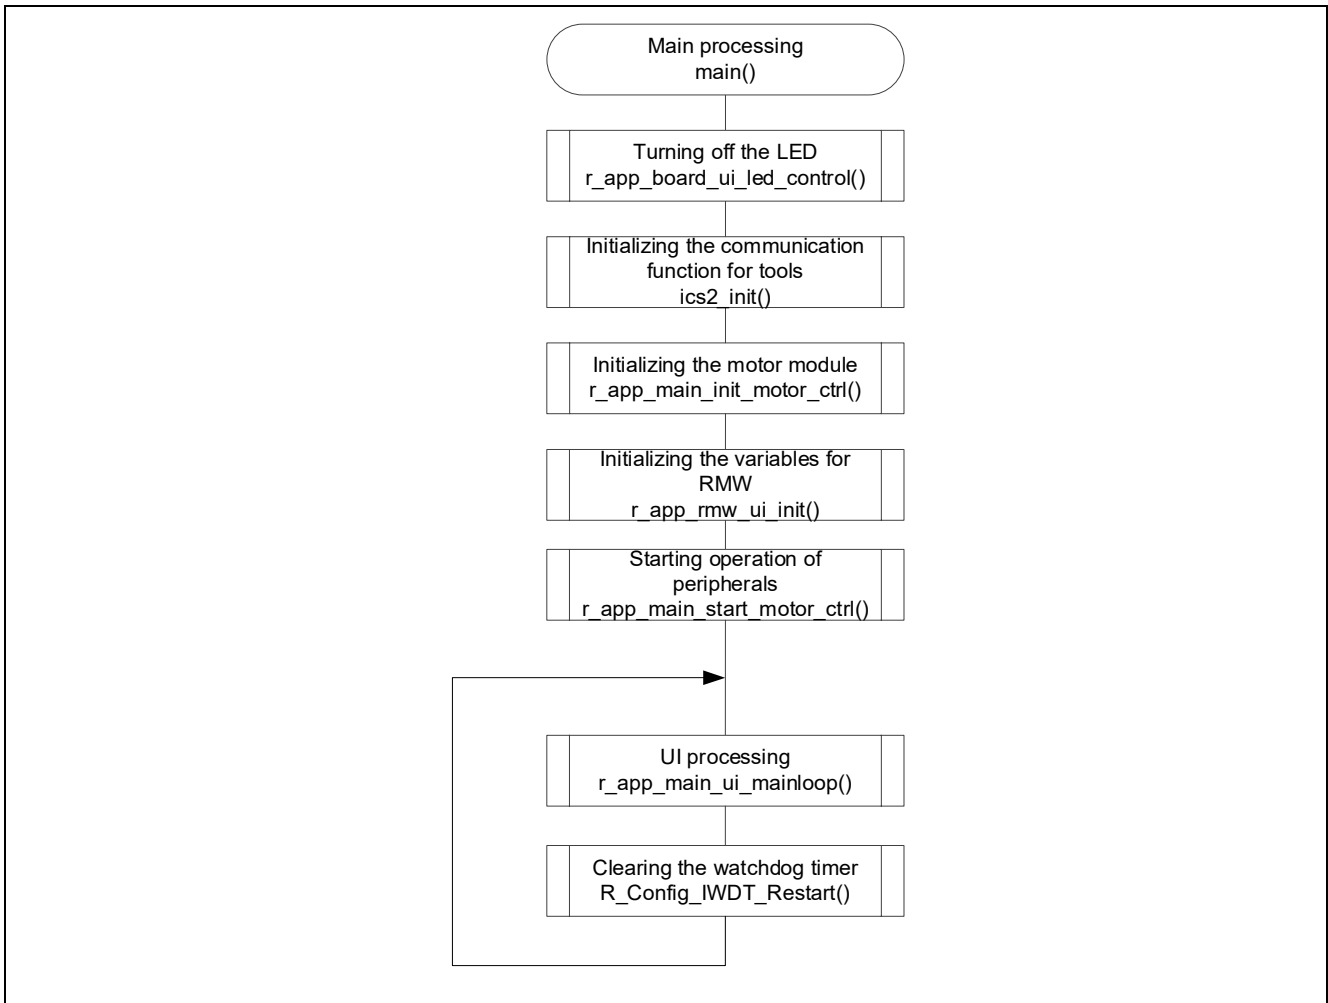


Figure 5-2 Flowchart for the main processing

5.1.3.2 UI processing

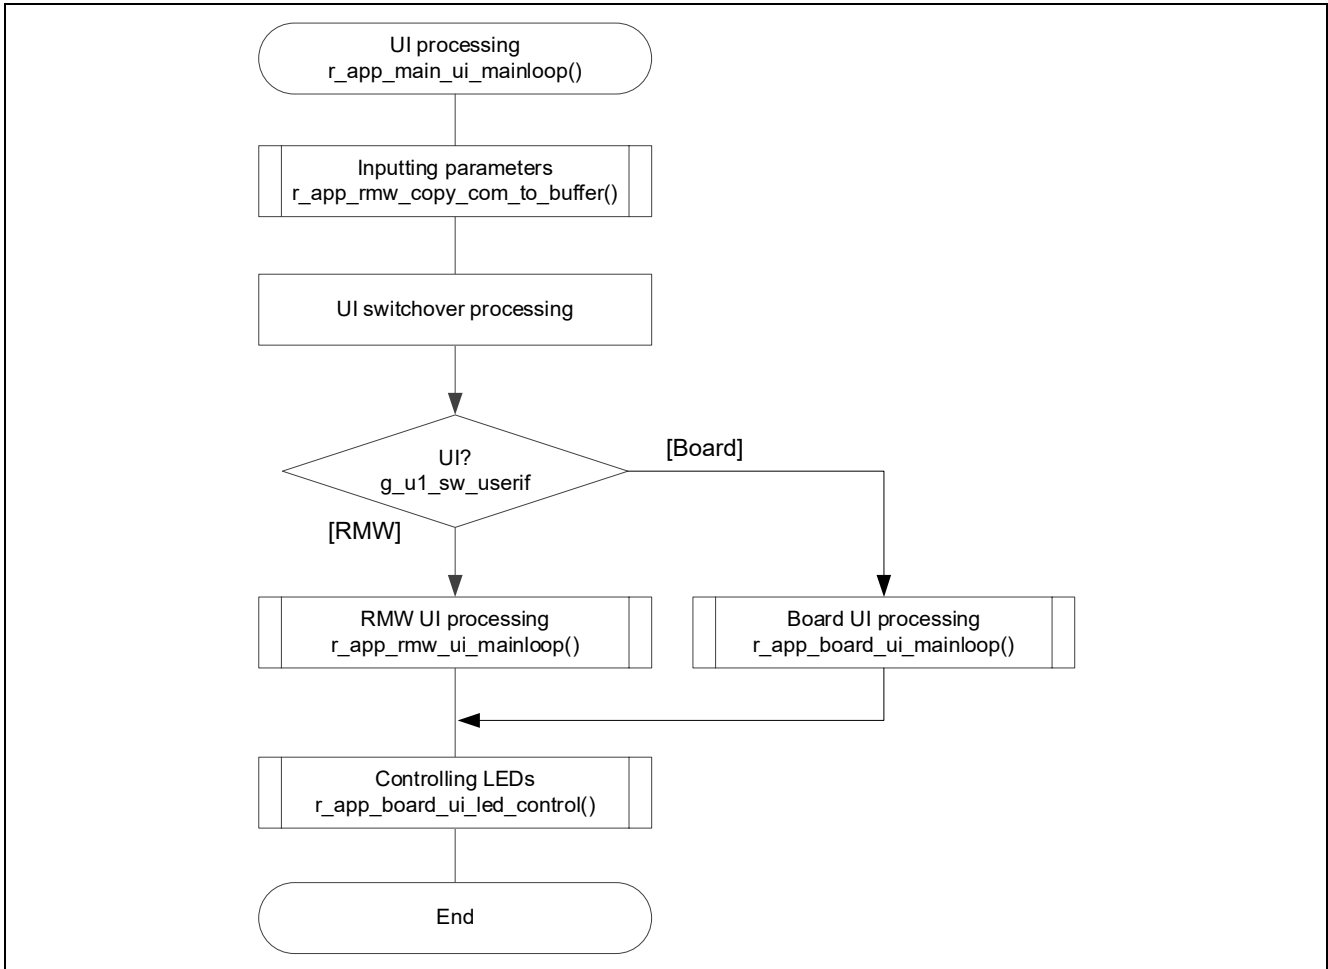


Figure 5-3 Flowchart for the UI processing

5.1.3.3 Board UI processing

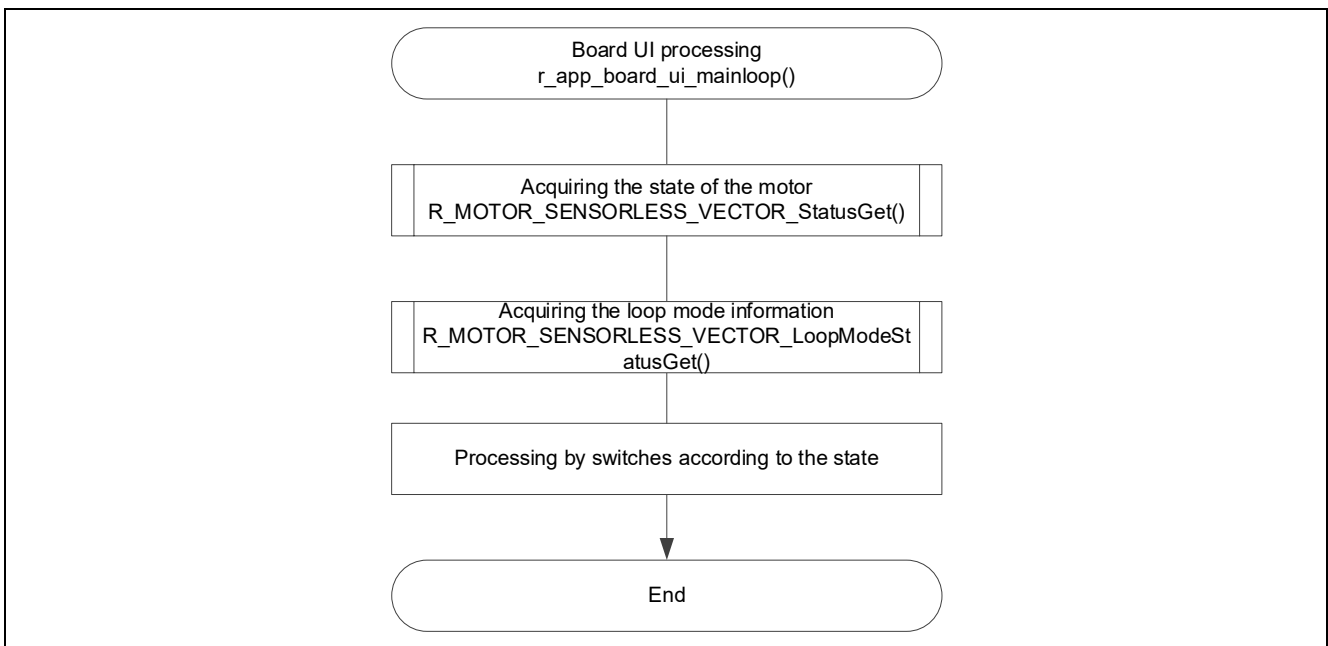


Figure 5-4 Flowchart for the Board UI processing

### 5.1.3.4 RMW UI processing

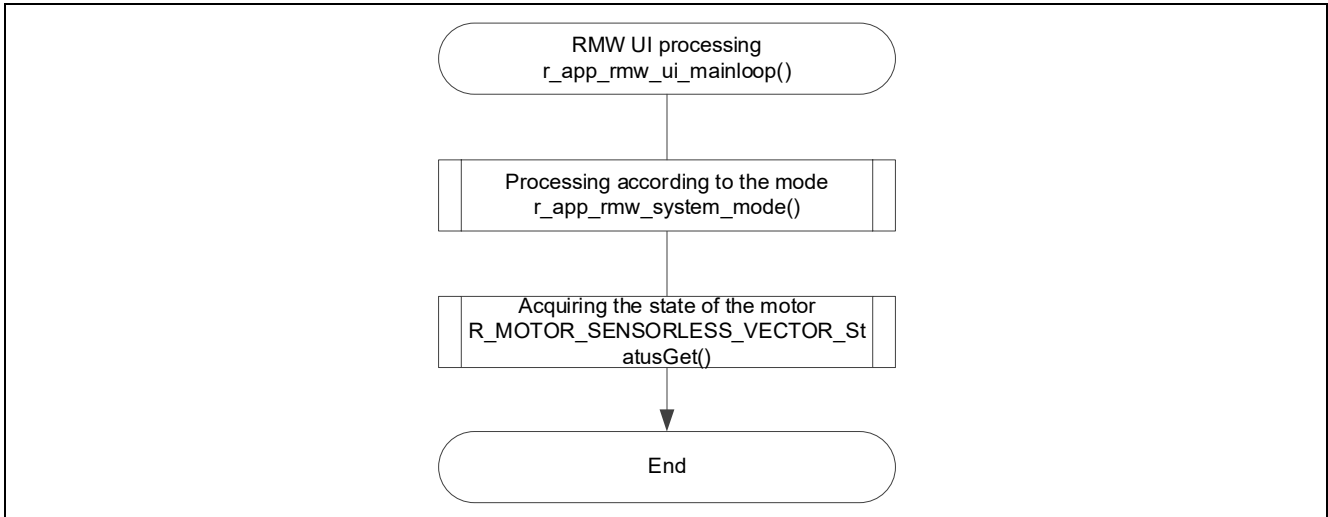


Figure 5-5 Flowchart for the RMW UI processing

### 5.1.4 Configurations

Table 5-2 shows the configurations used in the application layer.

**Table 5-2 List of configurations**

File name	Macro name	Description
r_app_control_cfg.h	APP_CFG_USE_UI	Initial UI setting RMW: MAIN_UI_RMW Board: MAIN_UI_BOARD
	APP_CFG_FREQ_BAND_LIMIT	This item sets the limit value for maintaining separation between the natural frequencies for current control, and speed control.
	APP_CFG_MAX_CURRENT_OMEGA	This item sets the upper limit on the natural frequency for the current control system [Hz].
	APP_CFG_MIN_OMEGA	This item sets the lower limit on natural frequencies [Hz].
	APP_CFG_SCI_CH_SELECT	This item is used to select the SCI channel for RMW.

**Table 5-3 List of initial values for configurations**

Macro name	Settings		
	RX26T RAM64KB Version	RX26T RAM48KB Version	RX14T
APP_CFG_USE_UI	MAIN_UI_RMW		
APP_CFG_FREQ_BAND_LIMIT	3.0f		
APP_CFG_MAX_CURRENT_OMEGA	1000.0f		
APP_CFG_MIN_OMEGA	1.0f		
APP_CFG_SCI_CH_SELECT	0x60 (SCI6)	0x10(SCI1)	0x50 (SCI5)

### 5.1.5 Structure and variable information

Table 5-4 lists the variables that can be used by users in the application layer. Table 5-5 lists the members of the structure provided for updating the motor module parameters by using RMW.

**Table 5-4 List of variables**

Variable	Description
g_st_rmw_input_buffer	Structure for updating the RMW variables
g_u1_update_param_flag	Buffer transfer completion flag
com_u1_system_mode	Variable to switch the system mode for user entry 0: Stopping the motor 1: Driving the motor 3: Canceling the error
g_u1_system_mode	System mode 0: Stopping the motor 1: Driving the motor 2: Error
com_u1_enable_write	Whether to enable rewrite of variables for user entry
g_u1_enable_write	Whether to enable rewrite of variables
com_u1_sw_userif	Variable to switch the UI for user entry 0: RMW UI 1: Board UI
g_u1_sw_userif	Variable to switch the UI
com_u2_offset_calc_time	Current offset value calculation time setting
com_u2_mtr_pp	Number of pole pairs of the motor to be driven
com_f4_mtr_r	Resistance of the motor to be driven [ $\Omega$ ]
com_f4_mtr_ld	d-axis inductance of the motor to be driven [H]
com_f4_mtr_lq	q-axis inductance of the motor to be driven [H]
com_f4_mtr_m	Magnetic flux of the motor to be driven [Wb]
com_f4_mtr_j	Rotor inertia of the motor to be driven [ $\text{kgm}^2$ ]
com_f4_nominal_current_rms	Rated current of the motor to be driven [Arms]
com_f4_max_speed_rpm	Maximum speed (mechanical angle) of the motor to be driven [rpm]
com_u1_ctrl_loop_mode	Switching of the control loop 0: Position control (Not used) 1: Speed control
com_f4_ol_ref_id	d-axis current command value [A]
com_f4_id_up_time	Ramping-up time of the d-axis current command value setting
com_f4_id_down_time	Decreasing time of the d-axis current command value
com_f4_id_down_speed_rpm	Speed (mechanical angle) when start decreasing the d-axis current command value [rpm]
com_f4_id_up_speed_rpm	Speed (mechanical angle) when start increasing the d-axis current command value [rpm]
com_f4_current_omega_hz	Natural frequency for the current control system [Hz]

Variable	Description
com_f4_current_zeta	Attenuation coefficient for the current control system
com_f4_speed_omega_hz	Natural frequency for the speed control system [Hz]
com_f4_speed_zeta	Attenuation coefficient for the speed control system
com_f4_speed_lpf_hz	Speed LPF cut-off frequency [Hz]
com_f4_ref_speed_rpm	Speed command value (mechanical angle) [rpm]
com_f4_speed_rate_limit_rpm	Maximum increment/decrement width for the speed command [rpm/s] (used when speed control is enabled)
com_f4_overspeed_limit_rpm	Speed limit value (mechanical angle) [rpm]
com_u1_flag_volt_err_comp_use	Voltage error compensation setting 0: Disable 1: Enable
com_u1_flag_fluxwkn_use	Magnetic flux weakening control setting 0: Disable 1: Enable
s_u1_cnt_ics	ICS watchpoint skip counter
com_f4_e_obs_omega_hz	Natural frequency for the inductive voltage estimation system [Hz]
com_f4_e_obs_zeta	Attenuation coefficient for the inductive voltage estimation system
com_f4_pll_est_omega_hz	Natural frequency for the position estimation system [Hz]
com_f4_pll_est_zeta	Attenuation coefficient for the position estimation system
com_u1_flag_less_switch_use	Switching-to-sensorless processing setting 0: Disable 1: Enable
com_f4_switch_phase_err_deg	Phase error that allows switching-to-sensorless control (electrical angle) [deg]
com_f4_opl2less_sw_time	Processing time for switching-to-sensorless processing [s]
com_f4_phase_err_lpf_cut_freq	Phase error LPF cut-off frequency [Hz]
com_u1_flag_openloop_damping_use	Open-loop damping control setting 0: Disable 1: Enable
com_f4_ed_hpf_omega	d-axis inductive voltage HPF cut-off frequency [Hz]
com_f4_ol_damping_zeta	Attenuation coefficient for open-loop damping control
com_f4_ol_damping_fb_limit_rate	Feedback limit rate for open-loop damping control
com_s2_difference_minimum	Securing the current detection period of Duty (for 1 shunt detection)
com_s2_adjust_adc_delay	Current detection timing adjustment (for 1 shunt detection)

**Table 5-5 List of variables of the structure for RMW to update parameters**

Structure	Variable	Description
st_rmw_param_buf fer_t  Structure for updating the RMW variables	u2_offset_calc_time	Current offset detection time set setting
	st_motor	Structure for motor parameters
	f4_max_speed_rpm	Maximum speed [rpm]
	u1_ctrl_loop_mode	Control loop mode (position control and speed control)
	f4_ol_ref_id	d-axis current command value in open loop mode [A]
	f4_id_up_time	Setting of the time required for Id increasement
	f4_id_down_time	Decreasing time of the d-axis current command value
	f4_id_down_speed_rpm	Speed (mechanical angle) when start decreasing the d-axis current command value [rpm]
	f4_id_up_speed_rpm	Speed (mechanical angle) when start increasing the d-axis current command value [rpm]
	f4_current_omega_hz	Natural frequency for the current control system [Hz]
	f4_current_zeta	Attenuation coefficient for the current control system
	f4_speed_omega_hz	Natural frequency for the speed control system [Hz]
	f4_speed_zeta	Attenuation coefficient for the speed control system
	f4_speed_lpf_hz	Speed LPF cut-off frequency [Hz]
	f4_ref_speed_rpm	Speed command value [rpm]
	f4_speed_rate_limit_rpm	Speed variation limit [rpm/s]
	f4_overspeed_limit_rpm	Speed limit value [rpm]
	u1_flag_volt_err_comp_use	Flag for whether to use voltage error compensation
	u1_flag_fluxwkn_use	Flag for whether to use magnetic flux weakening control
	f4_e_obs_omega_hz	Natural frequency for the inductive voltage estimation system [Hz]
	f4_e_obs_zeta	Attenuation coefficient for the inductive voltage estimation system
	f4_pll_est_omega_hz	Natural frequency for the position estimation system [Hz]
	f4_pll_est_zeta	Attenuation coefficient for the position estimation system
u1_flag_less_switch_use	Flag for whether to use switching-to-sensorless processing	
f4_switch_phase_err_deg	Phase error that allows switching-to-sensorless control (electrical angle) [deg]	
f4_opl2less_sw_time	Processing time for switching-to-sensorless processing [s]	
f4_phase_err_lpf_cut_freq	Phase error LPF cut-off frequency [Hz]	

Structure	Variable	Description
st_rmw_param_buffer_t  Structure for updating the RMW variables	u1_flag_openloop_damping_use	Flag for whether to use open-loop damping control
	f4_ed_hpf_omega	d-axis inductive voltage HPF cut-off frequency [Hz]
	f4_ol_damping_zeta	Attenuation coefficient for open-loop damping control
	f4_ol_damping_fb_limit_rate	Feedback limit rate for open-loop damping control
	s2_difference_minimum	Securing the current detection period of Duty (for 1 shunt detection)
	s2_adjust_adc_delay	Current detection timing adjustment (for 1 shunt detection)

**5.1.6 Macro definition**

Table 5-6 lists macros.

**Table 5-6 List of macros**

File name	Macro name	Defined value	Remarks
r_app_main.h	MAIN_UI_RMWS	0	The RMWS UI is used.
	MAIN_UI_BOARD	1	The Board UI is used.
	MAIN_UI_SIZE	2	The number of selectable UIs
r_app_board_ui.h	BOARD_SW1_ON	1	The switch SW1 is on.
	BOARD_SW1_OFF	0	The switch SW1 is off.
	BOARD_SW2_ON	0	The switch SW2 is on.
	BOARD_SW2_OFF	1	The switch SW2 is off.
	BOARD_CHATTERING_CNT	10	The chattering elimination counter value
	BOARD_AD12BIT_DATA	MOTOR_MCU_CFG_A D12BIT_DATA	12-bit AD value
	BOARD_VR1_SPEED_DEAD_BAND	80	Speed dead band for VR1 [rpm]
	BOARD_VR1_SPEED_MARGIN	50	Speed margin for VR1 [rpm]
	BOARD_VR1_SCALING_SPEED	(MOTOR_CFG_MAX_SPEED_RPM + BOARD_VR1_SPEED_MARGIN) / (BOARD_AD12BIT_DATA/2 + 1)	Speed scaling coefficient for VR1
BOARD_ADJUST_OFFSET	MOTOR_MCU_CFG_A DC_OFFSET	Offset value for VR1	
r_app_rmws.h	ICS_DECIMATION	RX26T: 5 RX14T: 2	RMWS watchpoint skip count
	ICS_INT_LEVEL	6	RMWS interrupt priority
	ICS_BRR	RX26T: 251 RX14T: 5	Communication baud rate for RMWS
	ICS_INT_MODE	1	Communication mode selection for RMWS
	ICS_SCI_CH_SELECT	CFG_SCI_CH_SELECT	SCI channel to be used

### **5.1.7 Adjustment and configuration of parameters**

In the application layer, the configurations must be specified by using the `r_app_control_cfg.h` file. For the parameters to be set, see 5.1.4.

For the variables listed in Table 5-4, perform adjustment and configuration from RMW. For details about how to use RMW, see 3 Quick start guide and the Renesas Motor Workbench User's Guide (R21UZ0004).

## 5.2 Manager module

The manager module uses specific control modules to control the motor. Its processing includes system-wide management and protection for the interface with each module and for motor control.

### 5.2.1 Functionality


Table 5-7 lists the functions of the manager module.

**Table 5-7 List of manager module functions**

Function	Description
Mode management	Switches the operation mode of the system in response to the user command to control the motor.
Protection function	Handles errors by using the system protection function.
Control method management	Acquires and sets the states of speed control and current control.
Speed information acquisition	Acquires the speed information.
Control module command value setting	Selects the command values to be entered to the current control module and speed control module based on the control states.
Interrupt processing	Assigns processing to appropriate modules in response to interrupts set in Smart Configurator.

### 5.2.2 Module configuration diagram

Figure 5-6 shows the module configuration.

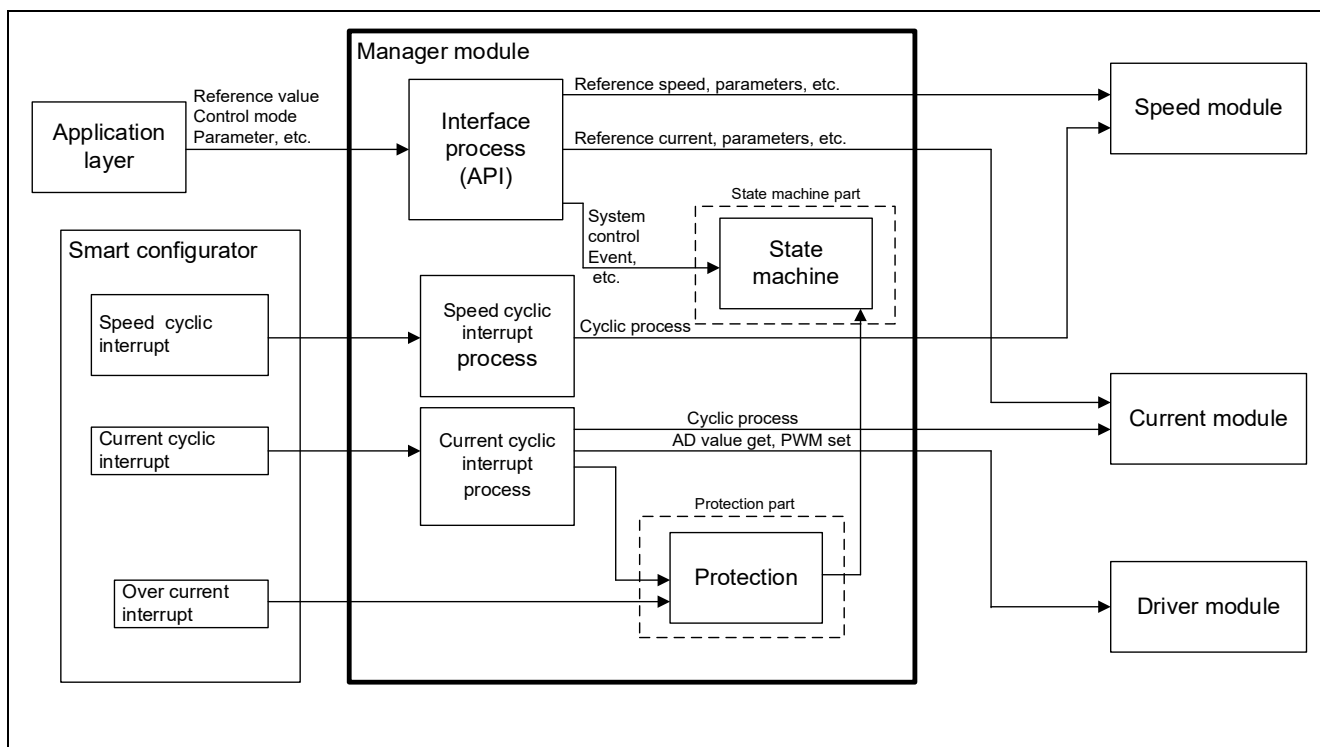

**Figure 5-6 Manager module configuration diagram**

### 5.2.3 Mode management

Figure 5-7 shows the state transitions of the target software of this application note. For the target software of this application note, the states are managed by using two types of modes: system modes and run modes. Control Config indicates the control systems that are currently active in the software.

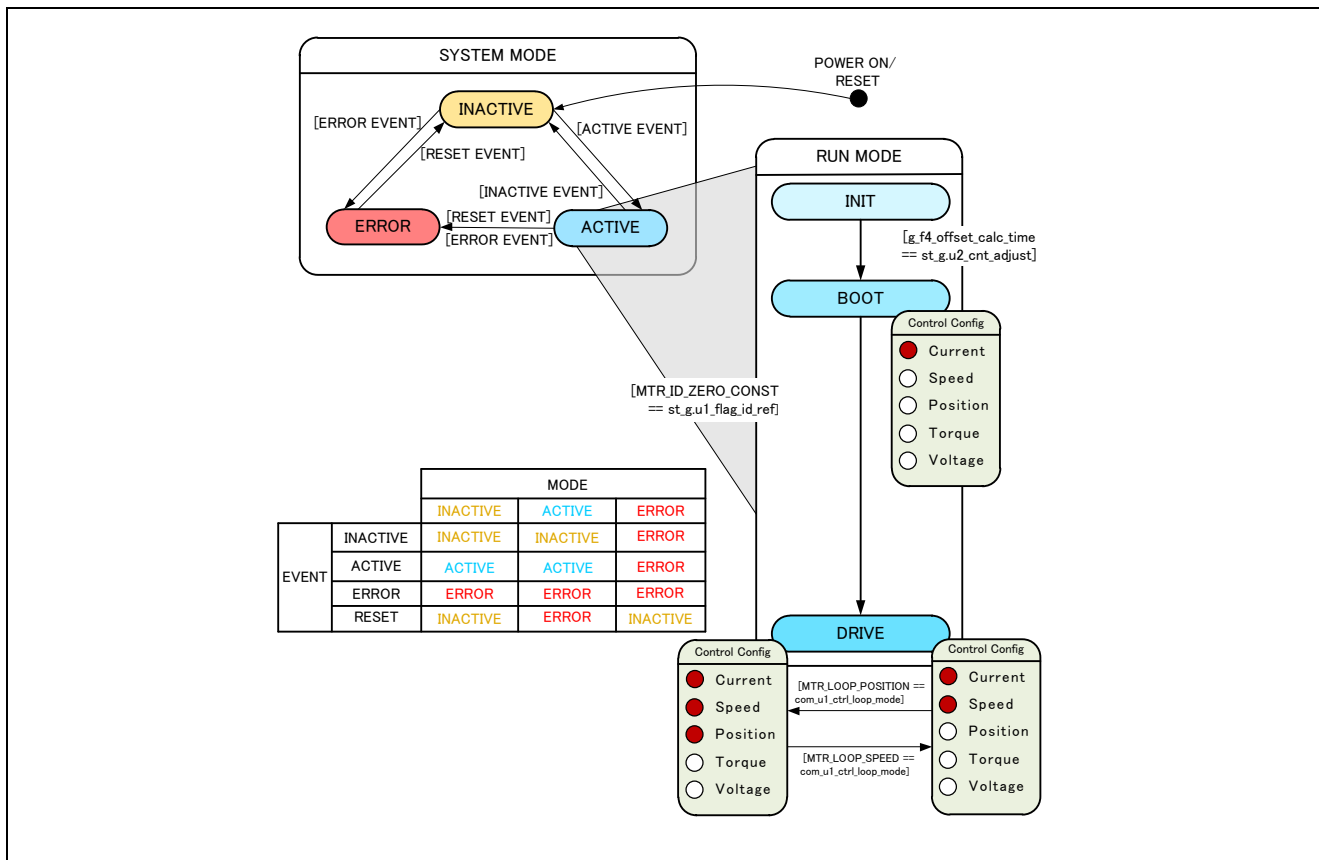


Figure 5-7 State transition diagram for the sensorless vector control software

(1) SYSTEM MODE

These modes are used to indicate the system operation state. The state transitions as the event corresponding to a new state occurs. There are three system modes: INACTIVE (the motor is stopped), ACTIVE (the motor is running), and ERROR (an error has occurred).

(2) RUN MODE

These modes are used to indicate the motor control state. When the system enters ACTIVE mode, the motor state transitions are shown in Figure 5-7.

(3) EVENT

The matrix table in Figure 5-7 shows the system operation state transitions according to the event that occurs in each system mode. The following table shows the trigger that causes each event to occur.

Table 5-8 List of events and their triggers

Event name	Trigger
INACTIVE	Operation performed by the user
ACTIVE	Operation performed by the user
ERROR	Error detection by the system
RESET	Operation performed by the user

### 5.2.4 Protection function

This control program provides the following error states and implements an emergency stop function in each error state. For details about the values that can be specified for the settings of the system protection function, see Table 5-9.

- **Overcurrent error**  
 Overcurrent errors can be detected on the hardware and in the software.  
 Inactive output is provided to the PWM output pin in response to an emergency stop signal (overcurrent detection) from the hardware.  
 This function monitors U-, V-, and W-phases at the overcurrent monitoring interval. When this function detects an overcurrent (the status in which the current is above the overcurrent limit value), it brings the program to an emergency stop (software detection).  
 The overcurrent limit value is automatically calculated from the rated current of the motor (MOTOR\_CFG\_NOMINAL\_CURRENT\_RMS).
- **Overvoltage error**  
 This function monitors the inverter bus voltage at the overvoltage monitoring interval. When the function detects an overvoltage (that is, a voltage above the overvoltage limit value), it brings the program to an emergency stop. The overvoltage limit value is preset in consideration of conditions such as an error in the resistor value of the detection circuit.
- **Low-voltage error**  
 This function monitors the inverter bus voltage at the low-voltage monitoring interval. When the function detects a low voltage (that is, a voltage below the low-voltage limit value), it brings the program to an emergency stop. The low-voltage limit value is preset in consideration of conditions such as an error in the resistor value of the detection circuit.
- **Rotation speed error**  
 This function monitors the speed at the rotation speed monitoring interval. When the rotation speed exceeds the speed limit value, it brings the program to an emergency stop.

**Table 5-9 Values specified for the system protection function settings**

Overcurrent error	Overcurrent limit value [A]	RX26T: 3.54 RX14T: 2.4
	Monitoring interval [ $\mu$ s]	Current control interval *1
Overvoltage error	Overvoltage limit value [V]	60
	Monitoring interval [ $\mu$ s]	Current control interval *1
Low-voltage error	Low-voltage limit value [V]	8
	Monitoring interval [ $\mu$ s]	Current control interval *1
Rotation speed error	Speed limit value [rpm]	4500
	Monitoring interval [ $\mu$ s]	Current control interval *1

Note: 1. See Table 4-1 Basic specifications of sensorless vector control software.

### 5.2.5 Flowcharts

The manager module performs processing in response to the occurrences of interrupts that are set in Smart Configurator by using several module API functions to control the motor. The following subsections show the flowcharts of the processing for these interrupts.

#### 5.2.5.1 Interrupt processing for current control

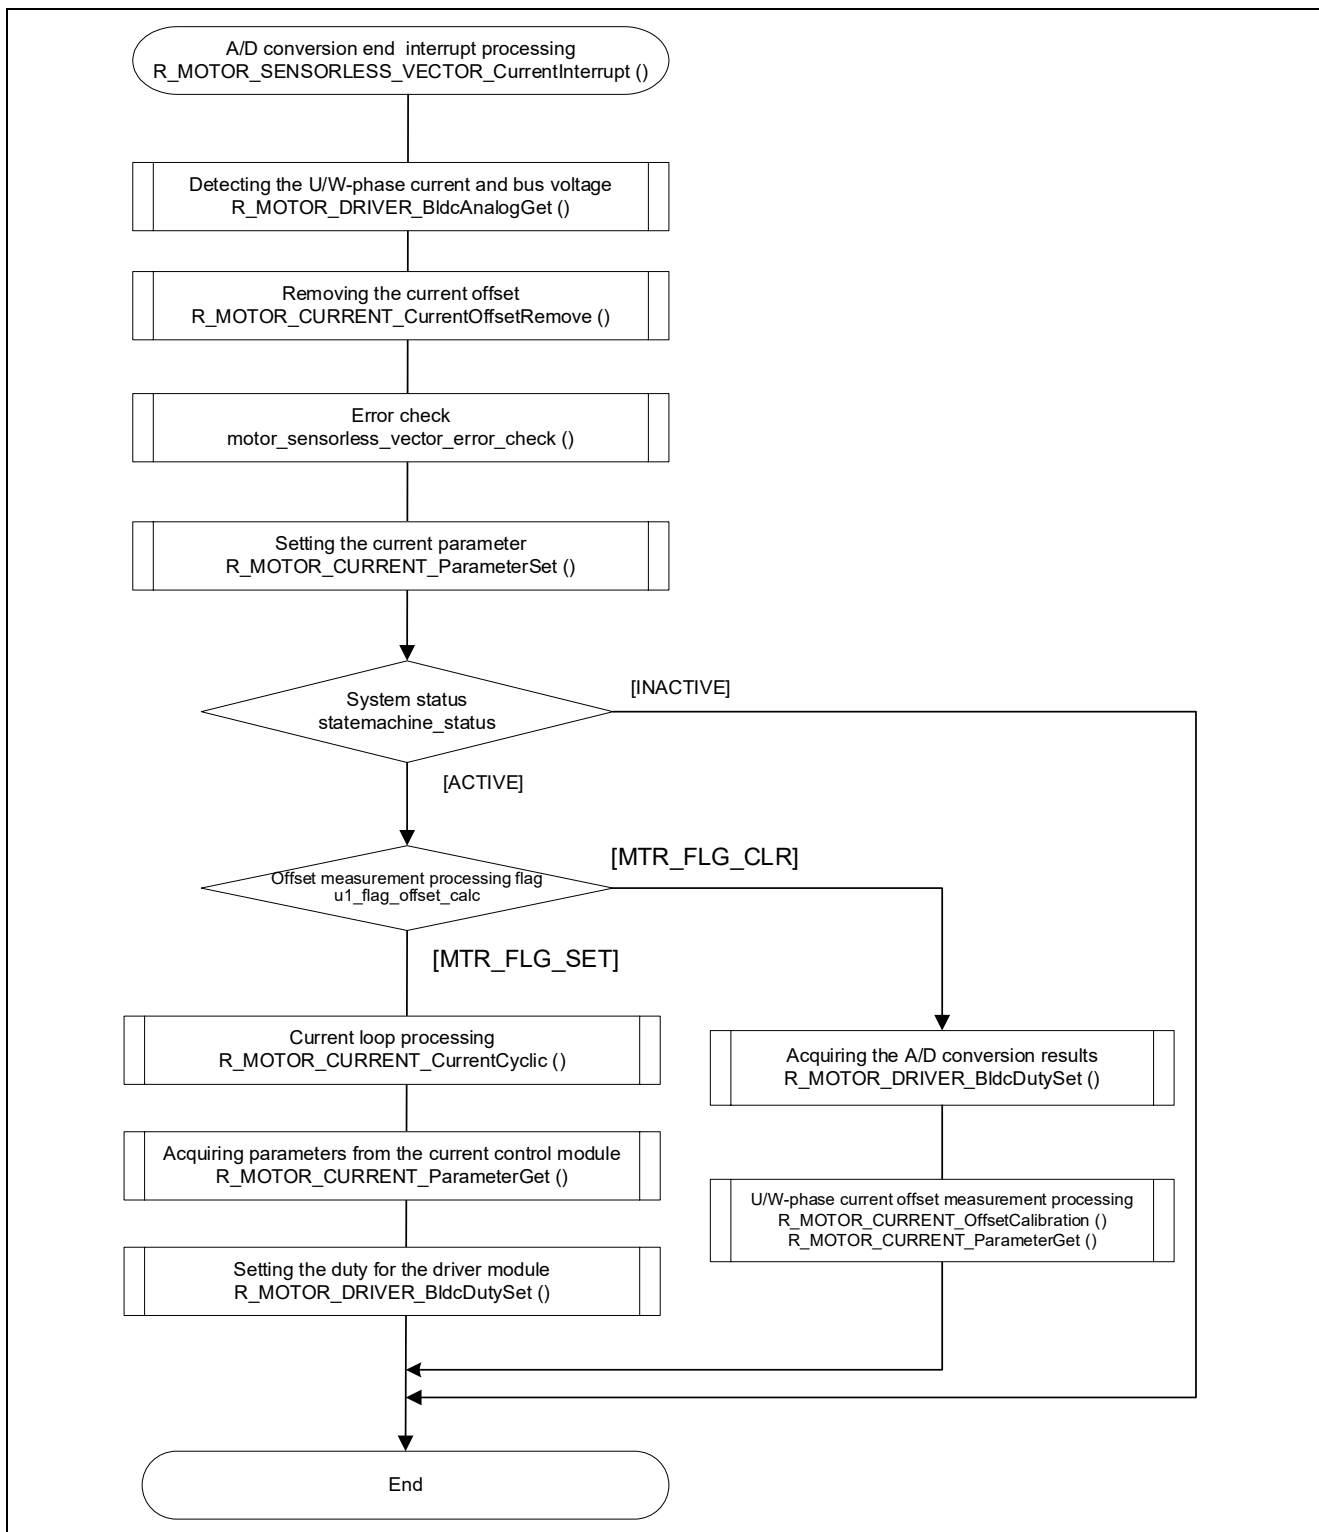


Figure 5-8 Interrupt processing flowchart for current control (2 shunt detection)

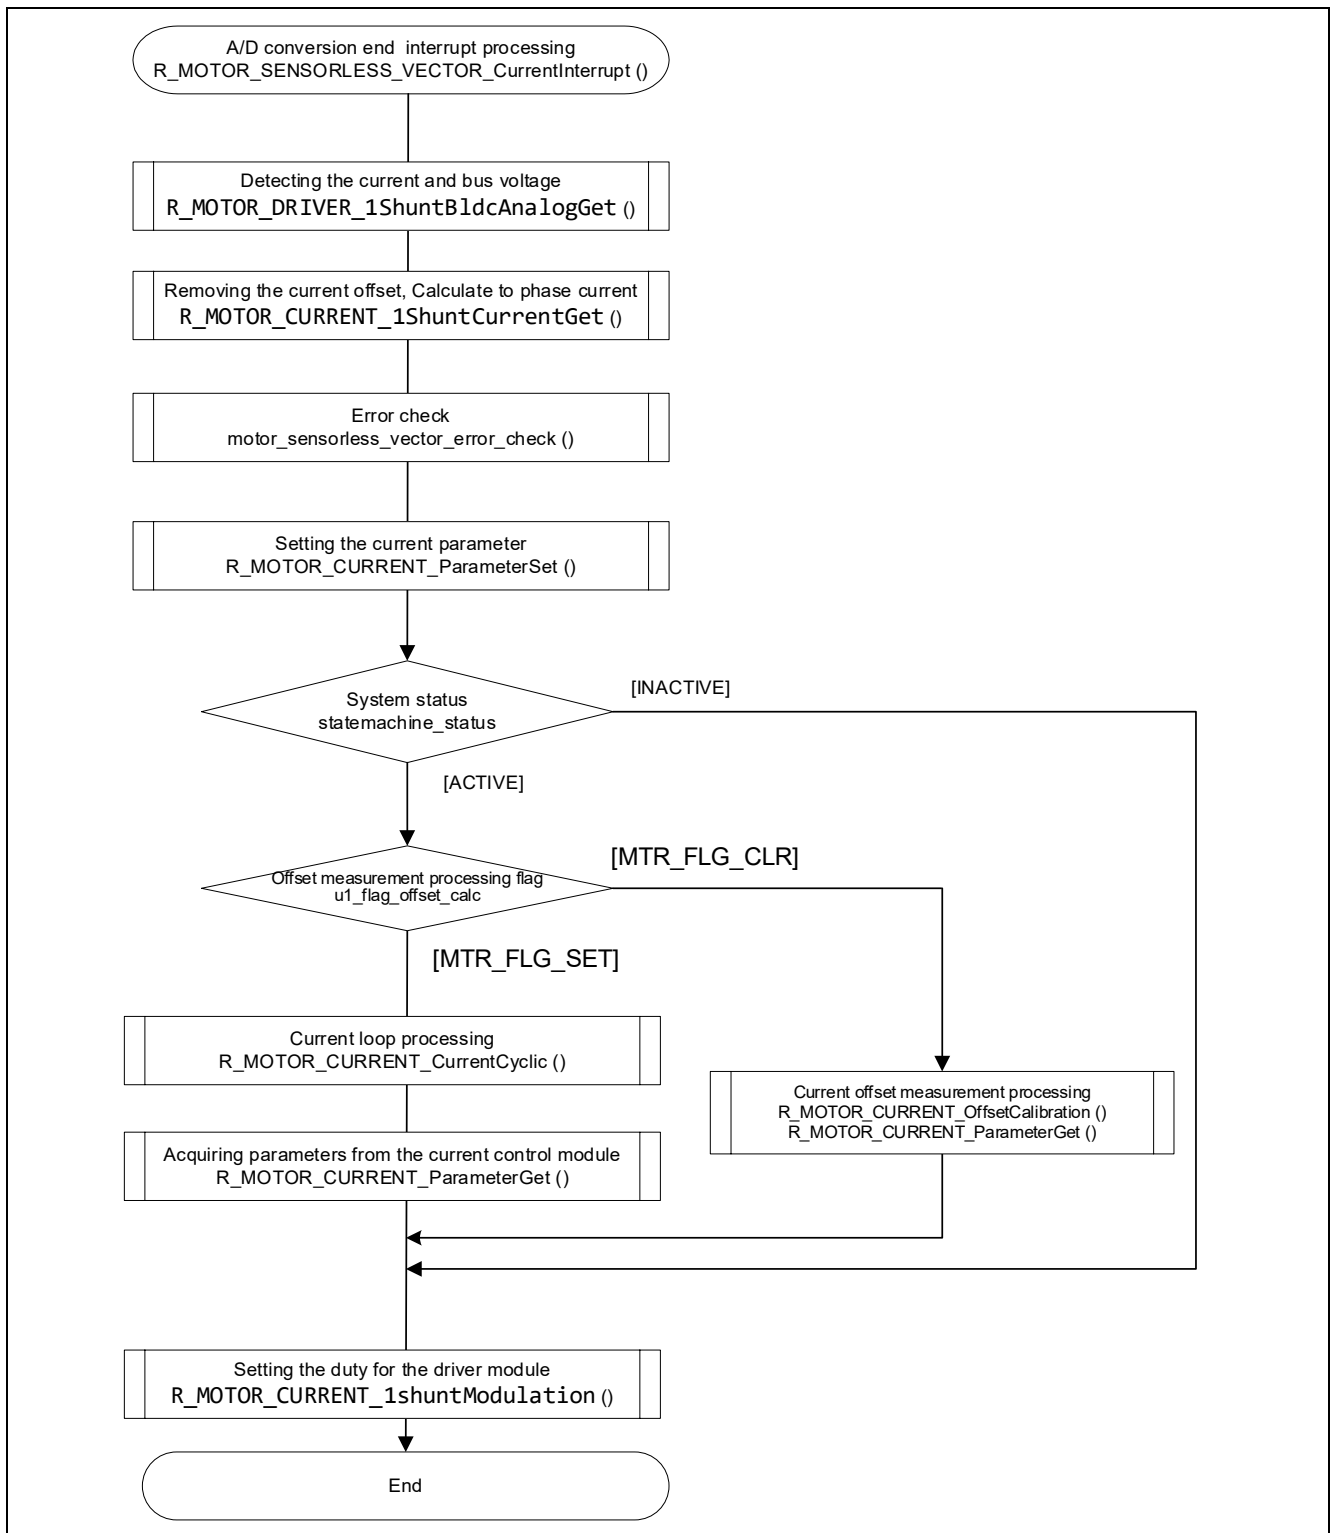


Figure 5-9 Interrupt processing flowchart for current control (1 shunt detection)

5.2.5.2 Interrupt processing for speed control

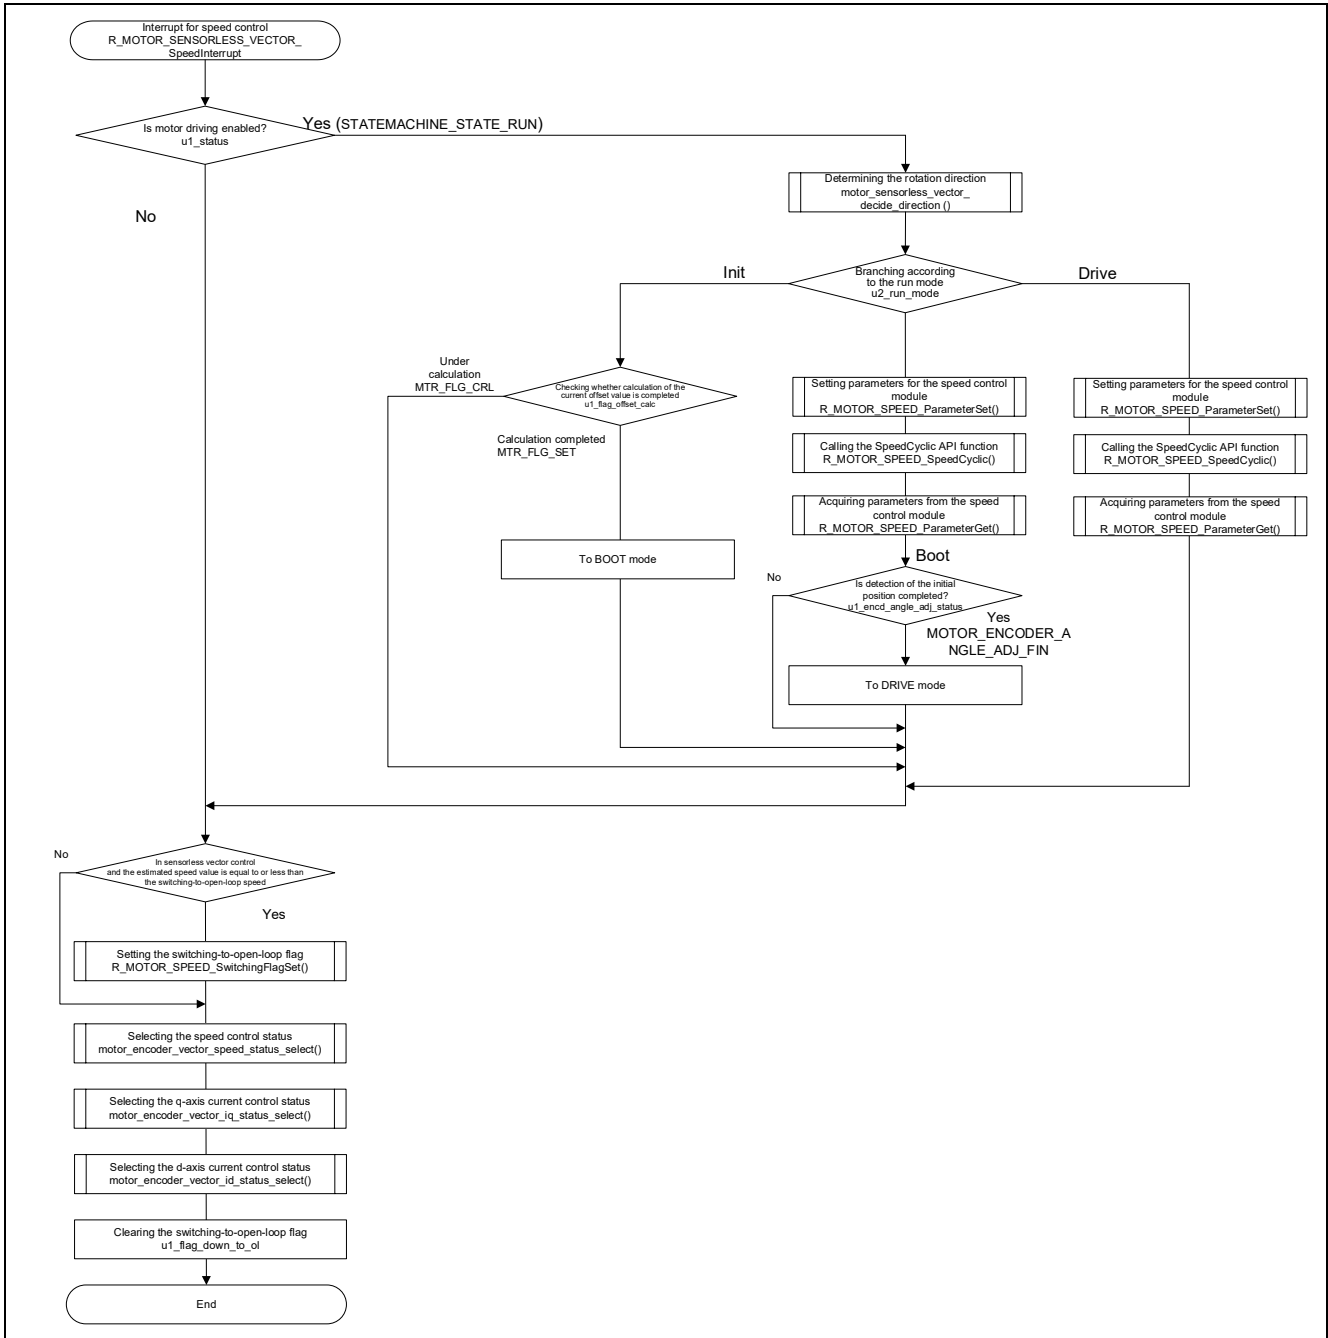


Figure 5-10 Interrupt processing flowchart for speed control

### 5.2.5.3 Overcurrent detection interrupt processing

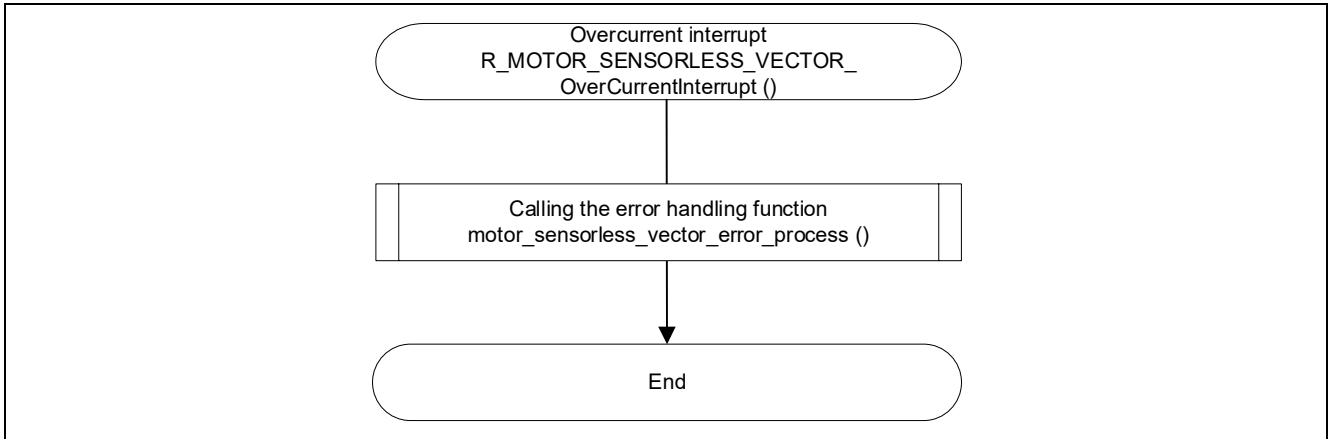


Figure 5-11 Overcurrent detection interrupt processing flowchart

**5.2.6 API**

Table 5-10 lists the manager module API functions.

**Table 5-10 List of API functions**

<b>API</b>	<b>Description</b>
R_MOTOR_SENSORLESS_VECTOR_Open	Generates instances of this module and the modules to be used.
R_MOTOR_SENSORLESS_VECTOR_Close	Places this module in a reset state.
R_MOTOR_SENSORLESS_VECTOR_Reset	Initializes modules.
R_MOTOR_SENSORLESS_VECTOR_ParameterUpdate	Updates the control parameter settings of this module. This function also updates the control parameters for the related modules.
R_MOTOR_SENSORLESS_VECTOR_MotorStart	Places the motor in the running state.
R_MOTOR_SENSORLESS_VECTOR_MotorStop	Places the motor in the stop state.
R_MOTOR_SENSORLESS_VECTOR_MotorReset	Releases the system from the error state.
R_MOTOR_SENSORLESS_VECTOR_ErrorSet	Places the system in an error state.
R_MOTOR_SENSORLESS_VECTOR_SpeedSet	Sets the speed command value. This function is enabled when speed control is being performed.
R_MOTOR_SENSORLESS_VECTOR_SpeedGet	Acquires the speed information.
R_MOTOR_SENSORLESS_VECTOR_StatusGet	Acquires the status from the state machine.
R_MOTOR_SENSORLESS_VECTOR_ErrorStatusGet	Acquires the error state.
R_MOTOR_SENSORLESS_VECTOR_CtrlTypeSet	Sets the control method. To change the control method, place the motor in the stopped state. 0: Position control (Not used) 1: Speed control
R_MOTOR_SENSORLESS_VECTOR_LoopModeStatusGet	Acquires the control method. 0: Position control (Not used) 1: Speed control
R_MOTOR_SENSORLESS_VECTOR_SpeedInterrupt	Performs interrupt processing for speed control.
R_MOTOR_SENSORLESS_VECTOR_CurrentInterrupt	Performs interrupt processing for current control.
R_MOTOR_SENSORLESS_VECTOR_OverCurrentInterrupt	Performs interrupt processing when an overcurrent occurs.

## 5.2.7 Configurations

Table 5-11 lists the configurations for the manager module.

**Table 5-11 List of configurations**

File name	Macro name	Description
r_motor_module_cfg.h	MOTOR_MCU_CFG_PWM_TIMER_FREQ	PWM timer frequency [MHz]
	MOTOR_MCU_CFG_CARRIER_FREQ	Carrier wave frequency [kHz]
	MOTOR_MCU_CFG_INTR_DECIMATION	Skipping count for carrier wave interrupts
	MOTOR_MCU_CFG_AD_FREQ	ADC operating frequency [MHz]
	MOTOR_MCU_CFG_AD_SAMPLING_CYCLE	ADC sampling state [cycles]
	MOTOR_MCU_CFG_AD12BIT_DATA	ADC resolution
	MOTOR_MCU_CFG_ADC_OFFSET	ADC intermediate data
	MOTOR_TYPE_BLDC	Motor used (BLDC)
	MOTOR_COMMON_CFG_LOOP_MODE	Sets the default run mode.
	MOTOR_COMMON_CFG_OVERCURRENT_MARGIN_MULT	Overcurrent limit value [A]
	MOTOR_COMMON_CFG_IA_MAX_CALC_MULT	Coefficient for calculating the overcurrent limit value BLDC: $\sqrt{3}$ STM: $\sqrt{2}$
	MOTOR_MCU_CFG_TFU_OPTIMIZE	Sets the processing of TFU-specific functions MTR_ENABLE MTR_DISABLE
	SENSORLESS_VECTOR_ID_DOWN_SPEED_RPM	Speed to start decreasing id [rpm]
	SENSORLESS_VECTOR_ID_UP_SPEED_RPM	Speed to start increasing id [rpm]
	SENSORLESS_VECTOR_OPL2LESS_SWITCH_PHASE_ERR_DEG	Phase error[deg] to decide sensorless switch timing
	SENSORLESS_VECTOR_OPL2LESS_SWITCH_PHASE_ERR_RAD	Phase error[rad] to decide sensorless switch timing
	SENSORLESS_VECTOR_OPL2LESS_SWITCH_PHASE_ERR_LPF_CUT_FREQ	Cut off frequency[Hz] of phase error LPF

**Table 5-12 List of initial values for configurations**

Macro name	2 shunt detection	1 shunt detection
MOTOR_MCU_CFG_PWM_TIMER_FREQ	CG_CONFIG_MOTOR_PWM_TIMER_FREQ	RX26T: 120.0 RX14T: 48.0
MOTOR_MCU_CFG_CARRIER_FREQ	CG_CONFIG_MOTOR_CARRIER_FREQ	RX26T: 20.0 RX14T: 10.0
MOTOR_MCU_CFG_INTR_DECIMATION (2 shunt detection)	RX26T: CG_CONFIG_MOTOR_INTR_DECIMATION RX14T: 1	0
MOTOR_MCU_CFG_AD_FREQ	CG_MOTOR_MCU_CFG_AD_FREQ	RX26T: 60.0 RX14T: 48.0
MOTOR_MCU_CFG_AD_SAMPLING_CYCLE	RX26T: 45 RX14T: 10.5	
MOTOR_MCU_CFG_AD12BIT_DATA	CG_MOTOR_CFG_MAX_AD_DATA	4095.0f
MOTOR_MCU_CFG_ADC_OFFSET	0x7FF	
MOTOR_TYPE_BLDC	Defined	
MOTOR_COMMON_CFG_LOOP_MODE	MOTOR_LOOP_SPEED	
MOTOR_COMMON_CFG_OVERCURRENT_MARGIN_MULT	1.5	
MOTOR_COMMON_CFG_IA_MAX_CALC_MULT	MTR_SQRT_3	
MOTOR_MCU_CFG_TFU_OPTIMIZE	MTR_ENABLE	

### 5.2.8 Structure and variable information

Table 5-13 lists the structures and variables for the manager module. For the manager module, the structure for the manager module (`g_st_sensorless_vector`) is defined by securing an instance of the module from the API.

**Table 5-13 List of structures and variables**

Structure	Variable	Description
st_sensorless_vector_control_t  Structure for the manager module	u1_flag_less_switch_use	ON/OFF for switching-to-sensorless processing
	u1_flag_openloop_damping_use	ON/OFF for open-loop damping control
	u1_flag_down_to_ol	Switching-to-open-loop flag
	u1_state_id_ref	Status of the d-axis current command value
	u1_state_iq_ref	Status of the q-axis current command value
	u1_state_speed_ref	Status of the speed command value
	u1_direction	Rotation direction
	u1_ctrl_loop_mode	Control mode selection (Only speed control)
	u2_error_status	Error status
	u2_run_mode	Run mode
	f4_vdc_ad	Bus voltage [V]
	f4_iu_ad	U-phase current [A]
	f4_iv_ad	V-phase current [A]
	f4_iw_ad	W-phase current [A]
	f4_overcurrent_limit	Overcurrent limit value [A]
	f4_overvoltage_limit	Overvoltage limit value [V]
	f4_undervoltage_limit	Low-voltage limit value [V]
	f4_overspeed_limit_rad	Overspeed limit value [rad/s]
	f4_phase_err_rad_lpf	LPF value of phase error[rad]
	f4_switch_phase_err_rad	Phase error to decide sensor-less switch timing [rad]
	f4_id_down_speed_rad	The speed threshold[rad/s] to ramp down the d-axis current
	f4_id_up_speed_rad	The speed threshold[rad/s] to ramp up the d-axis current
	f4_damp_comp_speed	Feedback value for reference speed [rad/s]
	f4_ol_speed_rad	Speed value in open loop mode [rad/s]
	st_phase_err_lpf	Phase error LPF structure
	st_current_output	Structure for current control module output
	st_speed_output	Structure for speed control module output
st_stm	Structure for the state machine	

Structure	Variable	Description
st_sensorless_vector_control_t  Structure for the manager module	st_motor	Motor parameter structure
	*p_st_driver	The driver module generation instance pointer
	*p_st_cc	The current control module generation instance pointer
	*p_st_sc	The speed control module generation instance pointer
st_sensorless_vector_config_t  Structure for setting the manager module control parameters	u1_flag_less_switch_use	ON/OFF for switching-to-sensorless processing
	u1_flag_openloop_damping_use	ON/OFF for open-loop damping control
	f4_overspeed_limit_rpm	Overspeed limit value [rpm]
	f4_switch_phase_err_deg	Phase error to decide sensor-less switch timing [deg]
	f4_phase_err_lpf_cut_freq	Cut off frequency of phase error LPF[Hz]
	f4_id_down_speed_rpm	The speed threshold [rpm] to ramp down the d-axis current
	f4_id_up_speed_rpm	The speed threshold [rpm] to ramp up the d-axis current
	f4_ctrl_period	Speed loop control interval [s]
	st_motor	Motor parameter structure

**5.2.9 Macro definition**

Table 5-14 lists the macros for the manager module.

**Table 5-14 List of macros**

File name	Macro name	Defined value	Remarks
r_motor_sensorless_vector_api.h	MOTOR_LOOP_POSITION	0	Position control mode
	MOTOR_LOOP_SPEED	1	Speed control mode
	MOTOR_SENSORLESS_VECTOR_ERROR_NONE	(0x0000)	An error status. There is no error.
	MOTOR_SENSORLESS_VECTOR_ERROR_OVERCURRENT_HW	(0x0001)	An error status. A hardware overcurrent error has occurred.
	MOTOR_SENSORLESS_VECTOR_ERROR_OVERVOLTAGE	(0x0002)	An error status. An overvoltage error has occurred.
	MOTOR_SENSORLESS_VECTOR_ERROR_OVERSPEED	(0x0004)	An error status. An overspeed error has occurred.
	MOTOR_SENSORLESS_VECTOR_ERROR_HALL_PATTERN	(0x0020)	An error status. A Hall pattern error has occurred.
	MOTOR_SENSORLESS_VECTOR_ERROR_LOW_VOLTAGE	(0x0080)	An error status. A low-voltage error has occurred.
	MOTOR_SENSORLESS_VECTOR_ERROR_OVERCURRENT_SW	(0x0100)	An error status. A software overcurrent error has occurred.
	MOTOR_SENSORLESS_VECTOR_ERROR_UNKNOWN	(0xffff)	An error status. An error whose error code is unknown has occurred.
r_motor_sensorless_vector_manager.h	MOTOR_MODE_INIT	(0x00)	INIT run mode
	MOTOR_MODE_BOOT	(0x01)	BOOT run mode
	MOTOR_MODE_DRIVE	(0x02)	DRIVE run mode
r_motor_sensorless_vector_api.h	MOTOR_CTRL_TYPE_POSITION	0	Macro for switching the control method. Position control mode.
	MOTOR_CTRL_TYPE_SPEED	1	Macro for switching the control method. Speed control mode.

### 5.2.10 Adjustment and configuration of parameters

When you use the sample program, you need to correctly set the inverter information and the information about the motor to be used. Table 5-15 shows the values set in the sample program.

**Table 5-15 Motor and inverter parameter settings**

File name	Macro name	Set value	Description
r_motor_inverter_cfg.h	INVERTER_CFG_SHUNT_RESIST	0.010f	Shunt resistance value [ohm]
	INVERTER_CFG_DEADTIME (2 shunt detection)	CG_CONFIG_MOTOR_DEADTIME	Dead time [μs]
	INVERTER_CFG_DEADTIME (1 shunt detection)	RX26T: 2.0f RX14T: 1.0f	Dead time [μs]
	INVERTER_CFG_VOLTAGE_GAIN	22.2766f	Coefficient for voltage detection
	INVERTER_CFG_CURRENT_AMP_GAIN	20.0f	Gain of the amplifier for current detection
	INVERTER_CFG_CURRENT_LIMIT	21.4f	Overcurrent limit value for the inverter board [A]
	INVERTER_CFG_OVERVOLTAGE_LIMIT	60.0f	Overvoltage limit [V]
	INVERTER_CFG_UNDERVOLTAGE_LIMIT	8.0f	Low-voltage limit [V]
	INVERTER_CFG_INPUT_V	24.0f	Input voltage [V]
	INVERTER_CFG_ADC_REF_VOLTAGE	5.0f	Analog power supply voltage for the MCU [V]
	INVERTER_CFG_COMP_V0	RX26T: 0.564f RX14T: 0.234f	Coefficient for compensation of the voltage error [V] *1
	INVERTER_CFG_COMP_V1	RX26T: 0.782f RX14T: 0.391f	Coefficient for compensation of the voltage error [V] *1
	INVERTER_CFG_COMP_V2	RX26T: 0.937f RX14T: 0.463f	Coefficient for compensation of the voltage error [V] *1
	INVERTER_CFG_COMP_V3	RX26T: 1.027f RX14T: 0.508f	Coefficient for compensation of the voltage error [V] *1
	INVERTER_CFG_COMP_V4	RX26T: 1.058f RX14T: 0.524f	Coefficient for compensation of the voltage error [V] *1
	INVERTER_CFG_COMP_I0	RX26T: 0.022f RX14T: 0.035f	Coefficient for compensation of the voltage error [A] *1
	INVERTER_CFG_COMP_I1	RX26T: 0.038f RX14T: 0.066f	Coefficient for compensation of the voltage error [A] *1
	INVERTER_CFG_COMP_I2	RX26T: 0.088f RX14T: 0.131f	Coefficient for compensation of the voltage error [A] *1
	INVERTER_CFG_COMP_I3	RX26T: 0.248f RX14T: 0.313f	Coefficient for compensation of the voltage error [A] *1

File name	Macro name	Set value	Description
r_motor_inverter_cfg.h	INVERTER_CFG_COMP_I4	RX26T: 0.865f RX14T: 0.609f	Coefficient for compensation of the voltage error [A] *1
r_motor_targetmotor_cfg.h	MOTOR_CFG_POLE_PAIRS	4	Number of pole pairs
	MOTOR_CFG_MAGNETIC_FLUX	RX26T: 0.01119f RX14T: 0.0115	Magnetic flux [wb]
	MOTOR_CFG_RESISTANCE	RX26T: 1.3f RX14T: 1.32f	Resistance [ohm]
	MOTOR_CFG_D_INDUCTANCE	RX26T: 0.0013f RX14T: 0.0021f	d-axis inductance [H]
	MOTOR_CFG_Q_INDUCTANCE	RX26T: 0.0013f RX14T: 0.0021f	q-axis inductance [H]
	MOTOR_CFG_ROTOR_INERTIA	RX26T: 0.000003666f RX14T: 0.0000032f	Rotor inertia [kg m <sup>2</sup> ]
	MOTOR_CFG_NOMINAL_CURRENT_RMS	RX26T: 1.67f RX14T: 1.13f	Rated current [A]
MOTOR_CFG_MAX_SPEED_RPM	2400.0f	Maximum speed [rpm]	

Notes: 1. For details, see the chapter on compensation of the voltage error.

### 5.2.11 How to start the motor

The manager module controls the motor by changing the flag settings that manage the command values for the d-axis current, q-axis current, and speed according to the run mode. Also, by changing these command values appropriately, the manager module creates a starting sequence to start the motor. Figure 5-12 shows start up of the motor.

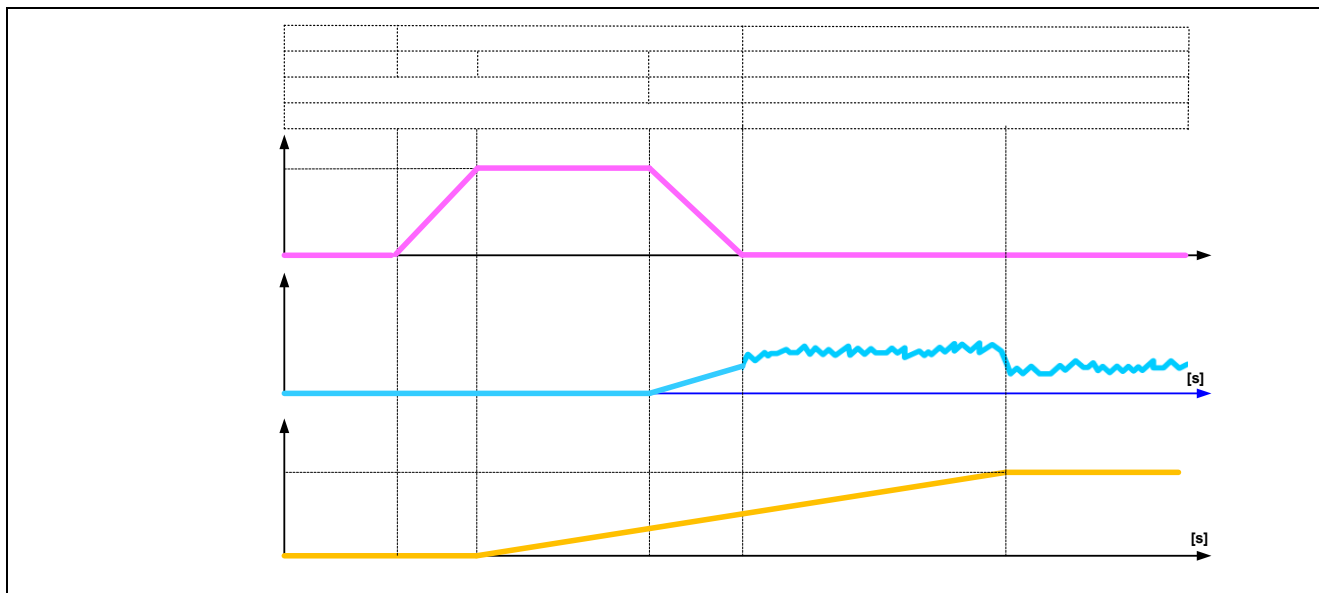


Figure 5-12 Motor start control based on sensorless vector control

### 5.3 Current control module

The current control module uses the value of the incoming current to perform coordinate transformation and feedback control that are necessary for vector control, and then calculates the voltage of the PWM output. The module also controls submodules that perform modulation and voltage error compensation.

#### 5.3.1 Functions


Table 5-16 lists the functions of the current control module.

**Table 5-16 List of functions of the current control module**

Function	Description
Current control	Performs calculation according to the current command value to set the PWM output value.
Current offset adjustment	Calculates the offset value of the current value detected by AD.
Voltage error compensation	Compensates for the effects of output voltage dead time.
Coordinate transformation and inverse transformation	Performs coordinate transformation for the current value detected to perform vector control. This function also performs inverse transformation of the coordinate for the calculation results to restore the original coordinate axis.
Modulation	Improves the efficiency by modulation to a PWM signal.
Non-interacting control	Calculates interference cancellation to prevent interference between the d and q axes.

#### 5.3.2 Module configuration diagram

Figure 5-13 shows the module configuration.

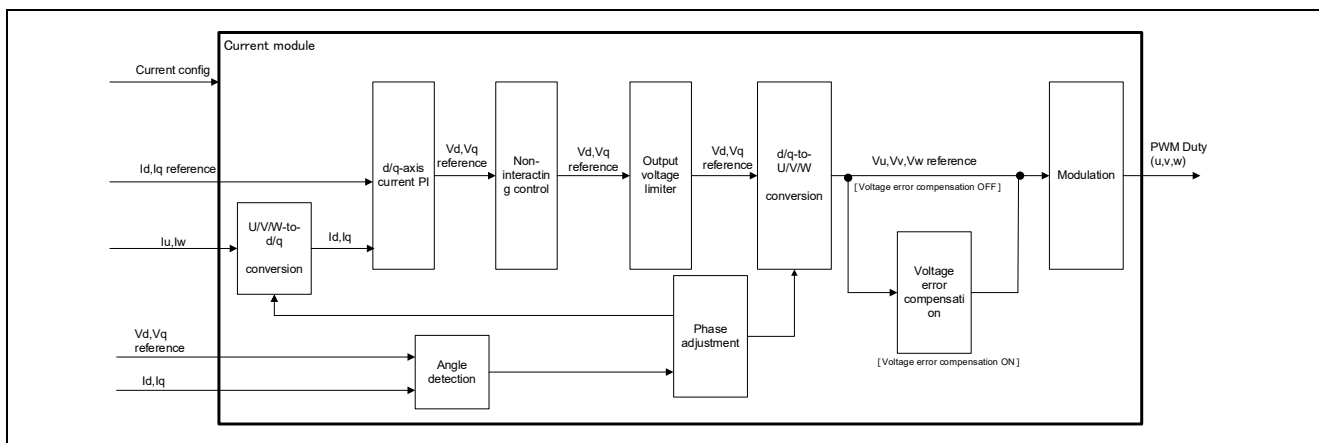

**Figure 5-13 Current control module configuration diagram**

5.3.3 Flowcharts

Figure 5-14 shows the flowchart for the loop processing of the current control module.

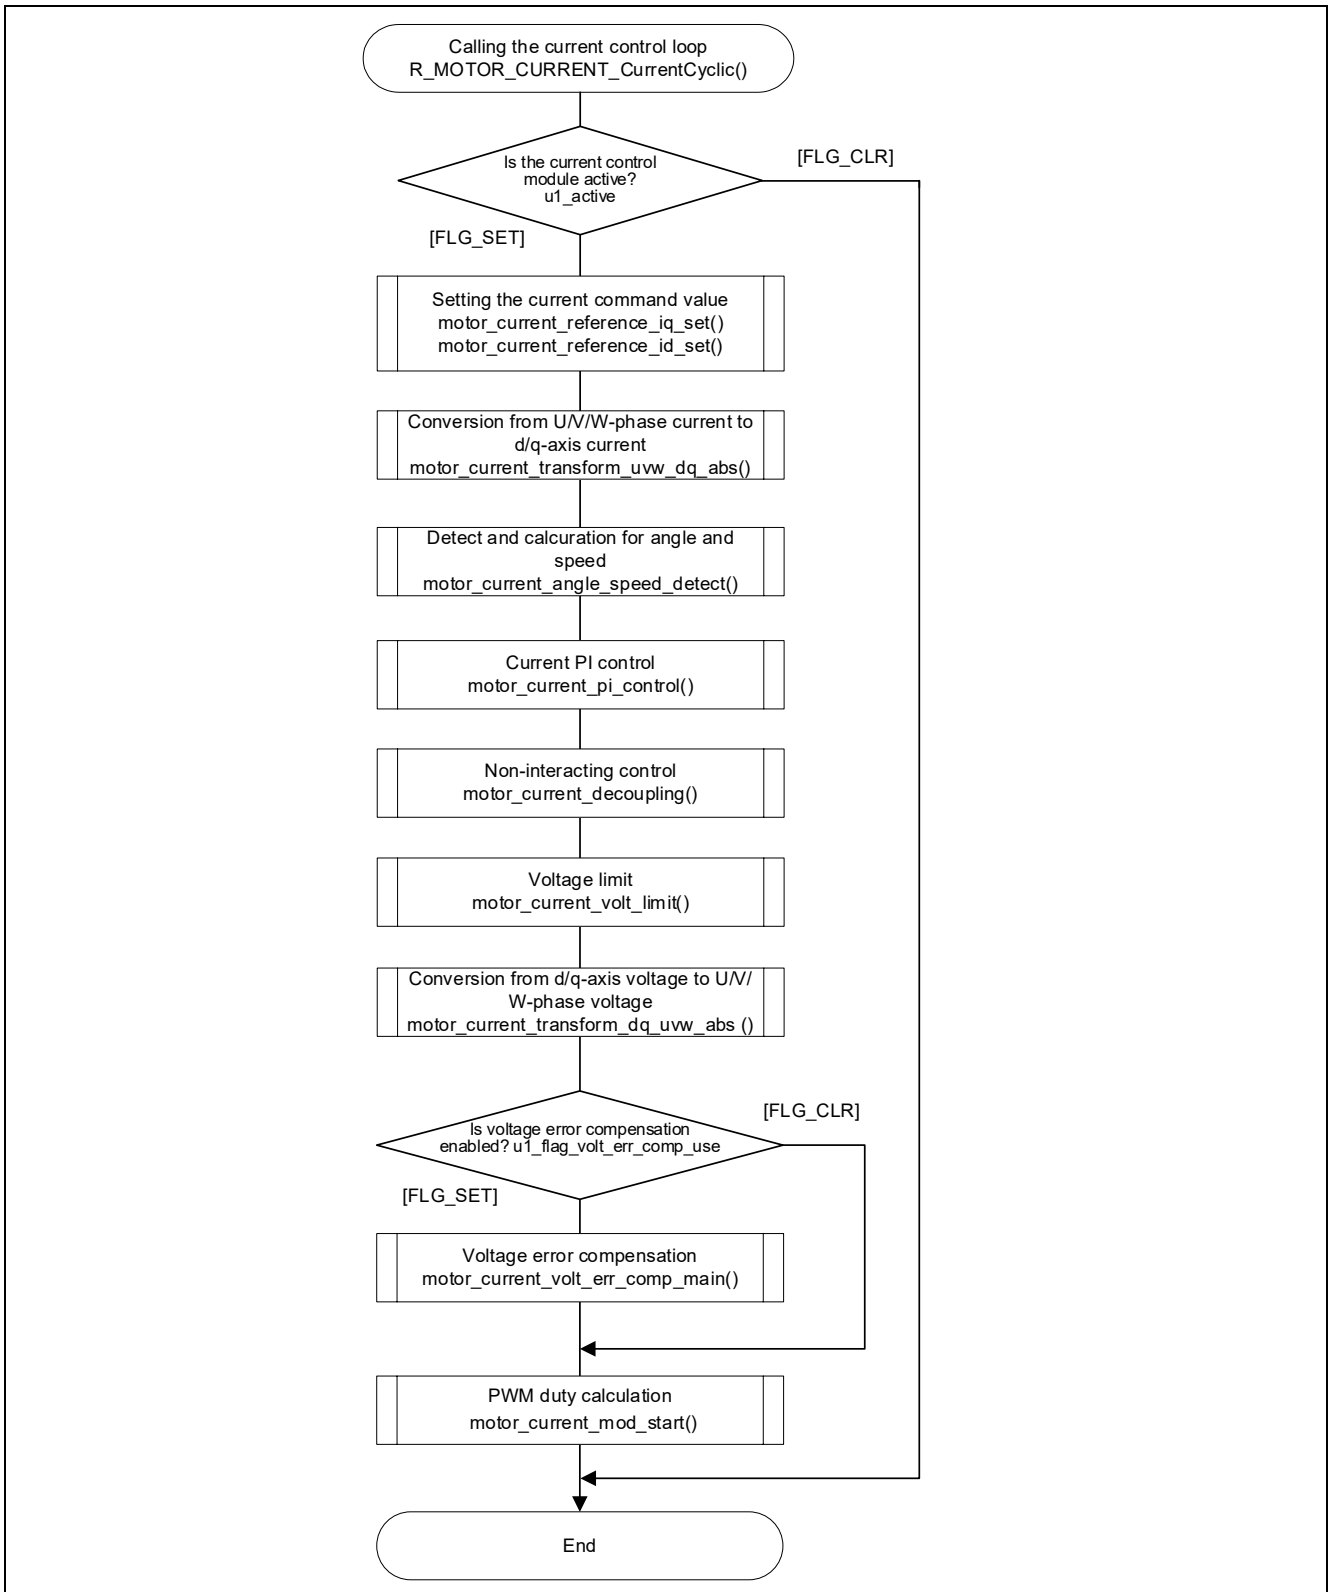


Figure 5-14 Flowchart for the loop processing of the current control module

**5.3.4 API**

Table 5-17 lists the API functions of the current control module.

**Table 5-17 List of API functions**

<b>API</b>	<b>Description</b>
R_MOTOR_CURRENT_Open	Generates an instance of the current control module.
R_MOTOR_CURRENT_Close	Places the current control module in a reset state.
R_MOTOR_CURRENT_Reset	Initializes the current control module.
R_MOTOR_CURRENT_Run	Activates the current control module.
R_MOTOR_CURRENT_ParameterSet	Inputs the variable information that is used for current control.
R_MOTOR_CURRENT_ParameterGet	Acquires the current control results that are output.
R_MOTOR_CURRENT_ParameterUpdate	Updates the control parameters of the current control module.
R_MOTOR_CURRENT_CurrentCyclic	Performs current control.
R_MOTOR_CURRENT_OffsetCalibration	Performs offset adjustment of current detection.
R_MOTOR_CURRENT_CurrentOffsetRemove	Returns the value with the current detection offset value excluded.
R_MOTOR_CURRENT_VoltErrCompParamSet	Sets the voltage error compensation parameter.
R_MOTOR_CURRENT_BEMFObserverParameterUpdate	Updates the control parameters for the inductive voltage observer.
R_MOTOR_CURRENT_HuntingSuppress	Performs a measure against estimation speed discontinuity when switching from open-loop control to sensorless vector control.
R_MOTOR_CURRENT_1ShuntCurrentGet	Gets the phase current. (For 1 shunt detection)
R_MOTOR_CURRENT_1shuntModulation	Performs modulation processing. (For 1 shunt detection)
R_MOTOR_CURRENT_DriverParameterUpdate	Set the driver for current detection. (For 1 shunt detection)

### 5.3.5 Configurations

Table 5-18 shows the configurations that are used for the current control module. Set up the functions to be used and the necessary parameters. Table 5-19 shows the initial values.

**Table 5-18 List of configurations**

File name	Macro name	Description
r_motor_module_cfg.h	CURRENT_CFG_VOLT_ERR_COMP	Enables or disables the voltage error compensation function. Enable: MTR_ENABLE Disable: MTR_DISABLE
	CURRENT_CFG_MODULATION_METHOD	Modulation method MOD_METHOD_SPWM : Sinusoidal PWM MOD_METHOD_SVPWM : Spatial vector PWM
	CURRENT_CFG_OFFSET_CALC_TIME	Current offset measurement time setting
	CURRENT_CFG_PERIOD_MAG_VALUE	Coordinate transformation interval coefficient
	CURRENT_CFG_PI_INTEGRAL_LIMIT_VD	d-axis current limit [V] INVERTER_CFG_INPUT_V: The maximum input voltage is defined by using r_motor_inverter_cfg.h.
	CURRENT_CFG_PI_INTEGRAL_LIMIT_VQ	q-axis current limit [V]
	CURRENT_CFG_OMEGA	Natural frequency for the current control system [Hz]
	CURRENT_CFG_ZETA	Attenuation coefficient for the current control system
	CURRENT_CFG_REF_ID_OPENLOOP	d-axis current command value in open loop mode [A]
	CURRENT_CFG_ID_UP_STEP_TIME	Setting of additional time for the d-axis current command value
	CURRENT_CFG_ID_DOWN_STEP_TIME	Additional time for the d-axis current command value
	CURRENT_CFG_IQ_DOWN_STEP_TIME_INV	The inverse of the additional time for the d-axis current command value
	CURRENT_CFG_E_OBS_OMEGA	Natural frequency for the inductive voltage estimation system [Hz]
	CURRENT_CFG_E_OBS_ZETA	Attenuation coefficient for the inductive voltage estimation system
	CURRENT_CFG_PLL_EST_OMEGA	Natural frequency for the position estimation system [Hz]
CURRENT_CFG_PLL_EST_ZETA	Attenuation coefficient for the position estimation system	

**Table 5-19 List of initial values for configurations**

Macro name	Settings
CURRENT_CFG_VOLT_ERR_COMP	MTR_ENABLE
CURRENT_CFG_MODULATION_METHOD	MOD_METHOD_SVPWM
CURRENT_CFG_OFFSET_CALC_TIME	RX26T: 512.0f RX14T: 256.0f
CURRENT_CFG_PERIOD_MAG_VALUE	1.0f
CURRENT_CFG_PI_INTEGRAL_LIMIT_VD	(INVERTER_CFG_INPUT_V * 0.5f)
CURRENT_CFG_PI_INTEGRAL_LIMIT_VQ	(INVERTER_CFG_INPUT_V * 0.5f)
CURRENT_CFG_OMEGA	300.0f
CURRENT_CFG_ZETA	1.0f
CURRENT_CFG_REF_ID_OPENLOOP	0.3f
CURRENT_CFG_ID_UP_STEP_TIME	RX26T: 2560.0f RX14T: 1280.0f
CURRENT_CFG_ID_DOWN_STEP_TIME	RX26T: 500.0f RX14T: 250.0f
CURRENT_CFG_IQ_DOWN_STEP_TIME_INV	1.0f / CURRENT_CFG_ID_UP_STEP_TIME
CURRENT_CFG_E_OBS_OMEGA	1000.0f
CURRENT_CFG_E_OBS_ZETA	1.0f
CURRENT_CFG_PLL_EST_OMEGA	20.0f
CURRENT_CFG_PLL_EST_ZETA	1.0f
CURRENT_CFG_MIN_DIFFERENCE_DUTY	600
CURRENT_CFG_ADJUST_ADC_DELAY	240
CURRENT_CFG_FUNC_DUTY_SET	R_Config_xxx_1ShuntUpdDuty (Smart Configurator function) *1
CURRENT_CFG_FUNC_ADC_TRIGGER_SET	R_Config_xxx_AdcTriggerSet (Smart Configurator function) *1
CURRENT_CFG_FUNC_PWM_MAX_COUNT_GET	R_Config_xxx_MaxCountGet (Smart Configurator function) *1

Note: 1. For details about the functions shown in the "Set value" column, see 5.12 Smart Configurator setting.

### 5.3.6 Structure and variable information

Table 5-20 lists the structures and variables that are used for the current control module. For the current control module, the structure for the current control module (`g_st_cc`) is defined by securing an instance of the module from the API.

**Table 5-20 List of structures and variables**

Structure	Variable	Description
st_current_control_t  Structure for the current control module	u1_active	The active state of the current control module
	u1_flag_volt_err_comp_use	Enables or disables the voltage error compensation function.
	u1_state_id_ref	Status of the d axis at startup
	u1_state_iq_ref	Status of the q axis at startup
	u1_flag_offset_calc	Flag for the current offset calculation
	u2_offset_calc_time	Measurement time setting in current offset adjustment
	u2_crnt_offset_cnt	Measurement count in current offset adjustment
	f4_ctrl_period	Current control interval (period) [s]
	f4_refu	U-phase command voltage [V]
	f4_refv	V-phase command voltage [V]
	f4_refw	W-phase command voltage [V]
	f4_vd_ref	d-axis voltage command value [V]
	f4_vq_ref	q-axis voltage command value [V]
	f4_id_ref	d-axis current command value [A]
	f4_iq_ref	q-axis current command value [A]
	f4_id_ad	d-axis current value [A]
	f4_iq_ad	q-axis current value [A]
	f4_lim_iq	q-axis current limit value [A]
	f4_offset_iu	U-phase offset current value [A]
	f4_offset_iw	W-phase offset current value [A]
	f4_sum_iu_ad	U-phase total current value [A]
	f4_sum_iw_ad	W-phase total current value [A]
	f4_vdc_ad	Bus voltage value [V]
	f4_iu_ad	U-phase current value [A]
	f4_iv_ad	V-phase current value [A]
	f4_iw_ad	W-phase current value [A]
	f4_modu	U-phase duty cycle
f4_modv	V-phase duty cycle	

Structure	Variable	Description
st_current_control_t  Structure for the current control module	f4_modw	W-phase duty cycle
	f4_speed_rad	Speed [rad/s]
	f4_ref_id_ctrl	d-axis current command value [A]
	f4_ref_iq_ctrl	q-axis current command value [A]
	f4_id_up_step	The amount of change in the d-axis current command value in d-axis current increase mode [A]
	f4_id_down_step	The amount of change in the d-axis current command value in d-axis current decrease mode [A]
	f4_iq_down_step	The amount of change in the q-axis current command value in q-axis current decrease mode [A]
	f4_iq_down_step_time_inv	The inverse of the change time in the q-axis current command value in q-axis current decrease mode
	f4_ol_ref_id	d-axis current command value in open loop mode [A]
	f4_va_max	Maximum voltage on the d and q axes [V]
	f4_ed	Estimated d-axis inductive voltage value
	f4_eq	Estimated q-axis inductive voltage value
	f4_phase_err_rad	Angle error
	f4_ol_speed_rad	Speed command value in open loop mode [rad/s]
	st_mod	Structure for the modulation module
	st_volt_comp	Structure for the voltage error compensation module
	st_bemf_observer	Structure for the inductive voltage observer
	st_pll_est	Structure for position and speed estimation
	st_pi_id	Structure for d-axis PI control
	st_pi_iq	Structure for q-axis PI control
	st_rotor_angle	Structure for rotor information
	st_motor	Structure for motor parameters
	u2_duty_u	Register buffer value for u-phase duty setting <sup>1*1</sup>
	u2_duty_v	Register buffer value for v-phase duty setting <sup>1*1</sup>
	u2_duty_w	register buffer value for w-phase duty setting <sup>1*1</sup>
	u2_duty_buff_u	Register buffer value for u-phase duty setting <sup>2*1</sup>

Structure	Variable	Description
st_current_control_t  Structure for the current control module	u2_duty_buff_v	Register buffer value for v-phase duty setting 2*1
	u2_duty_buff_w	register buffer value for w-phase duty setting 2*1
	s2_difference_minimum	Minimum PWM duty difference [count] *1
	s2_adjust_adc_delay	Delay time until A / D conversion starts [count] *1
	f4_pwm_period_cnt	PWM counter Count number in one cycle *1
	f4_pwm_dead_time_cnt	Dead time count *1
	min_phase	Structure for the phase current calculation *1
	mid_phase	Structure for the phase current calculation *1
	*BLDC1ShuntDutySet	Pointer to Smart Configurator function *1
	*ADCTriggerSet	Pointer to Smart Configurator function *1
	*PWMMaxCountGet	Pointer to Smart Configurator function *1
st_current_cfg_t  Structure for setting the parameters for controlling the current control module	u1_flag_volt_err_comp_use	Enables or disables voltage error compensation.
	u2_offset_calc_time	Offset calculation time setting
	s2_difference_minimum	Securing the current detection period of Duty (for 1 shunt detection)
	s2_adjust_adc_delay	Current detection timing adjustment (for 1 shunt detection)
	f4_ctrl_period	Control interval [s]
	f4_current_omega_hz	Natural frequency for the current control system [Hz]
	f4_current_zeta	Attenuation coefficient for the current control system
	f4_id_up_step	Increment of the d-axis current
	f4_id_down_step	The amount of change in the d-axis current command value in d-axis current decrease mode [A]
	f4_iq_down_step_time_inv	The inverse of the change time in the q-axis current command value in q-axis current decrease mode [A]
	f4_ol_ref_id	d-axis current command value in open loop mode [A]
	st_motor	Structure for motor parameters
st_current_output_t  Structure for the current control module output	u1_flag_offset_calc	Current offset flag
	f4_modu	U-phase duty cycle (Only 2 shunt detection)
	f4_modv	V-phase duty cycle (Only 2 shunt detection)
	f4_modw	W-phase duty cycle (Only 2 shunt detection)
	f4_neutral_duty	Duty cycle in offset measurement
	f4_va_max	Maximum voltage on the d and q axes [V]

Structure	Variable	Description
st_current_output_t  Structure for the current control module output	f4_ref_id_ctrl	d-axis current command value
	f4_speed_rad	Estimated speed [rad/s]
	f4_ed	Estimated d-axis inductive voltage value
	f4_eq	Estimated q-axis inductive voltage value
	f4_phase_err_rad	Angle error
st_current_input_t  Structure for the current control module input	u1_state_id_ref	Status of the d axis
	u1_state_iq_ref	Status of the q axis
	f4_iu_ad	U-phase current value [A]
	f4_iv_ad	V-phase current value [A]
	f4_iw_ad	W-phase current value [A]
	f4_vdc_ad	Bus voltage value [V]
	f4_id_ref	d-axis current command value [A]
	f4_iq_ref	q-axis current command value [A]
st_bemf_observer_cfg_t  Structure for the inductive voltage observer module input	f4_e_obs_omega_hz	Natural frequency for the inductive voltage estimation system [Hz]
	f4_e_obs_zeta	Attenuation coefficient for the inductive voltage estimation system
	f4_pll_est_omega_hz	Natural frequency for the position estimation system [Hz]
	f4_pll_est_zeta	Attenuation coefficient for the position estimation system
e_mtr_current_phase_t  Structure for the phase current calculation	CURRENT_PHASE_U_PHASE	U phase current [A] *1
	CURRENT_PHASE_V_PHASE	V phase current [A] *1
	CURRENT_PHASE_W_PHASE	W phase current [A] *1
st_current_driver_cfg_t	*BLDC1ShuntDutySet	Pointer to Smart Configurator function *1
	*ADCTriggerSet	Pointer to Smart Configurator function *1
	*PWMMaxCountGet	Pointer to Smart Configurator function *1

Note: 1. Only 1 shunt detection used.

**5.3.7 Macro definition**

Table 5-21 lists the macros that are used for the current control module.

**Table 5-21 List of macros**

File name	Macro name	Defined value	Description	
r_motor_current_api.h	CURRENT_STATE_ID_ZERO_CONST	0	Current status for the d axis: d-axis current always-0 mode	
	CURRENT_STATE_ID_INPUT	1	Current status for the d axis: d-axis current command input mode	
	CURRENT_STATE_ID_MANUAL	2	Current status for the d axis: d-axis fixed-command mode	
	CURRENT_STATE_ID_UP	3	Current status for the d axis: d-axis current increase mode	
	CURRENT_STATE_ID_DOWN	4	Current status for the d axis: d-axis current decrease mode	
	CURRENT_STATE_IQ_ZERO_CONST	0	Current status for the q axis: q-axis current always-0 mode	
	CURRENT_STATE_IQ_SPEED_PI_OUTPUT	1	Current status for the q axis: q-axis command PI input mode	
	CURRENT_STATE_IQ_AUTO_ADJ	2	Current status for the q axis: q-axis current switch-to-sensorless mode	
	CURRENT_STATE_IQ_DOWN	3	Current status for the q axis: q-axis current decrease mode	
	CURRENT_VERR_COMP_LIMIT	(MOTOR_MCU_CFG_CARRIER_FREQ * INVERTER_CFG_DEADTIME / 1000.0f)		Voltage error compensation period limiter value For details about MOTOR_MCU_CFG_CARRIER, see r_motor_module_cfg.h. For details about INVERTER_CFG_DEADTIME, see r_motor_inverter_cfg.h.

### 5.3.8 Adjustment and configuration of parameters

(a) Adjustment of the natural frequency and attenuation coefficient for the current control system

In the current control module, the control gain is adjusted by tuning the natural frequency for the current control system and the attenuation coefficient for the current control system. Set the natural frequency for the current control system in proportion to the frequency at which to perform current control. The natural frequency can be set to about 1/10 of the current control frequency. However, in many cases, a lower value may be set in consideration of noise during position detection and current detection.

For the attenuation coefficient for the current control system, a value in the range from 0.7 to 1.0 is ordinarily set. Setting a value nearer to 1.0 makes response more stable and moderate.

When you set or update the values of the natural frequency and attenuation coefficient for the current control system, use the following variables of the `st_current_cfg_t` structure (the structure for setting the parameters for controlling the current control module). After you have set the desired values in these variables, apply them by using `R_MOTOR_CURRENT_ParameterUpdate` (the API function for updating the parameters that control the current control module).

The natural frequency and attenuation coefficient for the current control system can be adjusted from RMW.

To set the natural frequency for the current control system, use `f4_current_omega_hz`. (See Table 5-5.)

To set the attenuation coefficient for the current control system, use `f4_current_zeta`. (See Table 5-5.)

(b) Setting the parameters for current control

Because the current control module uses the control interval and motor parameters, the control parameter configuration (`R_MOTOR_CURRENT_ParameterUpdate`) can be used to update the parameters. For details about the items that can be set, see the description of the `st_current_cfg_t` structure (structure for setting the parameters for controlling the current control module).

(c) Setting the initial values of the parameters for current control

The configurations of the current control module can be specified by using `r_motor_module_cfg.h`. The values set in this file are applied as initial values at system startup. For details about the items to be set, see 5.3.7 Macro definition.

### 5.3.9 The method to measure phase currents with an 1shunt resistance

In the chapter, the method to measure phase currents using in this software is explained.

#### 5.3.9.1 The timing of measure phase currents

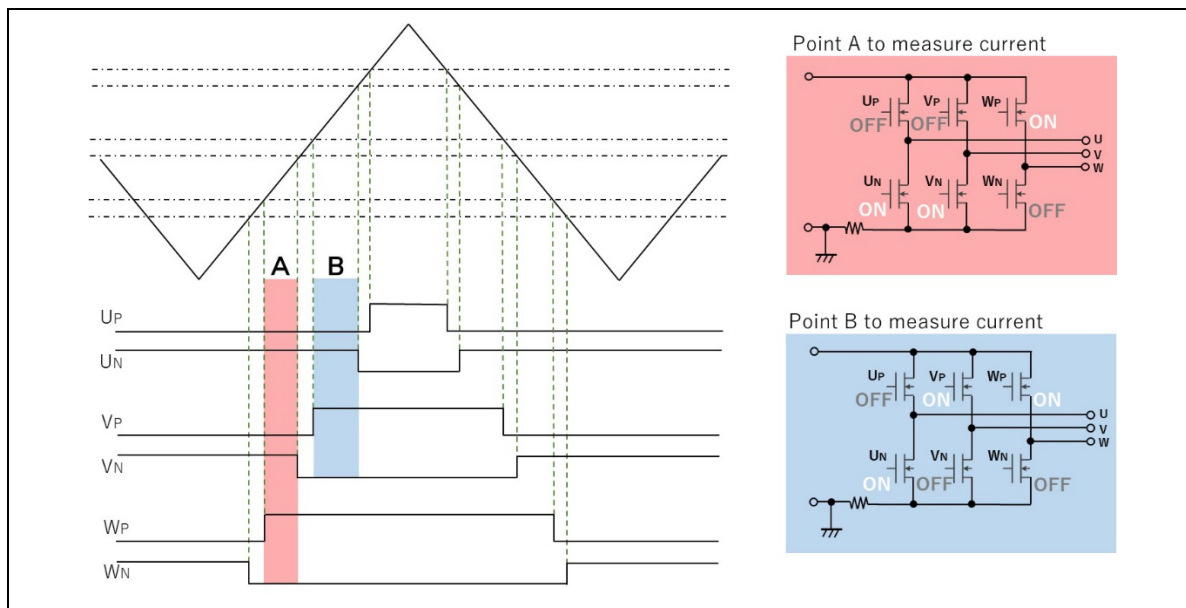


Figure 5-15 The wave form of PWM (in case of duty pattern  $W > V > U$ )

In this program, Triangle-wave PWM mode 3 is used to generate PWM wave with dead time by MTU unit. Figure 5-15 shows the wave form of PWM in case of duty pattern  $W > V > U$ .

At the point A in the figure, only W phase upper arm is ON as shown in the red rectangle in right side. In that case, the current which flows in the 1shunt resistance is same as current flows in W phase.

At the point B in the figure, only U phase low arm is ON as shown in the blue rectangle. In that case, the current which flows in the 1shunt resistance is same as current flows in U phase.

The remained V phase current can be calculated with these phase currents by the first theory of Kirchhoff.

Therefore, the three phase currents can be measured with measurement of point A and B.

The case which is shown in Figure 5-15 is the duty pattern  $W > V > U$ . Six duty pattern will be performed with each phase PWM output. The currents which be measured in point A and B changes according to duty pattern, so it is necessary to assign calculated currents to each phase. The assignment is possible, because each phase relations can be known at each PWM duty calculation.

Table 5-22 Relation between Duty pattern and phase current

Duty pattern	Point A	Point B
$W > V > U$	$I_w$	$-I_u$
$W > U > V$	$I_w$	$-I_v$
$V > W > U$	$I_v$	$-I_u$
$V > U > W$	$I_v$	$-I_w$
$U > W > V$	$I_u$	$-I_v$
$U > V > W$	$I_u$	$-I_w$

### 5.3.9.2 Shunt resistance current measurement method using function

When measuring the current with one shunt resistor as shown in 5.3.9.1, it is necessary to control the conversion timing of the A / D converter according to the PWM duty setting. The following functions are used in the sample program.

Case by GPT:

This is realized by GTADTRA of GPT module and A / D conversion start request function by compare match of GTADTRB register and GTCNT counter.

Case by MTU:

This is realized by TADCORA of GPT module and A / D conversion start request function by compare match of TADCORB register and TCNT counter.

### 5.3.9.3 Duty adjustment

If the timing as shown in 5.3.9.1 can be secured, the current can be detected by one shunt resistor, but sufficient time for A / D conversion cannot be secured depending on the PWM duty setting conditions during operation. Therefore, the current value cannot be obtained correctly. The following two measures are implemented for the conditions where timing cannot be secured.

(1) When the switching timings of the two phases are close to each other

When the switching timings of the two phases are close to each other and the time for A / D conversion cannot be secured, the PWM duty is not changed and the phase switching timing to be switched later is required for A / D conversion. The conversion time is secured by shifting only.

(2) When timing shift is not possible

If the PWM switching timing is delayed as described above, the duty is wide, and if the end of the PWM carrier cycle is reached, the timing cannot be delayed. In such a case, the modulation factor is close to 1, so the modulation factor is limited so that the PWM switching timing is at the end of the carrier cycle.

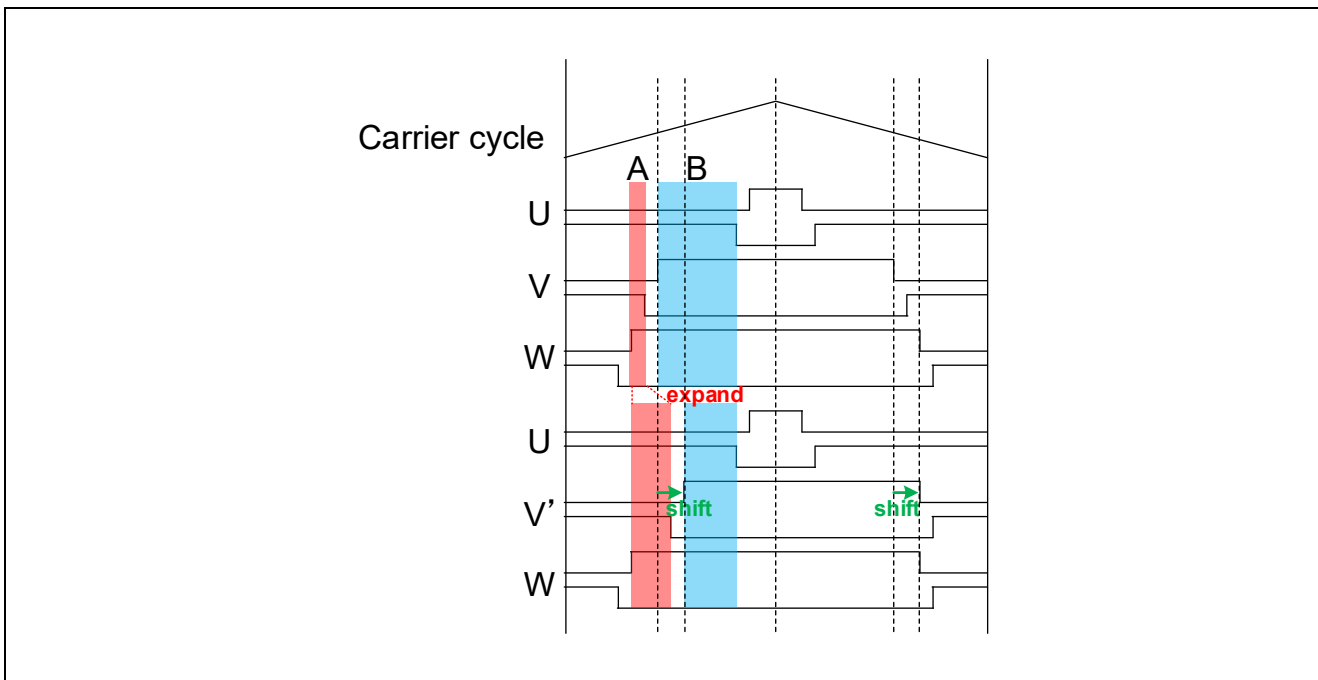


Figure 5-16 Duty adjustment

### 5.3.10 AD triggers

Shows the timing of AD triggers and scan.

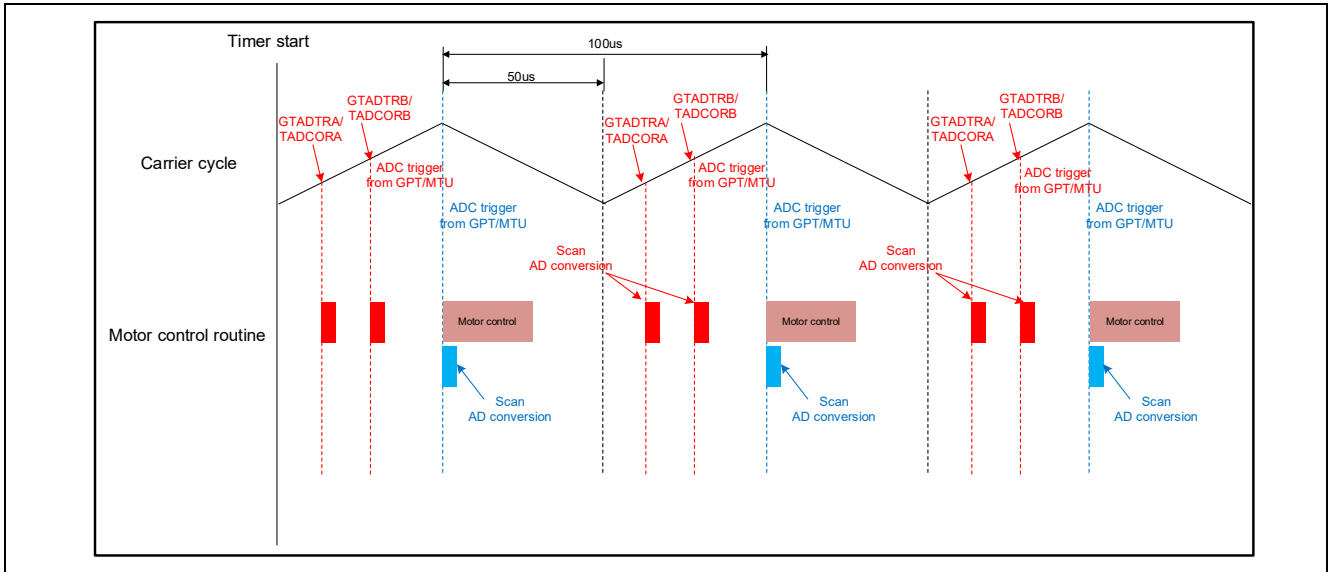


Figure 5-17 AD trigger timing

## 5.4 Modulation (current control module)

A modulated voltage can be output to improve the efficiency of voltage usage. The modulation operation is set from the API of the current control module.

### 5.4.1 Description of the functionality

With this module, you can select from two types of pulse width modulation drive methods.

(a) Sine wave modulation (MOD\_METHOD\_SPWM)

The modulation factor  $m$  is defined as follows.

$$m = \frac{V}{E}$$

$m$ : Modulation ratio     $V$ : Reference voltage     $E$ : Inverter input voltage

(b) Space Vector Modulation (MOD\_METHOD\_SVPWM) \*

In vector control of a permanent magnet synchronous motor, generally, the desired voltage command value of each phase is generated sinusoidally. However, if the generated value is used as-is for the modulation wave for PWM generation, voltage utilization as applied to the motor (in terms of line voltage) is limited to a maximum of 86.7% with respect to inverter bus voltage. As such, as shown in the following expression, the average of the maximum and minimum values is calculated for the voltage command value of each phase, and the value obtained by subtracting the average from the voltage command value of each phase is used as the modulation wave. As a result, the maximum amplitude of the modulation wave is multiplied by  $\sqrt{3}/2$ , while voltage utilization becomes 100% and line voltage is unchanged.

$$\begin{pmatrix} V'_u \\ V'_v \\ V'_w \end{pmatrix} = \begin{pmatrix} V_u \\ V_v \\ V_w \end{pmatrix} + \Delta V \begin{pmatrix} 1 \\ 1 \\ 1 \end{pmatrix}$$

$$\therefore \Delta V = -\frac{V_{max} + V_{min}}{2}, \quad V_{max} = \max\{V_u, V_v, V_w\}, \quad V_{min} = \min\{V_u, V_v, V_w\}$$

$V_u, V_v, V_w$ : Command values of U-, V-, and W-phases  
 $V'_u, V'_v, V'_w$ : Command values of U-, V-, and W-phases for PWM generation (modulation wave)

The modulation factor  $m$  is defined as follows.

$$m = \frac{V'}{E}$$

$m$ : Modulation ratio     $V'$ : Reference phase voltage for PWM  
 $E$ : Inverter input voltage

### 5.4.2 Configurations

Table 5-23 lists the configurations for the modulation function.

**Table 5-23 List of configurations**

File name	Macro name	Set value	Description
r_motor_module_cfg.h	CURRENT_CFG_MODULATION_METHOD	(MOD_METHOD_OD_SVPWM)	Pulse-width modulation drive mode

### 5.4.3 Structures

Table 5-24 lists the structures that are used for the modulation function.

**Table 5-24 List of variables**

Structure	Variable	Description
st_mod_t	f4_vdc	Bus voltage value [V]
	f4_1_div_vdc	1/f4_vdc
	f4_voltage_error_ratio	Voltage error ratio
	f4_max_duty	Maximum PWM duty cycle
	f4_min_duty	Minimum PWM duty cycle
	f4_neutral_duty	Intermediate value of the PWM duty cycle

### 5.4.4 Macro definition

Table 5-25 lists the macros that are used for the modulation function.

**Table 5-25 List of macros**

File name	Macro name	Defined value	Description
r_motor_current_modulation.h	MOD_DEFAULT_MAX_DUTY	1.0f	Maximum PWM duty cycle
	MOD_METHOD_SPWM	0	Pulse-width modulation drive mode : Sinusoidal PWM
	MOD_METHOD_SVPWM	1	Pulse-width modulation drive mode : Spatial vector PWM
	MOD_VDC_TO_VAMAX_MULT	0.6124f	Coefficient of the conversion from the input voltage to the maximum voltage
	MOD_SVPWM_MULT	1.155f	Coefficient for spatial vector PWM

### 5.4.5 Adjustment and configuration of parameters

There are no parameters to be set by the user for the modulation function.

### 5.5 Voltage error compensation (current control module)

The voltage error compensation function corrects for the effects of output voltage dead time. It operates through the API of the current control module.

#### 5.5.1 Description of the functionality

In the voltage PWM converter, to prevent the switching elements of the upper and lower sides from creating a short circuit, a dead time during which the two elements are simultaneously turned off is set. Therefore, an error arises between the voltage command value and the voltage actually applied to the motor, degrading the control precision. Voltage error compensation is implemented to reduce this error.

The current dependency of the voltage error depends on the current (direction and magnitude), dead time, and the switching characteristics of the power elements to be used, and has the characteristics shown below. Voltage error compensation is achieved by applying the inverse voltage pattern of the voltage error (as shown below) to the voltage command value according to the current.

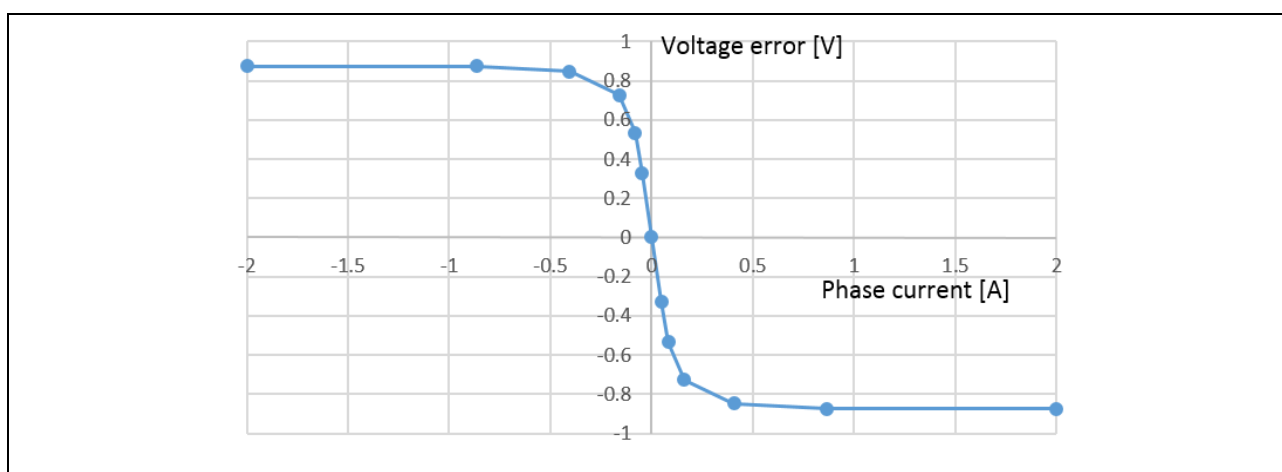


Figure 5-18 Current dependency in the voltage error (example)

## 5.5.2 Configurations

Table 5-26 lists the configurations for the voltage error compensation function.

**Table 5-26 List of configurations**

File name	Macro name	Set value	Description
r_motor_inverter_cfg.h	INVERTER_CFG_COMP_V0	RX26T: 0.564f RX14T: 0.234f	Voltage compensation table
	INVERTER_CFG_COMP_V1	RX26T: 0.782f RX14T: 0.391f	Voltage compensation table
	INVERTER_CFG_COMP_V2	RX26T: 0.937f RX14T: 0.463f	Voltage compensation table
	INVERTER_CFG_COMP_V3	RX26T: 1.027f RX14T: 0.508f	Voltage compensation table
	INVERTER_CFG_COMP_V4	RX26T: 1.058f RX14T: 0.524f	Voltage compensation table
	INVERTER_CFG_COMP_I0	RX26T: 0.022f RX14T: 0.035f	Voltage compensation table
	INVERTER_CFG_COMP_I1	RX26T: 0.038f RX14T: 0.066f	Voltage compensation table
	INVERTER_CFG_COMP_I2	RX26T: 0.088f RX14T: 0.131f	Voltage compensation table
	INVERTER_CFG_COMP_I3	RX26T: 0.248f RX14T: 0.313f	Voltage compensation table
	INVERTER_CFG_COMP_I4	RX26T: 0.865f RX14T: 0.609f	Voltage compensation table

## 5.5.3 Adjustment and configuration of parameters

(a) Setting the flag for whether to enable the voltage error compensation function

The voltage error compensation function is enabled by setting "u1\_flag\_volt\_err\_comp\_use" (flag for whether to enable the voltage error compensation function) to MTR\_FLG\_SET when R\_MOTOR\_CURRENT\_ParameterUpdate (setting of the control parameter for the current control module) is called. To disable the function, set this flag to MTR\_FLG\_CLR.

### 5.6 Inductive voltage observer (current control module)

To perform sensorless vector control, the position information must somehow be estimated. The sample program uses an inductive voltage observer.

#### 5.6.1 Description of the functionality

When an inductive voltage observer is used, the observer is used to estimate the inductive voltage. Then the phase error between the estimated d/q axis and the actual d/q axis is calculated to obtain the position and speed.

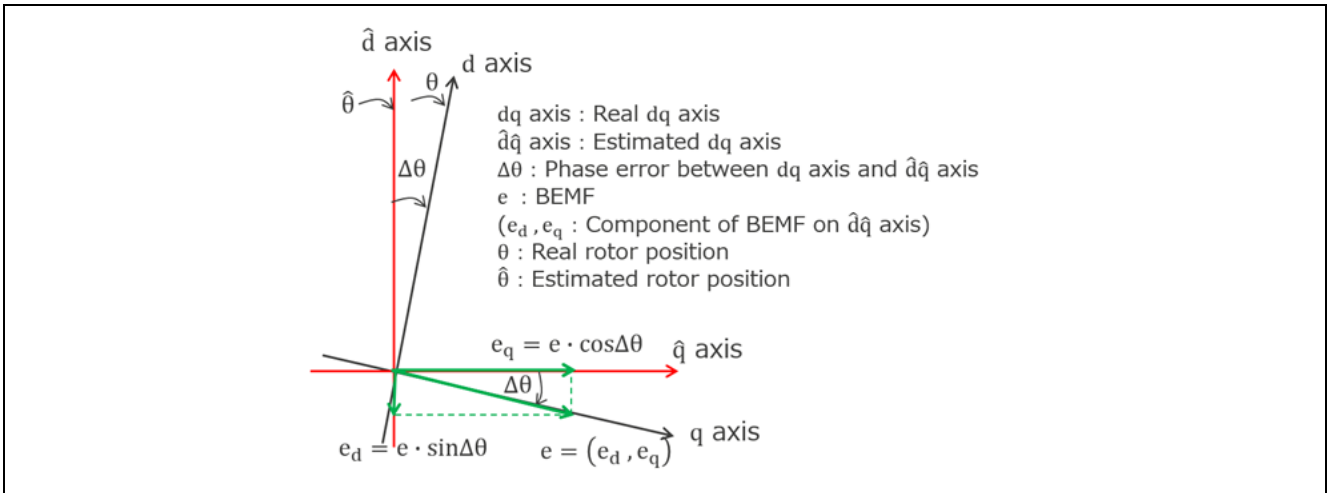


Figure 5-19 Inductive voltage on the estimated d/q-axis

From Figure 5-19, the voltage equations of the estimated d and q axes can be represented as follows:

$$v_d^* = (R + sL_d)i_d - \omega^*L_qi_q + e_d$$

$$v_q^* = (R + sL_q)i_q + \omega^*L_d i_d + e_q$$

Here,  $-\omega^*L_qi_q + e_d$  and  $\omega^*L_d i_d + e_q$  are treated as voltage disturbance and put to  $-d_d, -d_q$ .

$$v_d^* = (R + sL_d)i_d - d_d$$

$$v_q^* = (R + sL_q)i_q - d_q$$

An estimate equation for the d-axis inductive voltage is derived first. Rearrange the d-axis voltage equation as follows:

$$si_d = \frac{v_d^*}{L_d} - \frac{R}{L_d}i_d + \frac{d_d}{L_d}$$

Based on the above equation, an equation of state is composed with the state variables  $i_d$  (d-axis current) and  $d$  (voltage disturbance).

$$s i_d = -\frac{R}{L_d} i_d + \frac{d}{L_d} + \frac{v_d^*}{L_d}$$

$$s d = s d_d$$

Here, if the estimated value for  $i_d$  and  $d$  is  $\hat{i}_d$  and  $\hat{d}$ , respectively, the estimated equation of state for the observer side can be represented as follows, by multiplying the estimated gains  $K_{Ed1}$  and  $K_{Ed2}$  to the estimated error.

$$s \hat{i}_d = -\frac{R}{L_d} \hat{i}_d + \frac{\hat{d}}{L_d} + \frac{v_d^*}{L_d} + K_{Ed1}(i_d - \hat{i}_d)$$

$$s \hat{d} = K_{Ed2}(i_d - \hat{i}_d)$$

From the above equation,  $\hat{i}_d$  and  $\hat{d}$  can be represented as follows:

$$\hat{i}_d = \frac{\frac{K_{Ed2}}{L_d}}{s^2 + \left(\frac{R}{L_d} + K_{Ed1}\right)s + \frac{K_{Ed2}}{L_d}} \left\{ \left(1 + \frac{K_{Ed1}}{K_{Ed2}} L_d s\right) i_d + \frac{s}{K_{Ed2}} v_d^* \right\}$$

$$\hat{d} = \hat{d}_d = \frac{\frac{K_{Ed2}}{L_d}}{s^2 + \left(\frac{R}{L_d} + K_{Ed1}\right)s + \frac{K_{Ed2}}{L_d}} \{(L_d s + R) i_d - v_d^*\}$$

Looking at the above equation,  $\hat{i}_d$  and  $\hat{d}_d$  can be represented in a quadratic form, with the inputs  $i_d$  and  $v_d^*$ . Also, the natural frequency  $\omega_n$  and attenuation coefficient  $\zeta$  are as follows:

$$\omega_n = \sqrt{\frac{K_{Ed2}}{L_d}}$$

$$\zeta = \frac{\frac{R}{L_d} + K_{Ed1}}{2 \sqrt{\frac{K_{Ed2}}{L_d}}}$$

The estimated gains  $K_{Ed1}$  and  $K_{Ed2}$  of the d-axis inductive voltage estimation system can be represented as follows by using  $\omega_n$  and  $\zeta$ .

$$K_{Ed1} = 2\zeta\omega_{EG}\omega_{EG} - \frac{R}{L_d}$$

$$K_{Ed2} = \omega_{EG}^2 L_d$$

$\omega_{EG}$ : Natural frequency for the inductive voltage estimation system  
 $\zeta_{EG}$ : Attenuation coefficient for the inductive voltage estimation system

The estimated equation of state is further rearranged as follows:

$$\hat{i}_d = \frac{1}{s} \left\{ -\frac{R}{L_d} \hat{i}_d + \frac{\hat{d}_d}{L_d} + \frac{v_d^*}{L_d} + K_{Ed1}(i_d - \hat{i}_d) \right\}$$

$$\hat{d}_d = \frac{1}{s} \{ K_{Ed2}(i_d - \hat{i}_d) \}$$

From the above equation, the block diagram of d-axis inductive voltage estimation is as shown in Figure 5-20.

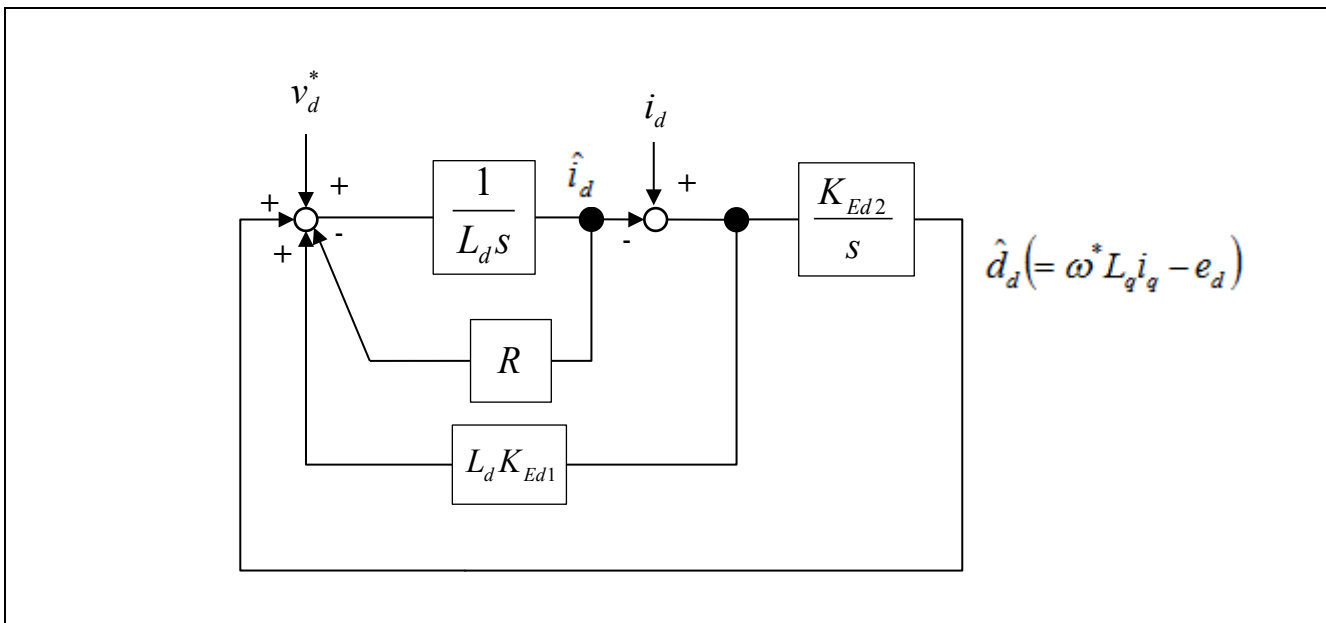


Figure 5-20 Block diagram of the d-axis inductive voltage observer

The q-axis side can be calculated in the same way, and  $\hat{i}_q$  and  $\hat{d}$  can be represented as follows:  $K_{Eq1}$  and  $K_{Eq2}$  are the estimated gains for the q axis side.

$$\hat{i}_q = \frac{\frac{K_{Eq2}}{L_q}}{s^2 + \left(\frac{R}{L_q} + K_{Eq1}\right)s + \frac{K_{Eq2}}{L_q}} \left\{ \left(1 + \frac{K_{Eq1}}{K_{Eq2}} L_q s\right) i_q + \frac{s}{K_{Eq2}} v_q^* \right\}$$

$$\hat{d} = \hat{d}_q = \frac{\frac{K_{Eq2}}{L_q}}{s^2 + \left(\frac{R}{L_q} + K_{Eq1}\right)s + \frac{K_{Eq2}}{L_q}} \{(L_q s + R) i_q - v_q^*\}$$

In the same way as the d axis, looking at the above equation,  $\hat{i}_q$  and  $\hat{d}_q$  can be represented in a quadratic form, with the inputs  $i_q$  and  $v_q^*$ . Also, the natural frequency  $\omega_n$  and attenuation coefficient  $\zeta$  are as follows:

$$\omega_n = \sqrt{\frac{K_{Eq2}}{L_q}}$$

$$\zeta = \frac{\frac{R}{L_q} + K_{Eq1}}{2 \sqrt{\frac{K_{Eq2}}{L_q}}}$$

Therefore, the estimated gains  $K_{Eq1}$  and  $K_{Eq2}$  of the q-axis inductive voltage estimation system can be represented as follows:

$$K_{Eq1} = 2\zeta_{EG}\omega_{EG} - \frac{R}{L_q}$$

$$K_{Eq2} = \omega_{EG}^2 L_q$$

$\omega_{EG}$ : Natural frequency for the inductive voltage estimation system

$\zeta_{EG}$ : Attenuation coefficient for the inductive voltage estimation system

In the same way as the d axis, the estimated equation of state can be represented as follows:

$$\hat{i}_q = \frac{1}{s} \left\{ -\frac{R}{L_q} \hat{i}_q + \frac{\hat{d}_q}{L_q} + \frac{v_q^*}{L_q} + K_{Eq1}(i_q - \hat{i}_q) \right\}$$

$$\hat{d}_q = \frac{1}{s} \{ K_{Eq2}(i_q - \hat{i}_q) \}$$

From the above equation, the block diagram of q-axis inductive voltage estimation is as shown in Figure 5-21.

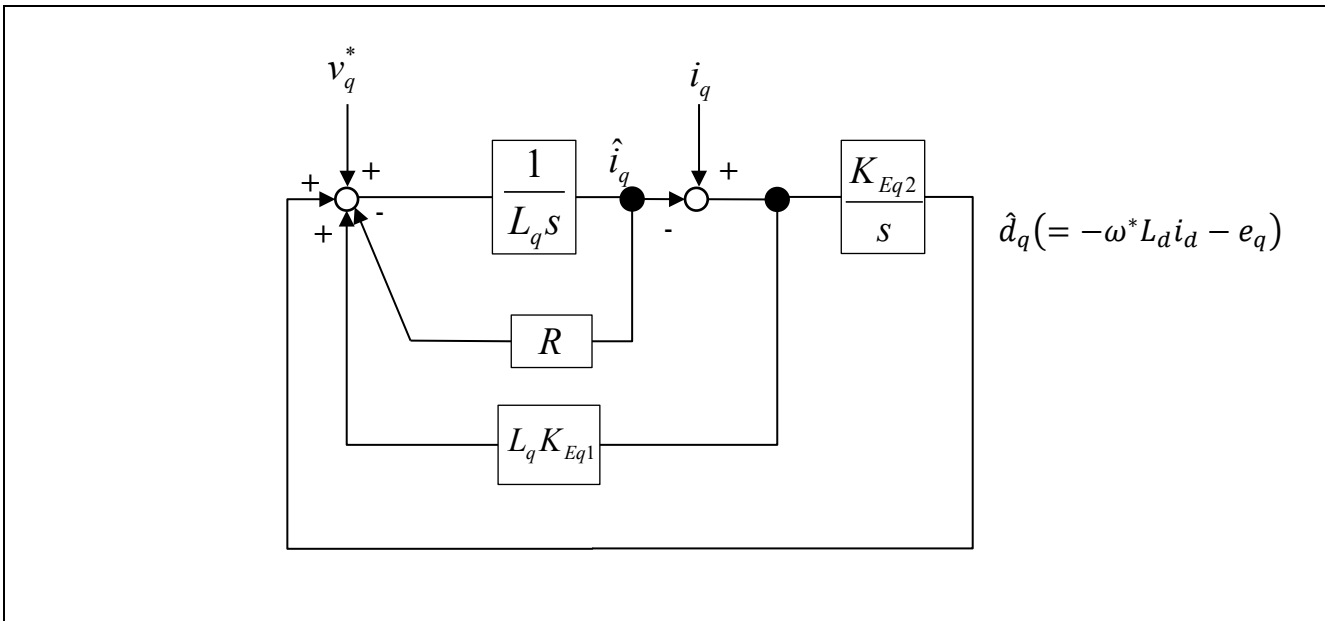


Figure 5-21 Block diagram of the q-axis inductive voltage observer

Next, the inductive voltages can be calculated from voltage disturbances  $\hat{d}_d$  and  $\hat{d}_q$ .

$$e_d = -\hat{d}_d + \omega^* L_q i_q$$

$$e_q = -\hat{d}_q - \omega^* L_d i_d$$

$$\Delta\theta = \text{atan} \left( \frac{e_d}{e_q} \right)$$

From the above, the phase error  $\Delta\theta$  between the actual d/q axis and the estimated d/q axis can be obtained.

Finally, reflect the phase error  $\Delta\theta$  to the estimated d/q-axis phase. The reflection is performed according to the block diagram shown in Figure 5-22.

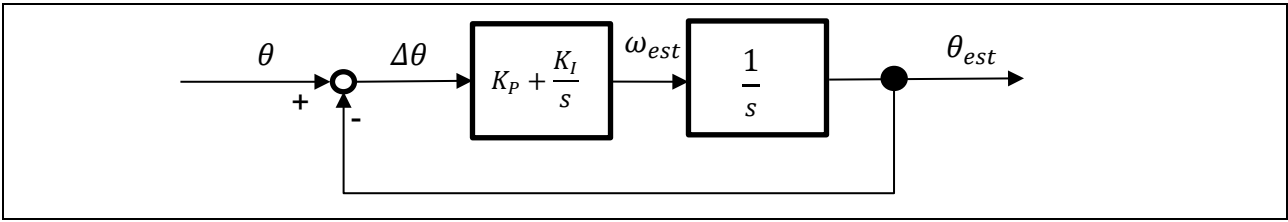


Figure 5-22 Block diagram of the magnetic pole estimation system

Here, the closed-loop transfer function from the magnetic pole position  $\theta$  of the motor to the estimated magnetic pole position  $\theta_{est}$  can be represented as follows:

$$\frac{\theta_{est}(s)}{\theta(s)} = \frac{K_I \left( s \frac{K_P}{K_I} + 1 \right)}{s^2 + K_P s + K_I}$$

Therefore, the transfer function from the motor's actual magnetic pole position to the estimated magnetic pole position is in quadratic form, and the natural frequency  $\omega_n$  and attenuation coefficient  $\zeta$  of the magnetic pole position estimation system are determined by the following formulas.

$$\omega_n = \sqrt{K_I}$$

$$\zeta = \frac{K_P}{2\sqrt{K_I}}$$

As a result, the control gains  $K_{P\_phase\_error}$  and  $K_{I\_phase\_error}$  for the magnetic pole position estimation system can be represented as follows:

$$K_{P\_phase\_error} = 2\zeta_{\Delta\theta}\omega_{\Delta\theta}$$

$$K_{I\_phase\_error} = \omega_{\Delta\theta}^2$$

$\omega_{\Delta\theta}$ : Natural frequency for the magnetic pole position estimation system  
 $\zeta_{\Delta\theta}$ : Attenuation coefficient for the magnetic pole position estimation system

As above, position and speed estimation is complete.

## 5.6.2 Configurations

Table 5-27 lists the configurations for the inductive voltage observer.

**Table 5-27 List of configurations**

File name	Macro name	Set value	Description
r_motor_module_ cfg.h	CURRENT_CFG_E_OBS_OMEGA	1000	Natural frequency for the inductive voltage observer [Hz]
	CURRENT_CFG_E_OBS_ZETA	1	Attenuation coefficient for the inductive voltage observer
	CURRENT_CFG_PLL_EST_OME GA	20	Natural frequency for the inductive voltage observer [Hz]
	CURRENT_CFG_PLL_EST_ZETA	1	Attenuation coefficient for the inductive voltage observer

## 5.6.3 Adjustment and configuration of parameters

(a) Configuration of the inductive voltage observer

In sensorless vector control, the inductive voltage observed must be always enabled. Therefore, there are no parameters to be set by the user.

## 5.7 Speed control module

The speed control module controls the motor so that the speed follows the speed command. When receiving a speed command value, this module outputs a current command value accordingly. This module also controls the submodules, which are magnetic flux weakening control, open-loop damping control, and switching-to-sensorless control.

### 5.7.1 Function


Table 5-28 lists the functions of the speed control module.

**Table 5-28 List of functions of the speed control module**

Function	Description
Speed control	Calculates and outputs a current command value that allows the speed to follow the speed command value.
Speed command setting	Sets a speed command value in the speed control module.
Magnetic flux weakening control setting	Uses the magnetic flux weakening control to calculate and set the current command values for the d and q axes.
Open-loop damping control setting	Sets the parameters for open-loop damping control.
Switching-to-sensorless control setting	Sets the parameters for the module that switches operation from open-loop control to sensorless control.

### 5.7.2 Module configuration diagram

Figure 5-23 shows the module configuration of the speed control module.

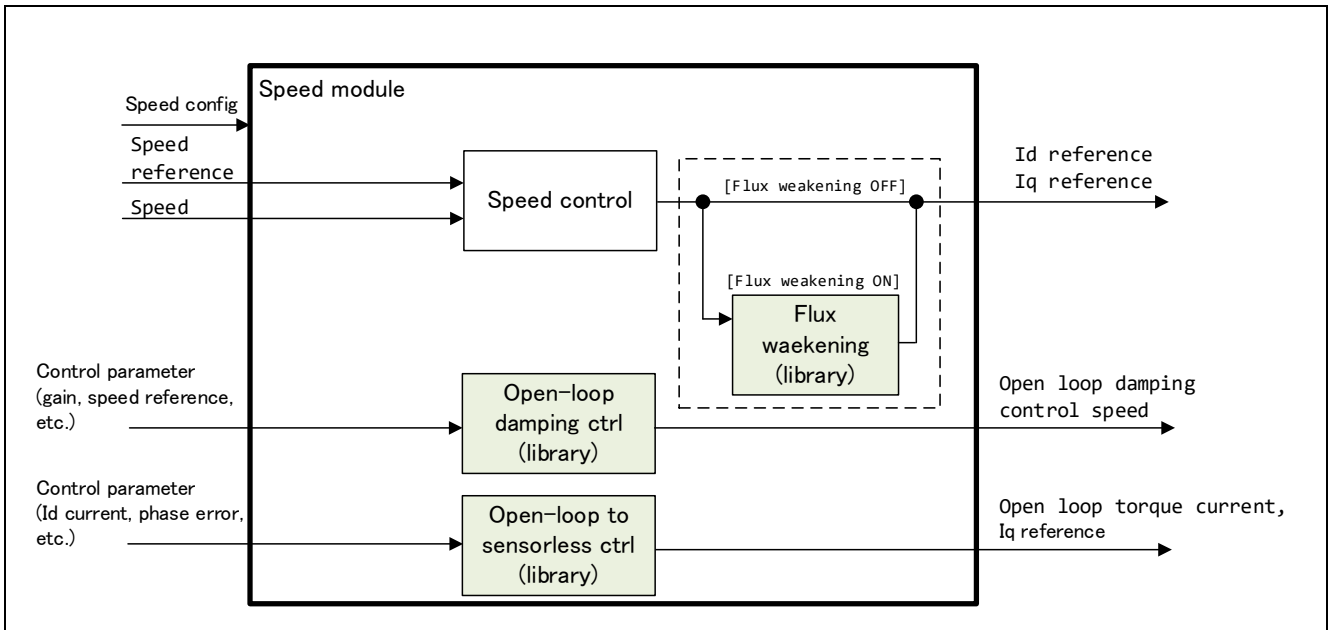

**Figure 5-23 Speed control module configuration diagram**

For details about the submodules of the speed control module, which are magnetic flux weakening control, open-loop damping control, and switching-to-sensorless control, see 5.8 Magnetic flux weakening control (speed control module), 5.9 Open-loop damping control (speed control module), and 5.10 Switching-to-sensorless control (speed control module).

5.7.3 Flowcharts

Figure 5-24 shows the flowchart for speed control.

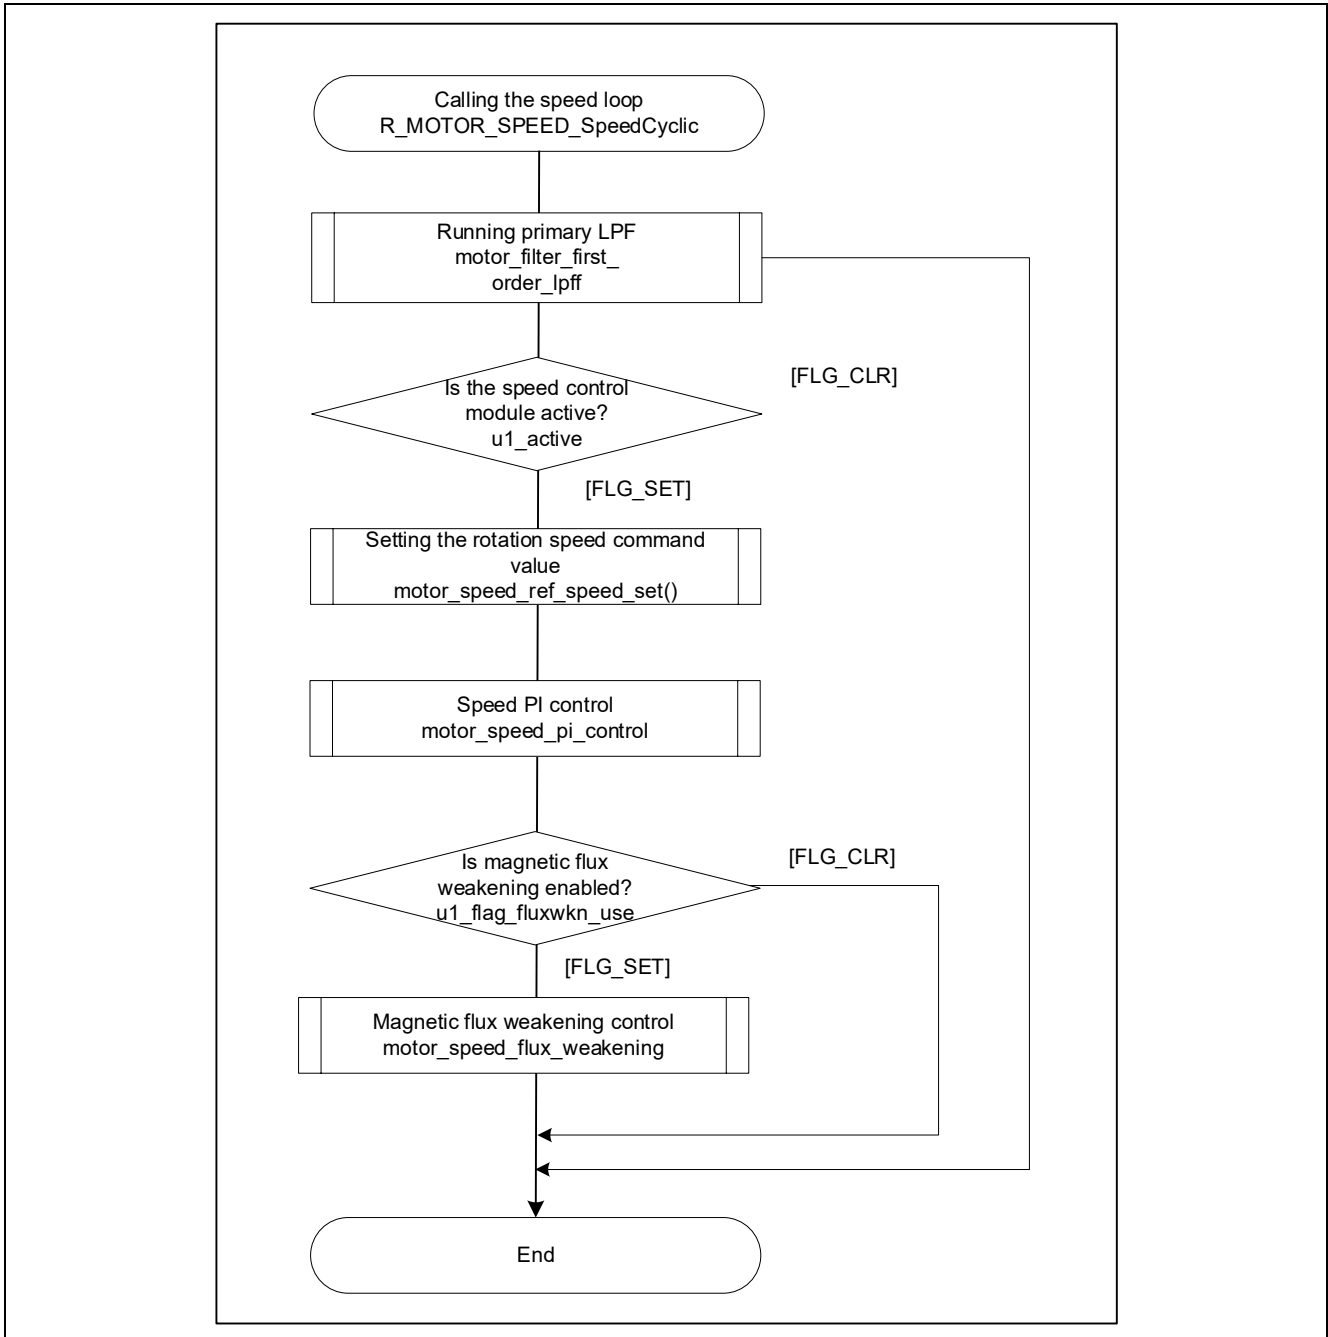


Figure 5-24 Flowchart for speed control

**5.7.4 API**

Table 5-29 lists the API functions of the speed control module.

**Table 5-29 List of API functions**

<b>API</b>	<b>Description</b>
R_MOTOR_SPEED_Open	Generates an instance of the speed control module.
R_MOTOR_SPEED_Close	Places the module in a reset state.
R_MOTOR_SPEED_Reset	Initializes the module.
R_MOTOR_SPEED_Run	Activates the module.
R_MOTOR_SPEED_ParameterSet	Inputs the variable information that is used for speed control.
R_MOTOR_SPEED_ParameterGet	Acquires the speed control results that are output.
R_MOTOR_SPEED_ParameterUpdate	Updates the control parameters of the module.
R_MOTOR_SPEED_SpdRefSet	Sets the speed command value.
R_MOTOR_SPEED_SpeedCyclic	Performs speed control.
R_MOTOR_SPEED_Opl2lessReferencelqCalc	Calculates the q-axis current command value when switching to sensorless control
R_MOTOR_SPEED_Opl2lessPreprocess	Calculate the torque current used to perform switching-to-sensorless control.
R_MOTOR_SPEED_OplDampCtrl	Starts open-loop damping control.
R_MOTOR_SPEED_OplDampReset	Resets open-loop damping control.
R_MOTOR_SPEED_HuntingSuppress	Performs a measure against estimation speed discontinuity of the q-axis current command value when switching controls.
R_MOTOR_SPEED_SwitchingFlagSet	Sets a flag that assigns an estimated speed to the speed command value when switching controls.

### 5.7.5 Configurations

Table 5-30 lists the configurations for the speed control module. Set up the functions to be used and the necessary parameters. Table 5-31 shows the initial values.

**Table 5-30 List of configurations**

File name	Macro name	Description
r_motor_module _cfg.h	SPEED_CFG_FLUX_WEAKENING	Magnetic flux weakening control setting Enable: MTR_ENABLE Disable: MTR_DISABLE
	SPEED_CFG_LESS_SWITCH	Switching-to-sensorless control setting Enable: MTR_ENABLE Disable: MTR_DISABLE
	SPEED_CFG_OPENLOOP_DAMPING	Open-loop damping control setting Enable: MTR_ENABLE Disable: MTR_DISABLE
	SPEED_CFG_CTRL_PERIOD	Control interval setting [s]
	SPEED_CFG_OMEGA	Natural frequency for the speed control system [Hz]
	SPEED_CFG_ZETA	Attenuation coefficient for the speed control system
	SPEED_CFG_LPF_OMEGA	LPF bandwidth for the speed control system [Hz]
	SPEED_CFG_SPEED_LIMIT_RPM	Speed limit value [rpm]
	SPEED_CFG_RATE_LIMIT_RPM	Acceleration limit [rpm/s]
	SPEED_OPL2LESS_SWITCH_TIME	Processing time required for switching-to-sensorless processing
	SPEED_OPL_DAMP_ED_HPF_OMEGA	d-axis inductive voltage estimation HPF cut-off frequency [Hz]
	SPEED_OPL_DAMP_ZETA	Default setting value of the attenuation coefficient for the open-loop damping control system
	SPEED_OPL_DAMP_FB_SPEED_LIMIT_RATE	Default setting value for the multiplier to be used to calculate the output speed command compensation value limiter.

**Table 5-31 List of initial values for configurations**

Macro name	Setting
SPEED_CFG_FLUX_WEAKENING	MTR_DISABLE
SPEED_CFG_LESS_SWITCH	MTR_ENABLE
SPEED_CFG_OPENLOOP_DAMPING	MTR_ENABLE
SPEED_CFG_CTRL_PERIOD	RX26T: 0.0005f RX14T: 0.001f
SPEED_CFG_OMEGA	3.0f
SPEED_CFG_ZETA	1.0f
SPEED_CFG_LPF_OMEGA	25.0f
SPEED_CFG_SPEED_LIMIT_RPM	4500.0f
SPEED_CFG_RATE_LIMIT_RPM	1000.0f
SPEED_OPL2LESS_SWITCH_TIME	0.025f
SPEED_OPL_DAMPED_HPF_OMEGA	2.5f
SPEED_OPL_DAMP_ZETA	1.0f
SPEED_OPL_DAMP_FB_SPEED_LIMIT_RATE	0.2f

### 5.7.6 Structure and variable information

Table 5-32 lists the structures and variables for the speed control module. For the speed control module, the structure for the speed control module (g\_st\_sc) is defined by securing an instance of the module from the API.

**Table 5-32 List of structures and variables (1)**

Structure	Variable	Description
st_speed_control_t	u1_active	Selects whether to enable the module.
Structure for the speed control module	u1_state_speed_ref	The variable for managing the states that determine the speed command value. It manages the states as shown in "Macro definition" below.
	u1_flag_fluxwkn_use	Flag for whether to use magnetic flux weakening control
	u1_flag_switching	Flag for whether to use switching-to-sensorless control
	f4_speed_ctrl_period	Speed loop control interval [s]
	f4_ref_speed_rad_ctrl	Speed command value for control [rad/s]
	f4_ref_speed_rad	Speed command value output [rad/s]
	f4_ref_speed_rad_manual	Speed command value set by the user during speed control [rad/s]
	f4_speed_rad_ctrl	Speed calculated by the speed control module [rad/s]
	f4_speed_rad	Speed that is input [rad/s]
	f4_max_speed_rad	Maximum speed [rad/s]
	f4_speed_rate_limit_rad	Speed variation limit value [rad/s]
	f4_id_ref_output	d-axis current command value [A]
	f4_iq_ref_output	q-axis current command value [A]
	f4_va_max	Maximum voltage on the d and q axes [V]
	f4_id_ad	d-axis current value [A]
	f4_iq_ad	q-axis current value [A]
	f4_opl2less_sw_time	Processing time for switching-to-sensorless processing [s]
	f4_torque_current	Torque current [A]
	st_motor	Structure for motor constants
	st_pi_speed	Structure for PI control
st_fluxwkn	Structure for magnetic flux weakening control	
st_opl_damp	Structure for open-loop damping control	
st_slpf	Structure for LPF	

**Table 5-33 List of structures and variables (2)**

Structure	Variable	Description
st_speed_cfg_t  Structure for setting the parameters for controlling the speed control module	u1_flag_fluxwkn_use	Flag for whether to use magnetic flux weakening control
	f4_max_speed_rpm	Maximum speed [rpm]
	f4_speed_ctrl_period	Speed control interval [s]
	f4_speed_rate_limit_rpm	Speed variation limit value [rpm]
	f4_speed_omega_hz	Natural frequency for the speed control system [Hz]
	f4_speed_zeta	Attenuation coefficient for the speed control system
	f4_speed_lpf_hz	LPF for speed control [Hz]
	f4_opl2less_sw_time	Processing time for switching-to-sensorless processing [s]
	f4_ed_hpf_omega	d-axis inductive voltage HPF cut-off frequency [Hz]
	f4_ol_damping_zeta	Attenuation coefficient for open-loop damping control
	f4_ol_damping_fb_limit_rate	Feedback limit rate for open-loop damping control
	f4_ol_ref_id	d-axis current command value in open loop mode [A]
	f4_id_down_speed_rpm	Speed (mechanical angle) when start decreasing the d-axis current command value [rpm]
	st_motor	Structure for motor constants
st_speed_input_t  Structure for speed control module input	u1_state_speed_ref	Speed command status
	f4_speed_rad	Speed that is to be input [rad/s]
	f4_va_max	Maximum voltage in the d and q axes [V]
st_speed_output_t  Structure for speed control module output	f4_id_ref	d-axis current command value [A]
	f4_iq_ref	q-axis current command value [A]
	f4_ref_speed_rad_ctrl	Speed that is used for PI control [rad/s]
	f4_speed_rad_lpf	Speed after LPF [rad/s]

### 5.7.7 Macro definition

Table 5-34 lists the macros of the speed control module.

**Table 5-34 List of macros**

File name	Macro name	Defined value	Remarks
r_motor_speed_api.h	SPEED_STATE_ZERO_CONST	0	This macro is used to manage the state of the speed control module. The speed command value is always 0.
	SPEED_STATE_POS_CONTROL_OUTPUT	1	This macro is used to manage the state of the speed control module. The speed command value is used as the output of the position control module.
	SPEED_STATE_MANUAL	2	This macro is used to manage the state of the speed control module. The speed command value becomes the user-specified value.

### 5.7.8 Adjustment and configuration of parameters

(a) Adjustment of the natural frequency and attenuation coefficient for the speed control system

In the speed control module, the control gain is adjusted by tuning the natural frequency for the speed control system and the attenuation coefficient for the speed control system. Increasing the natural frequency for the speed control system improves the responsiveness, expanding the following capability of the speed to the commanded speed. The maximum settable natural frequency for speed control is limited to 1/3 of the maximum settable natural frequency for current control to prevent interference with current control. For the attenuation coefficient for the speed control system, a value in the range from 0.7 to 1.0 is ordinarily set. Setting a value nearer to 1.0 makes response more stable and moderate. Make adjustment while checking the speed responsiveness.

When you set or update the values of the natural frequency and attenuation coefficient for speed control, use the following variables of the `st_speed_cfg_t` structure (the structure for setting the parameters for controlling the speed control module). After you have set the desired values in these variables, apply them by using `R_MOTOR_SPEED_ParameterUpdate` (the API function for updating the parameters that control the speed control module).

- To set the natural frequency for the speed control system, use `f4_speed_omega_hz`. (See Table 5-33.)
- To set the attenuation coefficient for the speed control system, use `f4_speed_zeta`. (See Table 5-33.)

(b) Setting the parameters for speed control

Because the speed control module uses the control interval and motor parameters, the control parameter configuration (`R_MOTOR_SPEED_ParameterUpdate`) can be used to update the parameters. For details about the items that can be set, see the description of the `st_speed_cfg_t` structure (structure for setting the parameters for controlling the speed control module).

(c) Setting the initial values of the parameters for speed control

The configurations of the speed control module can be specified by using `r_motor_module_cfg.h`. The values set in this file are applied as initial values at system startup. For details about the items to be set, see 5.7.5.

## 5.8 Magnetic flux weakening control (speed control module)

The magnetic flux weakening control module is a submodule of the speed control module. When a motor that uses a magnet as the rotor rotates, an inductive voltage arises in proportion to the permanent magnet magnetic flux and rotation speed of the rotor. When the rotation speed increases and the inductive voltage becomes equal to the power supply voltage (that is, the voltage saturates), higher current can no longer flow into the motor, resulting in a saturated state that restricts any further increase in motor speed. Magnetic flux weakening control is a technology that solves this problem.

### 5.8.1 Description of the functionality

In magnetic flux weakening control, the d-axis current is applied in the negative direction to suppress the effect of voltage saturation due to induced voltage, thus enabling higher and more stable rotational speeds to be obtained.

In practice, the d-axis current is determined and controlled according to the formula shown in Figure 5-25.

$$I_d = \frac{-\psi_a + \sqrt{\left(\frac{V_{om}}{\omega}\right)^2 - (L_q I_q)^2}}{L_d}$$

$$\because V_{om} = V_{amax} - I_a R$$

$V_{om}$ : Inductive voltage limit value [V]  
 $V_{amax}$ : Maximum voltage vector value [V]  
 $I_a$ : Current vector magnification [A]

Figure 5-25 Formula for calculating the d-axis command value in magnetic flux weakening control

### 5.8.2 Adjustment and configuration of parameters

There are no parameters to be set by the user for this module. To use this module, use R\_MOTOR\_SPEED\_ParameterUpdate (API function for updating the control parameters for the speed control module) to set "u1\_flag\_fluxwkn\_use" (flag for whether to use magnetic flux weakening control) to 1.

## 5.9 Open-loop damping control (speed control module)

### 5.9.1 Description of the functionality

Normally, in sensorless vector control, the inductive voltage is lower in low speeds so that the accuracy of position and speed estimation does not increase. Therefore, a constant d-axis current is applied to generate a rotating magnetic field, and the motor is driven synchronously in speed open loop (open-loop control). At this point, the motor speed vibrates at the natural frequency that depends on the current and motor parameters. Therefore, implementing an open-loop damping control as shown in the block diagram in Figure 5-26 can reduce the motor vibration and stabilize the motor speed even in low speeds.

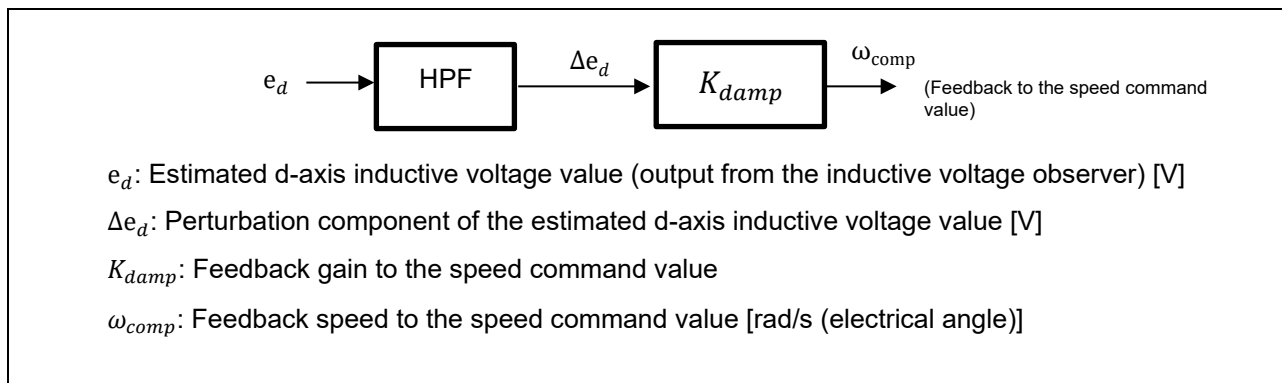


Figure 5-26 Block diagram of open-loop damping control

### 5.9.2 Adjustment and configuration of parameters

There are no parameters to be set by the user for this module. To use this module, use R\_MOTOR\_SENSORLESS\_VECTOR\_ParameterUpdate (API function for updating the control parameters for the manager module) to set "u1\_flag\_openloop\_damping\_use" (flag for whether to use open-loop damping control) to 1.

## 5.10 Switching-to-sensorless control (speed control module)

### 5.10.1 Description of the functionality

After the motor starts up, the motor switches to sensorless control (speed closed loop control) when the speed reaches to a level sufficient to estimate the inductive voltage. However, because the motor in open-loop control is rotated by a torque generated by a phase error, hunting in the current and speed may occur when switching to sensorless control due to the high phase error, especially at higher loads. Therefore, estimate the load torque from the phase error  $\Delta\theta$ , and then perform the switching-to-sensorless processing as shown in Figure 5-27. This can reduce hunting in the current and speed when switching controls.

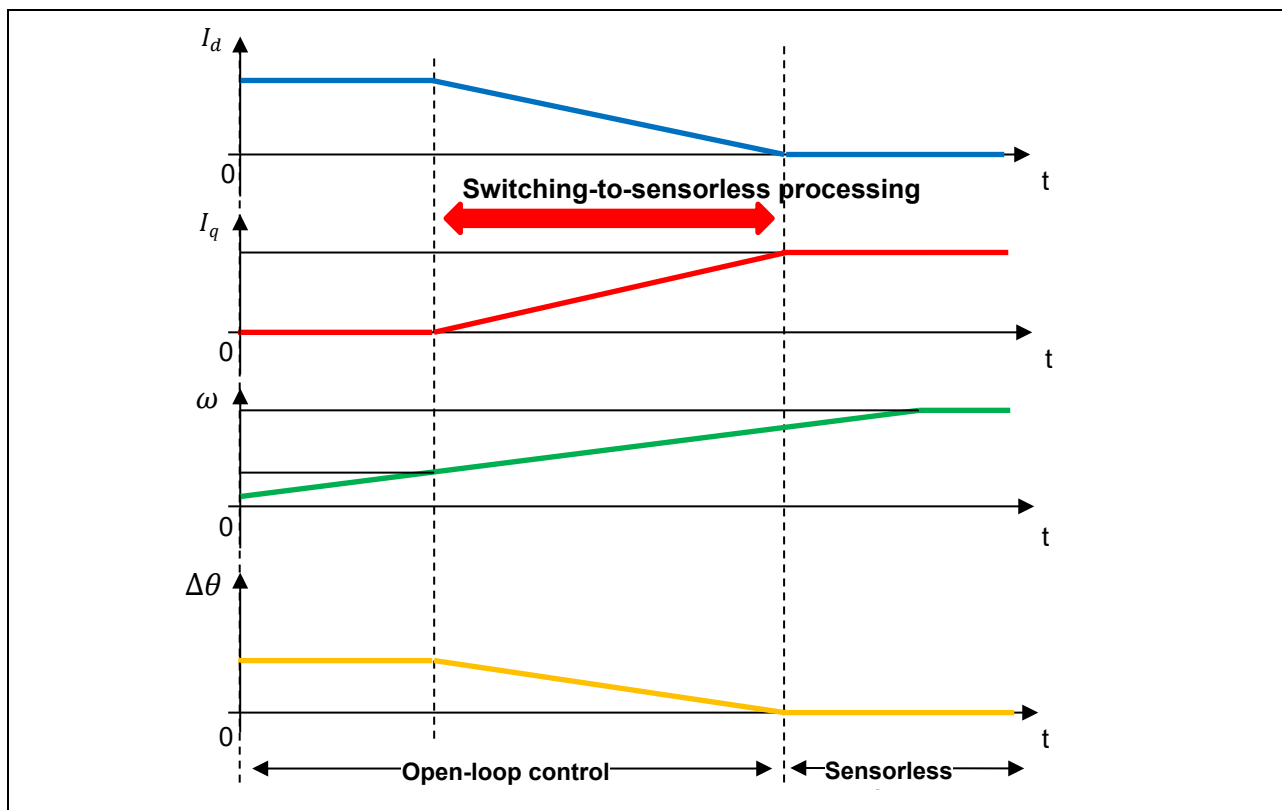


Figure 5-27 Behavior diagram of each physical quantity during switching-to-sensorless processing

### 5.10.2 Adjustment and configuration of parameters

There are no parameters to be set by the user for this module. To use this module, use R\_MOTOR\_SENSORLESS\_VECTOR\_ParameterUpdate (API function for updating the control parameters for the manager module) to set "u1\_flag\_less\_switch\_use" (flag for whether to use switching-to-sensorless control) to 1.

## 5.11 Driver module

The driver module works as an interface between the manager module, which corresponds to the middleware of the sample software, and Smart Configurator, which is required to access the microcontroller peripherals. Configuring the driver module appropriately allows you to use microcontroller function allocation and the differentials of the board to be used without modifying the motor module.

### 5.11.1 Functionality


Table 5-35 lists the functions of the driver module.

**Table 5-35 List of functions of the driver module**

Function	Description
Acquisition of the A/D conversion value	Acquires AD values such as the phase current and inverter board bus voltage via a Smart Configurator function.
PWM duty setting	Sets the PWM duty value that is to be output to U-, V-, and W-phases via a Smart Configurator function.
PWM start/stop	Controls whether to start or stop PWM output via a Smart Configurator function.

### 5.11.2 Module configuration diagram

Figure 5-28 Driver module configuration diagram shows the module configuration of the driver module.

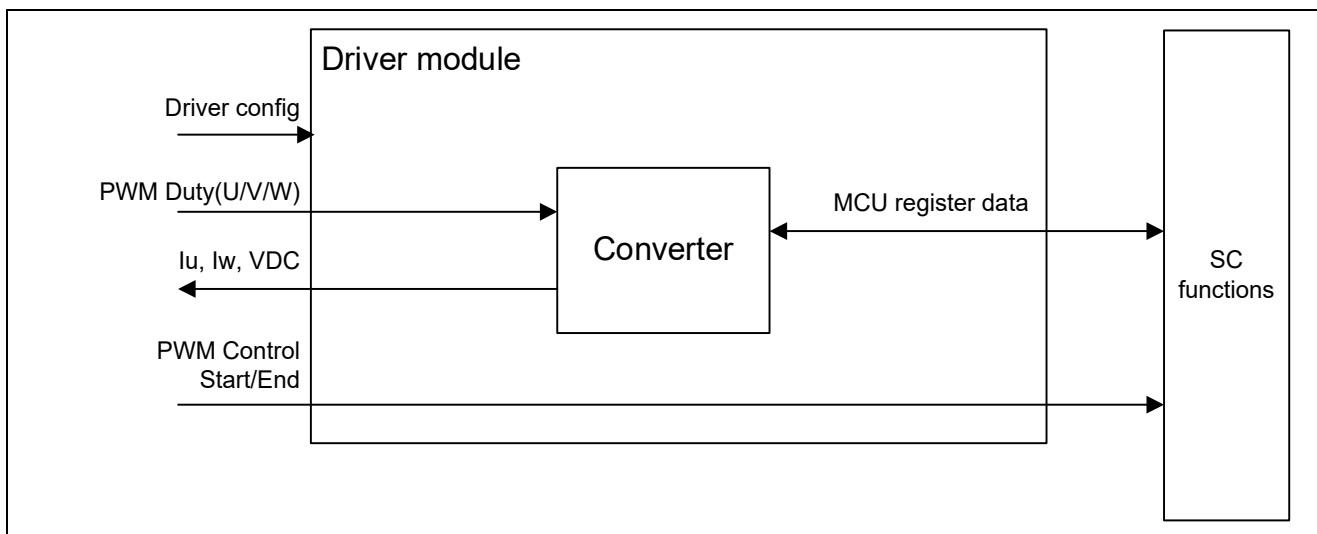

**Figure 5-28 Driver module configuration diagram**

### 5.11.3 API

Table 5-36 lists and describes the API functions for the driver module.

**Table 5-36 List of API functions**

<b>API</b>	<b>Description</b>
R_MOTOR_DRIVER_Open	Generates an instance of the driver module.
R_MOTOR_DRIVER_Close	Places the module in a reset state.
R_MOTOR_DRIVER_ParameterUpdate	Inputs the variable information that is to be used inside the module.
R_MOTOR_DRIVER_BldcAnalogGet	Acquires the A/D conversion results. (2 shunt detection)
R_MOTOR_DRIVER_1ShuntBldcAnalogGet	Acquires the A/D conversion results. (1 shunt detection)
R_MOTOR_DRIVER_BldcDutySet	Sets the PWM duty.
R_MOTOR_DRIVER_PWMControlStop	Stops PWM control.
R_MOTOR_DRIVER_PWMControlStart	Starts PWM control.

### 5.11.4 Configurations

Table 5-37 lists the configurations for the driver module. Set up the functions to be used and the necessary parameters. Table 5-38 shows the initial values.

**Table 5-37 List of configurations**

File name	Macro name	Description
r_motor_module_cfg.h	DRIVER_CFG_FUNC_PWM_OUTPUT_START	Sets the function that enables PWM output.
	DRIVER_CFG_FUNC_PWM_OUTPUT_STOP	Sets the function that disables PWM output.
	DRIVER_CFG_FUNC_ADC_DATA_GET	Sets the function that acquires the A/D conversion results.
	DRIVER_CFG_FUNC_DUTY_SET	Sets the function that sets the duty cycle. (Only 2 shunt detection)
r_motor_inverter_cfg.h	INVERTER_CFG_ADC_REF_VOLTAGE	Sets the reference voltage for A/D conversion.
r_motor_module_cfg.h	MOTOR_MCU_CFG_ADC_OFFSET	Sets the AD offset value.

**Table 5-38 List of initial values for configurations**

Macro name	Settings
DRIVER_CFG_FUNC_PWM_OUTPUT_START	R_Config_xxx_StartTimerCtrl (Smart Configurator function) *1 *2
DRIVER_CFG_FUNC_PWM_OUTPUT_STOP	R_Config_xxx_StopTimerCtrl (Smart Configurator function) *1 *2
DRIVER_CFG_FUNC_ADC_DATA_GET (2 shunt detection)	RX26T: R_Config_xxx_AdcGetConvVal RX14T: R_Config_xxx_AdcGetConvVal_MultiUnit (Smart Configurator function) *1 *2
DRIVER_CFG_FUNC_ADC_DATA_GET (1 shunt detection)	R_Config_xxx_1ShuntAdcGetConvVal (Smart Configurator function) *1 *2
DRIVER_CFG_FUNC_DUTY_SET (Only 2 shunt detection)	R_Config_xxx_UpdDuty (Smart Configurator function) *1 *2
INVERTER_CFG_ADC_REF_VOLTAGE	5.0f
MOTOR_MCU_CFG_ADC_OFFSET	0x7FF

Notes: 1. For details about the functions shown in the " Settings " column, see 5.12 Smart Configurator setting.

2. When the Smart Configurator Motor component is used, "xxx" is set to "MOTOR". When the Motor component is not used, it is the module name used for PWM.

### 5.11.5 Structure and variable information

Table 5-39 lists the structures that are used for the driver module. In the driver module, the structure for the driver module (g\_st\_driver) is defined by securing an instance of the module from the API.

**Table 5-39 List of structures and variables**

Structure	Variable	Description
st_motor_driver_t  Structure for the driver module	*ADCCDataGet	Pointer to the Smart Configurator function (This variable sets the function that acquires the results of A/D conversion.)
	*BLDCDutySet	Pointer to the Smart Configurator function (This variable sets the function that enables PWM output.) (Only 2 shunt detection)
	*PWMOutputStop	Pointer to the Smart Configurator function (This variable sets the function that disables PWM output.)
	*PWMOutputStart	Pointer to the Smart Configurator function (This variable sets the function that sets the duty cycle.)
	f4_ad_crnt_per_digit	Scale for A/D conversion of the current
	f4_ad_vdc_per_digit	Scale for A/D conversion of the voltage
	f4_pwm_period_cnt	Count value for one interval of the PWM counter (information for the duty setting)
	f4_pwm_dead_time_cnt	Count value for the dead time (information for the duty setting)
st_motor_driver_cfg_t  Structure for setting the parameters for controlling the drive module	*ADCCDataGet	Pointer to the Smart Configurator function
	*BLDCDutySet	Pointer to the Smart Configurator function (Only 2 shunts detection)
	*PWMOutputStop	Pointer to the Smart Configurator function
	*PWMOutputStart	Pointer to the Smart Configurator function
	f4_shunt_ohm	Shunt resistance value [ohm] (for calculation of f4_ad_crnt_per_digit)
	f4_volt_gain	Voltage conversion gain coefficient (for calculation of f4_ad_vdc_per_digit)
	f4_crnt_amp_gain	Current conversion gain coefficient (for calculation of f4_ad_crnt_per_digit)
	f4_pwm_period_cnt	Count value for one interval of the PWM counter (information for the duty setting)
	f4_pwm_dead_time_cnt	Count value for the dead time (information for the duty setting)

### 5.11.6 Macro definition

Table 5-40 lists the macros for the driver module.

**Table 5-40 List of macros**

File name	Macro name	Defined value	Remarks
r_motor_driver.c	MOTOR_DRIVER_PRV_ADC_REF_VOLTAGE	INVERTER_CFG_ADC_REF_VOLTAGE (See Table 5-37.)	Reference voltage [V]

### 5.11.7 Adjustment and configuration of parameters

(a) Setting the parameters for controlling the driver module

In the driver module, parameters that are input from the control parameter configuration (R\_MOTOR\_DRIVER\_ParameterUpdate) are used to associate the motor module and Smart Configurator and to convert data. The parameters are input by using st\_speed\_cfg\_t (the structure for setting the parameters for controlling the drive module). In the sample program, the information that is defined as configurations is used as the parameter settings. Table 5-41 shows the settings.

**Table 5-41 Example of settings specified in the sample program**

Variable name	Macro name	File name
*ADCDDataGet	DRIVER_CFG_FUNC_ADC_DATA_GET	See Table 5-37.
*BLDCDutySet	DRIVER_CFG_FUNC_DUTY_SET (Only 2 shunts detection)	
*PWMOutputStop	DRIVER_CFG_FUNC_PWM_OUTPUT_STOP	
*PWMOutputStart	DRIVER_CFG_FUNC_PWM_OUTPUT_START	
f4_shunt_ohm	INVERTER_CFG_SHUNT_RESIST	r_motor_inverter_cfg.h
f4_volt_gain	INVERTER_CFG_VOLTAGE_GAIN	
f4_crnt_amp_gain	INVERTER_CFG_CURRENT_AMP_GAIN	
f4_pwm_period_cnt	MOTOR_COMMON_CARRIER_SET_BASE	r_motor_module_cfg.h
f4_pwm_dead_time_cnt	MOTOR_COMMON_DEADTIME_SET	

## 5.12 Smart Configurator setting

In the sample program, Smart Configurator is used to create a project. This section describes the components used and the functions added to the user area.

### 5.12.1 Clock settings

Table 5-42 and Table 5-43 shows the clock settings.

**Table 5-42 MCU clock settings (RX26T)**

Clock	Frequency	
	RX26T RAM64KB Version	RX26T RAM48KB Version
Main clock	10MHz	
System clock (ICLK)	120MHz	
Peripheral module clock (PCLKA)	120MHz	
Peripheral module clocks (PCLKB/PCLKC/PCLKD)	60MHz/120MHz/60MHz	
Flash IF clock (FCLK)	60MHz	
IWDTCLK	120kHz	

**Table 5-43 MCU clock settings (RX14T)**

Clock	Frequency
	RX14T
Main clock	48MHz
System clock (ICLK)	48MHz
Peripheral module clocks (PCLKB/PCLKD)	48MHz
Flash IF clock (FCLK)	48MHz
IWDTCLK	15kHz

### 5.12.2 Component settings

Table 5-44 and Table 5-45 lists the components used and the functions allocated to the components.

**Table 5-44 Smart Configurator components and their functions (2 shunt detection)**

Function	Component		
	RX26T RAM64KB Version	RX26T RAM48KB Version	RX14T
3-phase PWM output, A/D conversion (current detection, inverter bus voltage detection)	Config_MOTOR		
A/D conversion processing (command voltage detection for the board UI)	Config_S12AD2		Config_S12AD1
Setting of the port to be used	Config_PORT		
Speed control interrupt timer	Config_CMT0		
Independent watchdog timer	Config_IWDT		
Overcurrent detection	Config_POE		

**Table 5-45 Smart Configurator components and their functions (1 shunt detection)**

Function	Component		
	RX26T RAM64KB Version	RX26T RAM48KB Version	RX14T
3-phase PWM output	Config_MTU3_MTU4		
A/D conversion (current detection, inverter bus voltage detection)	Config_S12AD0		
A/D conversion processing (command voltage detection for the board UI)	Config_S12AD2		Config_S12AD1
Setting of the port to be used	Config_PORT		
Position and speed control interrupt timer	Config_CMT0		
Independent watchdog timer	Config_IWDT		
Overcurrent detection	Config_POE		

**5.12.3 Interrupts**

Table 5-46, Table 5-47 and Table 5-48 shows the information about the interrupts.

**Table 5-46 List of interrupts (RX26T RAM64KB Version)**

Component	Interrupt function	Description
Config_MOTOR (2 shunt detection)	r_Config_MOTOR_ad_interrupt	A/D conversion end interrupt Interrupt level: 12 Multiple interrupt: Enabled
Config_MTU3_MTU4 (1 shunt detection)	r_Config_MTU3_MTU4_tgia3_interrupt	PWM crest interrupt Interrupt level: 12 Multiple interrupt: Enabled
Config_S12AD0/2	None	None
Config_PORT	None	None
Config_CMT0	r_Config_CMT0_cmi0_interrupt	Speed control interrupt Interrupt level: 11 Multiple interrupt: Enabled
Config_IWDT	None	None
Config_POE	r_Config_POE_oei1_interrupt	Hardware overcurrent interrupt / Short-circuited outputs interrupt Interrupt level: 15 Multiple interrupt: Disabled

**Table 5-47 List of interrupts (RX26T RAM48KB Version)**

Component	Interrupt function	Description
Config_MOTOR (2 shunt detection)	r_Config_MOTOR_ad_interrupt	A/D conversion end interrupt Interrupt level: 12 Multiple interrupt: Enabled
Config_MTU3_MTU4 (1 shunt detection)	r_Config_MTU3_MTU4_tgia3_interrupt	PWM crest interrupt Interrupt level: 12 Multiple interrupt: Enabled
Config_S12AD0/2	None	None
Config_PORT	None	None
Config_CMT0	r_Config_CMT0_cmi0_interrupt	Speed control interrupt Interrupt level: 11 Multiple interrupt: Enabled
Config_IWDT	None	None
Config_POE	r_Config_POE_oei1_interrupt	Hardware overcurrent interrupt Interrupt level: 15 Multiple interrupt: Disabled
	r_Config_POE_oei2_interrupt	Short-circuited outputs interrupt Interrupt level: 15 Multiple interrupt: Disabled

**Table 5-48 List of interrupts (RX14T)**

<b>Component</b>	<b>Interrupt function</b>	<b>Description</b>
Config_MOTOR (2 shunt detection)	r_Config_MOTOR_ad_interrupt	A/D conversion end interrupt Interrupt level: 12 Multiple interrupt: Enabled
Config_MTU3_MTU4 (1 shunt detection)	r_Config_MTU3_MTU4_tgia3_interrupt	PWM crest interrupt Interrupt level: 12 Multiple interrupt: Enabled
Config_S12AD0 (1 shunt detection)	None	None
Config_S12AD1	None	None
Config_PORT	None	None
Config_CMT0	r_Config_CMT0_cmi0_interrupt	Speed control interrupt Interrupt level: 11 Multiple interrupt: Enabled
Config_IWDT	None	None
Config_POE	r_Config_POE_oei4_interrupt	Hardware overcurrent interrupt Interrupt level: 15 Multiple interrupt: Disabled

**5.12.4 Details of user codes**

Table 5-49 lists the functions that are created in the user code area.

**Table 5-49 List of functions in the user area**

Component	Function	Description
Config_PORT	R_Config_PORT_GetSW1	Acquires the status of SW1.
	R_Config_PORT_GetSW2	Acquires the status of SW2.
	R_Config_PORT_Led1_on	Turns on LED1.
	R_Config_PORT_Led2_on	Turns on LED2.
	R_Config_PORT_Led1_off	Turns off LED1.
	R_Config_PORT_Led2_off	Turns off LED2.
	R_Config_PORT_Led3_on (Only RX14T)	Turns on LED3.
	R_Config_PORT_Led3_off (Only RX14T)	Turns off LED3.
Config_MTU3_MTU4	R_Config_MTU3_MTU4_StartTimerCount	Starts the counting of the PWM timer. *1
	R_Config_MTU3_MTU4_StopTimerCount	Stops the counting of the PWM timer. *1
	R_Config_MTU3_MTU4_StartTimerCtrl	Enables PWM output. *1
	R_Config_MTU3_MTU4_StopTimerCtrl	Disables PWM output. *1
	R_Config_MTU3_MTU4_1ShuntUpdDuty	Writes data to the PWM duty setting register. *1
	R_Config_MTU3_MTU4_StartA/D	Enables A/D conversion start and end interrupts. *1
	R_Config_MTU3_MTU4_StopA/D	Disables A/D conversion stop and end interrupts. *1
	R_Config_MTU3_MTU4_1ShuntAdcGetConvVal	Acquires the A/D conversion value. *1
	R_Config_MTU3_MTU4_AdcTriggerSet	Set AD double trigger timing for phase current detection. *1
	R_Config_MTU3_MTU4_MaxCountGet	Get max count of PWM timer. *1

Notes: 1. Set for only 1 shunt detection.

**5.12.5 Pin settings**

Table 5-50, Table 5-51 and Table 5-52 shows the pin interface information.

**Table 5-50 Pin interface (RX26T RAM64KB Version)**

Function	Pin name
Inverter Measurement of the bus voltage	P43 / AN003
Pin for inputting the /speed command value (analog value)	P50 / AN204
START/STOP Toggle switch	P23
ERROR RESET Push switch	P22
LED1 control	P21
LED2 control	P20
Measurement of the U-phase current	P40 / AN000
Measurement of the W-phase current	P42 / AN002
PWM output (U <sub>p</sub> ) / "High" active	P73 / MTIOC4B
PWM output (V <sub>p</sub> ) / "High" active	P72 / MTIOC4A
PWM output (W <sub>p</sub> ) / "High" active	P71 / MTIOC3B
PWM output (U <sub>n</sub> ) / "High" active	P76 / MTIOC4D
PWM output (V <sub>n</sub> ) / "High" active	P75 / MTIOC4C
PWM output (W <sub>n</sub> ) / "High" active	P74 / MTIOC3D
PWM emergency stop input when an overcurrent is detected	P70 / POE0#

**Table 5-51 Pin interface (RX26T RAM48KB Version)**

Function	Pin name
Inverter Measurement of the bus voltage	P43 / AN003
Pin for inputting the /speed command value (analog value)	P47 / AN206
START/STOP Toggle switch	P21
ERROR RESET Push switch	P20
LED1 control	P65
LED2 control	PB5
Measurement of the U-phase current	P40 / AN000
Measurement of the W-phase current	P42 / AN002
PWM output (U <sub>p</sub> ) / "High" active	P71 / MTIOC3B
PWM output (V <sub>p</sub> ) / "High" active	P72 / MTIOC4A
PWM output (W <sub>p</sub> ) / "High" active	P73 / MTIOC4B
PWM output (U <sub>n</sub> ) / "High" active	P74 / MTIOC3D
PWM output (V <sub>n</sub> ) / "High" active	P75 / MTIOC4C
PWM output (W <sub>n</sub> ) / "High" active	P76 / MTIOC4D
PWM emergency stop input when an overcurrent is detected	P96 / POE4#

**Table 5-52 Pin interface (RX14T)**

Function	Pin name
Inverter Measurement of the bus voltage	P11 / AN102
Pin for inputting the /speed command value (analog value)	P10 / AN103
START/STOP Toggle switch	PD7
ERROR RESET Push switch	PE2
LED1 control	PD3
LED2 control	PD4
LED3 control	PD6
Measurement of the U-phase current	P41 / AN001
Measurement of the W-phase current	P40 / AN000
PWM output ( $U_p$ ) / "High" active	P73 / MTIOC4B
PWM output ( $V_p$ ) / "High" active	P72 / MTIOC4A
PWM output ( $W_p$ ) / "High" active	P71 / MTIOC3B
PWM output ( $U_n$ ) / "High" active	P76 / MTIOC4D
PWM output ( $V_n$ ) / "High" active	P75 / MTIOC4C
PWM output ( $W_n$ ) / "High" active	P74 / MTIOC3D
PWM emergency stop input when an overcurrent is detected	P30 / POE11#

**5.12.6 Macro definitions**

Table 5-53 and Table 5-54 lists the macros for the motor component.

**Table 5-53 List of macros (RX26T RAM64KB Version / RX26T RAM48KB Version)**

File name	Macro name	Defined value	Remarks
Config_MOTOR .h	CG_CONFIG_MOTOR_PWM_TIMER_FREQ	120.0f	PWM timer frequency [MHz]
	CG_CONFIG_MOTOR_CARRIER_FREQ	20.000f	Carrier wave actual frequency [kHz]
	CG_CONFIG_MOTOR_DEADTIME	2.000f	Deadtime actual value [us]
	CG_CONFIG_MOTOR_INTR_DECIMATION	0.0	Interrupt skipping number
	CG_MOTOR_CFG_MAX_AD_DATA	4095.0f	Max A/D data
	CG_MOTOR_MCU_CFG_AD_FREQ	60.0f	A/D frequency [MHz]

**Table 5-54 List of macros (RX14T)**

File name	Macro name	Defined value	Remarks
Config_MOTOR .h	CG_CONFIG_MOTOR_PWM_TIMER_FREQ	48.0f	PWM timer frequency [MHz]
	CG_CONFIG_MOTOR_CARRIER_FREQ	20.000f	Carrier wave actual frequency [kHz]
	CG_CONFIG_MOTOR_DEADTIME	1.000f	Deadtime actual value [μs]
	CG_CONFIG_MOTOR_INTR_DECIMATION	0.0	Interrupt skipping number
	CG_MOTOR_CFG_MAX_AD_DATA	4095.0f	Max A/D data
	CG_MOTOR_MCU_CFG_AD_FREQ	48.0f	A/D frequency [MHz]

## 6. Vector control algorithm

### 6.1 Analysis model of a permanent magnet synchronous motor

The voltage equation of a permanent magnet synchronous motor that has sinusoidal magnetic flux distribution as shown in Figure 6-1 can be represented as below.

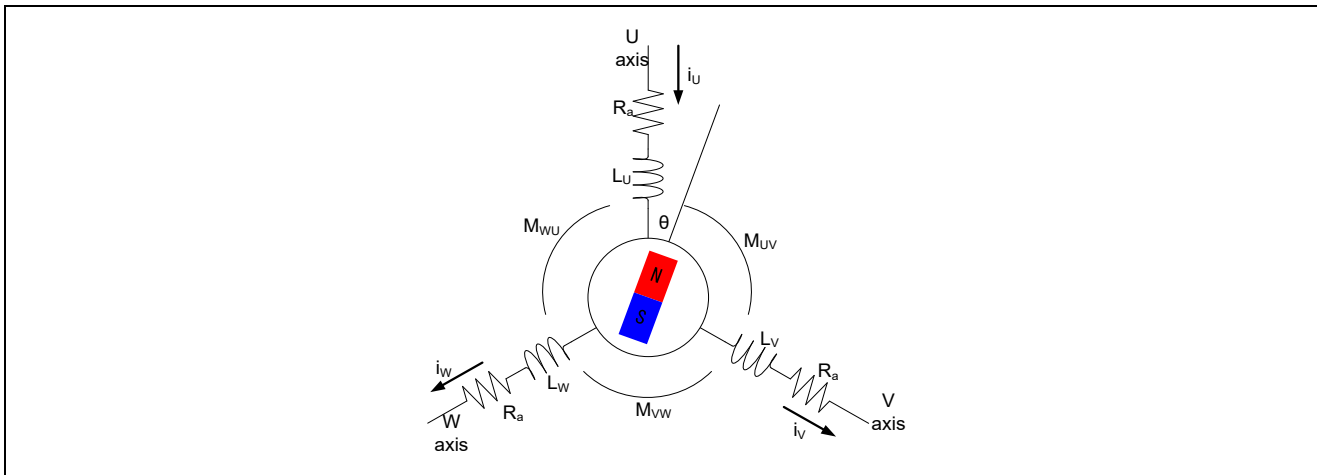


Figure 6-1 Conceptual diagram for a 3-phase permanent magnet synchronous motor

$$\begin{bmatrix} v_u \\ v_v \\ v_w \end{bmatrix} = R_a \begin{bmatrix} i_u \\ i_v \\ i_w \end{bmatrix} + p \begin{bmatrix} \phi_u \\ \phi_v \\ \phi_w \end{bmatrix}$$

$$\begin{bmatrix} \phi_u \\ \phi_v \\ \phi_w \end{bmatrix} = \begin{bmatrix} L_u & M_{uv} & M_{wu} \\ M_{uv} & L_v & M_{vw} \\ M_{wu} & M_{vw} & L_w \end{bmatrix} \begin{bmatrix} i_u \\ i_v \\ i_w \end{bmatrix} + \psi \begin{bmatrix} \cos \theta \\ \cos (\theta - 2\pi/3) \\ \cos (\theta + 2\pi/3) \end{bmatrix}$$

$v_u, v_v, v_w$ : Armature voltages of each phase

$L_u, L_v, L_w$ : Self-inductances of each phase

$i_u, i_v, i_w$ : Armature currents of each phase

$M_{uv}, M_{vw}, M_{wu}$ : Mutual inductance among each phase

$\phi_u, \phi_v, \phi_w$ : Armature interlinkage magnetic flux of each phase

$\psi$ : Maximum value of the armature interlinkage magnetic flux with a permanent magnet

$R_a$ : Armature resistance of each phase

$\theta$ : Lead angle of a permanent magnet (rotor) from the U phase

$p$ : Differential operator

### 6.2 d-q axis model of a permanent magnet synchronous motor

In vector control, the AC 3-phase (u, v, and w) coordinate system is represented as the DC two-phase (d and q) coordinate system. The 3-phase winding wire of the stator is transformed into a two-phase winding wire that rotates in synchronization with the rotor of the permanent magnet. Therefore, it can be treated as two electrically independent DC circuits that are relatively stationary.

In the two-phase (d and q) coordinate system, the d axis is set in the direction of the magnetic flux (to the north pole) of the permanent magnet of the rotor, and the q axis is set at the lead angle ( $\theta$ ) of 90 degrees in the positive direction from the d axis. The following conversion matrix is used to obtain the voltage equation of the permanent magnet synchronous motor seen from the d-q coordinate system.

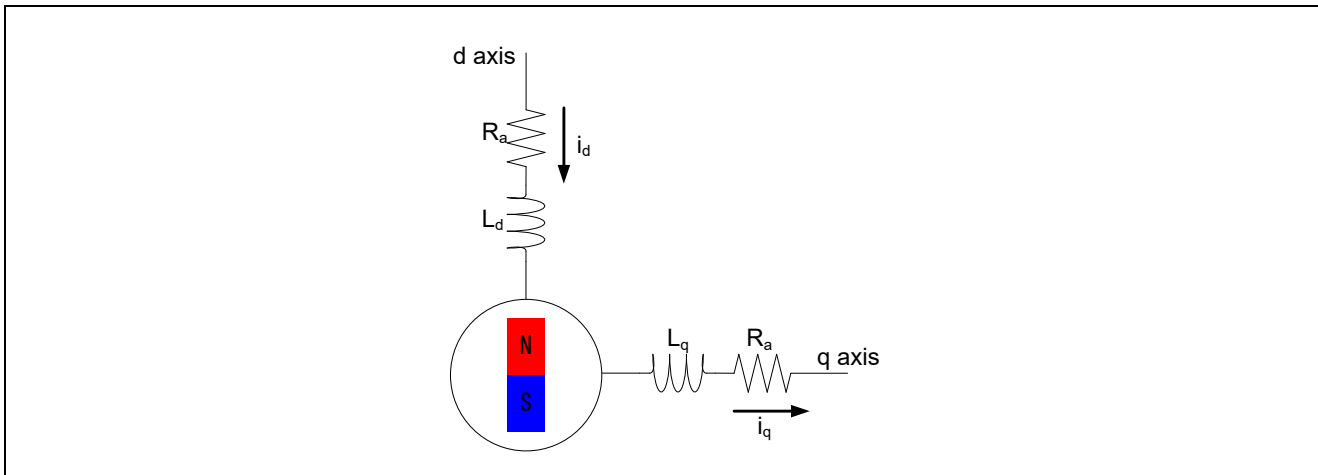


Figure 6-2 Conceptual diagram for a two-phase DC motor

$$C = \sqrt{\frac{2}{3}} \begin{bmatrix} \cos\theta & \cos(\theta - 2\pi/3) & \cos(\theta + 2\pi/3) \\ -\sin\theta & -\sin(\theta - 2\pi/3) & -\sin(\theta + 2\pi/3) \end{bmatrix}$$

$$\begin{bmatrix} v_d \\ v_q \end{bmatrix} = C \begin{bmatrix} v_u \\ v_v \\ v_w \end{bmatrix}$$

From the above shown coordinate transformation, the voltage equation in the d-q coordinate system can be represented as follows:

$$\begin{bmatrix} v_d \\ v_q \end{bmatrix} = \begin{bmatrix} R_a + pL_d & -\omega L_q \\ \omega L_d & R_a + pL_q \end{bmatrix} \begin{bmatrix} i_d \\ i_q \end{bmatrix} + \begin{bmatrix} 0 \\ \omega\psi_a \end{bmatrix}$$

$v_d, v_q$ : Armature voltages of the d and q axes

$L_d, L_q$ : Self-inductances of the d and q axes

$i_d, i_q$ : Armature currents of the d and q axes

$$L_d = l_a + \frac{3(L_a - L_{as})}{2}, L_q = l_a + \frac{3(L_a + L_{as})}{2}$$

$R_a$ : Armature resistance of each phase

$\psi_a$ : Effective value of the armature interlinkage magnetic flux with a permanent magnet

$\omega$ : Angular speed

$$\psi_a = \sqrt{\frac{3}{2}}\psi$$

As above, an alternating current that flows on a stationary two-phase stator can be assumed to be a direct current that flows on a two-phase stator that rotates in synchronization with the permanent magnet of the rotor.

The magnitude of torque generated in the motor is obtained from the cross product of the current vector and armature interlinkage magnetic flux as follows. In the following expression, the first term on the right side is called "magnet torque" and the second term on the right side is called "reluctance torque".

$$T = P_n \{ \psi_a i_q + (L_d - L_q) i_d i_q \}$$

$T$ : Motor torque,  $P_n$ : Number of pole pairs

A motor having no difference in inductance between the d and q axes is called a "motor without saliency". In this case, the torque increases in proportion to the q-axis current because the reluctance torque is 0. Therefore, the q-axis current is sometimes called the "torque current". On the other hand, the d-axis current is sometimes called the excitation current due to the varying magnitude of magnetic flux of the permanent magnet according to d-axis current.

### 6.3 Vector control system and controller

The following shows the example of the block diagram for the overall speed control system.

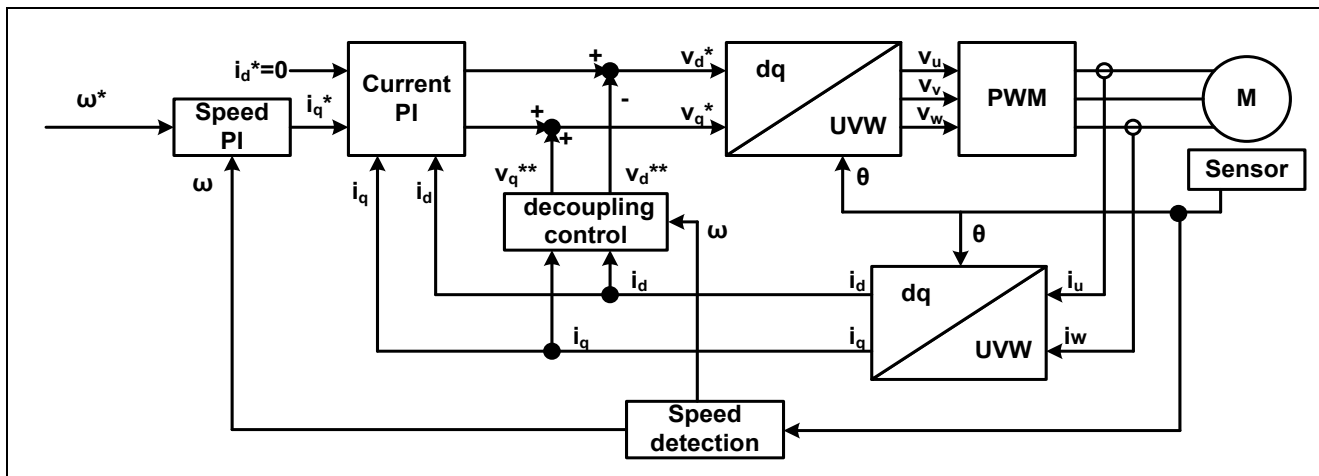


Figure 6-3 System block of vector control (example)

As shown in Figure 6-3, the speed control system consists of the speed control system and current control system. These systems are implemented by using a general PI controller, and the gain of each controller must be designed appropriately in order to achieve the desired control characteristics.

Also, the non-interacting control (decoupling control) in the system block feeds the inductive voltages ( $v_d^{**}$  and  $v_q^{**}$ ), which are generated when the motor rotates, forward to the command voltage of each phase. This achieves a highly responsive speed control system and enables independent control of the d and q axes.


$$v_d^{**} = -\omega L_d i_q$$

$$v_q^{**} = \omega(L_d i_d + \psi_a)$$

### 6.3.1 Design of the current control system

In this section, you model the current control system from a viewpoint of the electrical characteristics of the motor. A stator coil can be represented with the resistance  $R$  and inductance  $L$ . Therefore, the stator model of the motor can be represented as  $\frac{1}{R+Ls}$ , the transfer function of a general RL series circuit.

The controller can be represented using PI control. The current control system can be represented as a feedback control system like the one shown in Figure 6-4.

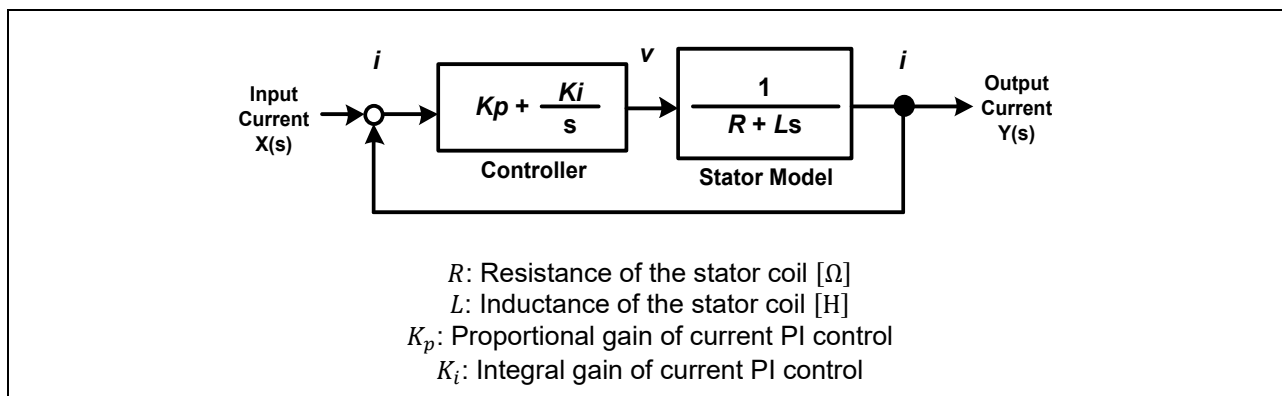

**Figure 6-4 Model of the current control system**

First, design the PI control gains of the current control system on the assumption that the values of  $R$  and  $L$  for the motor stator are known.

The closed-loop transfer function of the current control system can be obtained as follows:

$$G(s) = \frac{Y(s)}{X(s)} = \frac{\frac{K_a}{K_b} \left(1 + \frac{s}{a}\right)}{s^2 + \frac{1}{K_b} \left(1 + \frac{K_a}{a}\right)s + \frac{K_a}{K_b}}$$

$$K_i = K_p a, \quad K_a = \frac{K_p a}{R}, \quad K_b = \frac{L}{R}$$

Also, the general expression of a second-order system having the zero point can be represented as follows:

$$\frac{\omega_n^2}{s^2 + 2\zeta\omega_n s + \omega_n^2} \left(1 + \frac{s}{\omega_z}\right)$$

Additionally, if you perform coefficient comparison between the transfer function of the current control system and the second-order system having the zero point, the relationships shown in the following expressions can be obtained:

$$\frac{\omega_n^2 \left(1 + \frac{s}{\omega_z}\right)}{s^2 + 2\zeta\omega_n s + \omega_n^2} \Leftrightarrow \frac{\frac{K_a}{K_b} \left(1 + \frac{s}{a}\right)}{s^2 + \frac{1}{K_b} \left(1 + \frac{K_a}{a}\right)s + \frac{K_a}{K_b}}$$

$$\omega_n^2 = \frac{K_a}{K_b}, \quad 2\zeta\omega_n = \frac{1}{K_b} \left(1 + \frac{K_a}{a}\right), \quad \omega_z = a$$

From the above, the natural frequency  $\omega_n$ , attenuation coefficient  $\zeta$ , and zero-point frequency  $\omega_z$  can be represented as follows:

$$\omega_n = \sqrt{\frac{K_a}{K_b}}, \quad \zeta = \frac{1}{2K_b \sqrt{\frac{K_a}{K_b}}} \left(1 + \frac{K_a}{a}\right), \quad \omega_z = a = \frac{\omega_n^2 L}{2\zeta\omega_n L - R}$$

From this, the current PI control gains  $K_{p\_current}$  and  $K_{i\_current}$  can be represented by the following expressions:

$$K_{p\_current} = 2\zeta_{CG}\omega_{CG}L - R, \quad K_{i\_current} = K_{p\_current}a = \omega_{CG}^2 L$$

$\omega_{CG}$ : Natural frequency for the current control system

$\zeta_{CG}$ : Attenuation coefficient for the current control system

Therefore, it is found that the PI control gains of the current control system can be designed with  $\omega_{CG}$  and  $\zeta_{CG}$ .

### 6.3.2 Design of the speed control system

In this section, you model the speed control system from a viewpoint of the electrical characteristics of the motor. From the motion equation of the rotation system, the torque expression of the mechanical system can be represented by the following expression:

$$T = J\dot{\omega}_{mech}$$

$J$ : Rotor inertia,  $\omega_{mech}$ : Mechanical angular speed

On the other hand, the torque expression of the electrical system can be represented by the following expression if only the magnet torque is considered:

$$T = P_n\psi_a i_q$$

By using the above two torque expressions (of the mechanical and electrical systems), the mechanical angular speed can be represented by the following expression:

$$\omega_{mech} = \frac{P_n\psi_a}{sJ} i_q$$

$\omega_{mech}$ : Mechanical angular speed

Therefore, this is the motor model in the speed control system. Also, the controller can be represented using PI control. The speed control system can be represented as a feedback control system like the one shown in Figure 6-5.

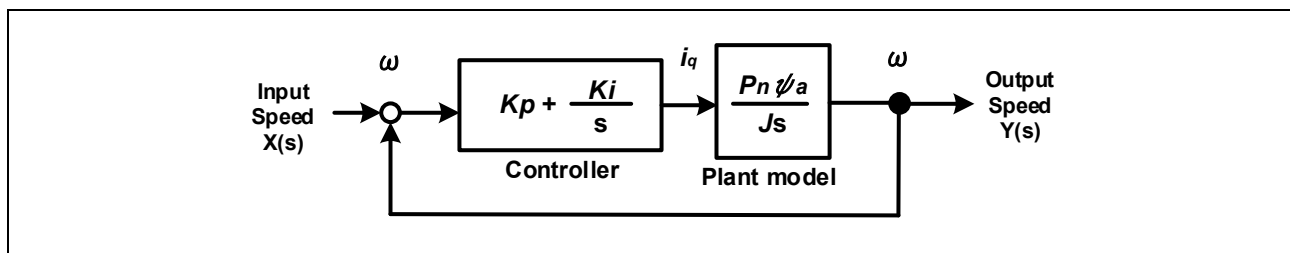


Figure 6-5 Model of the speed control system

Here, you set the PI control gains of the speed control system on the assumption that the motor parameter  $P_n, \psi, J$  is known. First, obtain the transfer function of the system.

The closed-loop transfer function of the speed control system can be obtained as follows:

$$G(s) = \frac{Y(s)}{X(s)} = \frac{K_b a \left(1 + \frac{s}{a}\right)}{s^2 + K_b s + K_b a}$$

$$K_b = \frac{K_p P_n \psi}{J}, \quad K_i = K_p a$$

Also, the general expression of a second-order system having the zero point can be represented as follows:

$$\frac{\omega_n^2}{s^2 + 2\zeta\omega_n s + \omega_n^2} \left(1 + \frac{s}{\omega_z}\right)$$

In the same way as for the current control system, if you perform coefficient comparison between the transfer function of the speed control system and the second-order system having the zero point, the relationships shown in the following expressions can be obtained:

$$\frac{\omega_n^2 (1 + s/\omega_z)}{s^2 + 2\zeta\omega_n s + \omega_n^2} \Leftrightarrow \frac{aK_b \left(1 + \frac{s}{a}\right)}{s^2 + K_b s + aK_b}$$

$$\omega_n^2 = aK_b = \frac{K_p a P_n \psi a}{J}, \quad 2\zeta\omega_n = K_b = \frac{K_p P_n \psi a}{J}, \quad \omega_z = a$$

From the above, the natural frequency  $\omega_n$ , attenuation coefficient  $\zeta$ , and zero-point frequency  $\omega_z$  can be represented as follows:

$$\omega_n = \sqrt{\frac{K_p a P_n \psi a}{J}}, \quad \zeta = \frac{1}{2} \sqrt{\frac{K_p P_n \psi a}{aJ}}, \quad \omega_z = a = \frac{\omega_n}{2\zeta}$$

From this, the PI control gains  $K_{p\_speed}, K_{i\_speed}$  can be represented by the following expressions:

$$K_{p\_speed} = \frac{2\zeta_{SG}\omega_{SG}J}{P_n\psi_a}, \quad K_{i\_speed} = K_{p\_speed} * a = \frac{\omega_{SG}^2 J}{P_n\psi_a}$$

$\omega_{SG}$ : Natural frequency for the speed control system

$\zeta_{SG}$ : Attenuation coefficient for the speed control system

Therefore, it is found that the PI control gains of the speed control system can be designed with  $\omega_{SG}$  and  $\zeta_{SG}$ .

### 6.4 Control block diagram

Figure 6-6 shows the control block diagram of sensorless vector control that uses the inductive voltage observer during open-loop control.

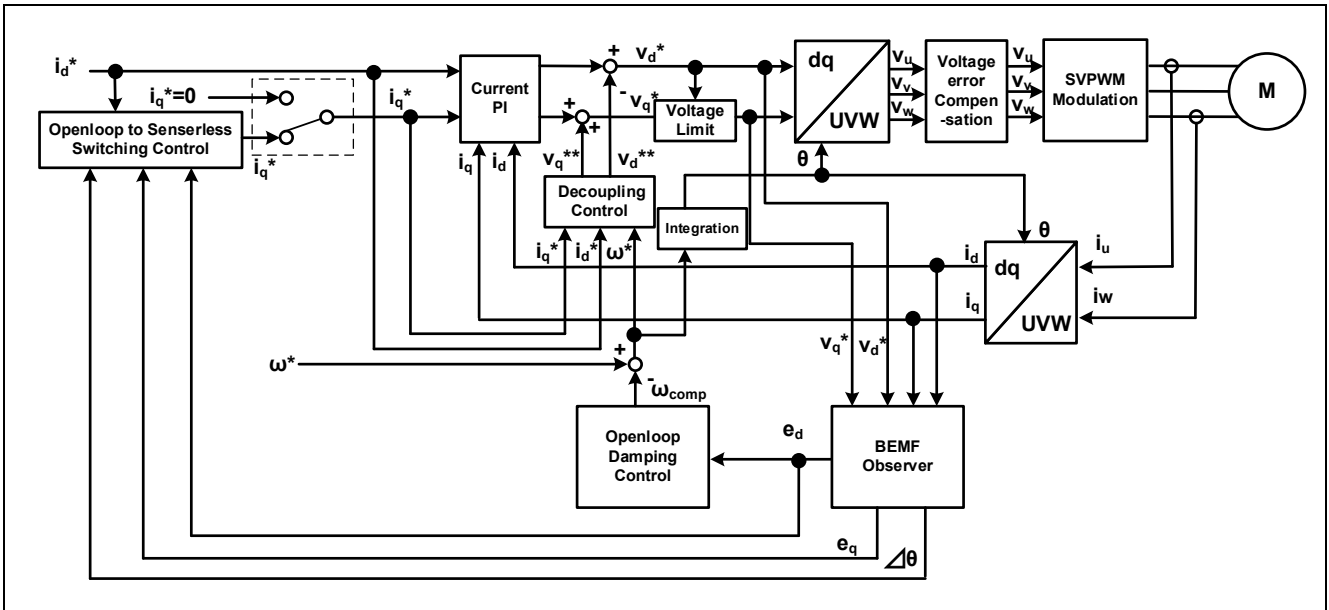


Figure 6-6 Control block diagram of sensorless vector control (during open-loop control)

Figure 6-7 shows the control block diagram of sensorless vector control that uses the inductive voltage observer during sensorless control (speed closed-loop control).

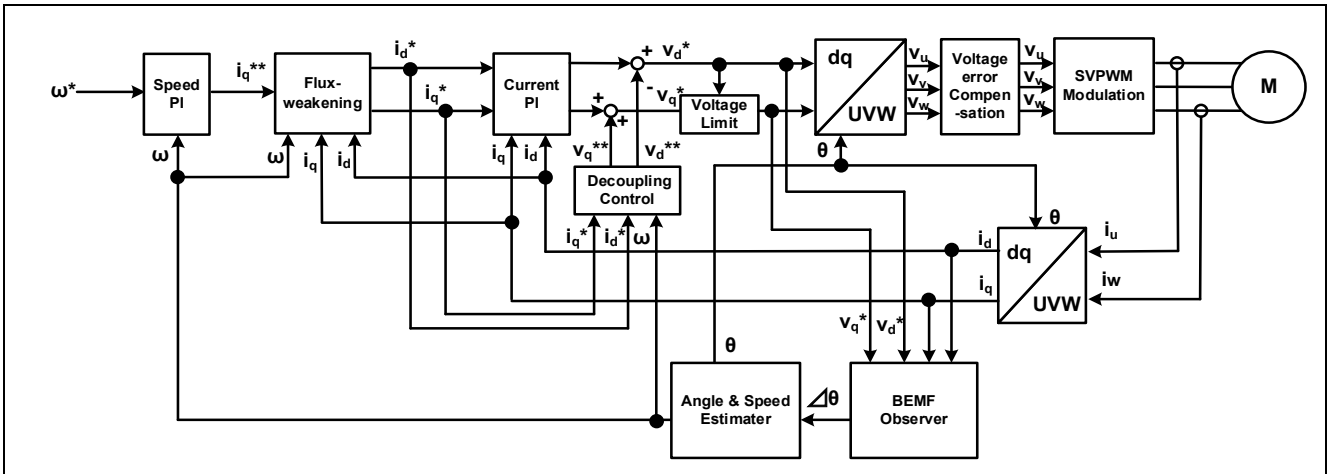


Figure 6-7 Control block diagram of sensorless vector control (during sensorless control)

## 7. Test results

The test results shown in this chapter are reference values measured in the 2.1 Operation check environment.

### 7.1 Program size

Table 7-1 and Table 7-2 shows the size of the sample program. In the optimization settings of the compiler, the optimization level is set to 2 (-optimize = 2) and the optimization method is set to the one that is code-size oriented (-size).

**Table 7-1 Program size (2 shunt detection)**

Memory	Size		
	RX26T RAM64KB Version	RX26T RAM48KB Version	RX14T
ROM	23.7 KB	23.7 KB	21.1 KB
RAM	9.6 KB	9.6 KB	5.7 KB
Maximum value of stack analysis result	324 B	324 B	228 B
Stack size setting value	5120 B	5120 B	1536 B

**Table 7-2 Program size (1 shunt detection)**

Memory	Size		
	RX26T RAM64KB Version	RX26T RAM48KB Version	RX14T
ROM	24.5 KB	24.4 KB	21.8 KB
RAM	9.6 KB	9.6 KB	5.8 KB
Maximum value of stack analysis result	328 B	328 B	232 B
Stack size setting value	5120 B	5120 B	1536 B

## 7.2 CPU loading rate

Table 7-3 and Table 7-4 shows the CPU processing time and loading rate for each control interval.

**Table 7-3 Control loop and CPU loading rate (2 shunt detection)**

CPU Board	Control loop type	Control interval	Processing time	CPU loading rate
RX26T RAM64KB Version	Current control loop	50 $\mu$ s (no decimation)	14.5 us	29.0 %
	Speed control loop	500 us	3.1 us	0.8 %
RX26T RAM48KB Version	Current control loop	50 $\mu$ s (no decimation)	14.5 us	29.0 %
	Speed control loop	500 us	3.1 us	0.6 %
RX14T	Current control loop	100 $\mu$ s (1 decimation)	32.8 us	32.8 %
	Speed control loop	1 ms	10.0 us	1.0 %

**Table 7-4 Control loop and CPU loading rate (1 shunt detection)**

CPU Board	Control loop type	Control interval	Processing time	CPU loading rate
RX26T RAM64KB Version	Current control loop	50 $\mu$ s (no decimation)	16.5 us	33.0 %
	Speed control loop	500 us	3.1 us	0.6 %
RX26T RAM48KB Version	Current control loop	50 $\mu$ s (no decimation)	16.7 us	33.4 %
	Speed control loop	500 us	3.1 us	0.6 %
RX14T	Current control loop	100 $\mu$ s (no decimation)	38.0 us	38.0 %
	Speed control loop	1 ms	10.2 us	1.0 %


### 7.3 Operation waveforms

For reference, a waveform observed during control using the sample program is provided from the results of tests using sensors. The waveform shown is the one seen when the motor rotates at a steady speed of 2,000 rpm during speed control.

**Table 7-5 Measurement conditions**

Item	Value	Remarks
Frequency for the current control system	300 [Hz]	
Attenuation coefficient for the current control system	1	
Frequency for the speed control system	3 [Hz]	
Attenuation coefficient for the speed control system	1	
Speed	2000 [rpm]	
Load	—	Conducted at no load.

Figure 7-1 shows the results of testing speed control.

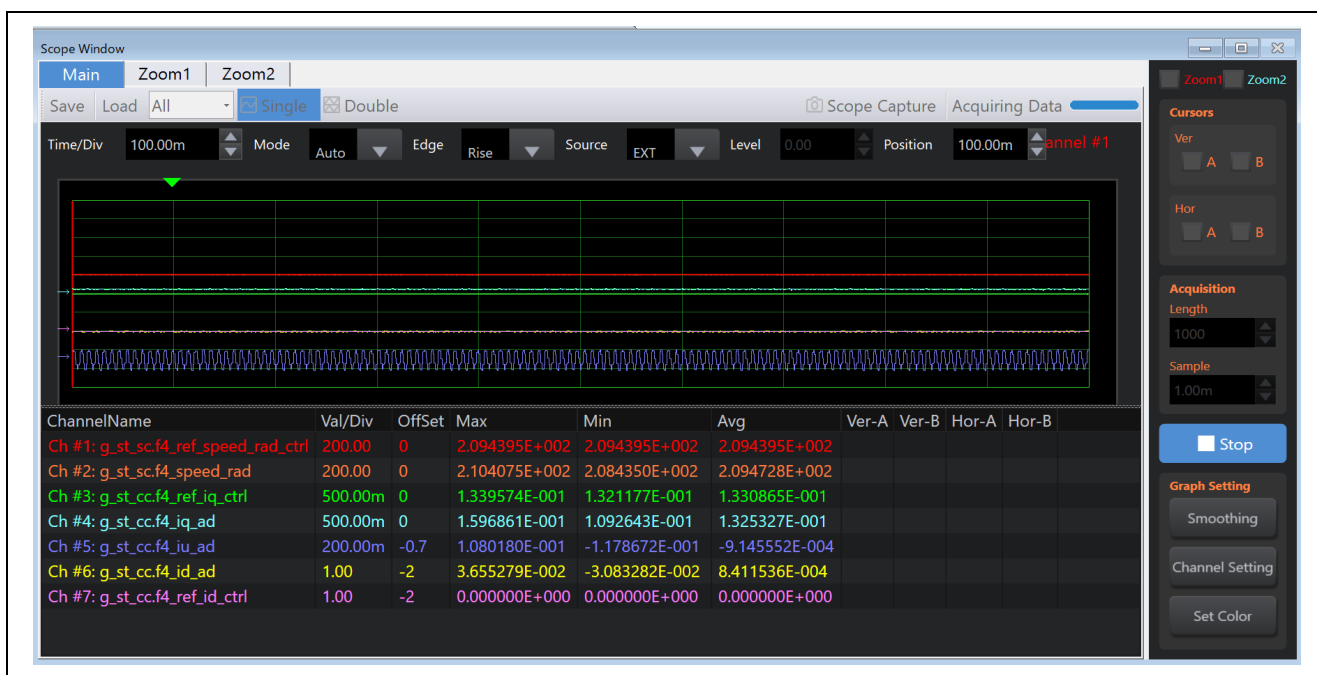

**Figure 7-1 Speed control using sensorless vector control**

Drive condition:

Rotation speed: Speed command 2000 [rpm]

Waveform information:

- Yellow: Detected speed [rad/s] (200 rad/s / div.)
- Orange: Instructed speed [rad/s] (200 rad/s / div.)
- Red: q-axis current command value [A] (500 mA / div.)
- Purple: q-axis current value [A] (500 mA / div.)
- Pink: d-axis current command value [A] (1 A / div.)
- White: d-axis current value [A] (1 A / div.)
- Light green: U-phase current [A] (200 mA / div.)
- Horizontal axis: 100 ms / div.

## 8. Reference materials

- Renesas Motor Workbench User's Guide (R21UZ0004)
- MCK-RX26T User's Manual (R12UZ0111)
- MCK-RX14T User's Manual (R12UZ0192)
- Smart Configurator User's Manual -- RX API Reference (R20UT4360)
- RX Smart Configurator User Guide -- CS+ (R20AN0470)
- RX Smart Configurator User Guide -- e<sup>2</sup> studio (R20AN0451)
- RX26T Group User's Manual: Hardware (R01UH0979)
- RX14T Group User's Manual: Hardware (R01UH1126)
- MCB-RX26T Type A User's Manual(R12UZ0112)
- MCB-RX26T Type C User's Manual(R12UZ0127)
- MCB-RX14T User's Manual(R12UZ0191)

**Revision History**

Rev.	Date of issue	Amendments	
		Page	Point
1.00	May.30.23	—	First edition issued
1.10	Aug.29.23	—	Additional target device (R5F526TACDFM)
1.11	Jun.30.25	P1	Target software version upgrade
		P5	Table 2-1 and Table 2-2 updated
		P7	Addition of Section 2.2.2
		P8	Addition of Section 2.2.3
		P10	Added description of JP11 settings
		P13, P13, P14, P16	Correction of typos
1.20	Jan.30.26	—	Additional target device (R5F514T5AGFM)

## General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

### 1. Precaution against Electrostatic Discharge (ESD)

A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity.

Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.

### 2. Processing at power-on

The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.

### 3. Input of signal during power-off state

Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.

### 4. Handling of unused pins

Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.

### 5. Clock signals

After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.

### 6. Voltage application waveform at input pin

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between  $V_{IL}$  (Max.) and  $V_{IH}$  (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between  $V_{IL}$  (Max.) and  $V_{IH}$  (Min.).

### 7. Prohibition of access to reserved addresses

Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not guaranteed.

### 8. Differences between products

Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.
  - "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.
  - "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.
7. Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
8. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
9. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
10. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
11. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
12. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
13. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
14. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
15. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

## Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,  
Koto-ku, Tokyo 135-0061, Japan  
[www.renesas.com](http://www.renesas.com)

## Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

## Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:  
[www.renesas.com/contact/](http://www.renesas.com/contact/).