

Vector control for permanent magnetic synchronous motor with encoder - AB incremental type encoder

For Renesas Flexible Motor Control Series

Introduction

This application note describes the sample program to drive a permanent magnetic synchronous motor with vector control using encoder based on Renesas microcontroller.

The targeted software for this note is only to be used for reference purposes and Renesas Electronics Corporation does not guarantee the operations. Please use this after carrying out a thorough evaluation in a suitable environment.

Contents

1. Introduction.....	5
2. Glossary	7
3. Used hardware and software.....	8
3.1 List of used hardware	8
3.2 List of used software	8
4. Building a hardware environment.....	9
4.1 Overview : Hardware environments	9
4.2 Preparing the power supply.....	9
4.3 Preparing the inverter.....	10
4.4 Setting up the RA series CPU board.....	10
4.5 Connection example of kit	13
4.6 Encoder connection.....	14
4.7 Hall sensor connection	15
4.8 On board debugger	15
4.9 Wiring	16
5. Environment to build the sample software.....	17
6. Driving the motor	18
6.1 Precautions before driving the motor	18
6.2 Connecting	18
6.3 Writing the sample program	23
6.3.1 Install e ² studio	23
6.3.2 Import a project	23
6.3.3 Build the target project	27
6.3.4 Connection between PC and the target CPU board via an USB cable	29

6.3.5	Writing to the target board (with built program).....	30
6.4	Introducing RMW.....	32
6.5	Registering and updating the Map file.....	33
6.6	Variables used for working with RMW	34
6.7	Controlling the motor	36
6.8	Stopping and shutting down the motor.....	38
7.	Motor control algorithm.....	39
7.1	Overview.....	39
7.2	Control block diagram	40
7.3	Speed control function.....	41
7.4	Current control function	41
7.5	Decoupling control.....	42
7.6	Detection of rotation speed	43
7.6.1	Calculation of angle/speed at encoder input capture interrupt (using pulse width)	43
7.6.2	Calculation of angle/speed at current control interrupt (using pulse counts)	43
7.6.3	Calculation of angle/speed at speed control interrupt (using pulse width).....	44
7.7	Method of start up	45
7.7.1	Start up with forced excitation using encoder signal	45
7.7.2	Startup with using hall sensors	46
7.8	Generation of position reference (Position Profile of Trapezoidal Curve for Speed Command Value)	48
7.9	Flux weakening control function.....	49
7.10	Voltage phase lead compensation	50
7.11	Voltage error compensation	50
7.12	Pulse Width Modulation (PWM) mode	51
8.	Hardware specifications	52
8.1	User interface	52
8.2	Peripheral functions.....	54
9.	Software specifications and configuration	56
9.1	Software specifications.....	56
9.2	Overall configuration of the software.....	57
9.3	Explanation about interrupt	58
9.4	File and folder configuration	59
9.5	Application layer	62
9.5.1	Functions.....	62
9.5.2	Configurations	62
9.5.3	Structure and variable information	63
9.5.4	Macro definition	65
9.6	Interface Module.....	68

9.6.1	Functions.....	68
9.6.2	Module configuration diagram.....	69
9.6.3	State transition	70
9.6.4	Protection function.....	71
9.6.5	API.....	72
9.6.6	Structure and variable information	73
9.6.7	Macro and enumeration definition	75
9.7	Speed Control Module.....	78
9.7.1	Functions.....	78
9.7.2	Module configuration diagram.....	78
9.7.3	API.....	79
9.7.4	Structure and variable information	80
9.7.5	Macro and enumeration definition	87
9.8	Current Control Module	90
9.8.1	Functions.....	90
9.8.2	Module configuration diagram.....	90
9.8.3	API.....	91
9.8.4	Structure and variable information	92
9.8.5	Macro and enumeration definition	98
9.9	Position Control Module	100
9.9.1	Functions.....	100
9.9.2	Module configuration diagram.....	100
9.9.3	API.....	101
9.9.4	Structure and variable information	102
9.9.5	Macro and enumeration definition	105
9.10	Driver Module	106
9.10.1	Functions.....	106
9.10.2	Module configuration diagram.....	106
9.10.3	API.....	107
9.10.4	Structure and variable information	108
9.10.5	Macro and enumeration definition	114
9.11	Detection of Angle/Speed Module.....	116
9.11.1	Functions.....	116
9.11.2	Module configuration diagram.....	116
9.11.3	API.....	117
9.11.4	Structure and variable information	118
9.11.5	Macro and enumeration definition	123
10.	Setting the parameters	125
10.1	Overview.....	125
10.2	List of Interface module parameters.....	125

10.3	List of Speed control module parameters	126
10.4	List of Current control module parameters	130
10.5	List of Position module parameters	133
10.6	List of Driver module parameters	136
10.7	List of Detect speed and angle module parameters	141
10.8	Parameters about protection function	144
10.9	Changing the PWM carrier frequency	144
10.10	modulation method	144
10.11	Parameters for inverter	145
10.11.1	Deadtime	145
10.11.2	Current detection gain	145
10.11.3	Voltage detection gain	145
10.11.4	Voltage error compensation parameters	146
10.12	Motor parameters	147
10.13	Parameters for current control	149
10.14	Parameters for speed control	149
10.15	Parameters for sample delay compensation	149
11.	Control flowcharts	150
11.1	Main process	150
11.2	Current Control Period Interrupt Process	151
11.3	Speed control Period Interrupt Process	152
11.4	Over Current Detection Interrupt Process	153
11.5	Encoder input capture interrupt	154
12.	FAQ	155
12.1	Troubleshooting	155
12.2	Frequently asked questions	156
12.2.1	The value of a variable displayed in RMW is abnormal.	156
	Revision History	157

1. Introduction

This application note explains how to implement the vector control software that drives permanent magnetic synchronous motor using the microcontroller (MCU) Renesas RA series. This sample program can drive a motor with the electrical kit 'Renesas Flexible Motor Control Series'. And, this program supports the motor control development support tool, 'Renesas Motor Workbench'. User can confirm the parameters of program with this tool and can use as User Interface to control motor driven. Please consider selecting which MCU or develop your program with refer to the period of interrupt process.

This sample program supports 'QE for Motor'. Please use the workflow to develop motor software simply by following the steps.

Target software

The following shows the target software for this application note:

- RA6T2_MCILV1_SPM_ENCD_FOC_E2S_V121
- RA6T2_MCB2_MCILV1_SPM_ENCD_FOC_E2S_V100
- RA6T3_MCILV1_SPM_ENCD_FOC_E2S_V111
- RA4T1_MCILV1_SPM_ENCD_FOC_E2S_V111
- RA8T1_MCILV1_SPM_ENCD_FOC_E2S_V111
- RA8T2_MCILV1_SPM_ENCD_FOC_E2S_V101

Reference materials

RA6T2 Group User's Manual: Hardware (R01UH0951)

RA6T3 Group User's Manual: Hardware (R01UH0998)

RA4T1 Group User's Manual: Hardware (R01UH0999)

RA8T1 Group User's Manual: Hardware (R01UH1016)

RA8T2 Group User's Manual: Hardware (R01UH1067)

RA Flexible Software Package Documentation (Release v6.2.0)

Application note: 'Encoder vector control for permanent magnet synchronous motor (Algorithm)' (R01AN3789)

Renesas Motor Workbench User's Manual (R21UZ0004)

Renesas Motor Workbench Quick start guide (R21QS0011)

MCK-RA6T2 User's Manual (R12UZ0091)

MCK-RA6T3 User's Manual (R12UZ0114)

MCK-RA4T1 User's Manual (R12UZ0115)

MCK-RA8T1 User's Manual (R12UZ0133)

MCK-RA8T2 User's Manual (R12UZ0172)

The following shows a summary of the items that you should check carefully when using this application note and the corresponding chapter for each.

Table 1-1 List of items to be checked and the corresponding chapters

Items to be checked	Corresponding chapter
Identify and select necessary environments	3
Confirm the wiring	4.9
Prepare a software development environment	5
Write the sample program to MCU	6.3
Install software for operating the motor on the PC.	6.4
Modify the sample program, and then reflect the changes in RMW	6.5
Drive the motor	6.7
Stop the motor	6.8
Examine the motor control algorithms	7
Examine the structure of the sample program	8
Verify and change the motor parameters	10.12
Changing the PWM carrier frequency	10.9
Change the control parameters	10.13, 10.14
Check the frequently asked questions	12
Check the troubleshooting tips	

2. Glossary

The following lists the main terms used in this document and their descriptions.

Table 2-1 Glossary

Term	Description
MC-COM	Refers to a set of communication jigs and tools for displaying waveforms. For details, refer to the following URL. https://www.renesas.com/design-resources/boards-kits/mc-com
RMW	Refers to Renesas Motor Workbench, which is the GUI operation software on PC specifically designed for motor control.
QE for Motor	QE for Motor is a software development support tool for motors that allows you to develop motor software by simply following the workflow. For details, refer to the following URL. https://www.renesas.com/software-tool/qe-motor-development-assistance-tool-motor-applications
Inverter bus voltage	Refers to the DC voltage fed to the inverter circuit. Also called DC intermediate voltage.
Open loop	Refers to a motor control technique that does not need current or position feedback signals to control the voltage.
Sensorless	In this document, this is used to indicate that there is no magnetic pole position sensor or speed sensor. Omitting the sensors is considered as an advantage because the position sensors and speed sensors present disadvantages in terms of cost and environmental robustness.
Electrical angle	Phase angle of the output current flowing in the motor. It can be converted to a mechanical angle by dividing it by the number of pole pairs of the motor.
Mechanical angle	Refers to the physical rotation angle of the motor axis. One rotation of the axis per minute is 1rpm.

3. Used hardware and software

3.1 List of used hardware

The following lists the hardware devices used for evaluating this sample program.

Table 3-1 Development Environment : Hardware

Category	Product used
Microcontroller / CPU board product type	RA6T2 (R7FA6T2BD3CFP) / MCB Ver.1 RTK0EMA270C00000BJ RA6T2 (R7FA6T2BD3CFP) / MCB Ver.2 RTK0EMA270C00002BJ RA6T3 (R7FA6T3BB3CFM) / RTK0EMA330C00000BJ RA4T1 (R7FA4T1BB3CFM) / RTK0EMA430C00000BJ RA8T1 (R7FA8T1AHECBD) / RTK0EMA5K0C00000BJ RA8T2 (R7KA8T2LFLCAC) / RTK0EMA6L0C00000BJ
Inverter board	MCI-LV-1 Inverter board / RTK0EM0000B12020BJ
Motor	BLY171D-24V-4000 (Product of 'Anaheim Automation')
Encoder	AMT102-V (Product of 'Same Sky')

3.2 List of used software

The following lists the software and its version used for evaluating this sample program. This sample program can be used within limitations of our development environment e² studio evaluation edition.

Table 3-2 Software Development Environment

e ² studio version	FSP version	Toolchain version
e ² studio : 2025-10	V6.2.0	GCC ARM Embedded :13.2.1.arm-13-7

4. Building a hardware environment

4.1 Overview : Hardware environments

This section describes hardware environments in which an SPM motor is operated using this sample program. Figure 4-1 shows an example of hardware configuration.

In the sections that follow, the power supply (4.2), the inverter (4.3), the CPU boards(4.4) and the on board debugger (4.8) are described in detail.

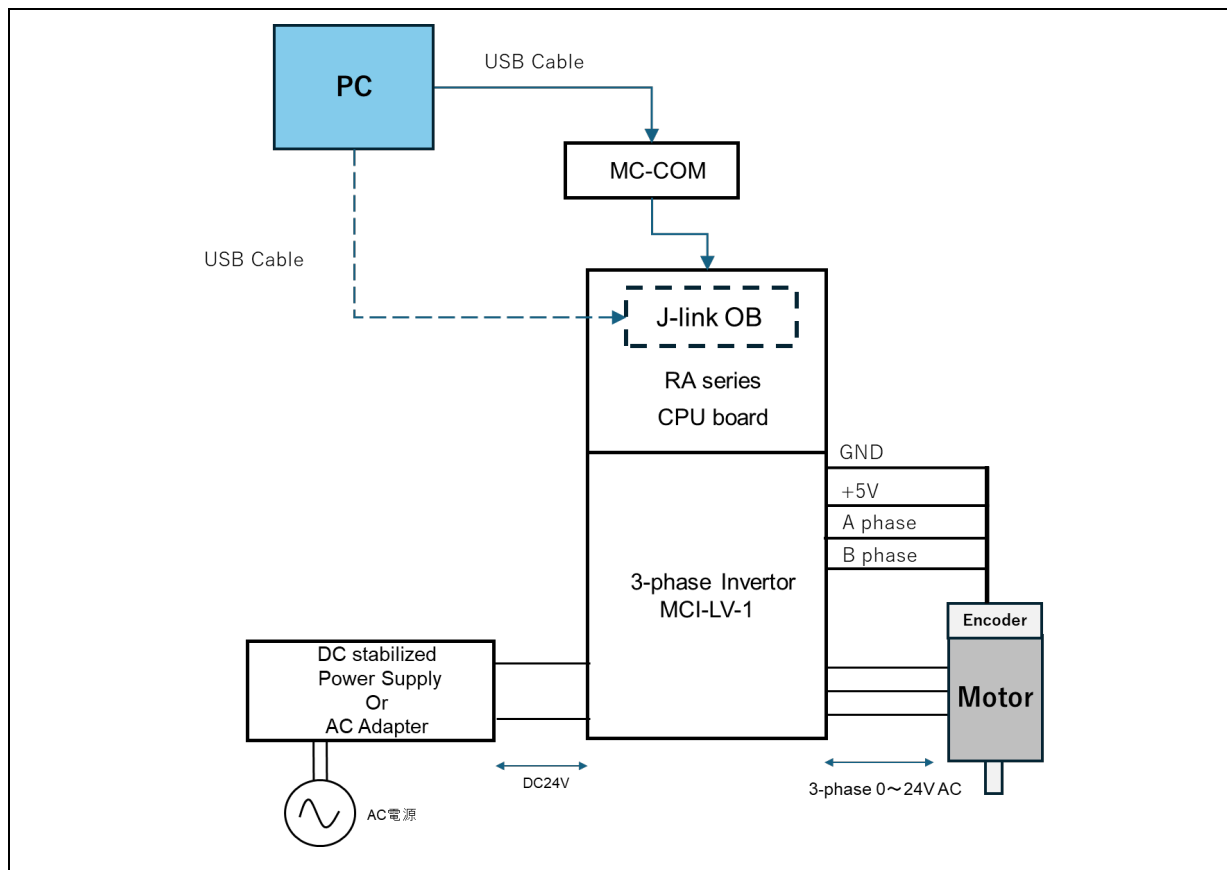


Figure 4-1 Example of hardware configuration

4.2 Preparing the power supply

In this sample program, DC stabilized power supply/AC adapter/a control power supply (capable of output of 24V, 2.5A or more) is used to supply a voltage of 24 VDC to the 3-phase inverter MCI-LV-1.

The voltage supplied to the inverter varies depending on the inductive voltage, rating conditions, maximum load conditions of the motor to be used. Please select an appropriate type of power supply based on your experimental environment and restrictions and conditions of AC power supply to be used.

The inverter introduced here has an output current of 10 A max.

4.3 Preparing the inverter

When preparing your inverter, note the following information: This sample program is configured for MCI-LV-1 and must be changed if you use another inverter.

- Rated capacity (VA)
- Dead time value [μ s]
- Type, characteristics, and signal specifications of the current sensor
- Characteristic data of the current sensor, including gain and offset values, the relationship between the current and voltage, and linearity of the signals
- Characteristic data of the voltage sensor, including the relationship between the current and voltage and linearity of the signals

4.4 Setting up the RA series CPU board

This section describes how to install the RA series CPU board, which can be plugged in MCI-LV-1 directly.

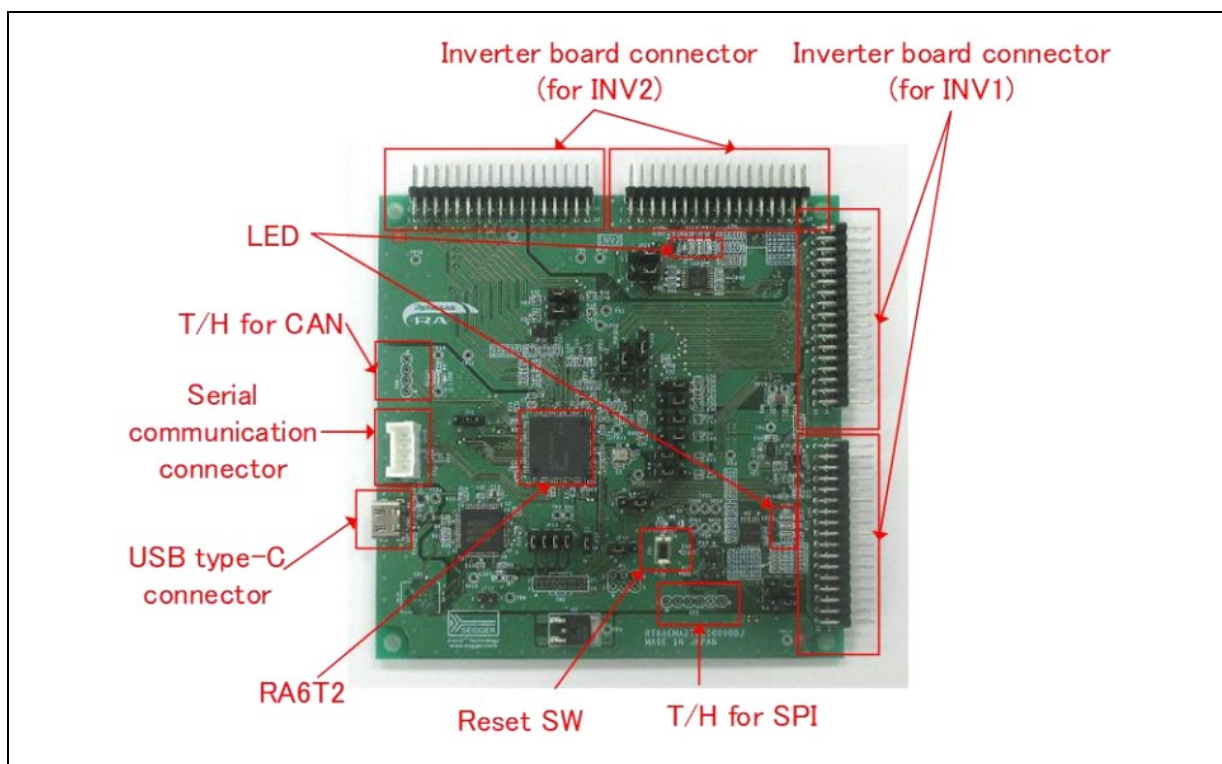


Figure 4-2 RA6T2 CPU board and its interface

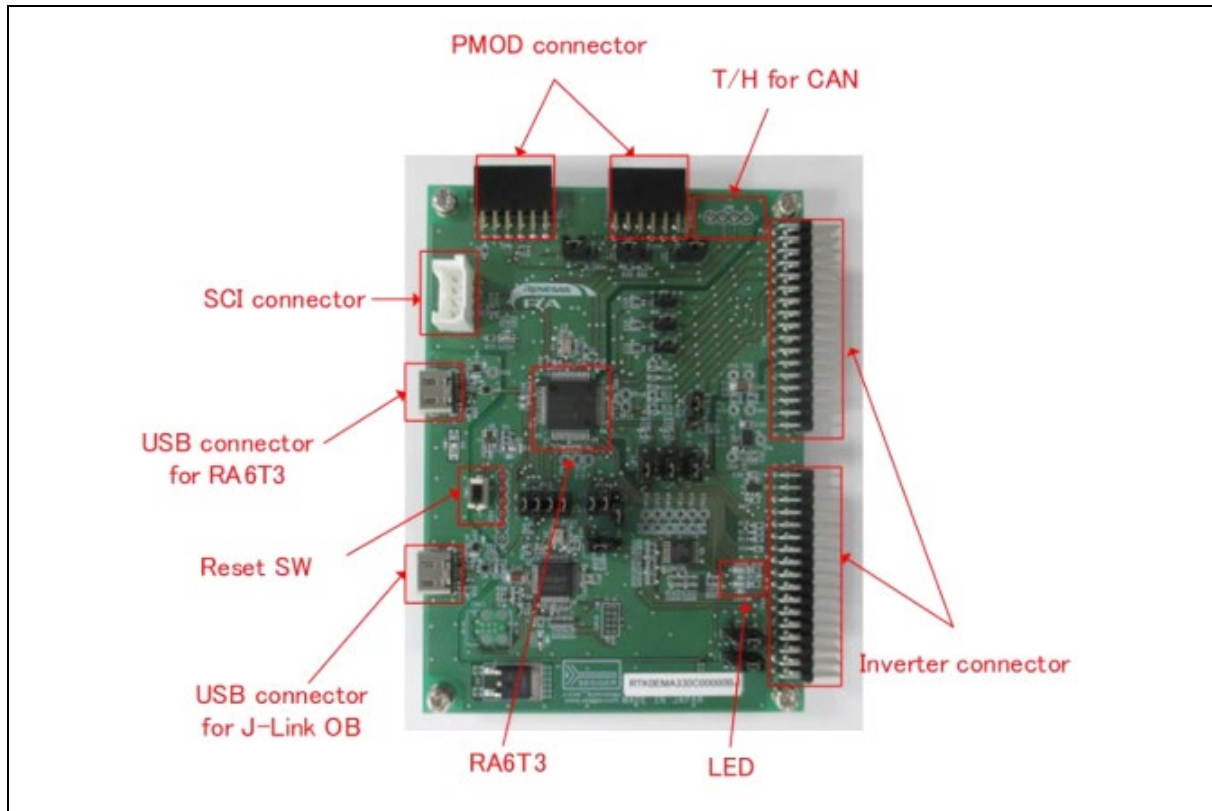


Figure 4-3 RA6T3 CPU board and its interface

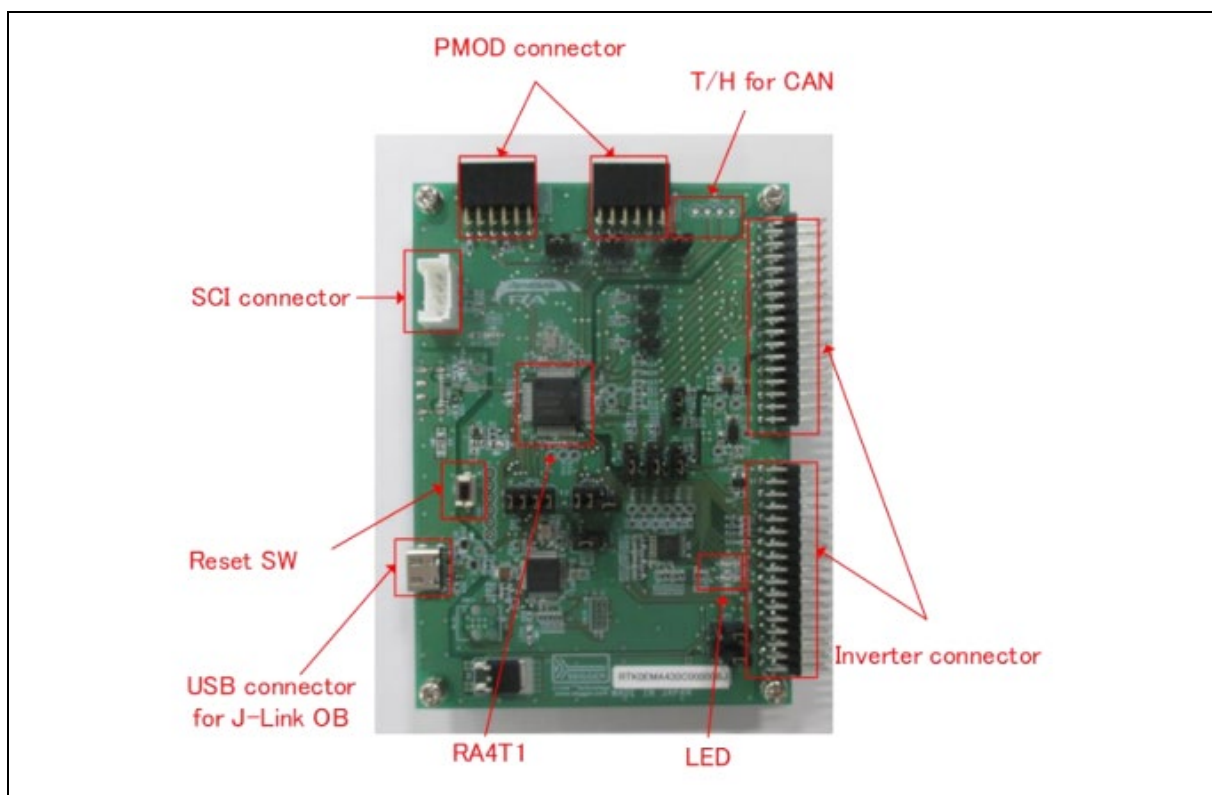


Figure 4-4 RA4T1 CPU board and its interface

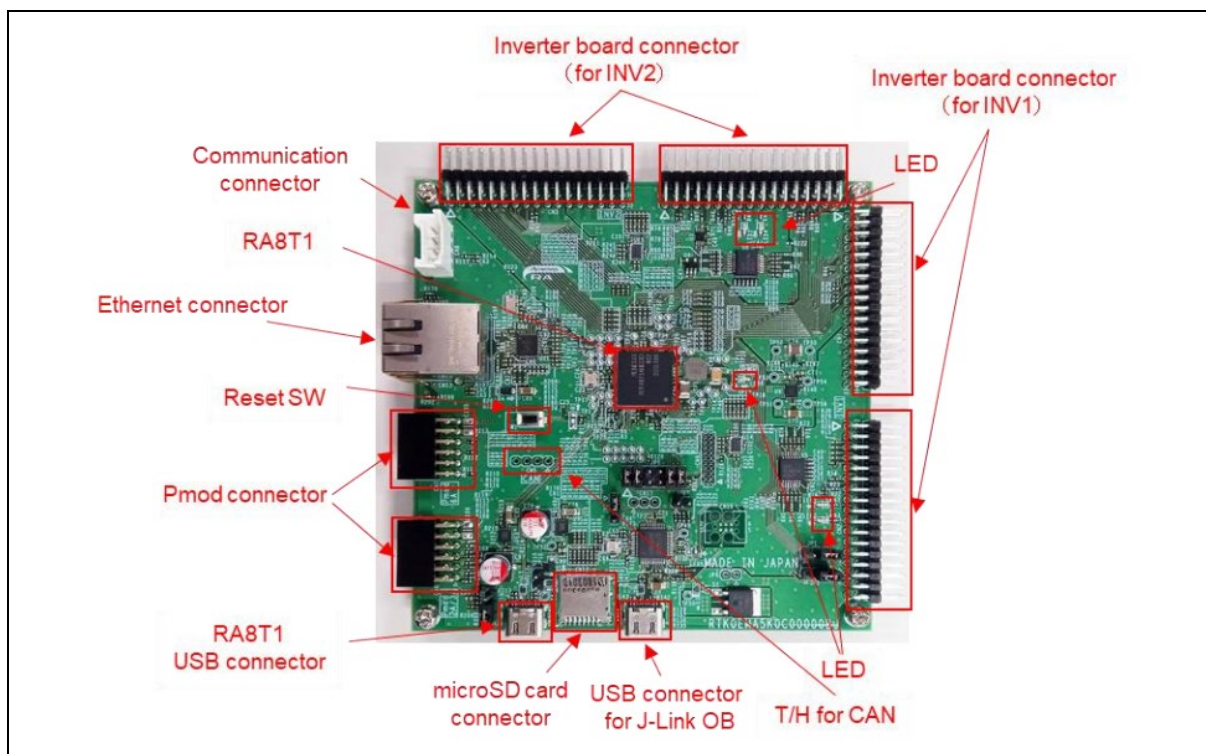


Figure 4-5 RA8T1 CPU board and its interface

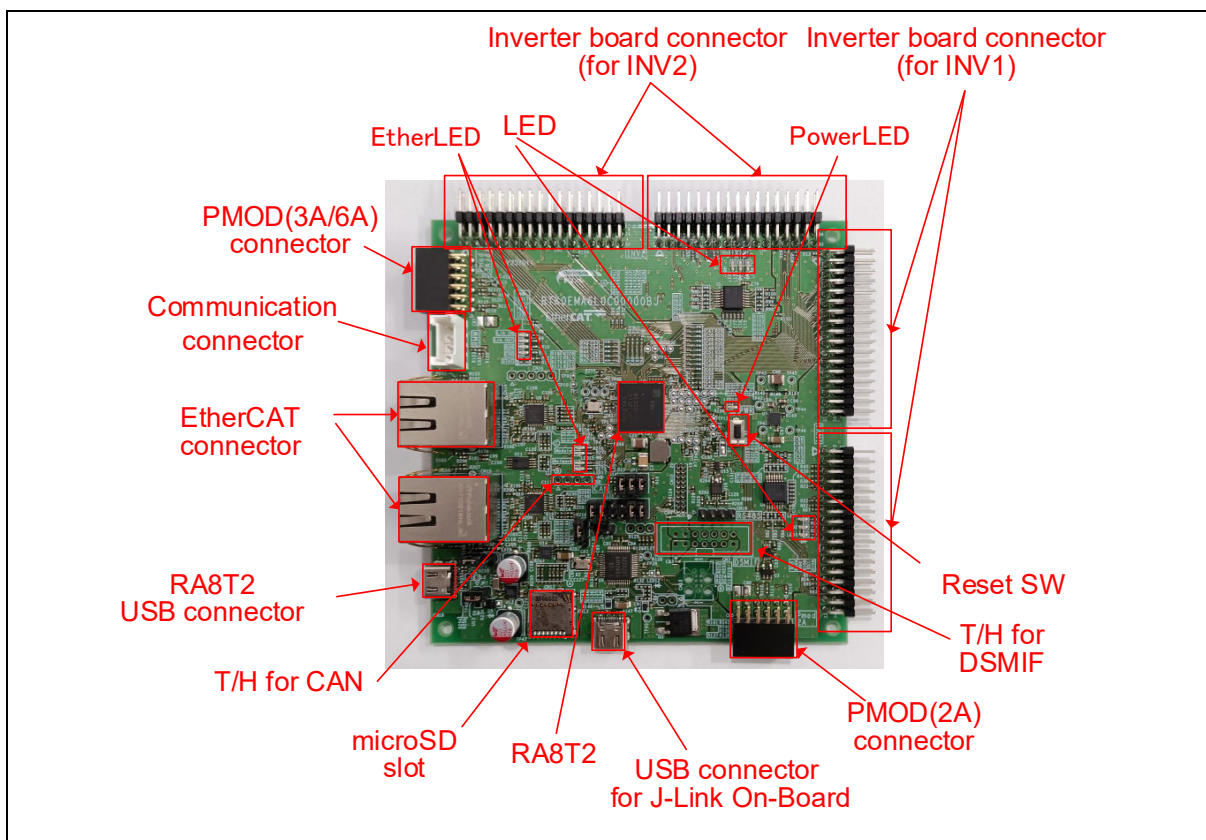


Figure 4-6 RA8T2 CPU board and its interface

4.5 Connection example of kit

Figure 4-7 shows an example of the connection of a CPU board in combination with an inverter board kit (MCI-LV-1) and a communication board kit (MC-COM, model name: RTK0EMXC90Z00000BJ).

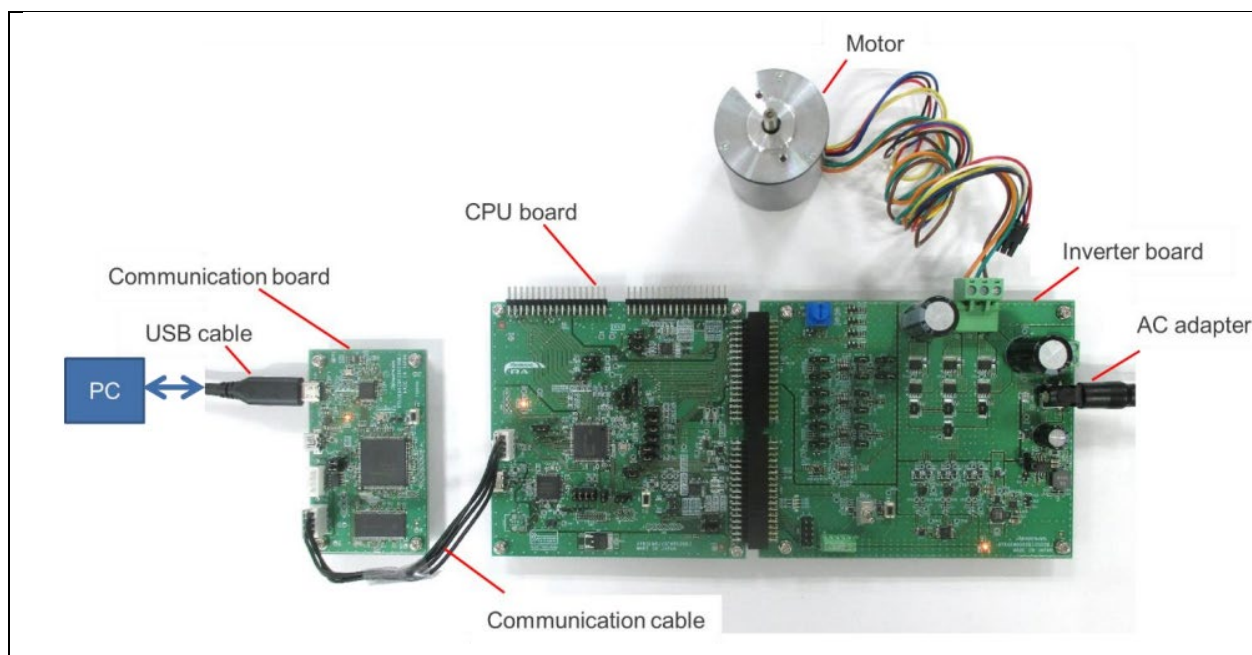


Figure 4-7 Connection example of kit

4.6 Encoder connection

Connect the encoder cable and the ENC/IPS connector (Figure 4-8) as shown in Table 4-1.

Table 4-1 Interface

Function	MCI-LV-1
+5V	CN5 2pin
Encoder A phase	CN5 6pin
Encoder B phase	CN5 8pin
GND	CN5 10pin

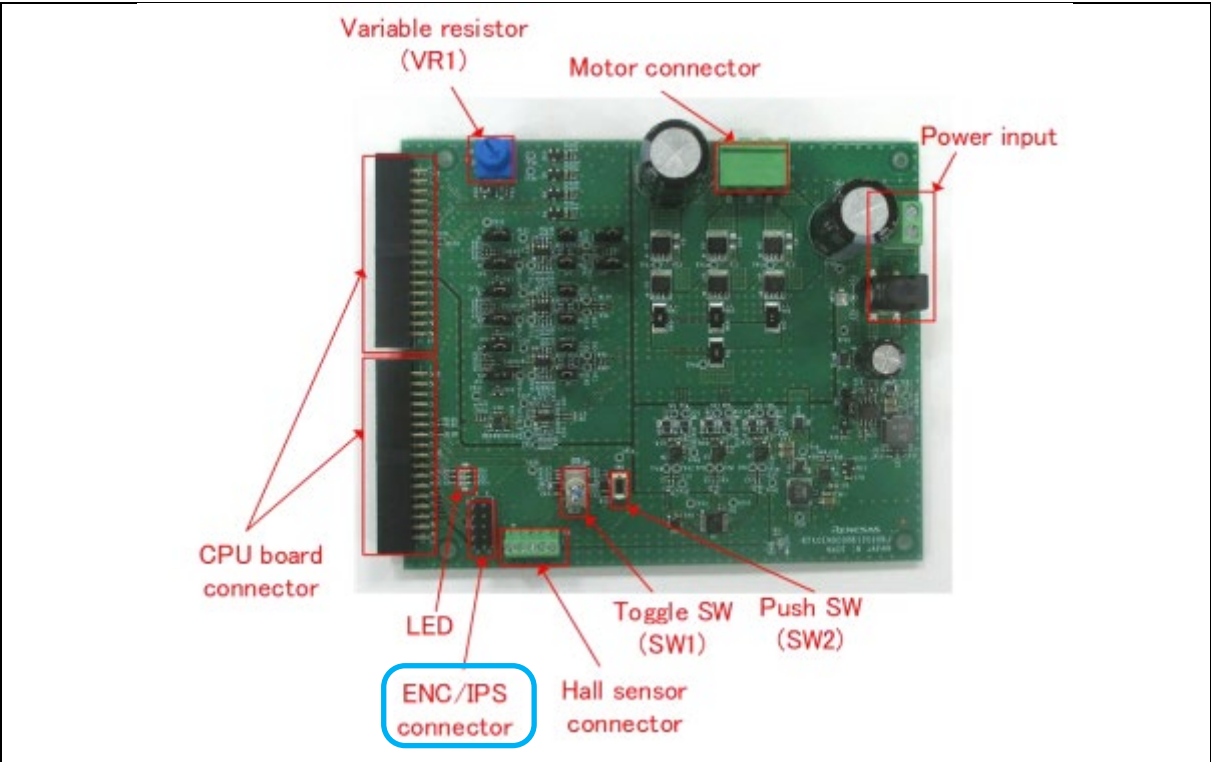


Figure 4-8 Inverter board

4.7 Hall sensor connection

Connect the Hall sensor cable and the Hall sensor connector (Figure 4-9) as shown in Table 4-2.

Table 4-2 Interface

Function	MCI-LV-1
GND	CN6 1pin
+5V	CN6 2pin
Hall sensor (HW)	CN6 3pin
Hall sensor (HV)	CN6 4pin
Hall sensor (HU)	CN6 5pin

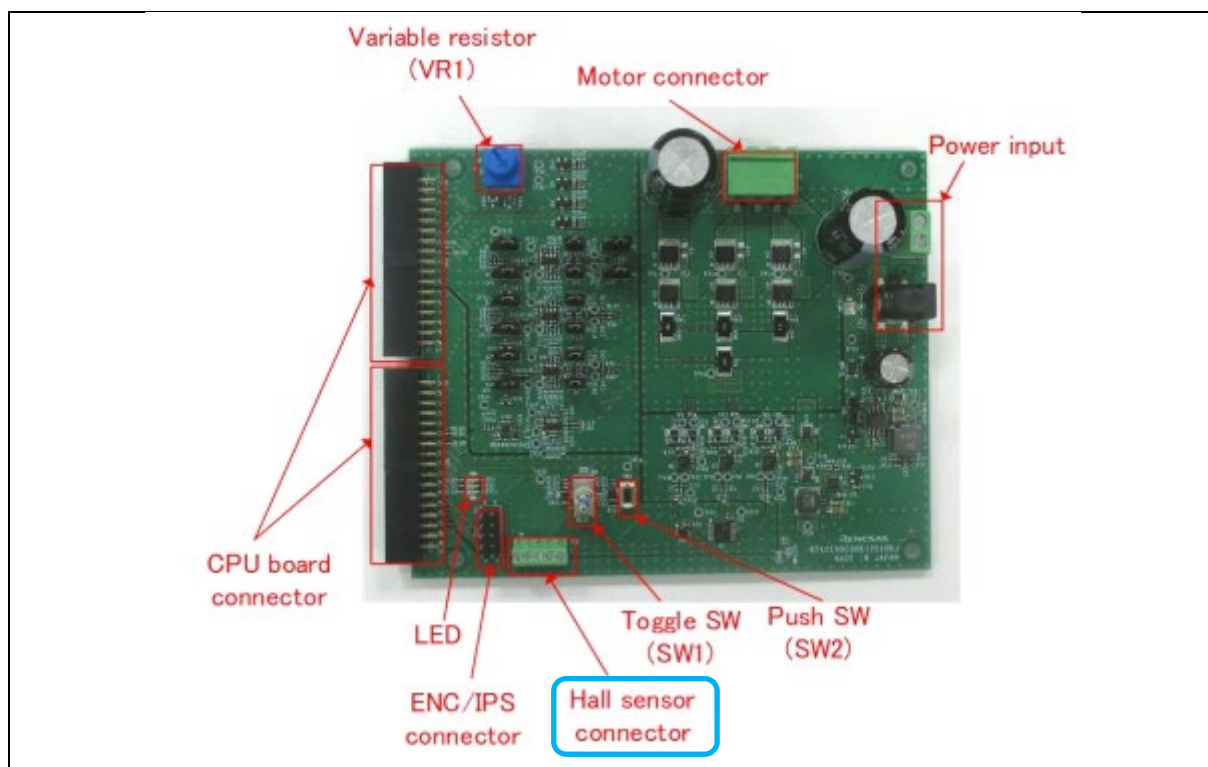


Figure 4-9 Inverter board

4.8 On board debugger

The RA series CPU boards include the circuit of “On board debugger J-Link OB (after here, JLOB). The update of program is performed through JLOB. When update, please connect CPU board and your PC via an USB cable.

4.9 Wiring

This section describes how to wire between the power supply, inverter, and motor. Terminal names vary depending on the devices used, so be sure to refer to the instruction manuals of the devices to verify the contents and specifications before wiring.

Figure 4-10 shows an example of wiring between the power supply and the inverter. Here, the output terminals of the regulated DC power supply are connected to the P and GND terminals of the inverter. Be careful not to connect with the wrong polarity. Figure 4-11 shows an example of wiring between the inverter and the motor.

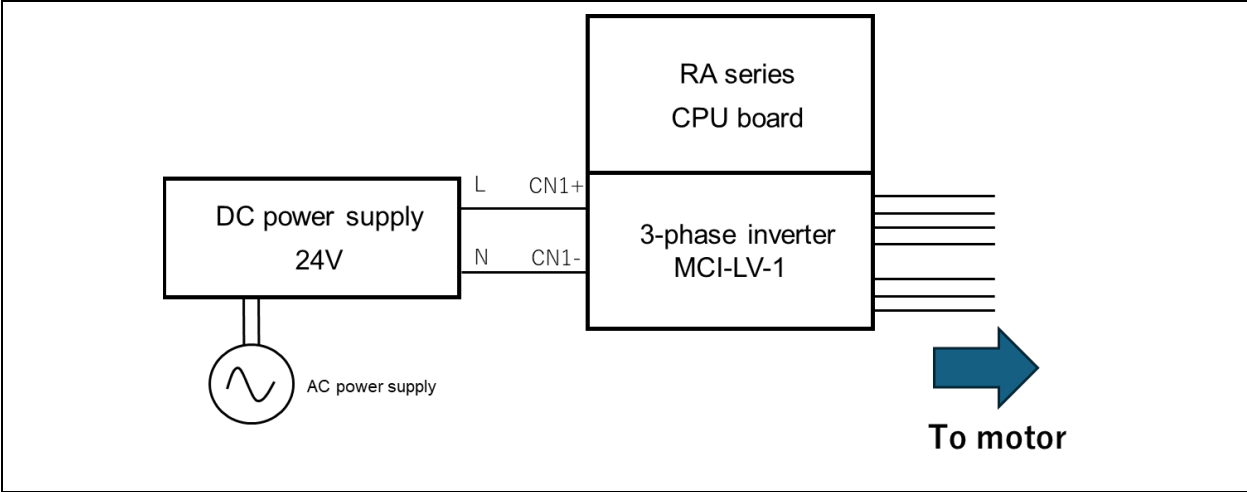


Figure 4-10 Wiring between the power supply and the inverter

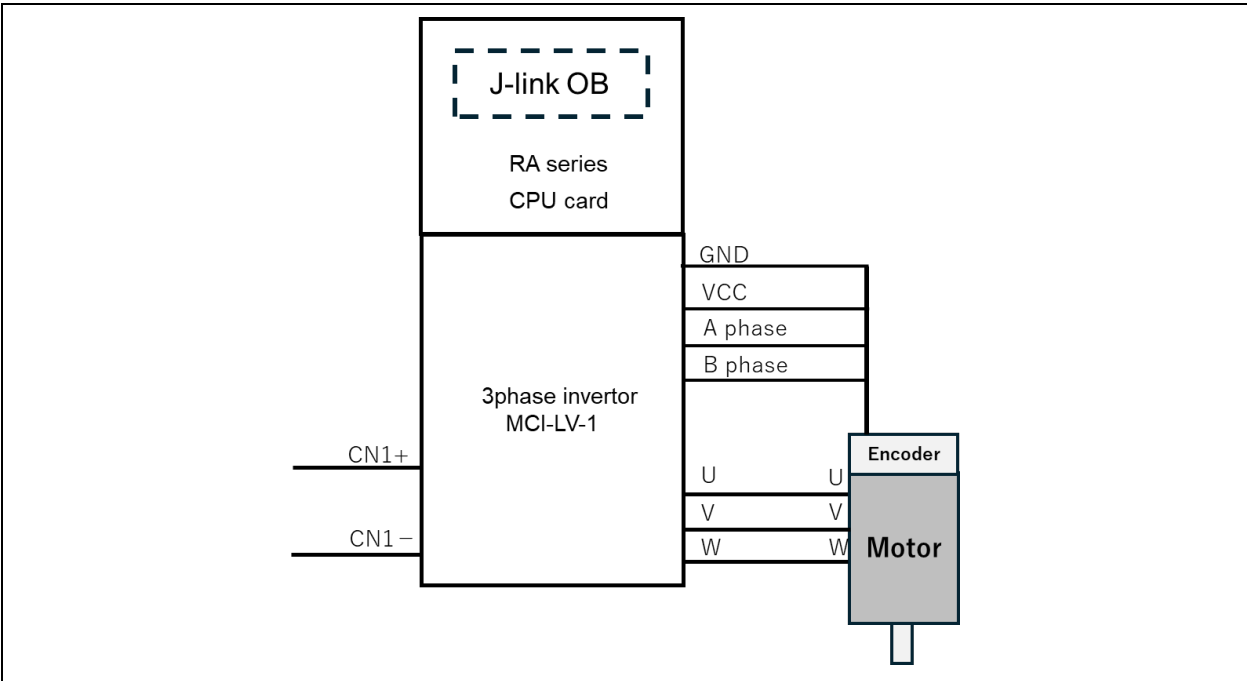


Figure 4-11 Wiring between the inverter and the motor

5. Environment to build the sample software

To develop the sample program in this application note, we will use e² studio with RA FSP as the development environment. Please download the installation environment from the following.

Download e² studio from the following URL:

<https://www.renesas.com/en/software-tool/flexible-software-package-fsp>

For installation instructions, refer to the PDF manual included with e² studio.

For more information on how to use it, refer to the PDF manual that you can download on the above URL or the videos.

How to upload the program to MCU is describes in detail on “6.3 Writing the sample program”.

6. Driving the motor

This chapter describes how to drive a motor. Please confirm “6.1 Precautions before driving the motor” and operate according to “6.2 Connecting”.

6.1 Precautions before driving the motor

When driving the motor, note the following points: Improper use may cause electric shock or failure of the devices.

- Do not control the motor under the conditions where the tracing and breakpoints are set while using E2OB. A sudden stop may cause the inverter to operate abnormally. Use RMW and debug under the conditions where the safety functions work properly.
- MC-COM can be safely used during operation because the signals are isolated. When a similar device is used, the GND of the PC and the inverter may be common, which could cause an electric shock hazard via the GND.
- Design the experimental facility so that the motor can be stopped in an emergency.
- When the inverter is stopped but the PM motor is still rotating, the PM motor generates an inductive voltage, thus applying voltage to the U/V/W three-phase wiring. Touching exposed conductive parts may cause electric shock.

6.2 Connecting

Note that the device to be used between the CPU board and the PC differs between writing and operating. Wiring methods for (1) writing and (2) motor operation are described below.

(1) For writing

CPU board includes the circuit of JLOB, therefore USB cable can be connected directly, and the program can download without another environment. After download, please connect out the cable.

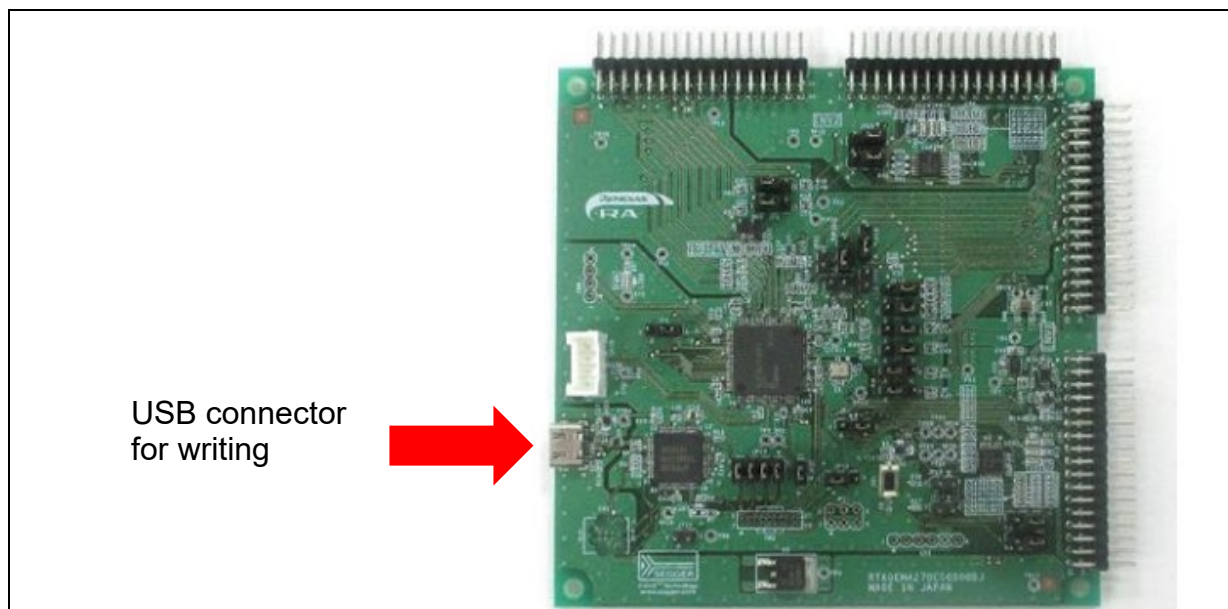


Figure 6-1 RA6T2 CPU board USB connector for writing

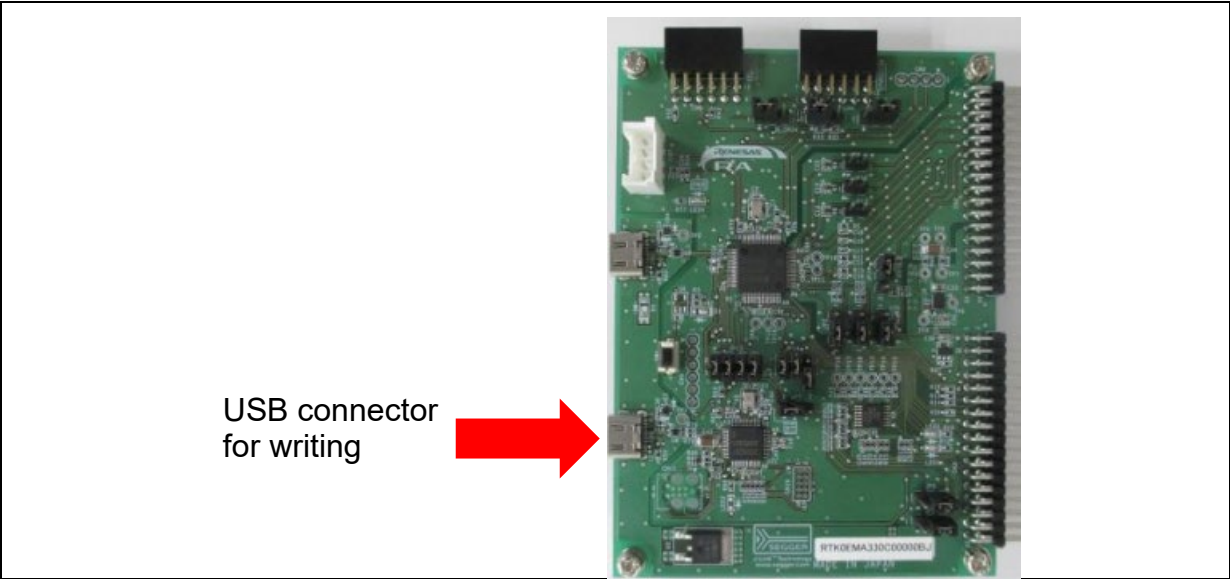


Figure 6-2 RA6T3 CPU board USB connector for writing

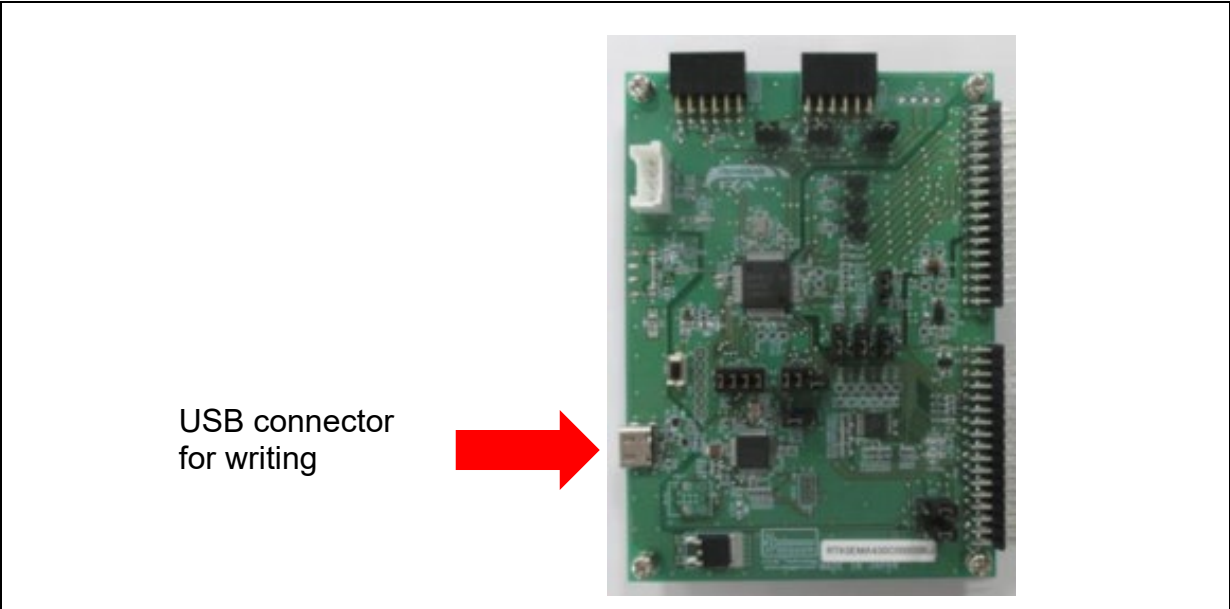


Figure 6-3 RA4T1 CPU board USB connector for writing

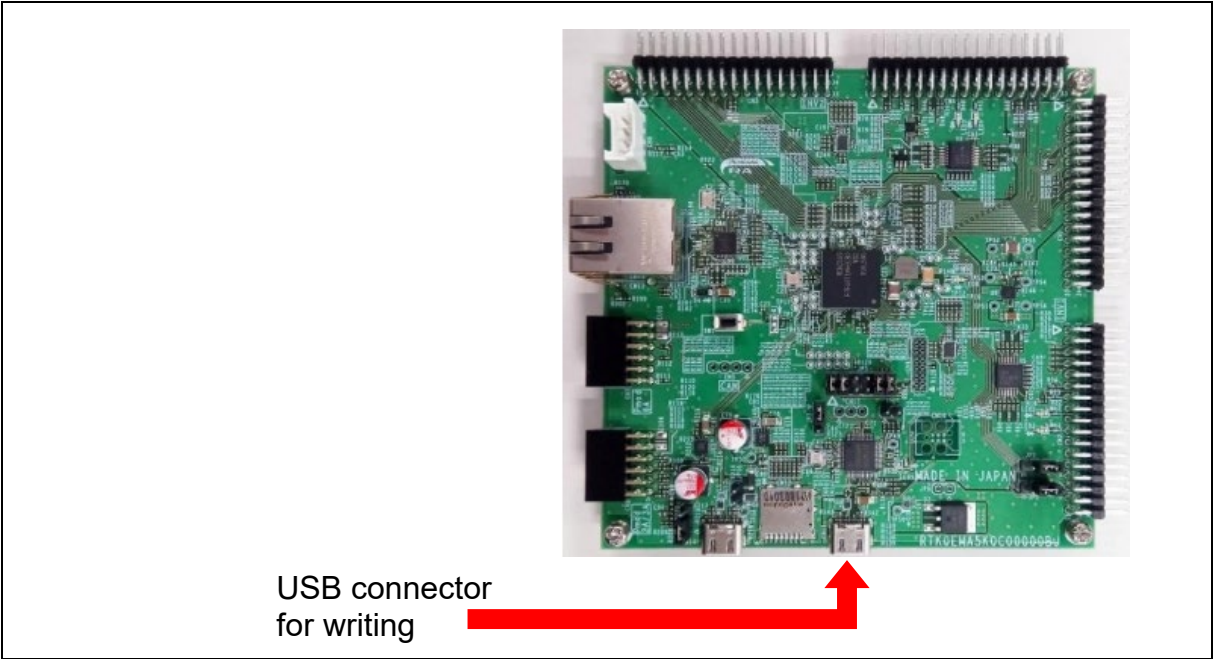


Figure 6-4 RA8T1 CPU board USB connector for writing

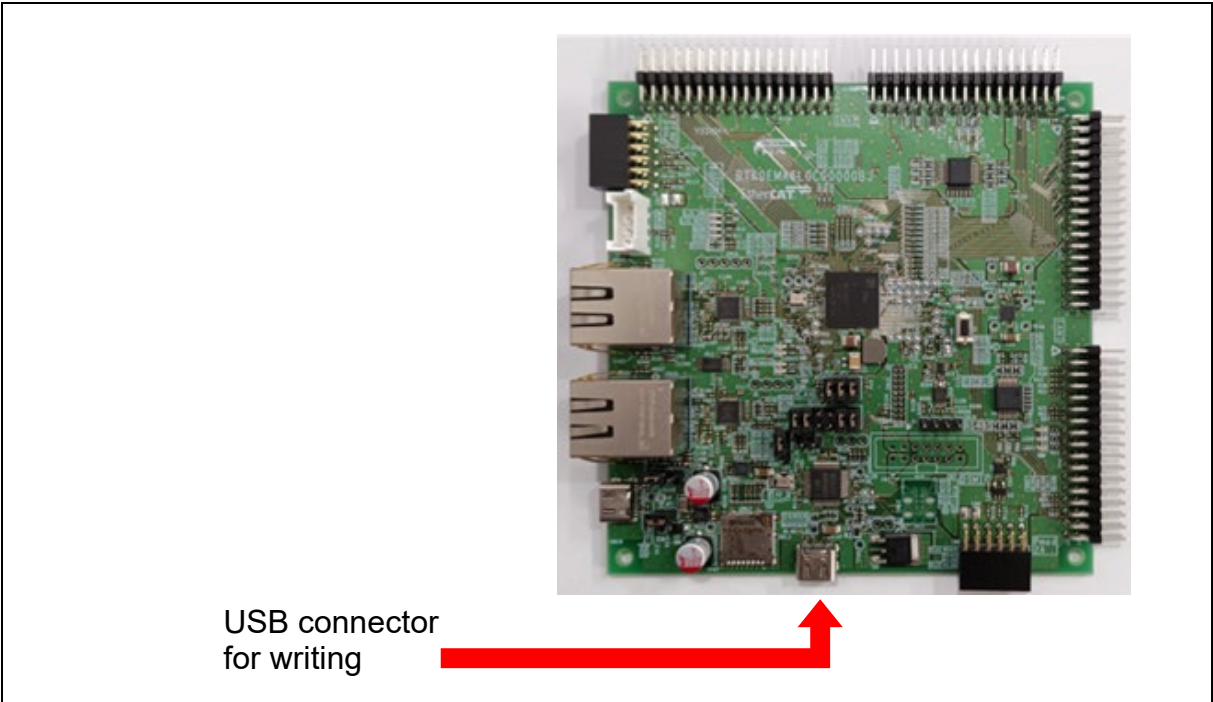


Figure 6-5 RA8T2 CPU board USB connector for writing

(2) For motor operation

Connect to the PC using MC-COM(RTK0EMXC90Z00000BJ) as shown in Figure 6-6. The CPU board is connected to the PC via UART and can be operated from the PC using a COM port. RMW can be used to operate the motor. MC-COM provides electrical isolation between the inverter and the PC and can be used safely even in high-voltage environments.

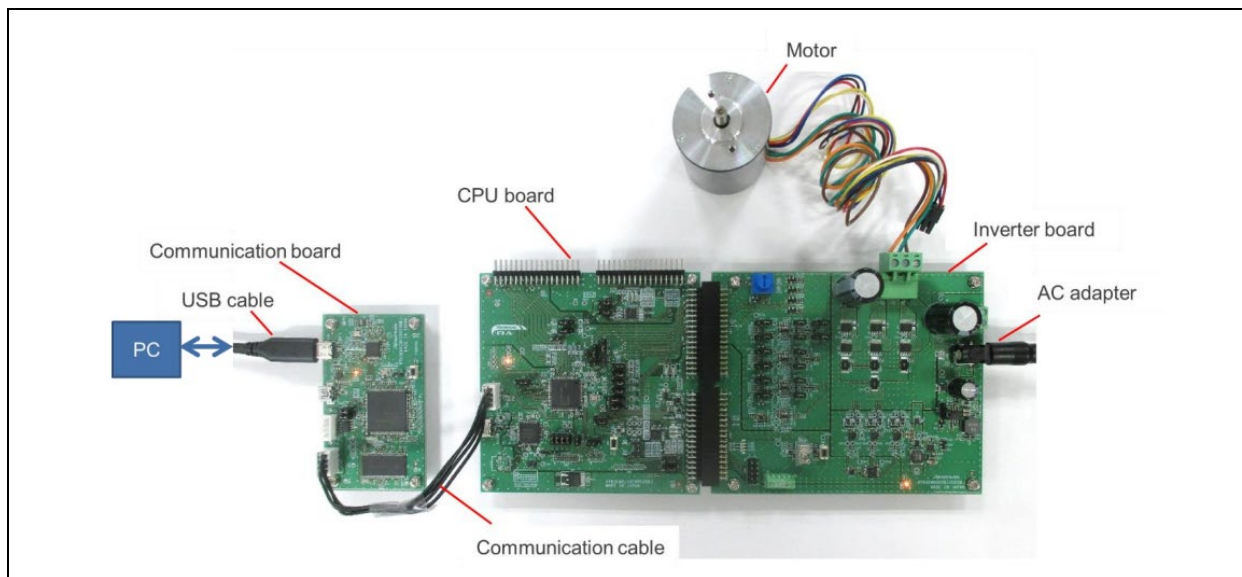


Figure 6-6 Example of connection at investigation

(3) Confirmation of jumper

Please confirm the jumper settings as shown below. After you used the environment for other type control, jumper position is different from below condition.

• Inverter board

Number of jumper	Connection
JP8	Connect 1-2
JP11	Connect 1-2

• RA6T2

Number of jumper	Connection
JP4	Connect 1-2
JP5	Connect 1-2
JP17	Connect 2-3
JP18	Connect 2-3

• RA6T3/RA4T1

Number of jumper	Connection
JP2	Connect 1-2
JP3	Connect 1-2
JP4	Connect 1-2
JP5	Connect 2-3
JP6	Connect 2-3

• RA8T1

Number of jumper	Connection
JP1	Connect 2-3
JP2	Connect 2-3

• RA8T2

Since there is no jumper change, please use it in its default state.

6.3 Writing the sample program

After you have downloaded the sample program from our website, with e² studio you can write it to the MCU on the CPU board.

6.3.1 Install e² studio

Please download e² studio which supports FSP configurator from our below WEB site, and install to your PC.

<https://www.renesas.com/en/software-tool/flexible-software-package-fsp>

6.3.2 Import a project

1. Left click “File” TAB.

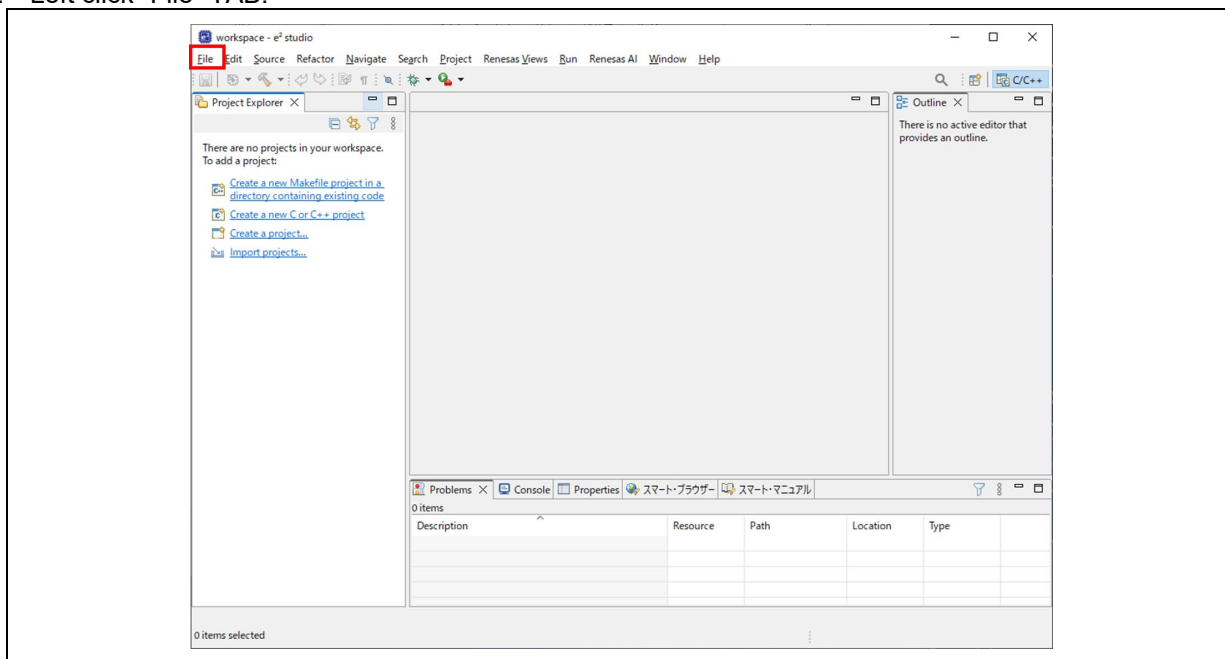


Figure 6-7 Selection of the target project (1)

2. Pull down menu is displayed. Then, select “Import” and left click.

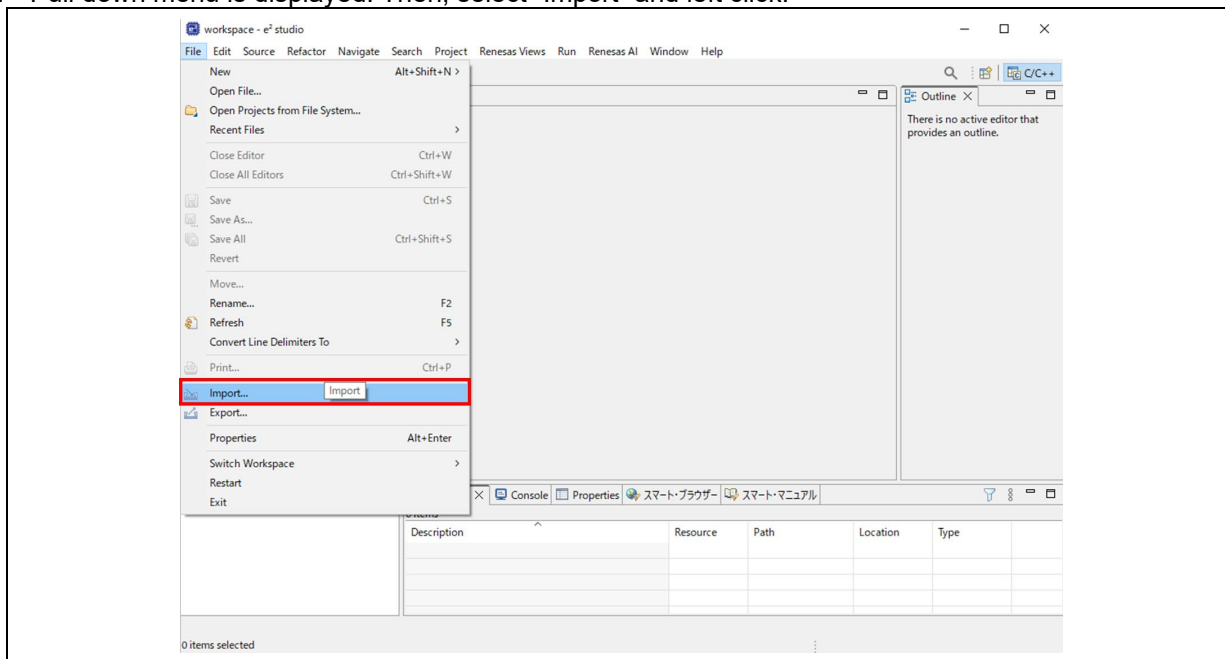


Figure 6-8 Selection of the target project (2)

3. Import window opens. Then, select “Existing project into Workspace” and left click.

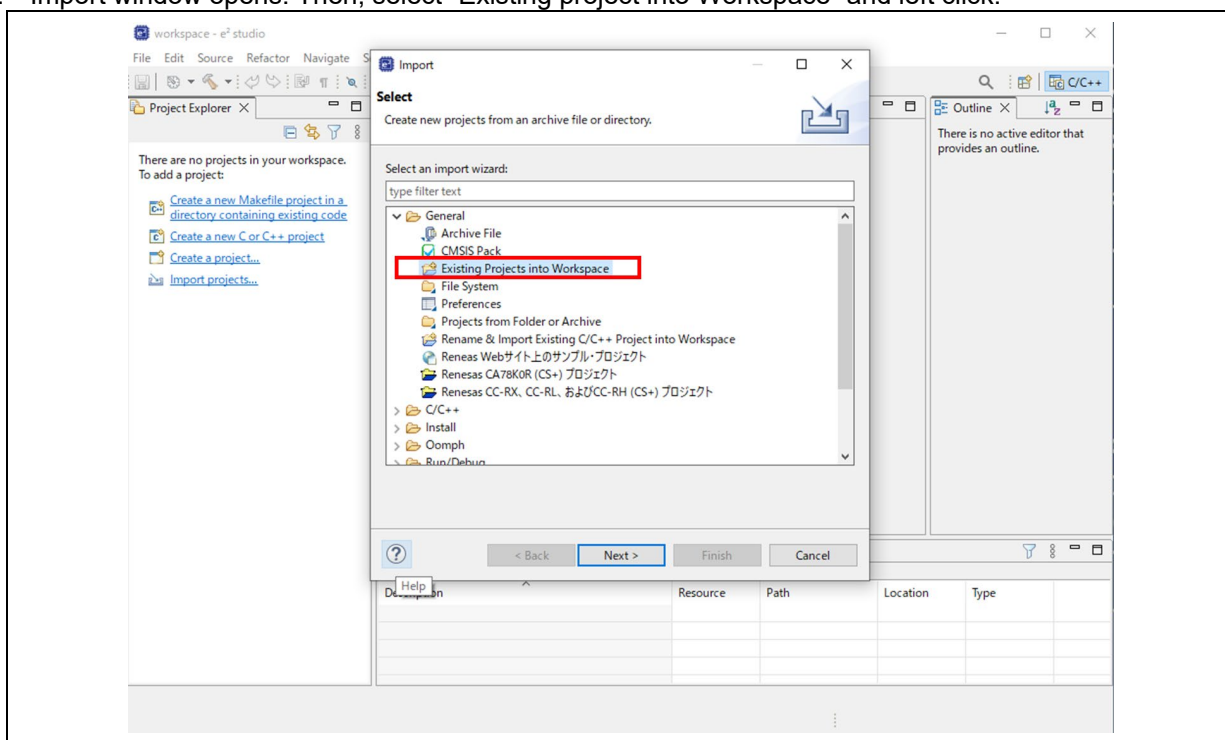


Figure 6-9 Selection of the target project (3)

4. “Import” window opens. Then, left click “Browse”.

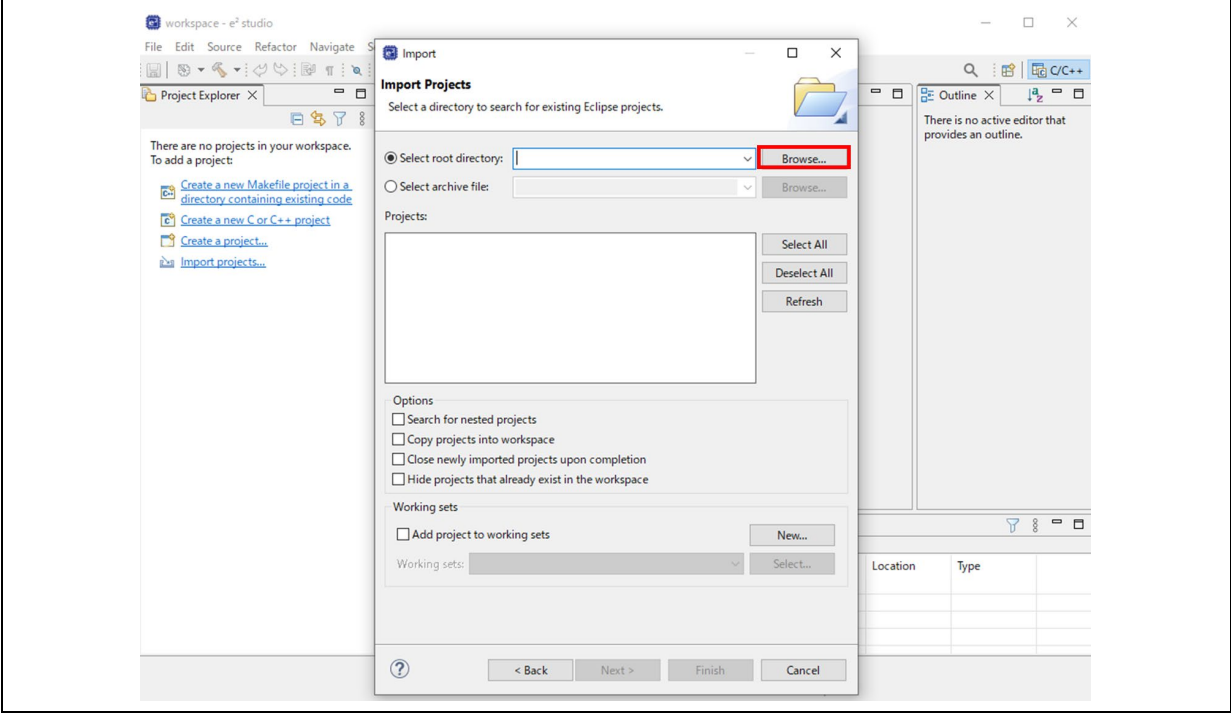


Figure 6-10 Selection of the target project (4)

5. Folder selection window opens. Then select the target folder and left click “select folder”.

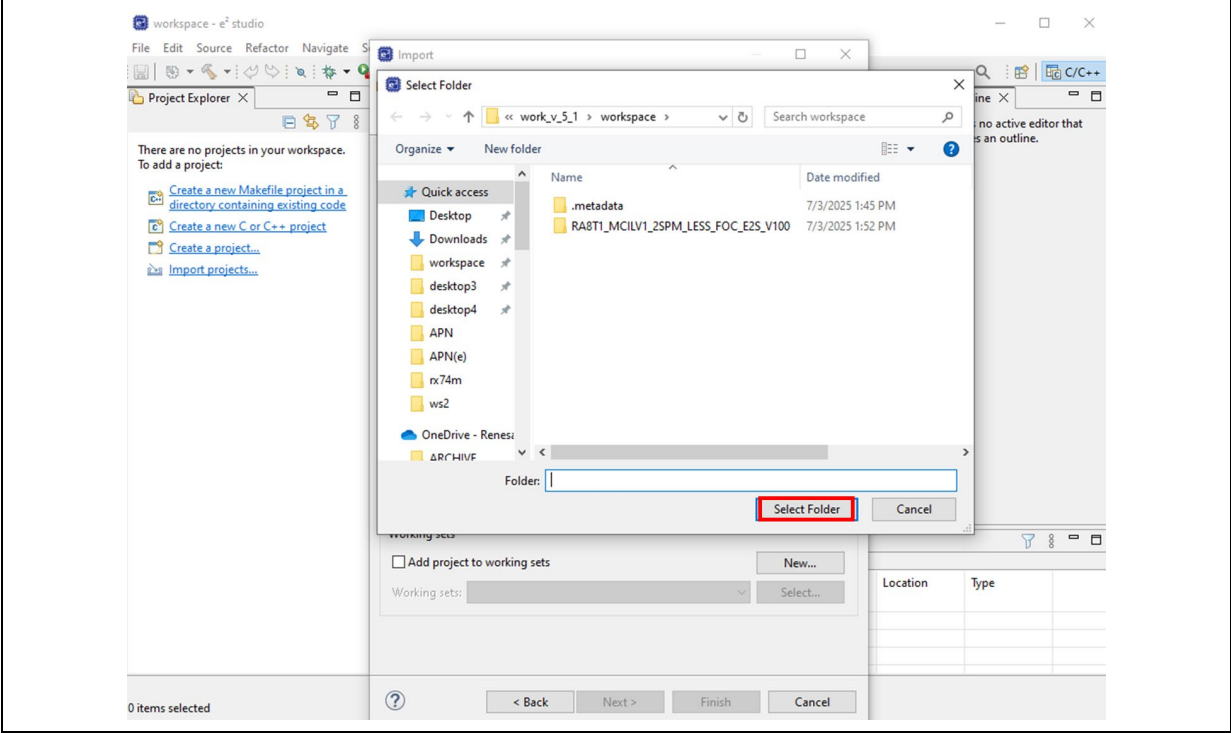


Figure 6-11 Selection of the target project (5)

6. When the target project is imported correctly, the display became like below. After confirmation, left click “Finish”.

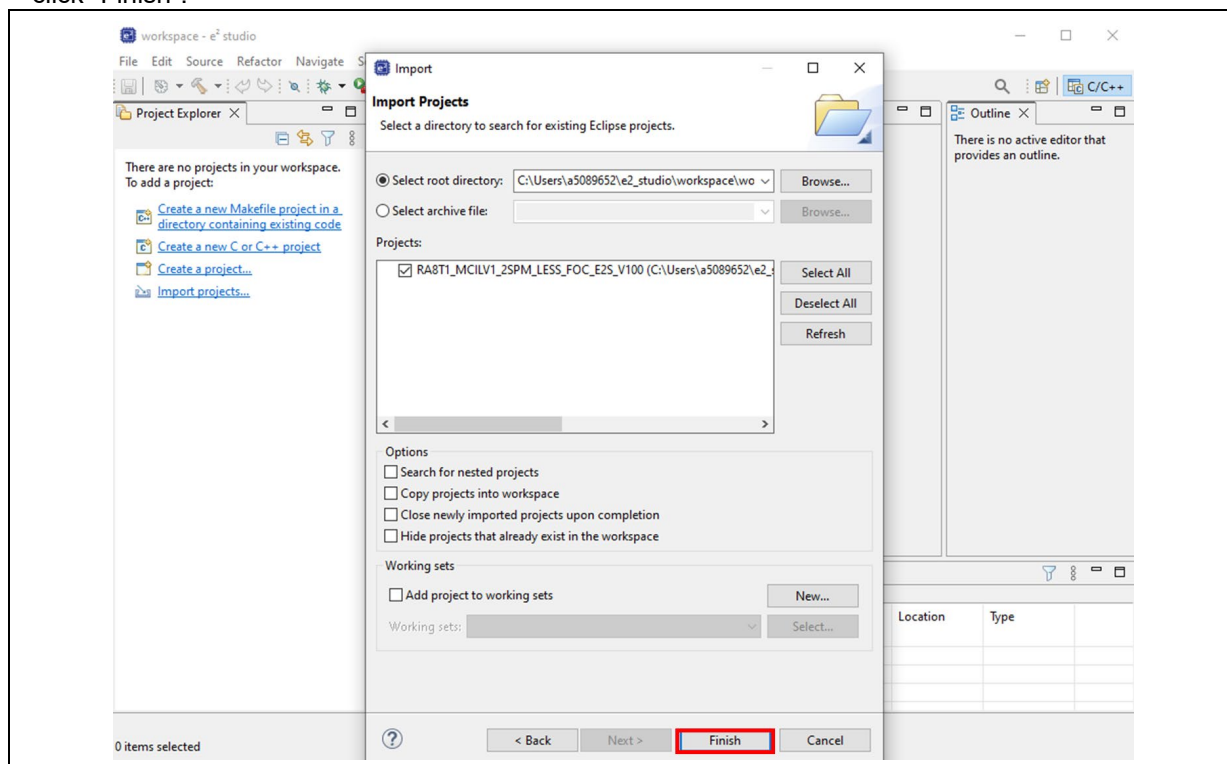


Figure 6-12 Selection of the target project (6)

7. Confirm the target project is imported correctly into e² studio.

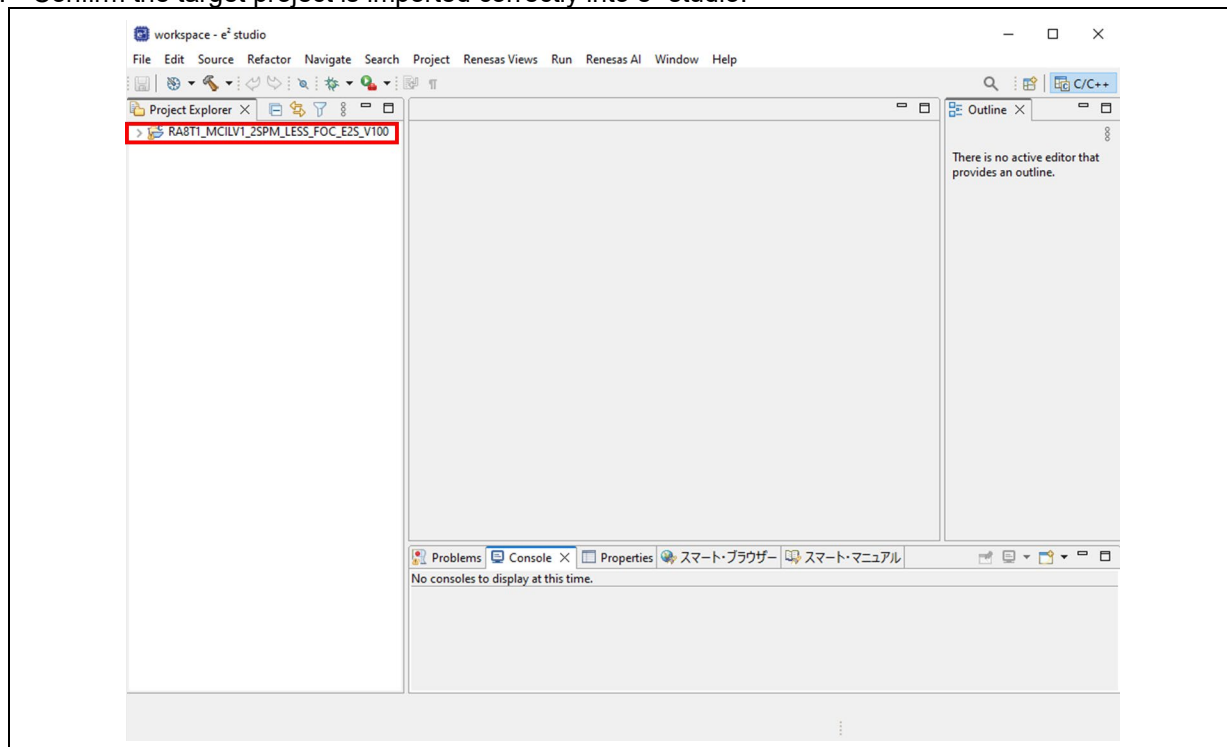


Figure 6-13 Confirmation of import the target project

6.3.3 Build the target project

1. Right click the imported target project in e² studio window.

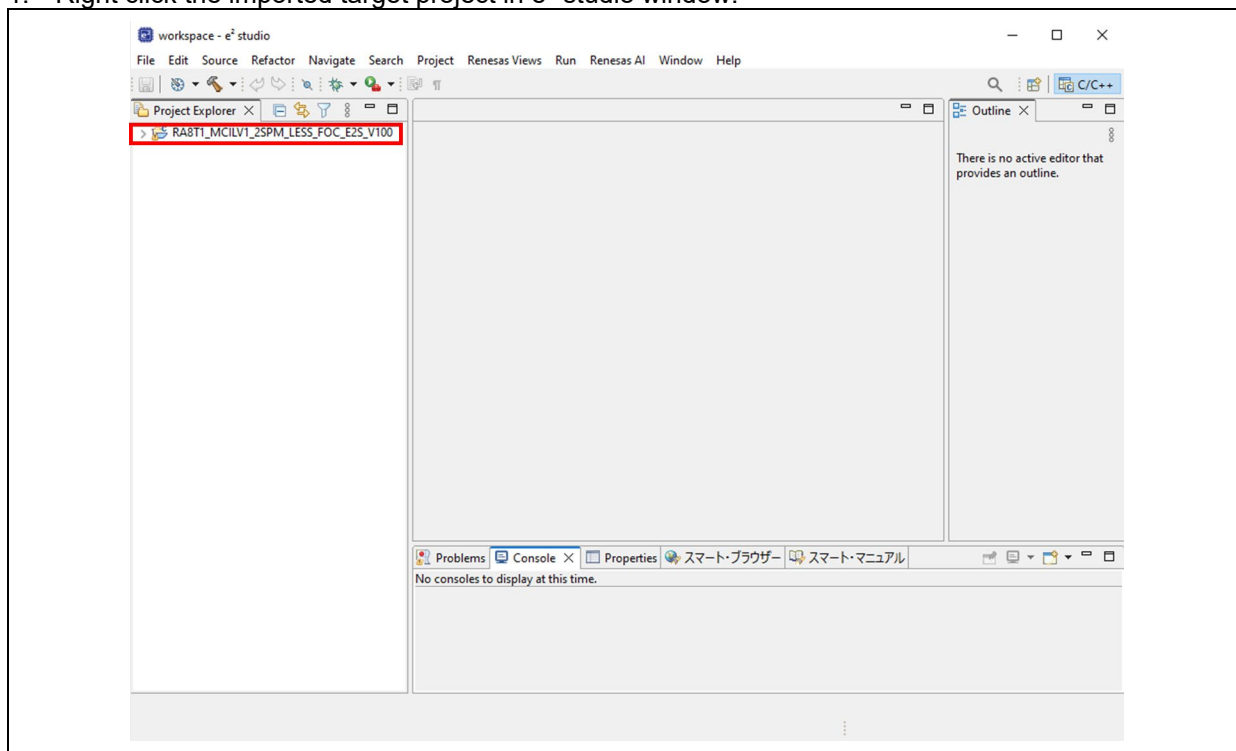


Figure 6-14 Selection of the target project

2. Pulldown menu appears. Then, left click “Build Project”.

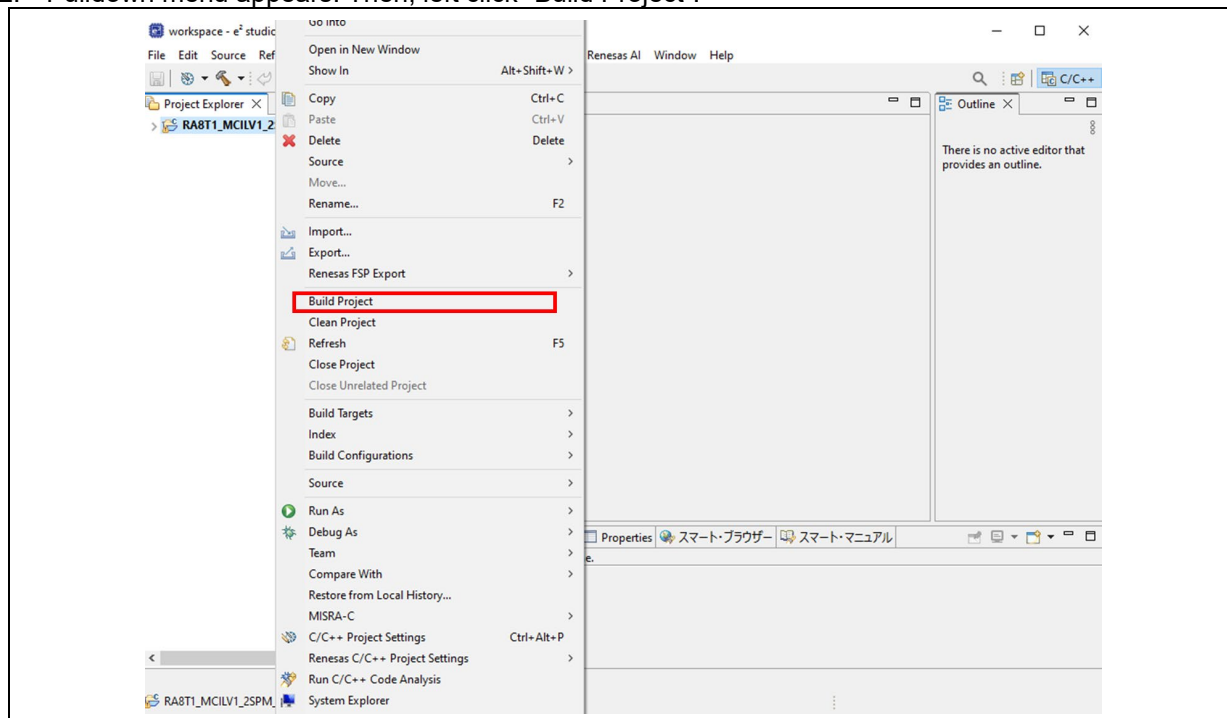


Figure 6-15 Pulldown menu

3. Target build is performed, and build process are displayed in console window. Confirm the finish of build with no error.

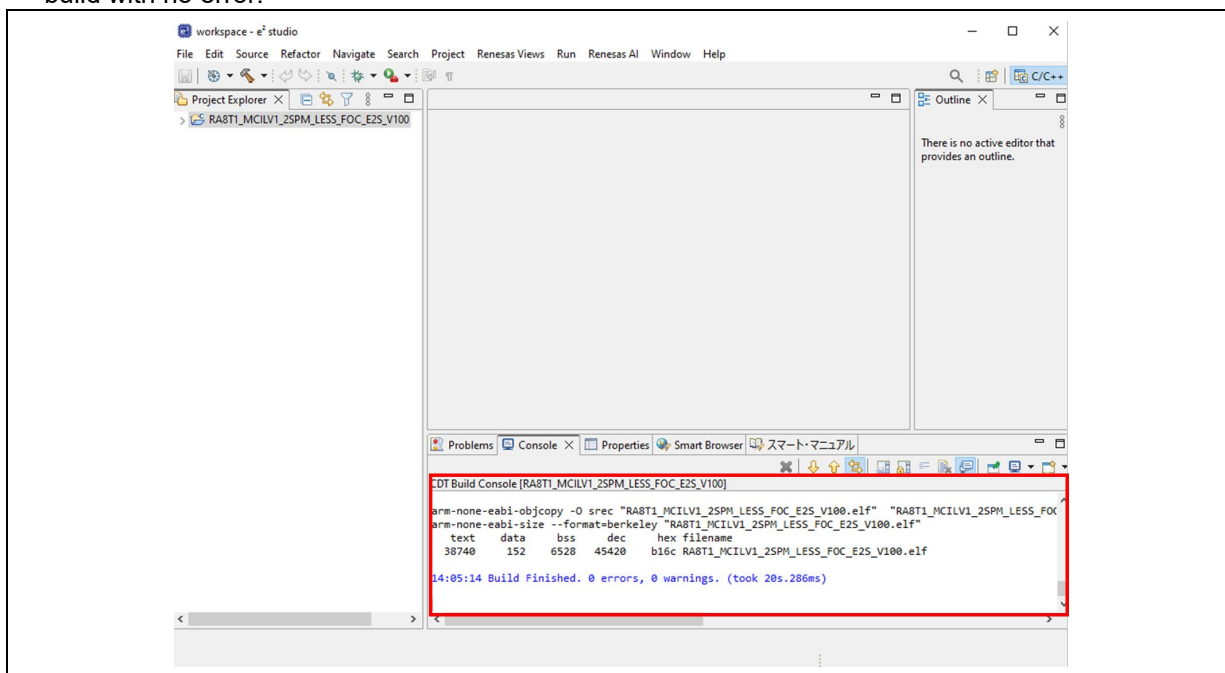


Figure 6-16 Confirmation of finish of build

6.3.4 Connection between PC and the target CPU board via an USB cable

Please connect PC and CPU board via an USB cable like below.

(In below figure, target board is RA6T2.)

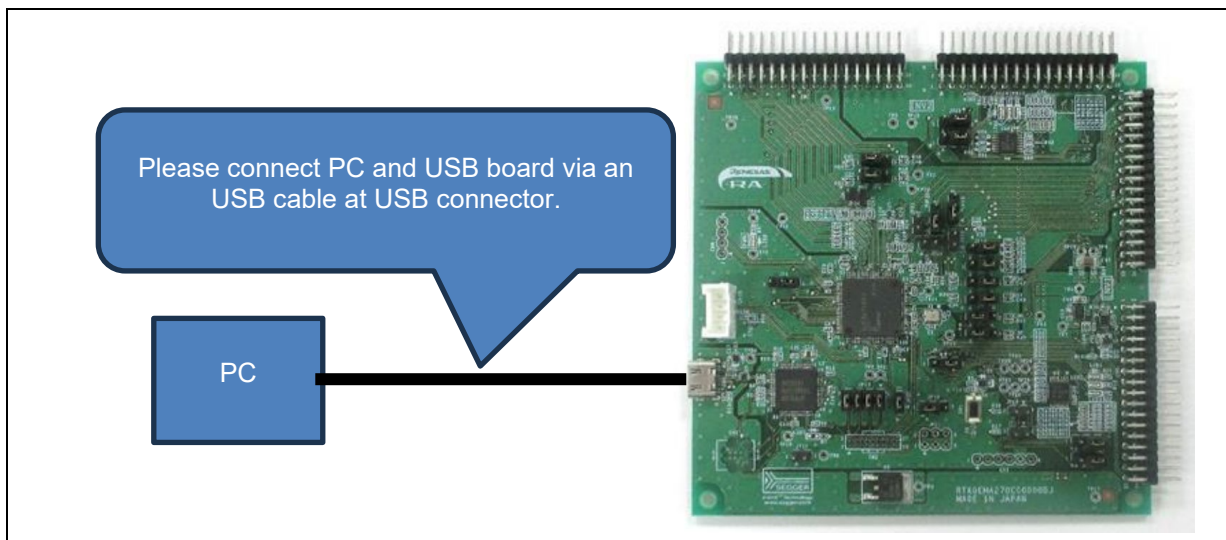


Figure 6-17 Confirmation between PC and CPU board (RA6T2)

6.3.5 Writing to the target board (with built program)

1. Select target project and right click.

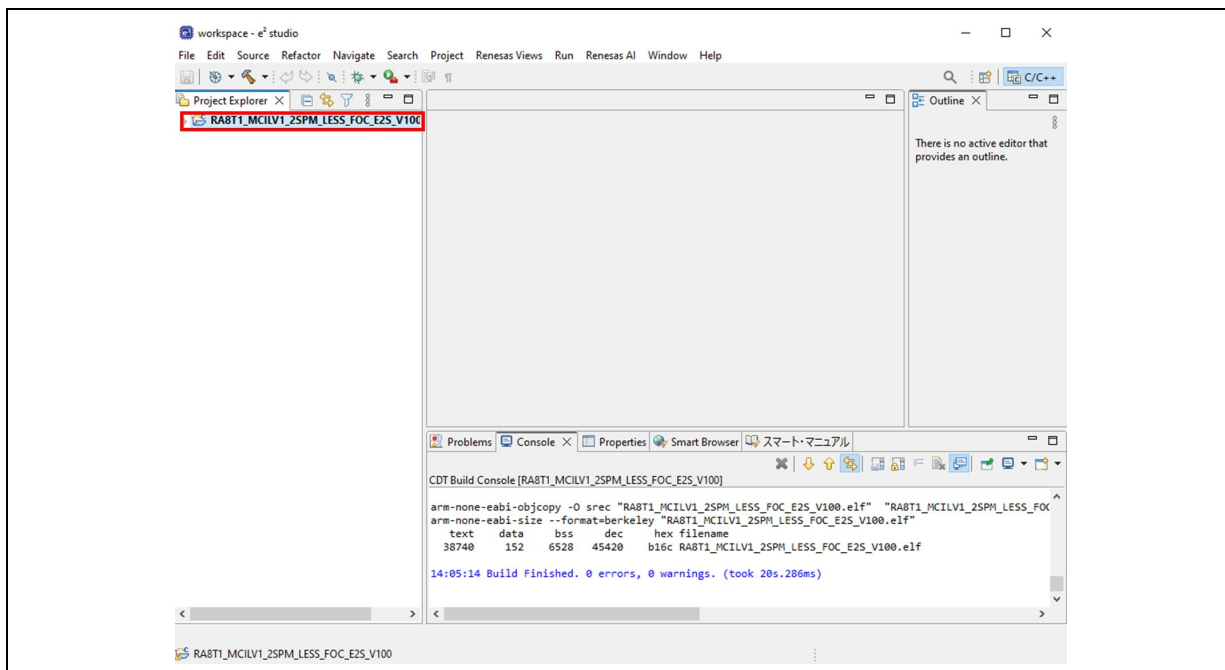


Figure 6-18 Selection of target project

2. Pull down menu display. Put mouse cursor on "Debug As", after that new list window appears. Select "Renesas GDB Hardware Debugging" and left click.

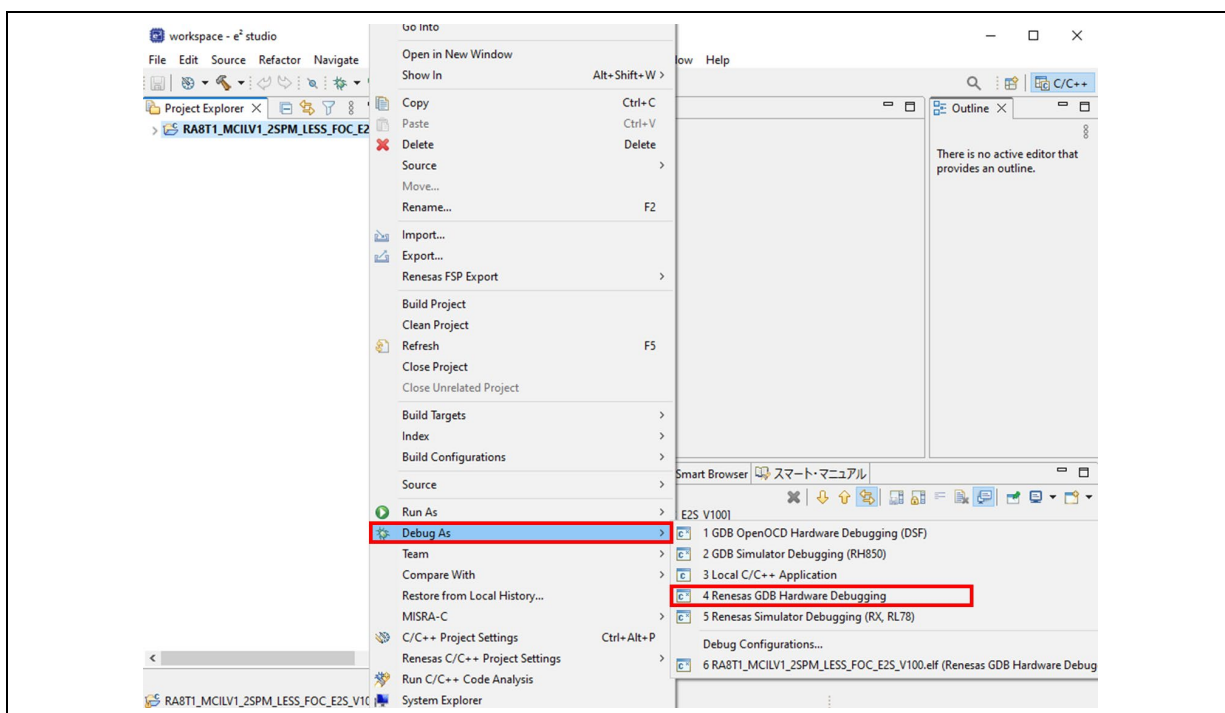


Figure 6-19 Selection of debug method

- If the connection is correct and program is downloaded successfully, the display changes to “Debug” mode like below.

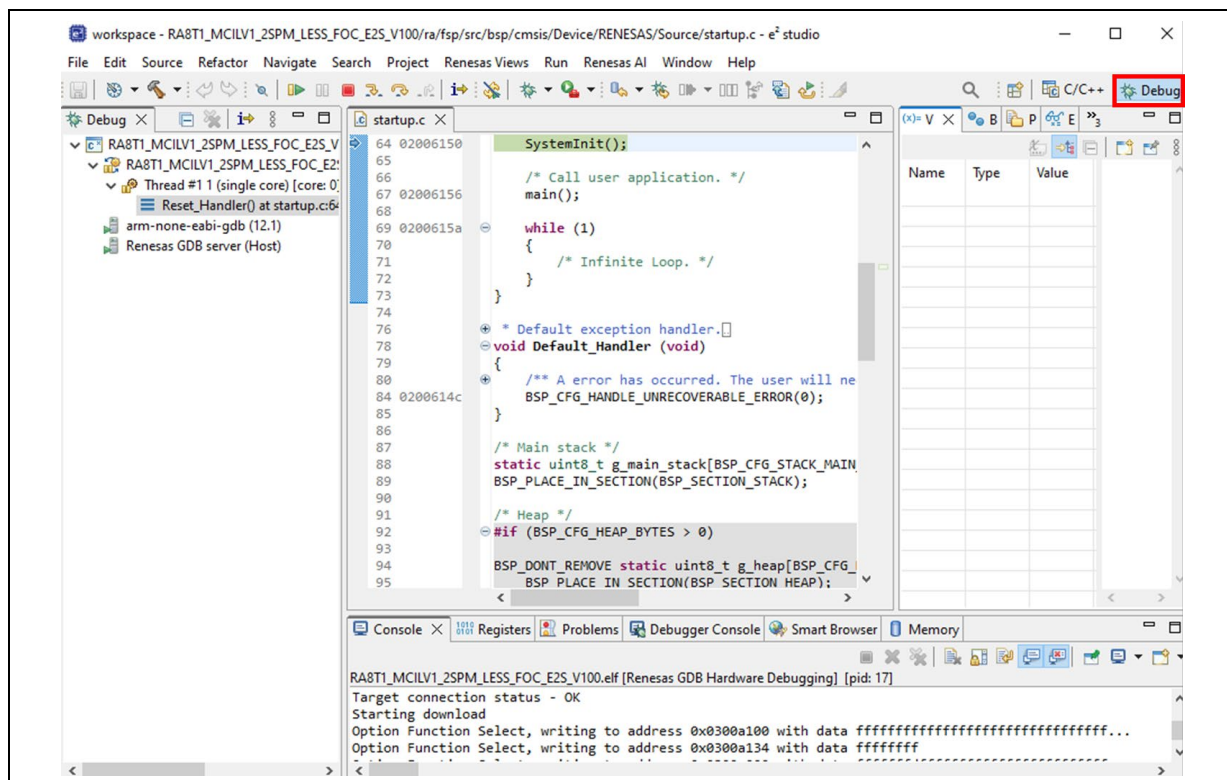


Figure 6-20 “Debug” mode

- Left click “” in debug mode to disconnect from target board. After that disconnect USB cable. All process is finished.

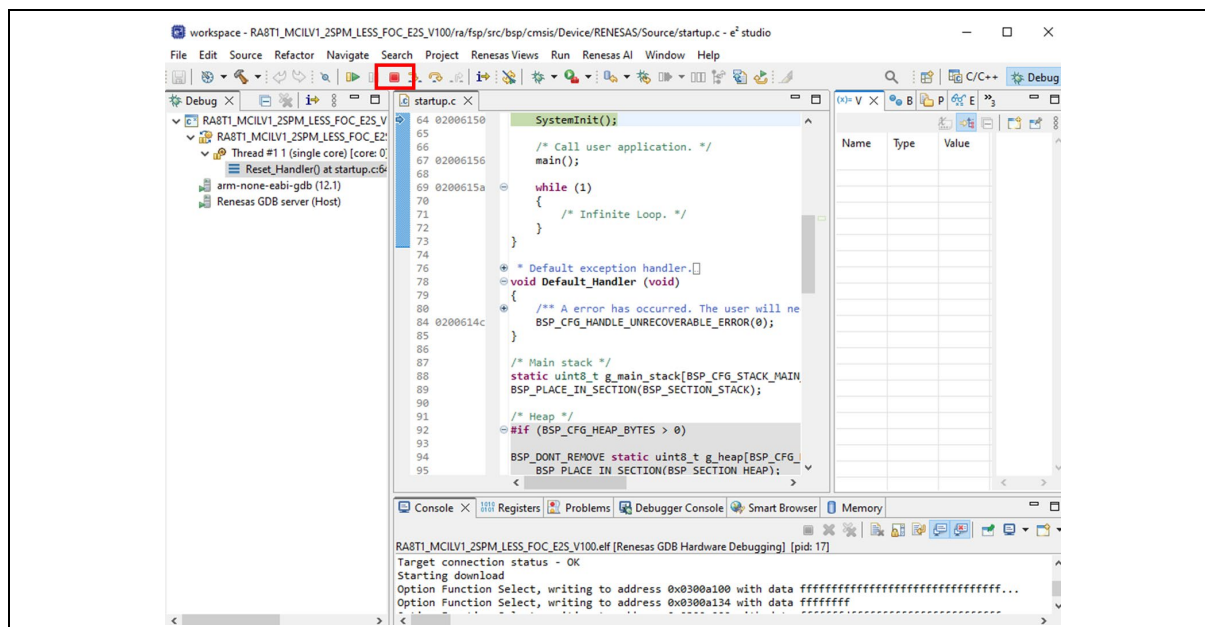


Figure 6-21 Disconnect from target board

6.4 Introducing RMW

Renesas Motor Workbench, a motor control development support tool, is used as an user interface (for issuing the rotation start/stop command, rotation speed command, and other commands). Renesas Motor Workbench (RMW) can be downloaded from our website.

<https://www.renesas.com/en/software-tool/renesas-motor-workbench>

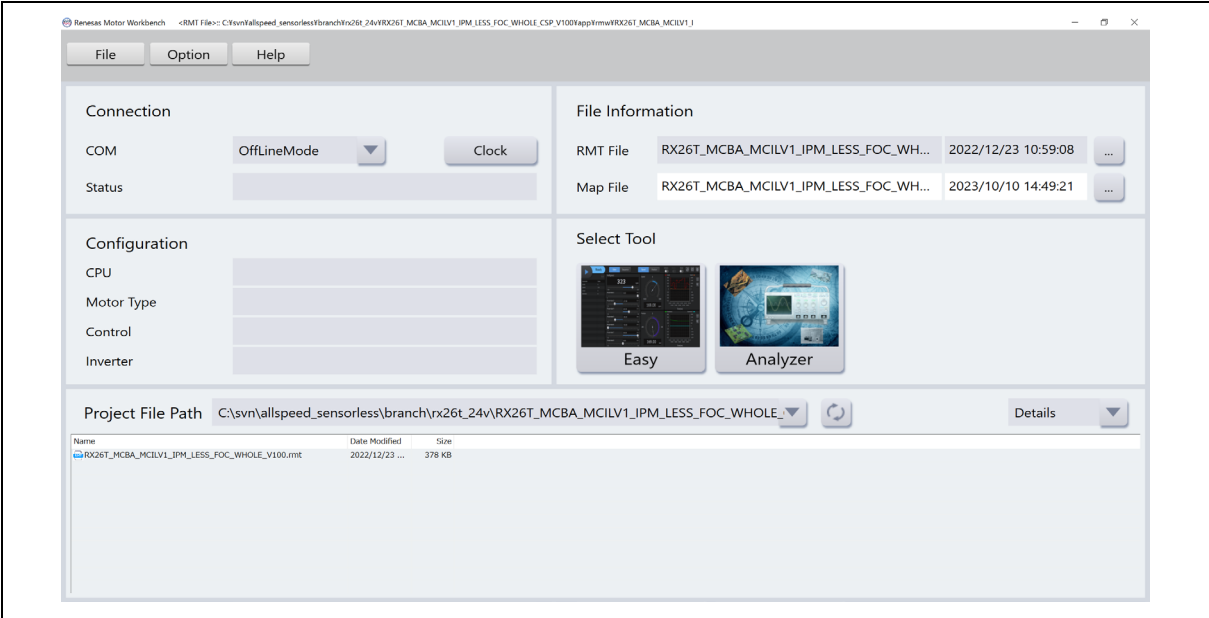


Figure 6-22 Window of Renesas Motor Workbench

6.5 Registering and updating the Map file

When a part of the sample program is changed by the user, the Map file including variables and other information needs to be registered and updated. If the software has not been changed, the Map file does not need to be registered or updated.

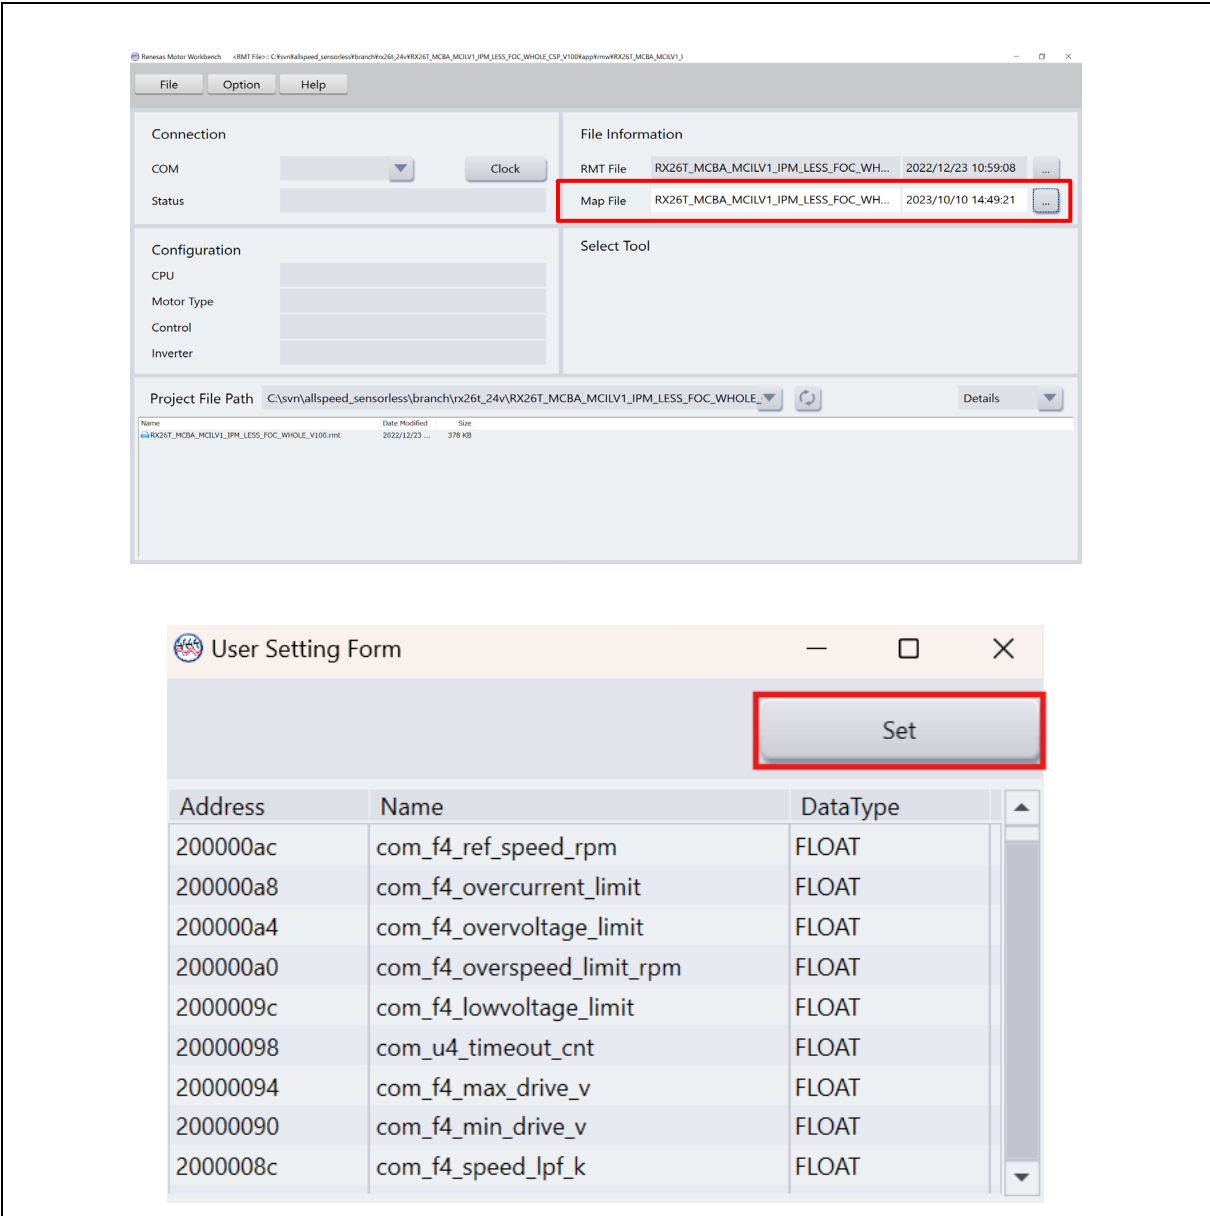


Figure 6-23 Map file registration setup window (upper) and confirmation window (lower) in RMW

6.6 Variables used for working with RMW

In this sample program, the motor can be controlled using RMW. Table 6-1 lists the data input variables that are used when the RMW UI is used. The values input to these variables are applied to the corresponding variables in the motor module and then used for controlling the motor if the value written to the `com_u1_enable_write` variable is the same as the value of the `g_u1_enable_write` variable. Note, however, that the variables indicated by an asterisk (*) do not depend on the value of the `com_u1_enable_write` variable.

Some parameters used for motor control can be changed while the motor is stopped. For details, see Table 9-8 and Table 9-9.

Note that the variable name prefix (for example, `u1` and `f4`) is an abbreviation of the variable type. RMW recognizes the variable name prefix, automatically selects the type, and displays the numeric value inside the variable in the Control Window.

Table 6-1 List of main input variables for Analyzer functions

Analyzer function input variable name	Type	Description
<code>com_u1_mode_system (*)</code>	<code>uint8_t</code>	Managing the state 0: Stop mode 1: Run mode 3: Reset
<code>com_f4_ref_speed_rpm (*)</code>	<code>float</code>	Speed command value (mechanical) [rpm]
<code>com_u1_enable_write</code>	<code>uint8_t</code>	Whether to enable rewrite of variables for user entry. The input data is applied if the values of this and <code>g_u1_enable_write</code> variables are the same.

Table 6-2 lists main variables that are often observed when driving under speed control is evaluated. Use this table for reference when the waveform is to be displayed, or the values of variables are to be loaded with an Analyzer function.

Table 6-2 List of main variables for vector control with encoder

Vector control with encoder variable name	Type	Substance
g_f4_id_ref_monitor	float	d-axis current reference [A]
g_f4_id_ad_monitor	float	d-axis measured current [A]
g_f4_iq_ref_monitor	float	q-axis current reference [A]
g_f4_iq_ad_monitor	float	q-axis measured current [A]
g_f4_iu_ad_monitor	float	U phase measured current [A]
g_f4_iv_ad_monitor	float	V phase measured current [A]
g_f4_iw_ad_monitor	float	W phase measured current [A]
g_f4_vdc_ad_monitor	float	Measured inverter bus voltage [V]
g_f4_vd_ref_monitor	float	d-axis voltage reference [V]
g_f4_vq_ref_monitor	float	q-axis voltage reference [V]
g_f4_refu_monitor	float	U phase voltage reference [V]
g_f4_refv_monitor	float	V phase voltage reference [V]
g_f4_refw_monitor	float	W phase voltage reference [V]
g_f4_pos_rad_monitor	float	Rotor angle (electrical) [rad]
g_f4_speed_rad_monitor	float	Rotation speed (electrical) [rad/s]
g_f4_ref_speed_rad_ctrl_monitor	float	Speed reference (electrical) [rad/s]
g_f4_speed_rpm_monitor	float	Rotation speed (mechanical) [rpm]
g_f4_pos_degree_monitor	float	Rotor angle (electrical) [degree]

6.7 Controlling the motor

The following shows an example of using the Analyzer function of RMW to perform operations on the motor. The operations are performed from the Control Window on RMW. For details about the Control Window, see the "Renesas Motor Workbench User's Manual".

a) Start driving of the motor

The motor can be rotated by performing the following steps:

- (1) Confirm that the check boxes in the [W?] column are selected on the "com_u1_mode_system" and "com_f4_ref_speed_rpm" rows.
- (2) On the "com_f4_ref_speed_rpm" row, in the [Write] column, enter the command rotation speed.
- (3) Click the [Write] button (At this time, the com_u1_mode_system field remains at "0").
- (4) Click the [Read] button. Confirm that the boxes in the [Read] column on the "com_f4_ref_speed_rpm" rows.
- (5) On the "com_u1_mode_system" row, in the [Write] column, enter "1".
- (6) Click the [Write] button.

(4) Click "Read" button (3)(6) Click "Write" button

Control Window

Read Write Commander Status Indicator One Shot

Variable Name	Variable Meaning	Data Type	Scale	Base	R?	Read	W?	Write
com_u1_mode_system	State management	INT8	Q0	Decimal	☒	1	☒	1
com_f4_ref_speed_rpm	Speed command value (mechan	FLOAT	Q0	Decimal	☒	2000	☒	2000
com_u1_enable_write	Enable to rewriting variables	INT8	Q0	Decimal	☒	1	☒	0
com_u1_sw_userif	User interface switch	INT8	Q0	Decimal	☒	0	☒	0

(1) Click (5) Write "1"

(2) Write reference speed

Figure 6-24 Procedure for driving of the motor

- b) Stop the motor
- (1) On the "com_u1_mode_system" row, in the [Write] column, enter "0".
 - (2) Click the [Write] button.
 - (3) Confirm that the motor has stopped.

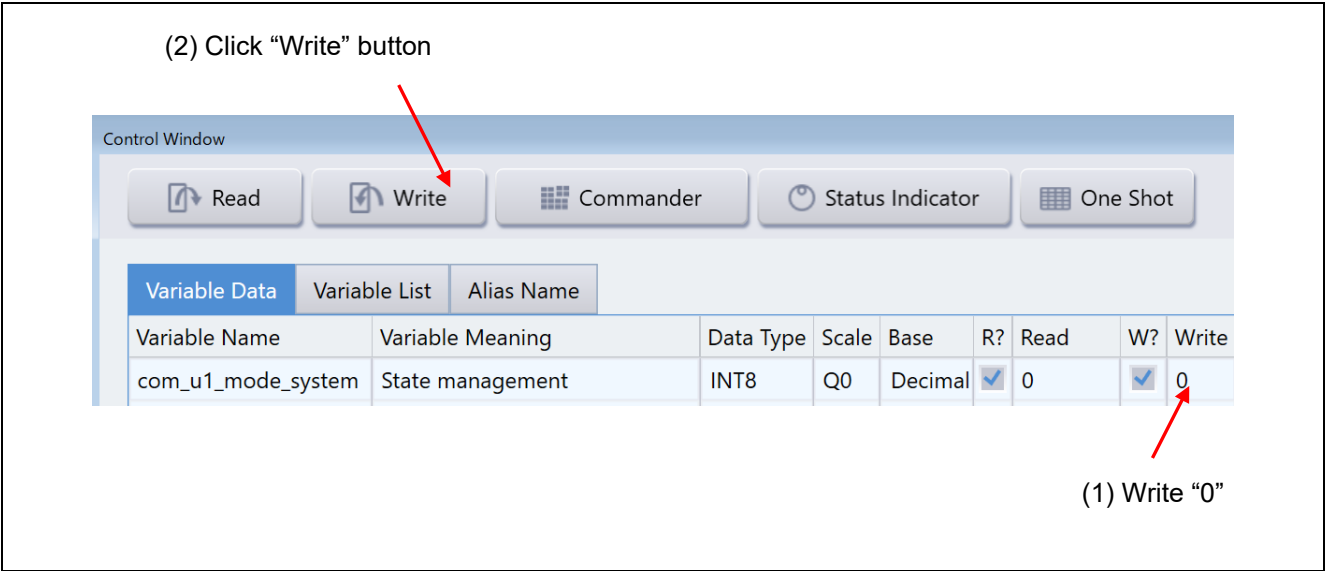


Figure 6-25 Procedure for stopping the motor

- c) What to do in case of motor stop (due to an error)
- (1) On the "com_u1_mode_system" row, in the [Write] column, enter "3".
 - (2) Click the [Write] button.

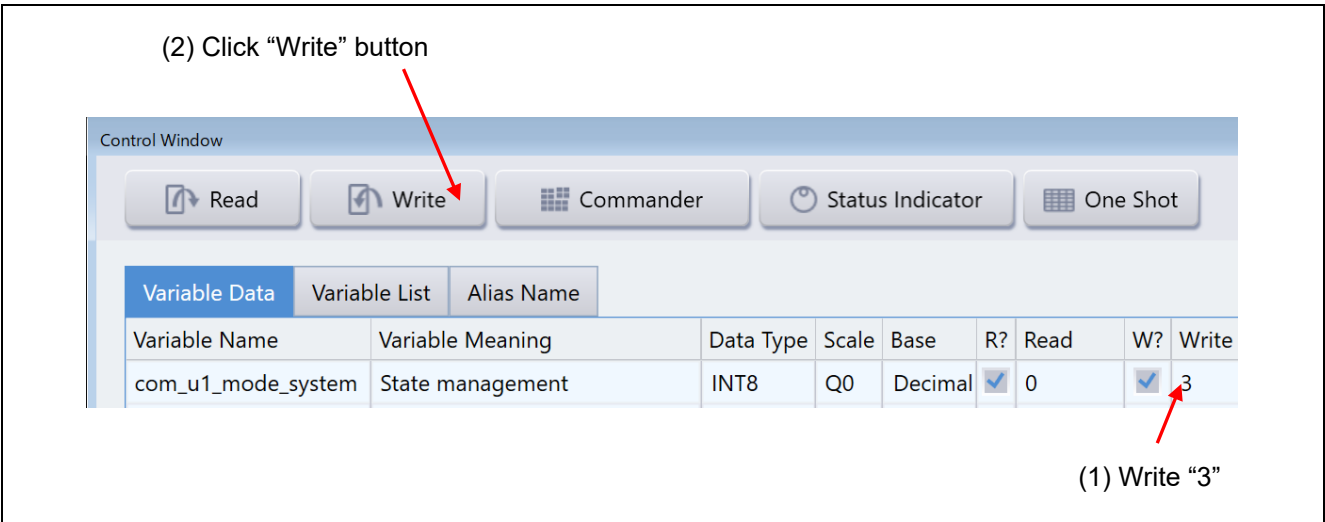


Figure 6-26 Procedure for handling an error

Table 6-3 Error status description

Value	Error Description	Assigned macro name
0x0000	No error	MOTOR_ERROR_NONE
0x0001	Hardware overcurrent error	MOTOR_ERROR_OVER_CURRENT_HW
0x0002	Overvoltage error	MOTOR_ERROR_OVER_VOLTAGE
0x0004	Overspeed error	MOTOR_ERROR_OVER_SPEED
0x0008	Hall signal timeout error	MOTOR_ERROR_HALL_TIMEOUT
0x0010	BEMF signal timeout error (Not happen in vector control with encoder)	MOTOR_ERROR_BEMF_TIMEOUT
0x0020	Unused	MOTOR_ERROR_HALL_PATTERN
0x0040	BEMF signal pattern error (Not happen in vector control with encoder)	MOTOR_ERROR_BEMF_PATTERN
0x0080	Low-voltage error	MOTOR_ERROR_LOW_VOLTAGE
0x0100	Software overcurrent error	MOTOR_ERROR_OVER_CURRENT_SW
0x0200	Induction sensor error in calibration (Not happen in vector control with encoder)	MOTOR_ERROR_INDUCATION_CORRECT
0xFFFF	Undefined error	MOTOR_ERROR_UNKNOWN

6.8 Stopping and shutting down the motor

To stop the operating motor, follow the procedure below. In an emergency, prioritize the step (2) and stop supplying 24 VDC.

- (1) Perform the procedure for stopping the motor described in 6.7b).
- (2) After confirming that the motor stops, operate the regulated DC power supply to stop supplying 24 VDC.

7. Motor control algorithm

7.1 Overview

This section describes the motor control algorithm of this sample program. Table 7-1 shows the motor control functions.

Table 7-1 Motor control functions of this sample program

Function item	Function description
Control method	Vector control
Pulse Width Modulation (PWM) method	Space vector modulation method (Sinusoidal modulation can also be selected)
Position and speed detection method	Detected with encoder and hall sensors(only at motor startup)
Control mode	Speed and Position control
Compensation function	• Voltage error compensation • Voltage phase lead compensation • Decoupling control

7.2 Control block diagram

The block diagram of vector control with encoder is shown below.

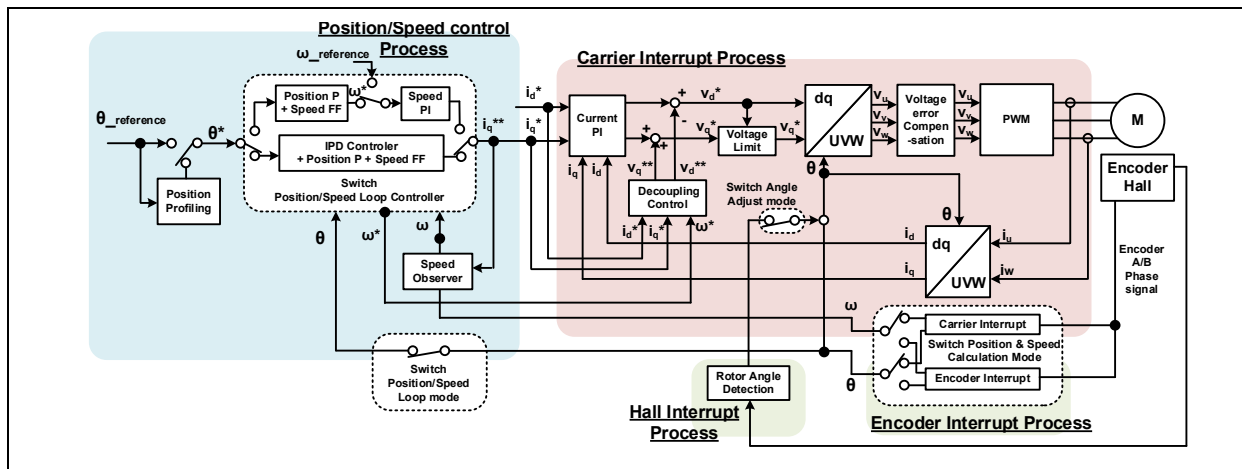


Figure 7-1 Block Diagram of Vector Control with encoder

7.3 Speed control function

The speed control function performs PI control so that the motor follows the speed command. When receiving a speed command value, the internal speed regulator outputs a current command value based on the deviation from the detected speed value.

The detected speed value is output from 7.6.

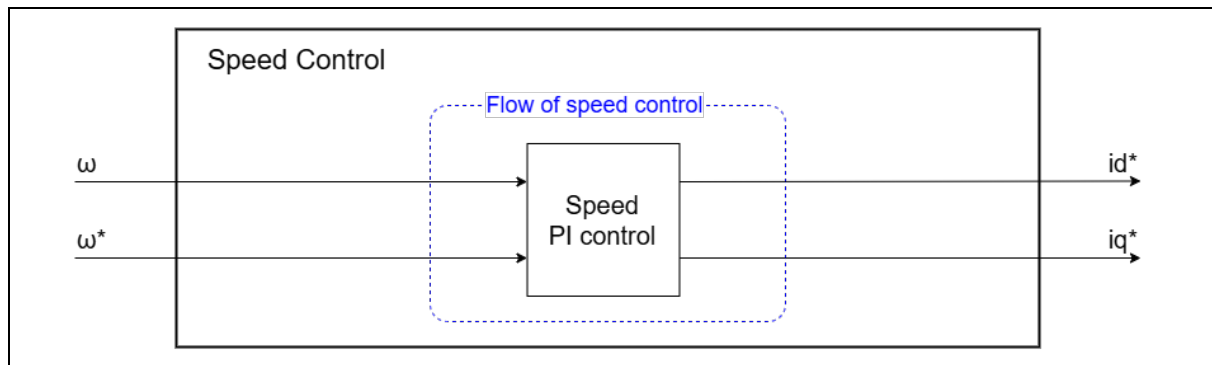


Figure 7-2 Functional block diagram for speed control

7.4 Current control function

The current control function uses the value of the incoming current to perform coordinate transformation and feedback control that are necessary for vector control, and then calculates the voltage of the PWM output. The module also controls submodules including the decoupling, lead compensation, voltage error compensation.

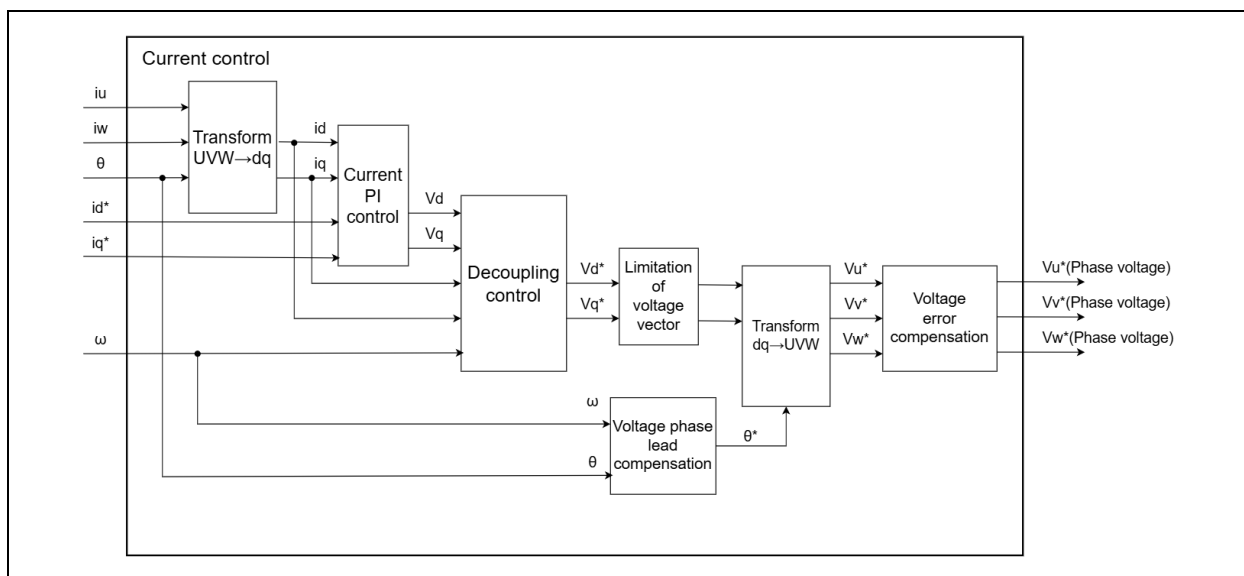


Figure 7-3 Functional block diagram for current control

7.5 Decoupling control

The decoupling control is used to improve current responsiveness and to prevent currents from interfering with each other between the d- and q-axes, thereby losing stability. The equation used is shown below. It is a voltage equation for a typical PM motor.

$$V_{d_dec}^* = RI_d^* - \omega L_q I_q^*$$

$$V_{q_dec}^* = RI_q^* + \omega L_d I_d^* + \omega \Psi$$

I_d^*, I_q^* : Current command value [A], ω : Rotation speed (Electrical angle) [rad/s],

R : Primary resistance of the motor [ohm], L_d, L_q : Inductance of the motor [H],

Ψ : Magnetic flux linkage of the motor [Wb]

The obtained voltage command value $V_{d_dec}^*$ and $V_{q_dec}^*$ are added to the voltage command value V_d^* and V_q^* output from PI regulator.

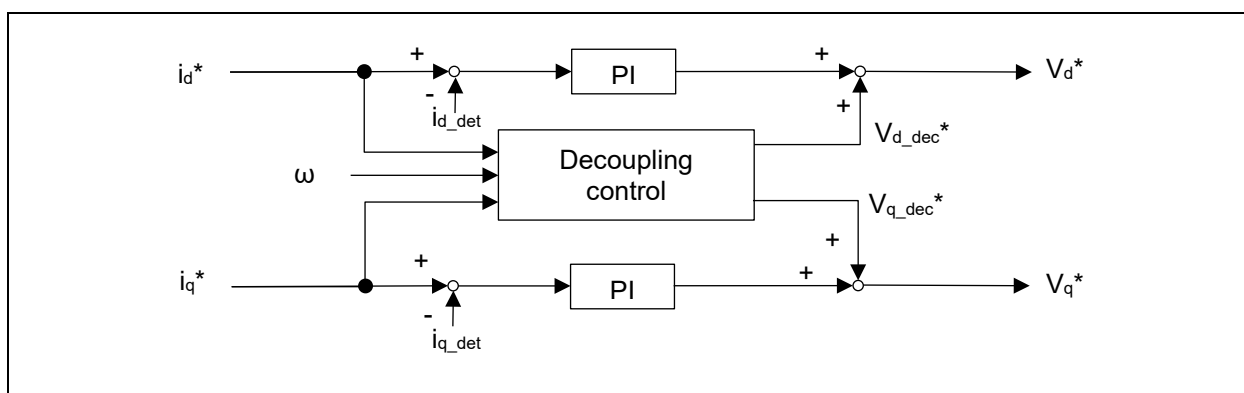


Figure 7-4 Functional block diagram for decoupling control

7.6 Detection of rotation speed

7.6.1 Calculation of angle/speed at encoder input capture interrupt (using pulse width)

At low speed, rotation speed and rotor angle are calculated at encoder input capture interrupt. Rotation speed is calculated like as below Figure 7-5. Rotor angle is calculated with the pulse counts which are detected between current and previous interrupts are added to accumulated counts.

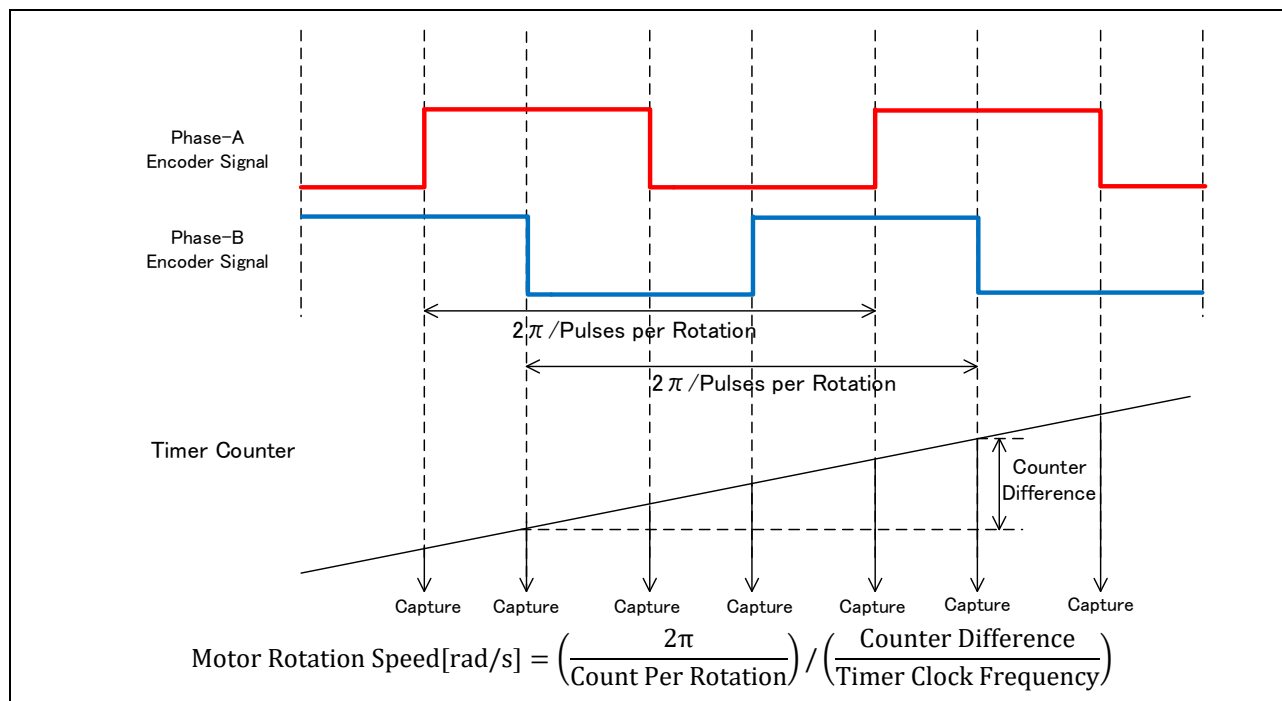


Figure 7-5 Speed calculation using encoder at low speed

7.6.2 Calculation of angle/speed at current control interrupt (using pulse counts)

At high speed, rotation speed is calculated like as below.

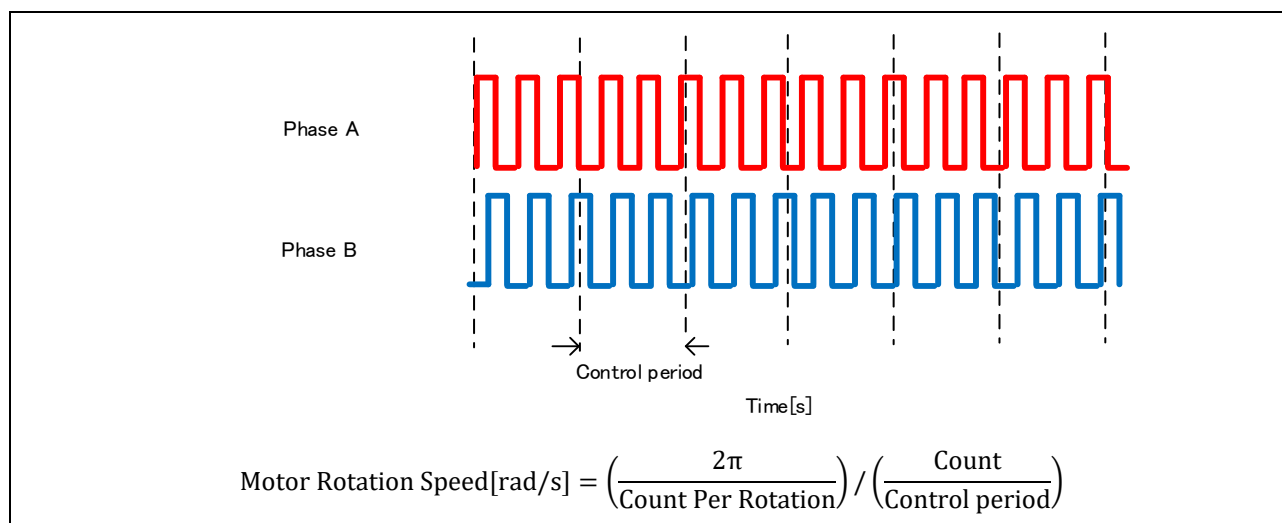


Figure 7-6 Speed calculation using encoder at high speed

7.6.3 Calculation of angle/speed at speed control interrupt (using pulse width)

Calculation of rotation speed using pulse width is performed like as below Figure 7-7. At encoder input capture interrupt, timer counts is gotten and calculate the difference with previous counts (at previous interrupt).

For that, pulse width can be measured. During speed control interrupt, measured counts are summarized. With the total counts, rotation speed can be calculated. When pulse width cannot be measured at start up, the calculation process is skipped to avoid calculation of wrong speed with very short pulse width data. When rotation speed becomes higher, the load of process becomes higher because the frequency of encoder input capture interrupt becomes much. Therefore, the interrupt is limit only one time between current control period. Rotor angle is calculated with the pulse counts which are detected between current and previous interrupts are added to accumulated counts.

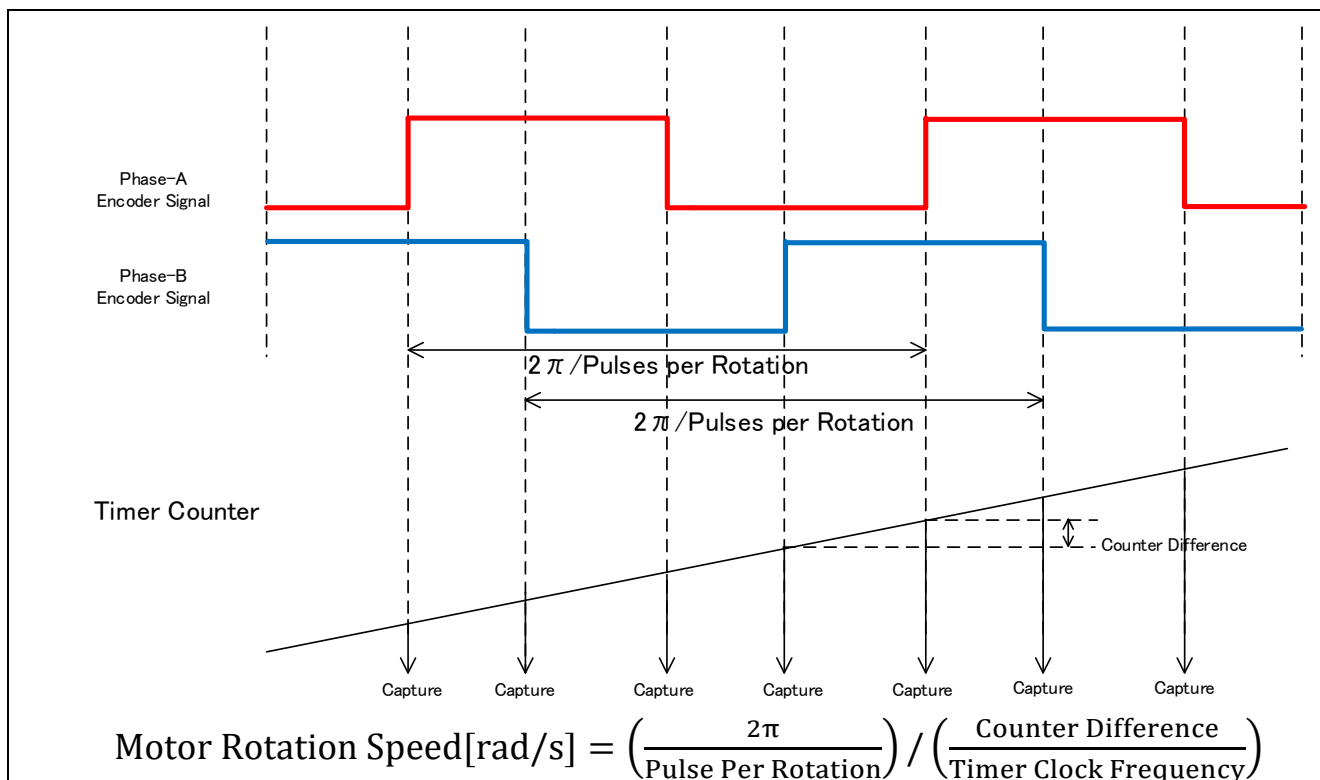


Figure 7-7 Calculation of rotation speed by encoder pulse width

7.7 Method of start up

7.7.1 Start up with forced excitation using encoder signal

When AB incremental type encoder is used as position detect sensor, absolute position cannot be detected and only relative position can be measured. Therefore, like as , electrical current is controlled in order (a) to (c) to occur magnetic field and the motor rotor is drawn in (forced excitation). By this process, the rotor position is set to d-axis 0 direction before start up. This 0 direction is considered as base position, and after control is performed by this position. In this process, the rotor will rotate 180 degree maximum by this process.

Start up the motor is controlled with d-axis/q-axis current and position reference to be calculated reasonable.

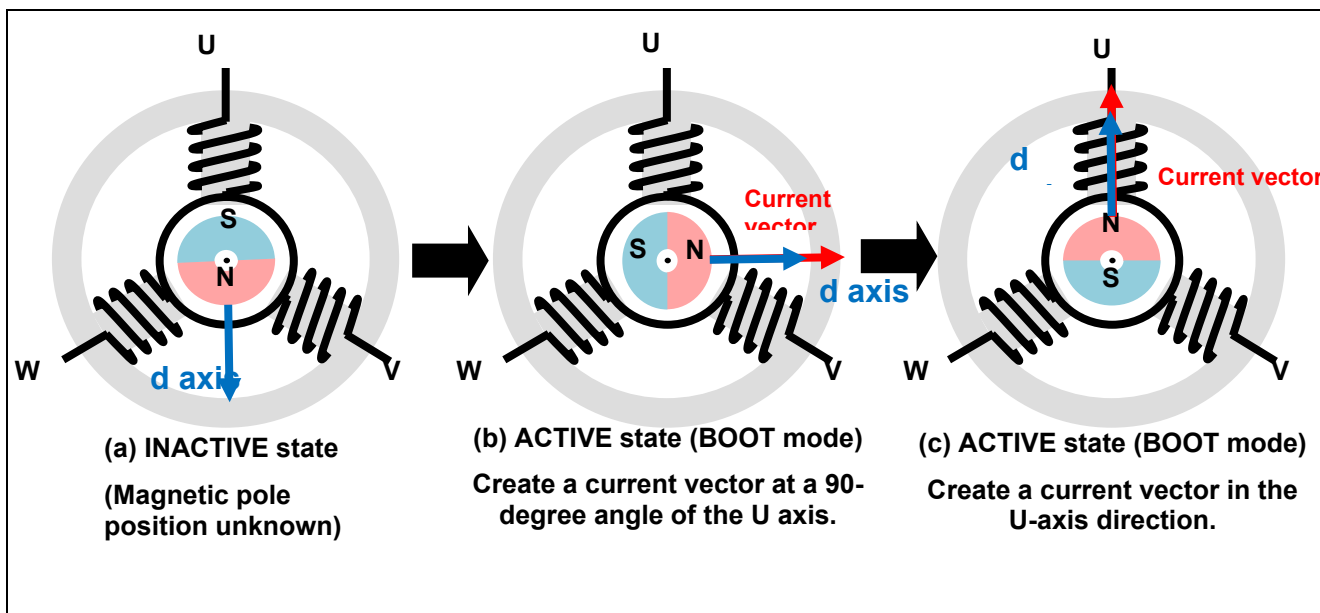


Figure 7-8 Decision of rotor position by moving with forced excitation

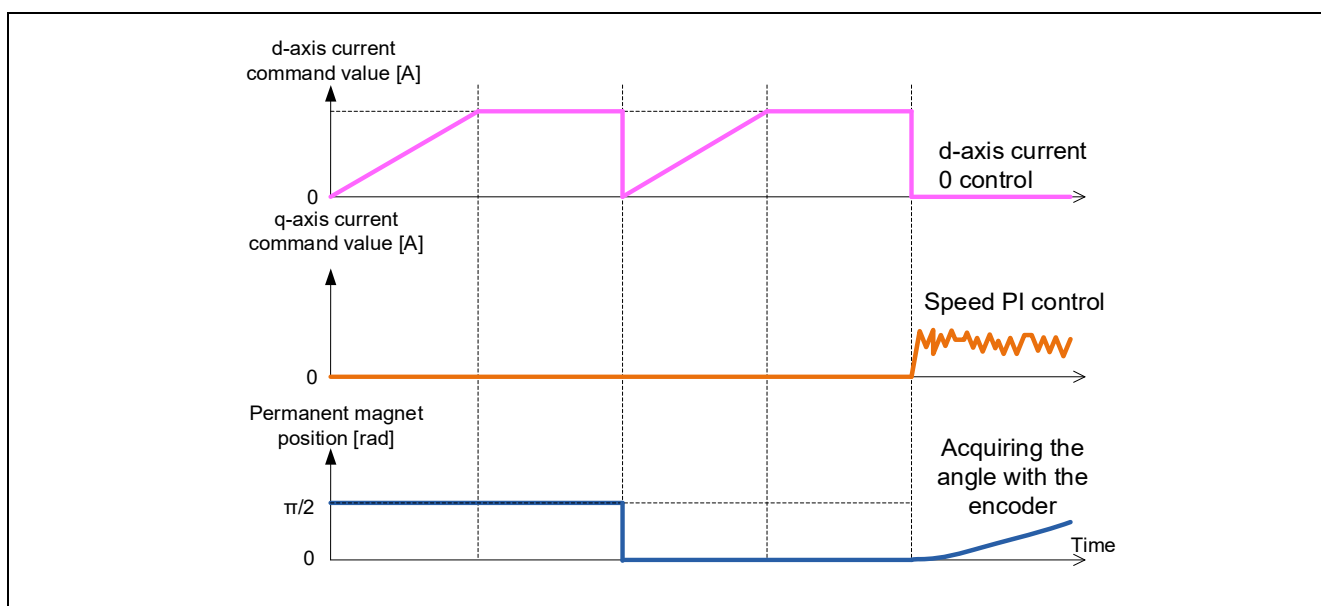


Figure 7-9 Startup sequence based on encoder-based vector control (example)

7.7.2 Startup with using hall sensors

When hall sensors are used with encoder at startup, rotor position can be detected in each 60 degrees. In that case, the difference of rotor position from actual position has maximum almost 60 degrees. Therefore, the rotor position at startup will be set at the center position of hall pattern as an assumption. When the first hall interrupts detected, the rotor position is corrected to actual position from assumed position. The method to set rotor position at startup with hall sensors is explained below.

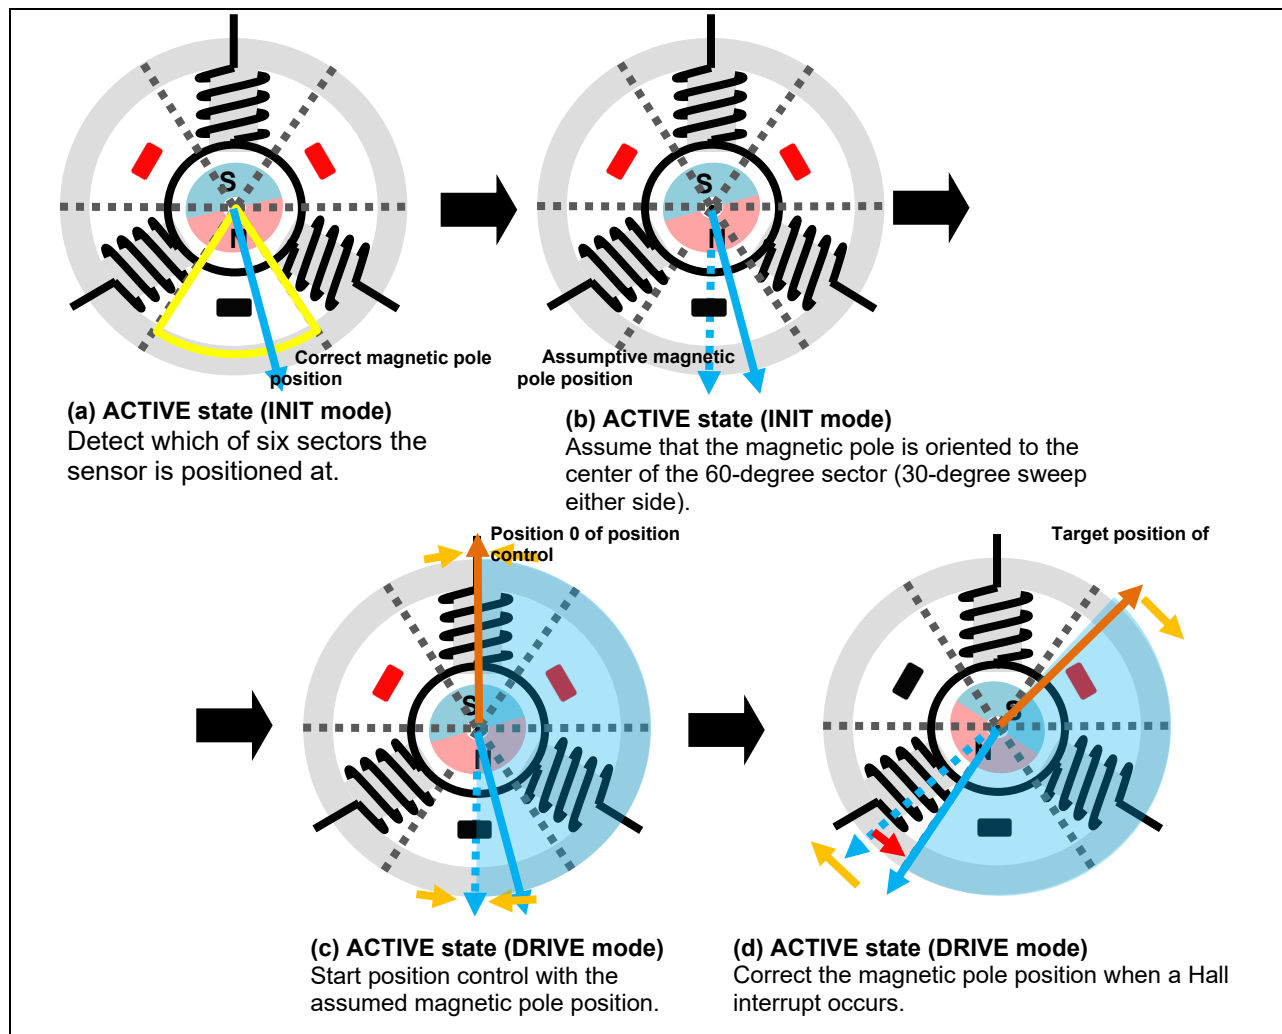


Figure 7-10 Procedure for determining the magnetic pole position of a permanent magnet

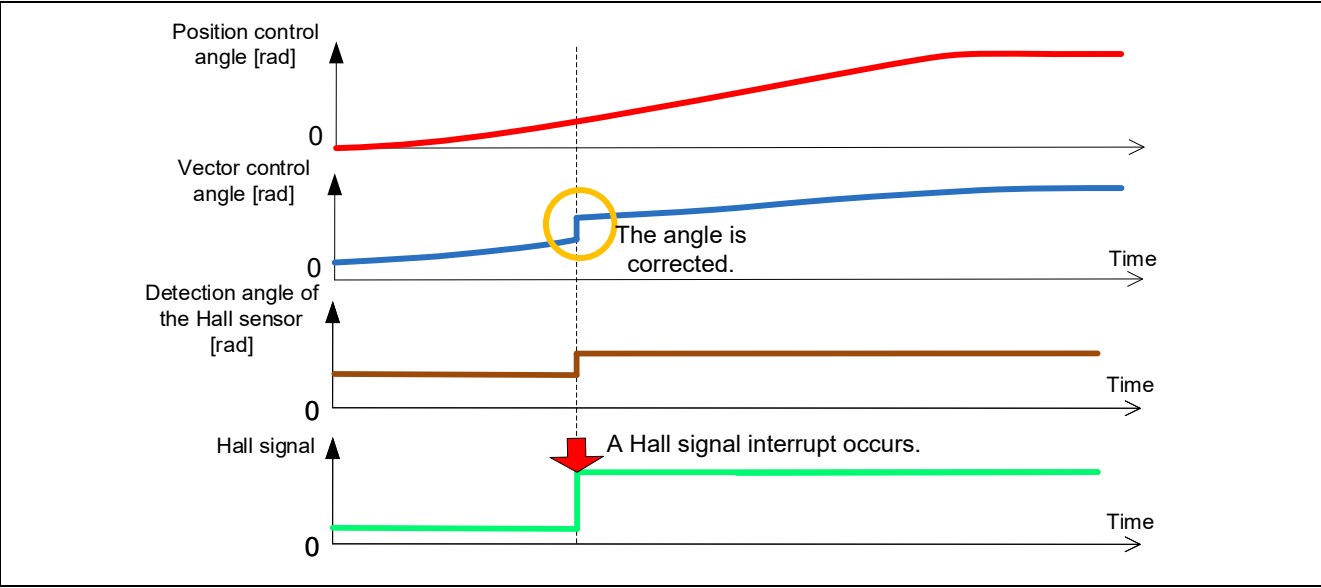


Figure 7-11 Startup sequence in initial position detection using a Hall sensor

7.8 Generation of position reference (Position Profile of Trapezoidal Curve for Speed Command Value)

In vector control software for PMSM with encoder, the position profile generation is used to create command value (input position value). The implementation of command value in each control cycle is used as method of managing acceleration and the maximum speed value with respect to target position value.

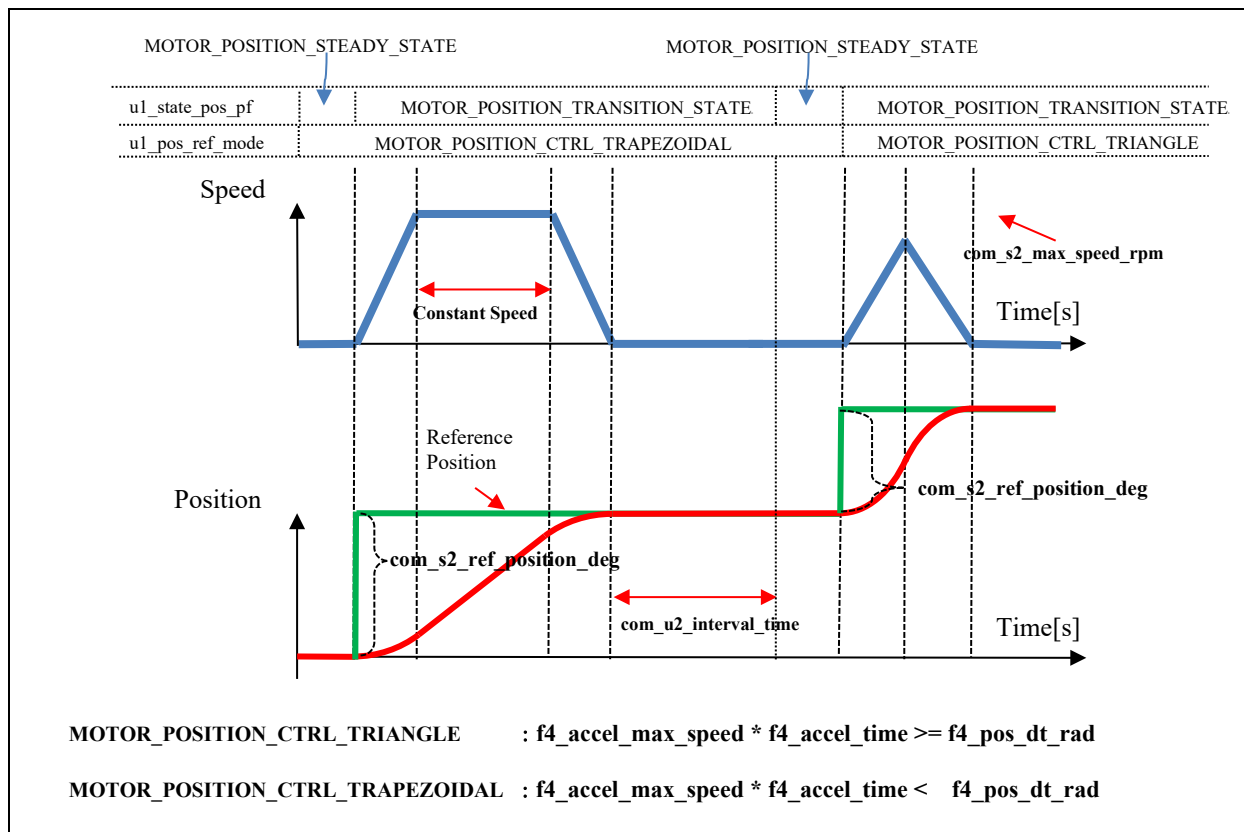


Figure 7-12 Position Profile Generation

Following variables are required to create a command value.

- Acceleration time (com_f4_accel_time)
- Maximum speed command value (com_f4_max_speed_rpm)
- Position stabilization wait time (com_u2_interval_time)

In cases that the speed calculated from the position deviation and acceleration time is greater than the maximum speed during acceleration, a trapezoidal speed command value is used.

7.9 Flux weakening control function

The flux weakening control function controls the d-axis current in the negative direction. Even under conditions where the inductive voltage ($= \omega\psi$) generated in proportion to the rotation of the PM motor exceeds the voltage that can be output from the inverter bus voltage, this function increases the d-axis current command value in the negative direction to reduce the inductive voltage (Figure 7-13 R). Through this reduction in the voltage saturation region, the q-axis current command value, which is necessary for acceleration, can be increased and the output torque in the high-speed rotation region and acceleration of rotation can thus be improved.

This function automatically detects the state where the speed of motor rotation has become fast and the margin of the available voltage in comparison with the current voltage has become small. In this state, this function increases the I_d^* value in the negative direction and cancels the inductive voltage according to the voltage equation of the PM motor.

To achieve this, the equation shown below is used to obtain the maximum limit on the inductive voltage. R is the resistance value of the motor and I_a is the square root of the sum of squares of the detected I_d and I_q values ($\sqrt{I_d \times I_d + I_q \times I_q}$). For V_{amax} , the maximum magnitude of the voltage vector that has been calculated in voltage error compensation or modulation processing is used.

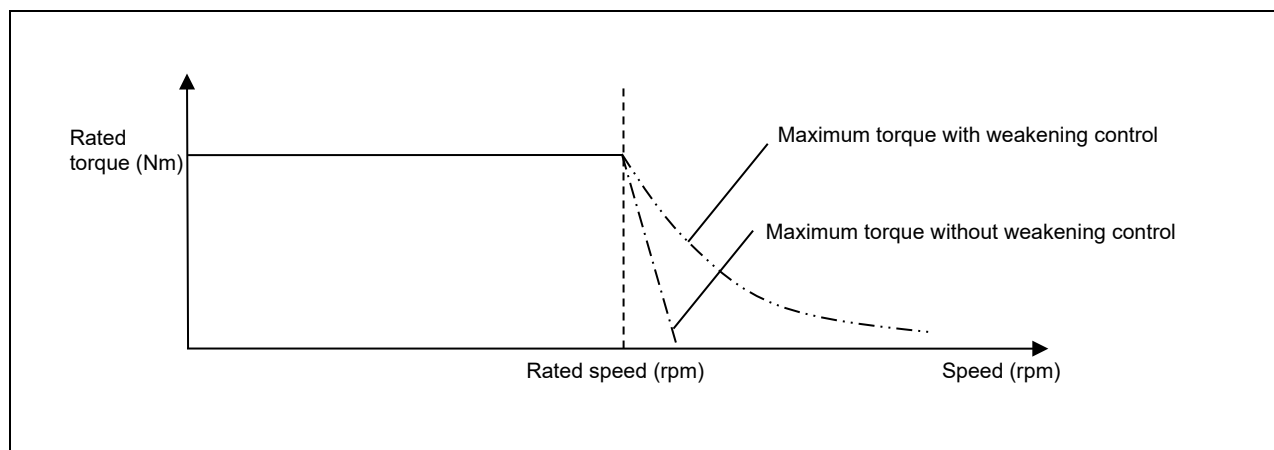


Figure 7-13 Relationship between the Available Output Torque and Speed

$$V_{om} = V_{amax} - I_a R$$

V_{om} : Maximum limit on inductive voltage (V), V_{amax} : Maximum magnitude of voltage vector (V),
 I_a : Magnitude of current vector (A)

Figure 7-14 Equation for Calculating the Maximum Limit on the Inductive Voltage

$$I_d = \frac{-\psi_a + \sqrt{\left(\frac{V_{om}}{\omega}\right)^2 - (L_q I_q)^2}}{L_d}$$

$$\because V_{om} = V_{amax} - I_a R$$

V_{om} : Maximum limit on inductive voltage (V), V_{amax} : Maximum magnitude of voltage vector (V),
 I_a : Magnitude of current vector (A)

Figure 7-15 Equation for Calculating the d-axis Current Command Value in Flux Weakening Control

7.10 Voltage phase lead compensation

When generating three-phase voltage commands for U, V, and W phases, 2-phase to 3-phase conversion is performed with the angle advanced by 0.5 control interval from the detected angle. This process improves control stability. Improvement can be achieved for high-speed rotation applications, when the PWM carrier cycle is short, or when skipping is used.

During command calculation, the angle is continuously displaced as the motor rotation advances. This function takes advantage of the fact that the command calculation time is constant to interpolate the advancing angle from the previous angular displacement.

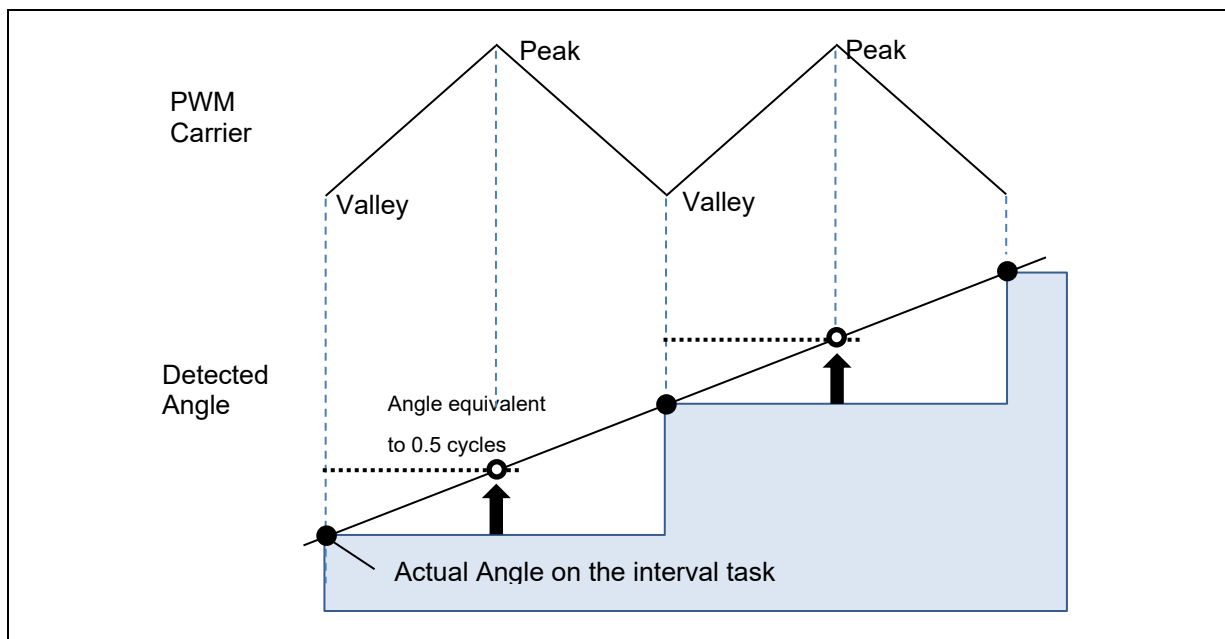


Figure 7-16 Example of the amount of angle advanced in a PWM carrier cycle

7.11 Voltage error compensation

In the voltage PWM inverter, to prevent the switching elements of the upper and lower sides from creating a short circuit, a dead time during which the two elements are simultaneously turned off is set. Therefore, an error arises between the voltage command value and the voltage actually applied to the motor, degrading the control precision. Voltage error compensation is implemented to reduce this error.

The current dependency of the voltage error depends on the current (direction and magnitude), dead time, and the switching characteristics of the power elements to be used, and has the characteristics shown below. Voltage error compensation is achieved by applying the inverse voltage pattern of the voltage error (as shown below) to the voltage command value according to the current.

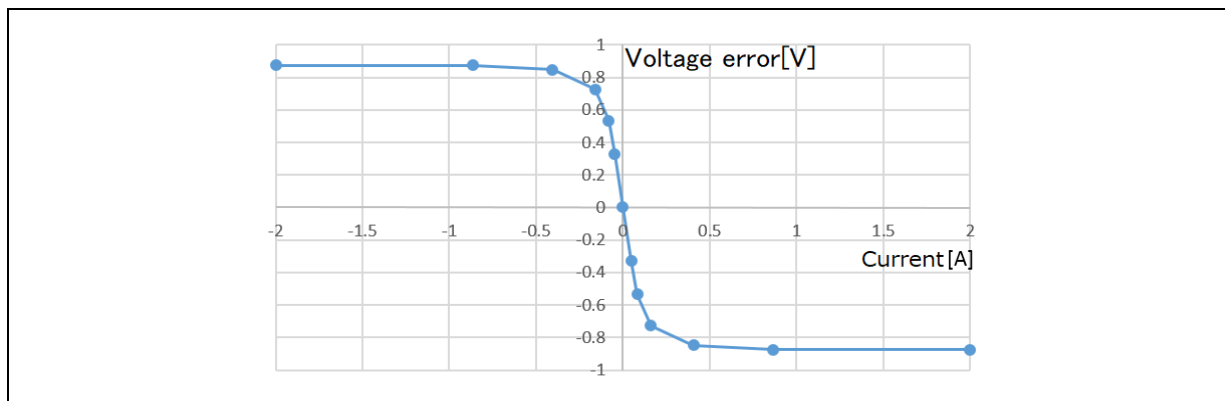


Figure 7-17 Current dependency in the voltage error (example)

7.12 Pulse Width Modulation (PWM) mode

In the sample program, the input voltage to the motor is generated by pulse-width modulation (PWM). In this module, the PWM duty cycle is calculated. In addition, a modulated voltage can be output to improve the voltage utilization. The modulation operation is set from the API of the current control module. In this sample program, one of two pulse-width modulation drive modes can be selected.

a) Sinusoidal modulation (MOD_METHOD_SPWM)

The modulation rate m is defined as follows:

$$m = \frac{V}{E}$$

m : Modulation rate, V : Command value voltage,
 E : Inverter bus voltage

b) Space vector modulation (MOD_METHOD_SVPWM)

In vector control of a permanent magnet synchronous motor, generally, the desired voltage command value of each phase is generated sinusoidally. However, if the generated value is used as-is for the modulation wave for PWM generation, voltage utilization as applied to the motor (in terms of line voltage) is limited to a maximum of 86.7% with respect to inverter bus voltage. As such, as shown in the following expression, the average of the maximum and minimum values is calculated for the voltage command value of each phase, and the value obtained by subtracting the average from the voltage command value of each phase is used as the modulation wave. As a result, the maximum amplitude of the modulation wave is multiplied by $\sqrt{3}/2$, while voltage utilization becomes 100% and line voltage is unchanged.

$$\begin{pmatrix} V'_u \\ V'_v \\ V'_w \end{pmatrix} = \begin{pmatrix} V_u \\ V_v \\ V_w \end{pmatrix} + \Delta V \begin{pmatrix} 1 \\ 1 \\ 1 \end{pmatrix}$$

$$\therefore \Delta V = -\frac{V_{\max} + V_{\min}}{2}, \quad V_{\max} = \max\{V_u, V_v, V_w\}, \quad V_{\min} = \min\{V_u, V_v, V_w\}$$

V_u, V_v, V_w : Command values of U-, V-, and W-phases

V'_u, V'_v, V'_w : Command values of U-, V-, and W-phases for PWM generation (modulation wave)

The modulation rate m is defined as follows:

$$m = \frac{V'}{E}$$

m : Modulation rate, V' : Phase voltage command for PWM generation,
 E : Inverter bus voltage

8. Hardware specifications

8.1 User interface

User interface in board circuit is listed below Table 8-1.

Table 8-1 User interface in board circuit

Item	Interface	Function
Rotation speed	Variable resistor (VR1)	Input speed reference
START/STOP	Toggle switch (SW1)	Start/Stop motor rotation
ERROR RESET	Push switch (SW2)	Reset from error state.
LED1	Orange LED (LED1)	• Motor driven : lighten • Motor stop : lights out
LED2	Orange LED (LED2)	• Error happen : lighten • No error : lights out
LED3	Orange LED (LED3)	- Positioning completed: ON - Positioning not completed: OFF (Only RA6T2, RA8T2)
RESET	Push switch (RESET1)	System reset

Pin interface of this sample software is listed below Table 8-2 and Table 8-3.

Table 8-2 Pin interface [1/2]

Function	RA6T2	RA6T3	RA4T1
Measure inverter bus voltage	Ver.1: PA06 / AN006 Ver.2: PA07 / AN007	P004 / AN004	P004 / AN004
Input speed reference (VR1)	Ver.1: PB00 / AN008 Ver.2: P000 / AN016	P005 / AN005	P005 / AN005
START/STOP Toggle switch (SW1)	PD04	P304	P304
Error reset push switch (SW2)	PD07	P200	P200
LED1 Light control	PD01	P113	P113
LED2 Light control	PD02	P106	P106
LED3 Light control	PD03	-	-
Measure current of U-phase	PA04 / AN004	P000 / AN000	P000 / AN000
Measure current of V-phase	PA02 / AN002	P001 / AN001	P001 / AN001
Measure current of W-phase	PA00 / AN000	P002 / AN002	P002 / AN002
PWM Output (Up)	PB04 / GTIOC4A	P409 / GTIOC1A	P409 / GTIOC1A
PWM Output (Vp)	PB06 / GTIOC5A	P103 / GTIOC2A	P103 / GTIOC2A
PWM Output (Wp)	PB08 / GTIOC6A	P111 / GTIOC3A	P111 / GTIOC3A
PWM Output (Un)	PB05 / GTIOC4B	P408 / GTIOC1B	P408 / GTIOC1B
PWM Output (Vn)	PB07 / GTIOC5B	P102 / GTIOC2B	P102 / GTIOC2B
PWM Output (Wn)	PB09 / GTIOC6B	P112 / GTIOC3B	P112 / GTIOC3B
Encoder A phase input	PC14 / GTIOC3A	P101 / GTIOC5A	P101 / GTIOC5A
Encoder B phase input	PC15 / GTIOC3B	P100 / GTIOC5B	P100 / GTIOC5B
U phase hall sensor input (HU)	Ver.1: PC04 Ver.2: PB02	P008	P008
V phase hall sensor input (HV)	Ver.1: PC05 Ver.2: PC00	P006	P006
W phase hall sensor input (HW)	Ver.1: PB01 Ver.2: PB10	P015	P015
Emergency PWM stop input at overcurrent	PC13 / GTETRGD	P104 / GTETRGB	P104 / GTETRGB

Table 8-3 Pin interface [2/2]

Function	RA8T1	RA8T2
Measure inverter bus voltage	P008 / AN008	P007 / AN007
Input speed reference (VR1)	P014 / AN007	P015 / AN015
START/STOP Toggle switch (SW1)	PA15	PA00
Error reset push switch (SW2)	PA13	PA07
LED1 Light control	PA12	P614
LED2 Light control	PA14	PA15
LED3 Light control	-	PA04
Measure current of U-phase	P004 / AN000	P006 / AN006
Measure current of V-phase	P005 / AN001	P008 / AN008
Measure current of W-phase	P006 / AN002	P010 / AN010
PWM Output (Up)	P115 / GTIOC5A	P605 / GTIOC8A
PWM Output (Vp)	P113 / GTIOC2A	P603 / GTIOC7A
PWM Output (Wp)	P300 / GTIOC3A	P612 / GTIOC9A
PWM Output (Un)	P609 / GTIOC5B	P604 / GTIOC8B
PWM Output (Vn)	P114 / GTIOC2B	P602 / GTIOC7B
PWM Output (Wn)	P112 / GTIOC3B	P613 / GTIOC9B
Encoder A phase input	P903 / GTIOC11A	P507 / GTIOC0A
Encoder B phase input	P904 / GTIOC11B	P508 / GTIOC0B
U phase hall sensor input (HU)	P907	PA08
V phase hall sensor input (HV)	P905	PA10
W phase hall sensor input (HW)	P906	PA09
Emergency PWM stop input at overcurrent	P613 / GTETRGA	P112 / GTETRGA

8.2 Peripheral functions

Peripheral functions which are used in sample program are listed below Table 8-4 and Table 8-5.

Table 8-4 Peripheral functions [1/2]

Peripheral	Purpose	RA6T2	RA6T3	RA4T1
A/D converter	Measure current of U-phase	AN004	AN000	AN000
	Measure current of V-phase	AN002	AN001	AN001
	Measure current of W-phase	AN000	AN002	AN002
	Measure inverter bus voltage	Ver.1: AN006 Ver.2: AN007	AN004	AN004
	Measure VR input	Ver.1: AN008 Ver.2: AN016	AN005	AN005
AGTW	Interval timer for speed control	AGT0	AGT0	AGT0
GPT	PWM output of U-phase	CH4	CH1	CH1
	PWM output of V-phase	CH5	CH2	CH2
	PWM output of W-phase	CH6	CH3	CH3
	Encoder phase counter	CH3	CH5	CH5
	Encoder count capture	CH1	CH0	CH0
POEG	Emergency stop input of overcurrent	Group D	Group B	Group B

Table 8-5 Peripheral functions [2/2]

Peripheral	Purpose	RA8T1	RA8T2
A/D converter	Measure current of U-phase	AN000	AN006
	Measure current of V-phase	AN001	AN008
	Measure current of W-phase	AN002	AN010
	Measure inverter bus voltage	AN008	AN007
	Measure VR input	AN007	AN015
AGTW	Interval timer for speed control	AGT0	AGT0
GPT	PWM output of U-phase	CH5	CH8
	PWM output of V-phase	CH2	CH7
	PWM output of W-phase	CH3	CH9
	Encoder phase counter	CH11	CH0
	Encoder count capture	CH0	CH2
POEG	Emergency stop input of overcurrent	Group A	Group A

(1) A/D converter

A/D converter measure current of U-phase(I_u), current of V-phase(I_v), current of W-phase(I_w), inverter bus voltage(V_{dc}), and Speed reference input (VR) with "Single scan mode" (use hardware trigger).

A/D conversion is synchronized with underflow of GPT (trough of PWM). A/D conversion end interrupt is used as current control period interrupt.

(2) General asynchronous timer (AGTW)

AGTW is used as cyclic interval timer to generate speed control period interrupt.

(3) General purpose timer (GPT)

GPT outputs complementally PWM by its original mode with dead time.

(4) General purpose timer (GPT)

Use as phase counting mode2 to measure the phase difference between encoder phase A and B signal and counts the encoder input.

(5) Port output enable for GPT (POEG)

When overcurrent is detected (low level input at GTETRGx pin), set PWM output ports are all high-impedance state.

9. Software specifications and configuration

9.1 Software specifications

The following shows the basic software specifications of this system.

Table 9-1 Basic Specifications of Vector Control with Encoder Software

Item	Content
Control method	Vector control
Motor rotation start/stop	SW1 input or input from 'Renesas Motor Workbench'
Position detection method	Position detection using encoder and hall sensors (Only motor startup)
Input voltage	24 [VDC]
Main clock frequency	RA6T2: 240 [MHz] RA6T3: 200 [MHz] RA4T1: 100 [MHz] RA8T1: 480 [MHz] RA8T2: 1 [GHz]
Carrier frequency (PWM)	20 [kHz] (Carrier period: 50 [μs])
Modulation method of PWM	Space vector modulation (enable to select sinsoidal modulation)
Dead time	2 [μs]
Current control period	RA6T2: 50 [μs] RA6T3: 50 [μs] RA4T1: 100 [μs] RA8T1: 50 [μs] RA8T2 :50[μs]
Speed and position control period	RA6T2: 500 [μs] RA6T3: 500 [μs] RA4T1: 1000 [μs] RA8T1: 500 [μs] RA8T2: 500 [μs]
Rotation speed control range	CW: 0 [rpm] to 4000 [rpm] CCW: 0 [rpm] to 4000 [rpm]
Position control range	At board_ui: Position command generation: Voltage input divided by VR (input range) -180° to 180° At Renesas Motor Workbench: Position command generation: Position profile of trapezoidal curve for speed command value (input range) -32768° to 32767°
Position resolution	0.09degree (Encoder pulse:1000[ppr], 4000 [cpr] at 4 multiplication)
Dead band of position*	Encoder count ±1 [cpr] (±0.09degree)
Natural frequency of each control system	Current control system : 300 [Hz] Speed control system : 3 [Hz] Position control system : 4 [Hz]
Optimization setting of compiler	Optimization level Optimize more(-O2) (default setting)
Processing stop for protection	Disables the motor control signal output (six outputs), under any of the following conditions. 1. Instantaneous value of current of any phase exceeds 3.82(=1.8*sqrt (2)*1.5) [A] (monitored in current control period) 2. Inverter bus voltage exceeds 60 [V] (monitored in current control period) 3. Inverter bus voltage is less than 8 [V] (monitored in current control period) 4. Rotation speed exceeds 4500 [rpm] (monitored in current control period) When an external over current signal is detected (when a low level is detected), the PWM output ports are set to high impedance state.

* Dead band is provided to avoid hunting at the detection of target position.

9.2 Overall configuration of the software

The overall configuration of the software is shown below.

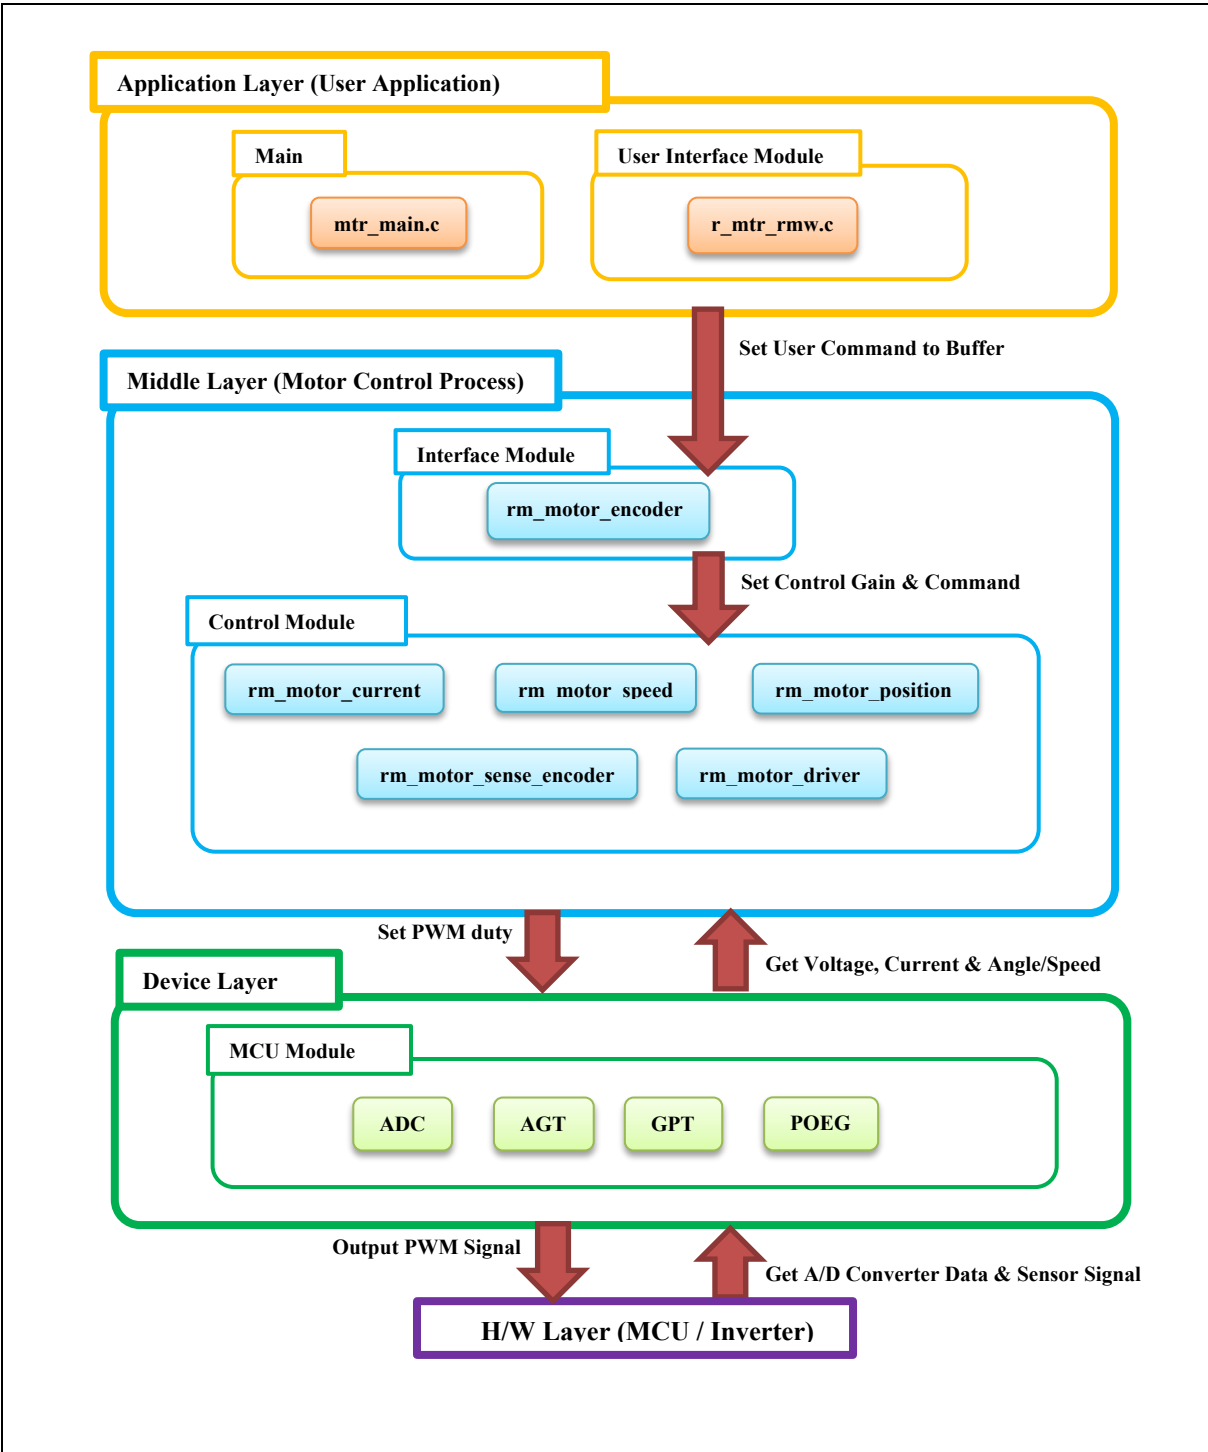


Figure 9-1 Module Configuration

9.3 Explanation about interrupt

In the sample program of this document, main process are performed at speed control period interrupt and current control period interrupt. UI functions as interface layer are performed in main routine. POEG hardware interrupt is used as emergency stop at detection of overcurrent by hardware.

Table 9-2 Interrupt priority

Interrupt level	Priority	function
15	 Min Max	
14		
13		
12		
11		
10		AGT0 INT Speed control period interrupt
9		
8		
7		
6		
5		ADC0 ADI0(RA6T2, RA8T2) ADC0 SCAN END(RA6T3, RA4T1, RA8T1) Current control period interrupt (A/D conversion end interrupt)
4		
3		GPT3 CAPTURE COMPARE A(RA6T2, RA8T2) GPT5 CAPTURE COMPARE A(RA6T3, RA4T1) GPT11 CAPTURE COMPARE A(RA8T1) GPT capture A interrupt (encoder input capture interrupt)
2		
1		
0		POEG3 EVENT(RA6T2) POEG1 EVENT(RA6T3, RA4T1) POEG0 EVENT(RA8T1, RA8T2) Over current detection interrupt

9.4 File and folder configuration

The lists of folder and file configuration of the sample program are shown below.

Table 9-3 File and folder configuration[1/2]

Folder	Subfolder	File	Remarks
ra_cfg			Generated config header
ra_gen			Generated register setting, main function etc.
ra	arm		CMSIS source code
	board		Function definition for board (bsp)
	fsp/inc/api	bsp_api.h	BSP API definition
		fsp_common_api.h	Common API definition
		r_adc_api.h	AD API definition
		r_elc_api.h (RA6T3, RA4T1, RA8T1)	ELC API definition
		r_external_irq_api.h	ICU API definition
		r_ioport_api.h	I/O API definition
		r_poeg_api.h	POEG API definition
		r_three_phase_api.h	3phase PWM API definition
		r_timer_api.h	Timer API definition
		r_transfer_api.h	Transfer API definition
		rm_motor_angle_api.h	Angle detection API definition
		rm_motor_api.h	Motor control API definition
		rm_motor_current_api.h	Current control API definition
		rm_motor_driver_api.h	Motor driver API definition
		rm_motor_inertia_estimate_api.h	Inertia estimate API definition
		rm_motor_position_api.h	Position control API definition
		rm_motor_return_origin_api.h	Return to origin API definition
		rm_motor_speed_api.h	Speed control API definition
	fsp/inc/instances	r_adc_b.h(RA6T2, RA8T2)	Function definition for ADC
		r_adc.h(RA6T3, RA4T1 and RA8T1)	
		r_agt.h	Function definition for AGT
		r_elc.h(Only RA6T3, RA4T1 and RA8T1)	Function definition for ELC
		r_gpt.h	Function definition for GPT
		r_gpt_three_phase.h	Function definition for 3 Phase PWM
		r_icu.h	Function definition for ICU
		r_ioport.h	Function definition for I/O
		r_poeg.h	Function definition for POEG
		rm_motor_current.h	Function definition for current control
		rm_motor_driver.h	Function definition for motor driver
		rm_motor_encoder.h	Function definition for vector control with encoder
		rm_motor_position.h	Function definition for position control
		rm_motor_sense_encoder.h	Function definition for encoder
		rm_motor_speed.h	Function definition for speed control

Table 9-4 File and folder configuration[2/2]

Folder	Subfolder	File	Remarks
ra	fsp/lib		Library files
	fsp/src	bsp	BSP driver folder
		r_adc_b/r_adc_b.c(RA6T2, RA8T2) r_adc/r_adc.c(RA6T3, RA4T1 and RA8T1)	ADC driver
		r_agt/r_agt.c	AGT driver
		r_elc/r_elc.c(Only RA6T3, RA4T1 and RA8T1)	ELC driver
		r_gpt/r_gpt.c	GPT driver
		r_gpt_three_phase/ r_gpt_three_phase.c	3 phase PWM driver
		r_icu/r_icu.c	ICU driver
		r_ioport/r_ioport.c	I/O driver
		r_poeg/r_poeg.c	POEG driver
		rm_motor_current/rm_motor_current.c	Current control driver
		rm_motor_current/rm_motor_current_library.h	Current control library API definition
		rm_motor_driver/rm_motor_driver.c	Motor driver
		rm_motor_encoder/rm_motor_encoder.c	Vector control with encoder driver
		rm_motor_position/rm_motor_position.c	Position control driver
		rm_motor_position/rm_motor_position_library.h	Position control library API definition
		rm_motor_sense_encoder/rm_motor_sense_encoder.c	Encoder driver
		rm_motor_speed/rm_motor_speed.c	Speed control driver
		rm_motor_speed/rm_motor_speed_library.h	Speed control library API definition
src	application/main	mtr_main.h , mtr_main.c	User main function
		r_mtr_control_parameter.h	Control parameters definition
		r_mtr_motor_parameter.h	Motor parameters definition
	application/rmw	r_mtr_rmw.h , r_mtr_rmw.c	Function definition for Analyzer UI
		ICS2_RA6T2.h , ICS2_RA6T3.h , ICS2_RA4T1.h ICS2_RA8T1.h , ICS2_RA8T2.h	Function definition for RMW communication
		ICS2_RA6T2.o , ICS2_RA6T3.o , ICS2_RA4T1.o ICS2_RA8T1.o , ICS2_RA8T2.o	Communication library for GUI tool

FSP can be used to generate peripheral drivers easily.

FSP saves the settings information about the microcontrollers, peripheral functions, pin functions, and other items that are used for the project in a Configuration Settings File (configuration.xml), and references the information saved in the file. Settings of configuration can be changed with an operation in e² studio.

Below folders are also generated automatically by FSP at structured a program project.

- ra

Information about selected target board, header and code files of selected FSP modules are installed below this folder.

If you want to change code for adding functions, maintain the header files of modules and C code files under ra/fsp/inc and ra/fsp/src.

- ra_cfg

Settings (as like “compile option”) about selected functions of FSP modules are registered below this folder. Do not edit. These settings are able to be changed only by FSP operation.

- ra_gen

Files which include variables, and these initial values which are generated with configuration settings(Pins, interrupts, property of each module and so on), set by FSP operation, are registered below this folder. These files are always generated at program build. Therefore, it is no need to modify directly.

9.5 Application layer

The application layer is used for selecting the user interface (UI), setting command values for controlling motor modules that use RMW, and updating parameters for control modules.

9.5.1 Functions

Table 9-5 lists the functions that are configured in the application layer.

Table 9-5 Functions available in the application layer

Functions	Description
Main processing	Enables or disables each user command in the system.
UI processing	Selects of Board UI or RMW UI, and manages these.
Manager processing	Manages motor start/stop. Reads speed reference and reflects.
RMW UI processing	Acquires and sets parameters (including command values).

9.5.2 Configurations

Application layer is a user interface layer of motor control, which uses generated FSP modules (Speed, Current and so on). Therefore, Application layer program of this sample program is implemented only as a sample. Configurations of this application layer are implemented in "mtr_main.h" file as MACRO definitions.

Table 9-6 shows the configurations used in the application layer.

Table 9-6 List of configurations

File name	Macro name	Description
mtr_main.h	CHATTERING_CNT	Chattering counts for switch read.
	MTR_MAX_SPEED_RPM	Maximum limit of speed reference If you set large value of this, speed reference is limited with this value.
	CONFIG_DEFAULT_UI	Selection of Board UI/RMW UI at reset start.
	MTR_ADCH_VR1	AD conversion channel of VR for speed reference.

Table 9-7 List of initial values for configurations

Macro name	Set value
CHATTERING_CNT	10
MTR_MAX_SPEED_RPM	4000
CONFIG_DEFAULT_UI	BOARD_UI
MTR_ADCH_VR1	RA6T2 Ver.1 : 8 RA6T2 Ver.2 : 16 RA6T3, RA4T1 : 5 RA8T1 : 7 RA8T2 : 15

9.5.3 Structure and variable information

Table 9-8 and Table 9-9 list the variables that can be used by users in the application layer.

The variables which are listed in Table 9-8 and Table 9-9 can be changed by users.

When you change these values by RMW, these are reflected to variables listed in Table 9-10. The application layer reflects these settings with each module parameter update process.

Table 9-8 List of variables [1/2]

Variable	Description
g_u1_trig_enable_write	An internal flag displays enable of value update
com_u1_mode_system	Change system mode 0: Stop motor rotation 1: Start motor rotation 3: Reset errors
g_u1_mode_system	System mode 0: Stop motor rotation 1: Start motor rotation 2: Error
com_u1_ctrl_loop_mode	Control loop switching 0: Speed control 1: Position control (default)
com_u1_enable_write	A flag displays user command for value update (When this variable is set same value with "g_u1_enable_write", set values are reflected to each variables.)
g_u1_enable_write	A flag displays enable of value update
com_u2_mtr_pp	Motor pole pairs
com_f4_mtr_r	Resistance [ohm]
com_f4_mtr_ld	Inductance of d-axis [H]
com_f4_mtr_lq	Inductance of q-axis [H]
com_f4_mtr_m	Magnetic flux [Wb]
com_f4_mtr_j	Inertia [kgm ²]
com_f4_current_omega	Natural frequency of current control [Hz]
com_f4_current_zeta	Attenuation coefficient of current control
com_f4_speed_omega	Natural frequency of speed control [Hz]
com_f4_speed_zeta	Attenuation coefficient of speed control
com_f4_pos_omega	Natural frequency of position control [Hz]
com_f4_sob_omega	Natural frequency of speed observer [Hz]
com_f4_sob_zeta	Attenuation coefficient of speed observer
com_f4_ol_ref_id	d-axis current reference in open loop mode [A]
com_f4_id_up_time	d-axis current command value addition time [ms]
com_f4_speed_limit_rpm	Over speed limit

Table 9-9 List of variables [2/2]

Variable	Description
com_u2_pos_dead_band	Dead band of position
com_u2_pos_band_limit	Positioning complete range
com_u2_interval_time	Time interval of the position command changes
com_f4_accel_time	Acceleration time [s] (for position control)
com_f4_speed_rate_limit	Step of speed change at acceleration/deceleration (mechanical) [rpm]
com_f4_max_speed_rpm	Maximum speed (mechanical) [rpm]
com_f4_overcurrent_limit	Over current limit
com_f4_iq_limit	q-axis current limit
com_f4_speed_ob_hpf_omega	Natural frequency of speed observer HPF [Hz]
com_u2_encd_cpr	Encoder pulse count (4 for multiplying)

Table 9-10 List of variables of the structure for RMW to update parameters

Structure	Description
g_user_motor_encoder_extended_cfg	Structure of configuration for parameters about interface module which can be changed by user
g_user_motor_position_extended_cfg	Structure of configuration for parameters about position module which can be changed by user
g_user_motor_speed_extended_cfg	Structure of configuration for parameters about speed module which can be changed by user
g_user_motor_current_extended_cfg	Structure of configuration for parameters about current module which can be changed by user
g_user_motor_sense_encoder_extended_cfg	Structure of configuration for parameters about angle/speed detection module which can be changed by user

9.5.4 Macro definition

Macro definitions are listed below.

Table 9-11 List of macros [1/2] (mtr_main.h)

Macro Name	RA6T2	RA6T3	RA4T1
SW_ON	0	0	0
SW_OFF	1	1	1
SW1_ON	1	1	1
SW1_OFF	0	0	0
SW2_ON	0	0	0
SW2_OFF	1	1	1
CHATTERING_CNT	10	10	10
MTR_CW	-	-	-
MTR_CCW	-	-	-
WAIT_STOP_COUNT	-	-	-
MTR_LED_ON	BSP_IO_LEVEL_LOW	BSP_IO_LEVEL_LOW	BSP_IO_LEVEL_LOW
MTR_LED_OFF	BSP_IO_LEVEL_HIGH	BSP_IO_LEVEL_HIGH	BSP_IO_LEVEL_HIGH
ICS_UI	0	0	0
BOARD_UI	1	1	1
LOOP_SPEED	0	0	0
LOOP_POSITION	1	1	1
MTR_MAX_SPEED_RPM	4000	4000	4000
STOP_RPM	200	200	200
MTR_AD12BIT_DATA	4095.0f	4095.0f	4095.0f
VR1_SCALING	$(\text{MTR_MAX_SPEED_RPM} + 100) / (\text{MTR_AD12BIT_DATA} * 0.5f)$	$(\text{MTR_MAX_SPEED_RPM} + 100) / (\text{MTR_AD12BIT_DATA} * 0.5f)$	$(\text{MTR_MAX_SPEED_RPM} + 100) / (\text{MTR_AD12BIT_DATA} * 0.5f)$
VR1_SCALING_POS	$(180 + 10) / (\text{MTR_AD12BIT_DATA} / 2 + 1)$	$(180 + 10) / (\text{MTR_AD12BIT_DATA} / 2 + 1)$	$(180 + 10) / (\text{MTR_AD12BIT_DATA} / 2 + 1)$
VR1_180	180.0f	180.0f	180.0f
VR1_POSITION_DEAD_BAND	2	2	2
ADJUST_OFFSET	0x7FF	0x7FF	0x7FF
MTR_FLG_CLR	0	0	0
MTR_FLG_SET	1	1	1
CONFIG_DEFAULT_UI	BOARD_UI	BOARD_UI	BOARD_UI
CONFIG_LOOP_MODE	LOOP_POSITION	LOOP_POSITION	LOOP_POSITION
MTR_ADCH_VR1	8	5	5
MTR_PORT_SW1	BSP_IO_PORT_13_PIN_04	BSP_IO_PORT_03_PIN_04	BSP_IO_PORT_03_PIN_04
MTR_PORT_SW2	BSP_IO_PORT_13_PIN_07	BSP_IO_PORT_02_PIN_00	BSP_IO_PORT_02_PIN_00
MTR_PORT_LED1	BSP_IO_PORT_13_PIN_01	BSP_IO_PORT_01_PIN_13	BSP_IO_PORT_01_PIN_13
MTR_PORT_LED2	BSP_IO_PORT_13_PIN_02	BSP_IO_PORT_01_PIN_06	BSP_IO_PORT_01_PIN_06
MTR_PORT_LED3	BSP_IO_PORT_13_PIN_03	-	-

Table 9-12 List of macros [2/2] (mtr_main.h)

Macro Name	RA8T1	RA8T2
SW_ON	0	0
SW_OFF	1	1
SW1_ON	1	1
SW1_OFF	0	0
SW2_ON	0	0
SW2_OFF	1	1
CHATTERING_CNT	10	10
MTR_CW	-	-
MTR_CCW	-	-
WAIT_STOP_COUNT	-	-
MTR_LED_ON	BSP_IO_LEVEL_LOW	BSP_IO_LEVEL_LOW
MTR_LED_OFF	BSP_IO_LEVEL_HIGH	BSP_IO_LEVEL_HIGH
ICS_UI	0	0
BOARD_UI	1	1
LOOP_SPEED	0	0
LOOP_POSITION	1	1
MTR_MAX_SPEED_RPM	4000	4000
STOP_RPM	200	200
MTR_AD12BIT_DATA	4095.0f	4095.0f
VR1_SCALING	$(\text{MTR_MAX_SPEED_RPM} + 100) / (\text{MTR_AD12BIT_DATA} * 0.5f)$	$(\text{MTR_MAX_SPEED_RPM} + 100) / (\text{MTR_AD12BIT_DATA} * 0.5f)$
VR1_SCALING_POS	$(180 + 10) / (\text{MTR_AD12BIT_DATA} / 2 + 1)$	$(180 + 10) / (\text{MTR_AD12BIT_DATA} / 2 + 1)$
VR1_180	180.0f	180.0f
VR1_POSITION_DEAD_BAND	2	2
ADJUST_OFFSET	0x7FF	0x7FF
MTR_FLG_CLR	0	0
MTR_FLG_SET	1	1
CONFIG_DEFAULT_UI	BOARD_UI	BOARD_UI
CONFIG_LOOP_MODE	LOOP_POSITION	LOOP_POSITION
MTR_ADCH_VR1	7	15
MTR_PORT_SW1	BSP_IO_PORT_10_PIN_15	BSP_IO_PORT_10_PIN_00
MTR_PORT_SW2	BSP_IO_PORT_10_PIN_13	BSP_IO_PORT_10_PIN_07
MTR_PORT_LED1	BSP_IO_PORT_10_PIN_12	BSP_IO_PORT_06_PIN_14
MTR_PORT_LED2	BSP_IO_PORT_10_PIN_14	BSP_IO_PORT_10_PIN_15
MTR_PORT_LED3	-	BSP_IO_PORT_10_PIN_04

Table 9-13 List of macros [1/2] (r_mtr_rmw.h)

Macro Name	RA6T2	RA6T3	RA4T1
USE_BUILT_IN	0	0	0
MTR_ICS_DECIMATION	5	5	3
ICS_BRR	19	250	250
ICS_INT_MODE	1	1	1
MTR_SQRT_2	1.41421356f	1.41421356f	1.41421356f
MTR_TWO_PI	6.28318531f	6.28318531f	6.28318531f
MTR_RAD_RPM	60/MTR_TWO_PI	60/MTR_TWO_PI	60/MTR_TWO_PI
MTR_RAD_DEGREE	360/MTR_TWO_PI	360/MTR_TWO_PI	360/MTR_TWO_PI
MTR_OVERCURRENT_MARGIN_MULT	1.5f	1.5f	1.5f

Table 9-14 List of macros [2/2] (r_mtr_rmw.h)

Macro Name	RA8T1	RA8T2
USE_BUILT_IN	0	0
MTR_ICS_DECIMATION	5	5
ICS_BRR	19	19
ICS_INT_MODE	1	1
MTR_SQRT_2	1.41421356f	1.41421356f
MTR_TWO_PI	6.28318531f	6.28318531f
MTR_RAD_RPM	60/MTR_TWO_PI	60/MTR_TWO_PI
MTR_RAD_DEGREE	360/MTR_TWO_PI	360/MTR_TWO_PI
MTR_OVERCURRENT_MARGIN_MULT	1.5f	1.5f

9.6 Interface Module

The interface module manages motor rotation with specific control modules (speed and current). This module controls data swapping between speed and current modules, total system mode of this project, and protection functions.

9.6.1 Functions

Table 9-15 lists the functions of interface module.

Table 9-15 List of interface module functions

Functions	Description
Mode management	Switches the operation mode of the system in response to the user command to control the motor.
Protection function	Handles errors by using the system protection function.
Control method management	Acquires and sets the states of speed control and current control.
Speed and position information acquisition	Acquires the speed and position information from current control module.
Control module command value setting	Set speed reference to speed control module via API
Interrupt processing	Perform user functions which are registered as a callback at each interrupts (speed and current).

9.6.2 Module configuration diagram

Figure 9-2 shows the module configuration.

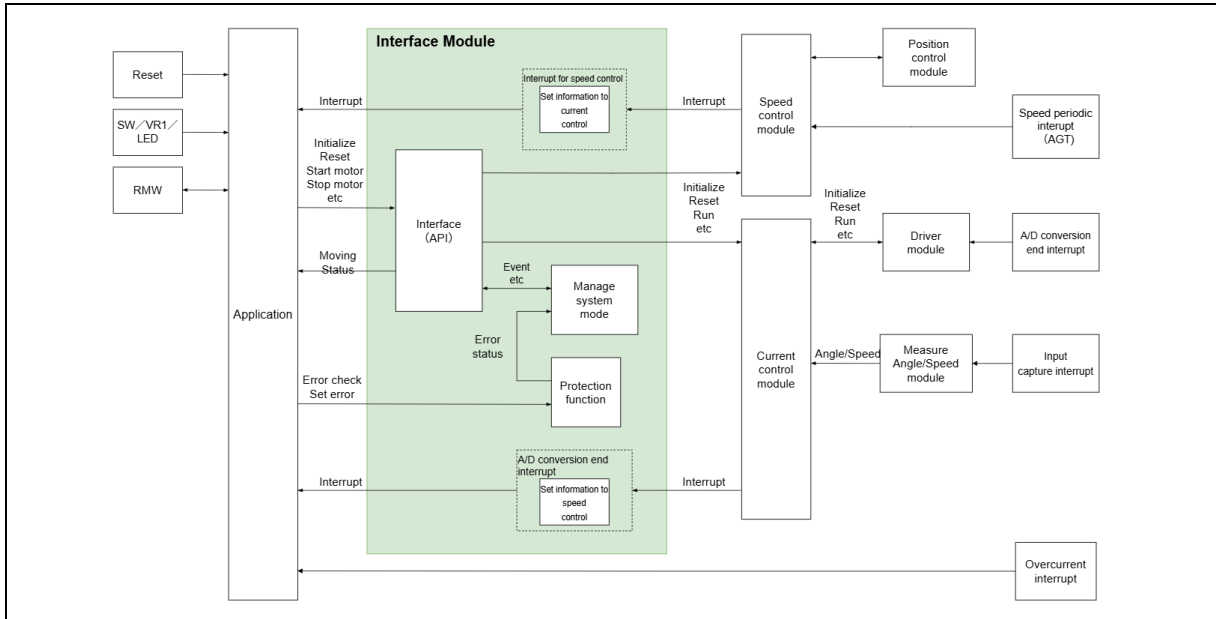


Figure 9-2 Module configuration diagram of interface module

9.6.3 State transition

Figure 9-3 is a state transition diagram of sample software. In the target software of this application note, the software state is managed by “SYSTEM MODE”.

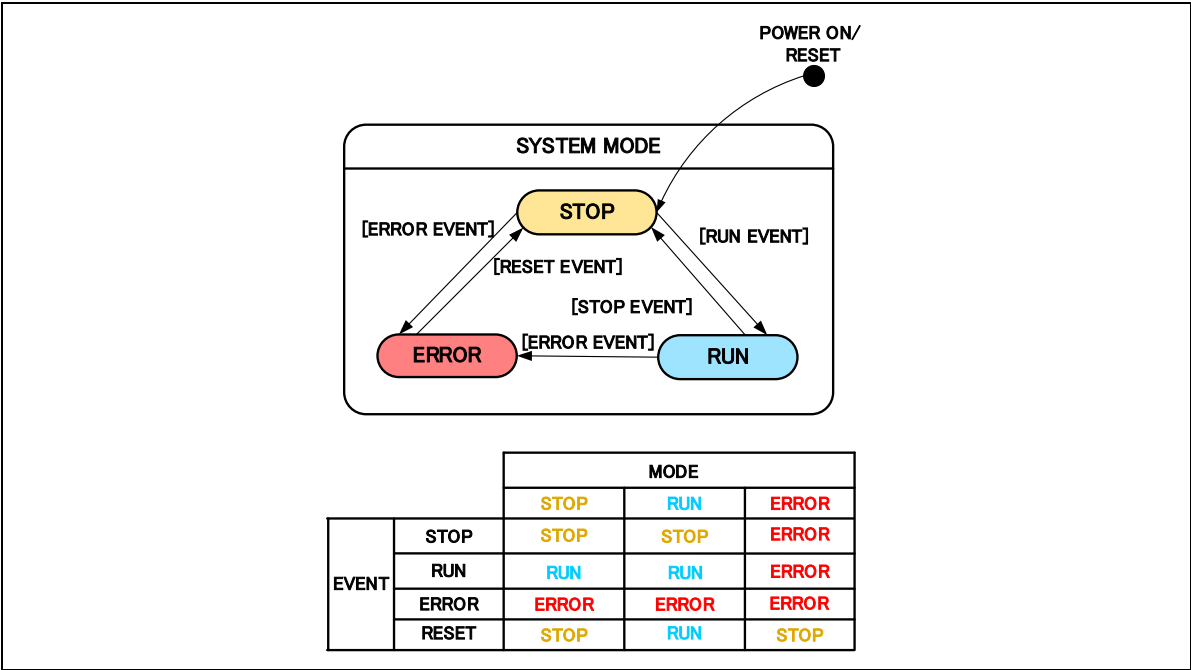


Figure 9-3 State Transition Diagram of Sample Software

(1). SYSTEM MODE

“SYSTEM MODE” indicates the operating states of the system. The state transits on occurrence of each event (EVENT). “SYSTEM MODE” has 3 states that are motor drive stop (STOP), motor drive (RUN), and abnormal condition (ERROR).

(2). EVENT

When “EVENT” occurs in each “SYSTEM MODE”, “SYSTEM MODE” changes as shown the table in Figure 9-3, according to that “EVENT”. The occurrence factors of each event are shown below.

Table 9-16 List of EVENT

EVENT name	occurrence factor
STOP	by user operation
RUN	by user operation
ERROR	when the system detects an error
RESET	by user operation

9.6.4 Protection function

This control program provides the following error states and implements an emergency stop function in each error state. For details about the values that can be specified for the settings of the system protection function, see Table 9-17.

- **Overcurrent error**
Overcurrent errors can be detected on the hardware and in the software.
A high-impedance output is provided to the PWM output pin in response to an emergency stop signal (overcurrent detection) from the hardware. This function monitors U-, V-, and W-phases at the overcurrent monitoring interval. When this function detects an overcurrent (the status in which the current is above the overcurrent limit value), it brings the program to an emergency stop (software detection).
- **Overvoltage error**
This function monitors the inverter bus voltage at the overvoltage monitoring interval. When the function detects an overvoltage (that is, a voltage above the overvoltage limit value), it brings the program to an emergency stop. The overvoltage limit value is preset in consideration of conditions such as an error in the resistor value of the detection circuit.
- **Low-voltage error**
This function monitors the inverter bus voltage at the low-voltage monitoring interval. When the function detects a low voltage (that is, a voltage below the low-voltage limit value), it brings the program to an emergency stop. The low-voltage limit value is preset in consideration of conditions such as an error in the resistor value of the detection circuit.
- **Rotation speed error**
This function monitors the speed at the rotation speed monitoring interval. When the rotation speed exceeds the speed limit value, it brings the program to an emergency stop.

Table 9-17 Operating conditions and setting values for the system protection functions

Category	Item	Value
Overcurrent error	Overcurrent limit value [A]	1.8
	Monitoring interval [μ s]	Current control interval*1
Overvoltage error	Overvoltage limit value [V]	60
	Monitoring interval [μ s]	Current control interval*1
Low-voltage error	Low-voltage limit value [V]	8
	Monitoring interval [μ s]	Current control interval*1
Rotation speed error	Speed limit value (mechanical) [rpm]	4500
	Monitoring interval [μ s]	Current control interval*1

*1 Refer to Table 9-1 Basic Specifications of Vector Control with Encoder Software.

9.6.5 API

Table 9-18 lists API functions of interface module.

Table 9-18 List of API functions

API	Description
RM_MOTOR_ENCODER_Open	Generates instances of this module and the modules to be used.
RM_MOTOR_ENCODER_Close	Close instances of this module and the modules to be used.
RM_MOTOR_ENCODER_Run	Run the motor.
RM_MOTOR_ENCODER_Stop	Stop the motor.
RM_MOTOR_ENCODER_Reset	Reset this module and the modules to be used.
RM_MOTOR_ENCODER_ErrorSet	Set error state.
RM_MOTOR_ENCODER_SpeedSet	Set speed reference (mechanical) [rpm]
RM_MOTOR_ENCODER_StatusGet	Get current state of the project.
RM_MOTOR_ENCODER_AngleGet	Get rotor angle [rad]
RM_MOTOR_ENCODER_SpeedGet	Get rotation speed (mechanical) [rpm]
RM_MOTOR_ENCODER_ErrorCheck	Check error occurrence
RM_MOTOR_ENCODER_PositionSet	Set position reference [degree]
RM_MOTOR_ENCODER_WaitStopFlagGet	Get a flag of waiting motor stop (Unsupported in vector control with encoder)
RM_MOTOR_ENCODER_FunctionSelect	Select to use servo function (Unsupported in vector control with encoder)

9.6.6 Structure and variable information

The structures and variables for interface module are listed below.

Table 9-19 List of structures and variable for interface module (rm_motor_api.h)

Structure	Members	Description
motor_callback_args_t	*p_context	Address of context data for callback function
	event	Event data of callback
motor_cfg_t	*p_motor_speed_instance	Address of speed control module instance
	*p_motor_current_instance	Address of current control module instance
	*p_callback	Address of registered callback function
	*p_context	Address of context data for registered callback function
	*p_extend	Address of structure of extended configuration data to refer
motor_api_t	*open	Function address to open module
	*close	Function address to close module
	*run	Function address to activate module (start motor rotation)
	*stop	Function address to inactivate module (stop motor rotation)
	*reset	Function address to reset module
	*errorSet	Function address to set error data
	*speedSet	Function address to set speed reference (mechanical) [rpm]
	*positionSet	Function address to set position reference
	*statusGet	Function address to get moving status
	*angleGet	Function address to get rotor angle
	*speedGet	Function address to get rotation speed (mechanical) [rpm]
	*waitStopFlagGet	Function address to get a flag for waiting "STOP" (Unsupported in vector control with encoder)
	*errorCheck	Function address to check error occurrence
	*functionSelect	Function address to select servo function (Unsupported in vector control with encoder)
motor_instance_t	*p_ctrl	Address of structure of variables to be used in the module
	*p_cfg	Address of structure of configuration data
	*p_api	Address of structure of API functions

Table 9-20 List of structures and variable for interface module (rm_motor_encoder.h)

Structure	Members	Description
motor_encoder_statemachine_t	u1_status	Moving status
	u1_status_next	Next moving status
	u1_current_event	Current happened event
	u2_error_status	Error status
motor_encoder_extended_cfg_t	f_overcurrent_limit	Limit (threshold) of over current detection [A]
	f_overnoltage_limit	Limit (threshold) of over voltage detection [V]
	f_overspeed_limit	Limit (threshold) of over speed detection (mechanical) [rpm]
	f_lowvoltage_limit	Limit (threshold) of low voltage detection [V]
motor_encoder_instance_ctrl_t	open	Module opened information
	u2_error_info	Error status
	st_statem	Structure of state machine
	st_speed_input	Structure of input data from speed control module
	st_speed_output	Structure of output data to speed control module
	st_current_input	Structure of input data from current control module
	st_current_output	Structure of output data to current control module
	*p_cfg	Address of structure of configuration to refer

9.6.7 Macro and enumeration definition

The macros and enumerations for interface module are listed below.

Table 9-21 List of macros for interface module

File name	Name of MACRO	Defined value	Description
rm_motor_encoder.c	MOTOR_ENCODER_OPEN	('M' << 24U) ('T' << 16U) ('E' << 8U) ('C' << 0U)	Opened information
	MOTOR_ENCODER_RAD2 RPM	30.0F / 3.1415926535F	To use rad/s => rpm translation
	MOTOR_ENCODER_FLAG_CLEAR	0	Clear a flag
	MOTOR_ENCODER_FLAG_SET	1	Set a flag
	MOTOR_ENCODER_STATE MACHINE_SIZE_STATE	3	Size of status of state machine
	MOTOR_ENCODER_STATE MACHINE_SIZE_EVENT	4	Size of event of state machine
	MOTOR_ENCODER_STATE MACHINE_ERROR_NONE	0x00	No error happened
	MOTOR_ENCODER_STATE MACHINE_ERROR_EVENT OUTBOUND	0x01	Error of outbound of event
	MOTOR_ENCODER_STATE MACHINE_ERROR_STATE OUTBOUND	0x02	Error of outbound of status
	MOTOR_ENCODER_STATE MACHINE_ERROR_ACTION EXCEPTION	0x04	Error of exception about action

Table 9-22 List of Enumeration type for interface module [1/2] (rm_motor_api.h)

Enumeration type name	Members	Defined value	Description
motor_error_t	MOTOR_ERROR_NONE	0x0000	No error happened
	MOTOR_ERROR_OVER_CURRENT_HW	0x0001	Over current error detected by hardware
	MOTOR_ERROR_OVER_VOLTAGE	0x0002	Over voltage error
	MOTOR_ERROR_OVER_SPEED	0x0004	Over speed error
	MOTOR_ERROR_HALL_TIMEOUT	0x0008	Timeout error of hall signal detection (Not happen in vector control with encoder)
	MOTOR_ERROR_BEMF_TIMEOUT	0x0010	Timeout error of BEMF signal detection (Not happen in vector control with encoder)
	MOTOR_ERROR_HALL_PATTERN	0x0020	Unused
	MOTOR_ERROR_BEMF_PATTERN	0x0040	BEMF signal pattern error (Not happen in vector control with encoder)
	MOTOR_ERROR_LOW_VOLTAGE	0x0080	Low voltage error
	MOTOR_ERROR_OVER_CURRENT_SW	0x0100	Over current error detected by software
	MOTOR_ERROR_INDUCTION_CORRECT	0x0200	Induction calibration error (Not happen in vector control with encoder)
	MOTOR_ERROR_UNKNOWN	0xFFFF	Unknown error
motor_callback_event_t	MOTOR_CALLBACK_EVENT_SPEED_FORWARD	1	Callback event before cyclic speed control process
	MOTOR_CALLBACK_EVENT_SPEED_BACKWARD	2	Callback event after cyclic speed control process
	MOTOR_CALLBACK_EVENT_CURRENT_FORWARD	3	Callback event before cyclic current control process
	MOTOR_CALLBACK_EVENT_CURRENT_BACKWARD	4	Callback event after cyclic current control process
	MOTOR_CALLBACK_EVENT_ADC_FORWARD	5	Callback event before A/D conversion end interrupt process (Not happen in vector control with encoder)
	MOTOR_CALLBACK_EVENT_ADC_BACKWARD	6	Callback event after A/D conversion end interrupt process (Not happen in vector control with encoder)
	MOTOR_CALLBACK_EVENT_CYCLE_FORWARD	7	Callback event before cyclic speed control process (Not happen in vector control with encoder)
	MOTOR_CALLBACK_EVENT_CYCLE_BACKWARD	8	Callback event after cyclic speed control process (Not happen in vector control with encoder)
motor_wait_stop_flag_t (Not happen in vector control with encoder)	MOTOR_WAIT_STOP_FLAG_CLEAR	0	Clear a flag for waiting stop
	MOTOR_WAIT_STOP_FLAG_SET	1	Set a flag for waiting stop

Table 9-23 List of Enumeration type for interface module [2/2] (rm_motor_api.h)

Enumeration type name	Members	Defined value	Description
motor_function_select_t (Not happen in vector control with encoder)	MOTOR_FUNCTION_SELECT_NONE	0	No servo function is selected
	MOTOR_FUNCTION_SELECT_INERTIA_ESTIMATE	1	Inertia estimation function is selected
	MOTOR_FUNCTION_SELECT_RETURN_ORIGIN	2	Return origin position function is selected

Table 9-24 List of Enumeration type for interface module (rm_motor_encoder.h)

Enumeration type name	Members	Defined value	Description
motor_encoder_ctrl_status_t	MOTOR_ENCODER_CTRL_STOP	0	Stop state
	MOTOR_ENCODER_CTRL_RUN	1	Run (active) state
	MOTOR_ENCODER_CTRL_ERROR	2	Error state
motor_encoder_ctrl_event_t	MOTOR_ENCODER_CTRL_EVENT_STOP	0	Event to stop (inactive)
	MOTOR_ENCODER_CTRL_EVENT_RUN	1	Event to run (active)
	MOTOR_ENCODER_CTRL_EVENT_ERROR	2	Event of error
	MOTOR_ENCODER_CTRL_EVENT_RESET	3	Event to reset

9.7 Speed Control Module

Speed control module calculates speed PI with speed reference which is set by user and rotation speed from current module. And it outputs current reference to current module.

9.7.1 Functions

Functions of speed control module are listed below.

Table 9-25 Functions of speed control module

Function	Description
Speed control	Calculate speed PI and output current reference

9.7.2 Module configuration diagram

Figure 9-4 shows the module configuration diagram.

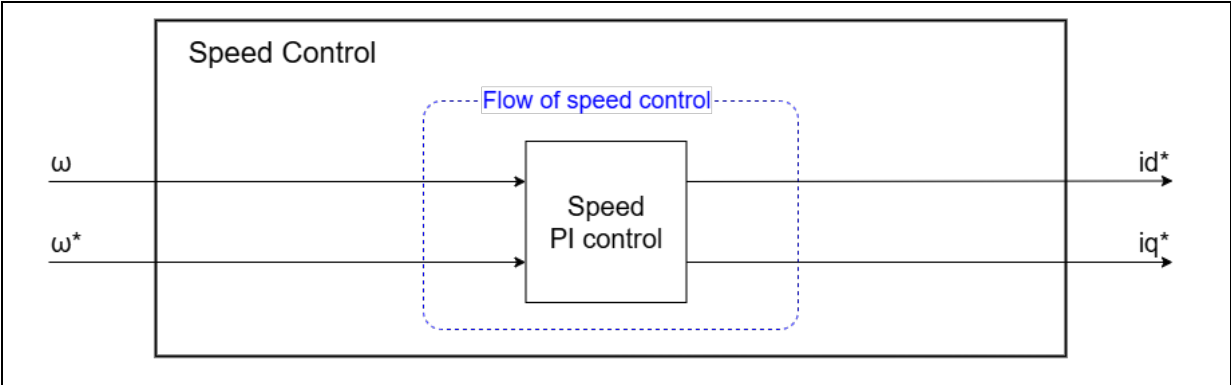


Figure 9-4 Module configuration diagram of speed control module

9.7.3 API

Table 9-26 lists API functions of speed control module.

Table 9-26 List of API functions of the speed control module

API	Description
RM_MOTOR_SPEED_Open	Generates instances of speed control module and the modules to be used.
RM_MOTOR_SPEED_Close	Close instances of speed control module and the modules to be used.
RM_MOTOR_SPEED_Reset	Initializes the module.
RM_MOTOR_SPEED_Run	Activates the module.
RM_MOTOR_SPEED_SpeedReferenceSet	Set speed reference.
RM_MOTOR_SPEED_PositionReferenceSet	Set position reference.
RM_MOTOR_SPEED_ParameterSet	Set parameters from current control module.
RM_MOTOR_SPEED_SpeedControl	Perform speed control process.
RM_MOTOR_SPEED_ParameterGet	Get parameters of speed control module. (These parameters are set to current control module via interface module.)
RM_MOTOR_SPEED_ParameterUpdate	Updates the control parameters by user setting.

9.7.4 Structure and variable information

Structures and variables of speed control module are listed below.

Table 9-27 List of structures and variables of speed control module [1/2] (rm_motor_speed_api.h)

Structure	Members	Description
motor_speed_callback_args_t	*p_context	Address of context data for callback function
	event	Event data of callback
motor_speed_input_t	f_id	d-axis electrical current
	f_iq	q-axis electrical current
	f_vamax	Maximum value of vector current [A]
	f_speed_rad	Rotation speed (electrical) [rad/s]
	f_position_rad	Rotor position (angle) [rad]
	f_ed	Estimated d-axis voltage [V] (No use in vector control with encoder)
	f_eq	Estimated q-axis voltage [V] (No use in vector control with encoder)
	f_phase_err_rad	Phase error [rad] (No use in vector control with encoder)
	u1_flag_get_iref	Flag of enable getting current reference
	u1_adjust_status	Adjusting (draw in) status at start up
	u1_adjust_mode	Adjusting (draw in) mode at start up
	u1_adjust_count_full	Flag of full of counter
	u1_openloop_status	Open loop status at induction calibration (No use in vector control with encoder)
	f_openloop_speed	Speed of open loop at induction calibration (No use in vector control with encoder)
	f_openloop_id_ref	d-axis current reference at induction calibration (No use in vector control with encoder)
motor_speed_output_t	f_id_ref	d-axis current reference
	f_iq_ref	q-axis current reference
	f_ref_speed_rad_ctrl	Speed reference internally (electrical) [rad/s]
	f_damp_comp_speed	Damping speed at open loop (electrical) [rad/s] (No use in vector control with encoder)
	u1_flag_pi	Flag of started PI control
motor_speed_position_data_t	e_step_mode	Position control mode
	e_loop_mode	Control method (Speed or Position)
	position_reference_degree	Position reference [degree]

Table 9-28 List of structures and variables of speed control module [2/2] (rm_motor_speed_api.h)

Structure	Members	Description
motor_speed_cfg_t	*st_input	Address of structure of input data from current control module
	*st_output	Address of structure of output data to current control module
	*p_timer_instance	Address of instance of cyclic timer module
	*p_position_instance	Address of instance of position control module
	*p_callback	Address of registered callback function
	*p_context	Address of context data for registered callback function
	*p_extend	Address of structure of extended configuration data to refer
motor_speed_api_t	*open	Function address to open module
	*close	Function address to close module
	*reset	Function address to reset module
	*run	Function address to run (activate)
	*speedReferenceSet	Function address to set speed reference
	*positionReferenceSet	Function address to set position reference
	*parameterSet	Function address to set data to speed control module
	*speedControl	Function address to perform speed control
	*parameterGet	Function address to get parameters for setting to current control module
	*parameterUpdate	Function address to update configuration
motor_speed_instance_t	*p_ctrl	Address of structure to be used in the module
	*p_cfg	Address of structure of configuration data
	*p_api	Address of structure of API functions

Table 9-29 List of structures and variables of speed control module [1/5] (rm_motor_speed.h)

Structure	Members	Description
motor_speed_pi_params_t	f_err	Error
	f_kp	Gain parameter for proportional term
	f_ki	Gain parameter for integral term
	f_refi	Integral term
	f_ilimit	Limit of integral term
motor_speed_design_params_t	f_speed_omega	Natural frequency of speed PI [Hz]
	f_speed_zeta	Attenuation coefficient of speed PI
	f_ed_hpf_omega	Natural frequency of HPF [Hz] (No use in vector control with encoder)
	f_ol_damping_zeta	Attenuation coefficient of damping (No use in vector control with encoder)
	f_phase_err_lpf_cut_freq	Cut off frequency of LPF of phase error (No use in vector control with encoder)
	f_observer_omega	Natural frequency of speed observer [Hz]
	f_observer_zeta	Attenuation coefficient of speed observer
motor_speed_lpf_t	f_pre_output	Previous (last) output data
	f_pre_input	Previous (last) input data
	f_omega_t	Natural frequency of LPF [Hz]
	f_gain_ka	Gain of LPF
	f_gain_kb	Gain of LPF
motor_speed_2nd_order_lpf_t (No use in vector control with encoder)	f4_pre_output	Previous (last) output data
	f4_pre2_output	2 times previous output data
	f4_pre_input	Previous (last) input data
	f4_pre2_input	2 times previous input data
	f4_omega_t	Calculated value
	f4_omega2_t	Calculated value
	f4_omega2_t2	Calculated value
	f4_gain_ka	Gain of LPF
	f4_gain_kb	Gain of LPF
	f4_gain_kc	Gain of LPF
motor_speed_oldamp_sub_t (No use in vector control with encoder)	st_ed_lpf	Structure for LPF
	f_damp_comp_gain	Gain of damping at open loop
	f_fb_speed_limit_rate	Limit rate of speed feedback

Table 9-30 List of structures and variables of speed control module [2/5] (rm_motor_speed.h)

Structure	Members	Description
motor_speed_oldamp_t (No use in vector control with encoder)	f4_ol_id_up_step	Step of increase of d-axis current [A]
	f4_ol_id_down_step	Step of decrease of d-axis current [A]
	f4_ol_iq_down_step_ratio	Ratio of decrease of q-axis current
	f4_ol_id_ref	d-axis current reference at open loop [A]
	f4_id_down_speed_rpm	Threshold of speed to judge decrease current (electrical) [rpm]
	f4_id_up_speed_rpm	Threshold of speed to judge increase current (electrical) [rpm]
	f4_opl2less_sw_time	Period to change to sensorless from open loop
	f4_switch_phase_err_rad	Phase error at change to sensorless
motor_speed_motor_parameter_t	u2_mtr_pp	Pole pairs
	f4_mtr_r	Resistance [ohm]
	f4_mtr_ld	d-axis inductance [H]
	f4_mtr_lq	q-axis inductance [H]
	f4_mtr_m	Magnetic flux [Wb]
	f4_mtr_j	Inertia [kgm ²]
motor_speed_flux_weakening_t	*pmotor	Address of structure of motor parameters
	f4_ia_max	Maximum current of d/q-axis [A]
	f4_va_max	Maximum voltage of d/q-axis [V]
	f4_vfw_ratio	Maximum voltage ratio in flux weakening
	f4_id_demag	Demagnetization current
	f4_id_min	Minimum current of d-axis [A]
	f4_v_fw	Limit of voltage vector in flux weakening
	u2_fw_status	Status of flux weakening

Table 9-31 List of structures and variables of speed control module [3/5] (rm_motor_speed.h)

Structure	Members	Description
motor_speed_observer_t	f4_speed_rad	Rotation speed (electrical) [rad/s]
	f4_ref_torque	Torque reference
	f4_ref_pre_torque	Previous (last) torque reference
	f4_ref_speed_rad	Previous speed (electrical) [rad/s]
	f4_ref_pre_speed_rad	Previous (last) speed reference (electrical) [rad/s]
	f4_hpf_k1	Coefficient of HPF #1
	f4_hpf_k2	Coefficient of HPF #2
	f4_hpf_k3	Coefficient of HPF #3
	f4_k1	Coefficient of observer #1
	f4_k2	Coefficient of observer #2
	f4_hpf_ref_speed_rad	Speed reference in HPF (electrical) [rad/s]
	f4_hpf_ref_pre_speed_rad	Previous (last) speed reference in HPF (electrical) [rad/s]
	f4_hpf_omega	Natural frequency of HPF [Hz]
	st_lpf	Structure for LPF
motor_speed_disturbance_observer_t	f4_gain_distubance_estimate	Gain of disturbance
	f4_gain_speed_estimate	Gain of speed
	f4_estimated_distubance	Estimated disturbance
	f4_estimated_speed	Estimated speed (electrical) [rad/s]
	f4_inertia	Motor inertia
	f4_ctrl_period	Period of observer process
	st_lpf	Structure for LPF

Table 9-32 List of structures and variables of speed control module [4/5] (rm_motor_speed.h)

Structure	Members	Description
motor_speed_extended_cfg_t	u1_ctrl_method	Control method (Speed or Position) (Only speed is effective in sensorless)
	f_speed_ctrl_period	Period of speed control [Hz]
	f_limit_speed_change	Step of speed at speed change (electrical) [rad/s]
	f_maximum_speed_rpm	Maximum rotation speed (electrical) [rpm]
	f_omega_t	Natural frequency of speed PI [Hz]
	f_id_up_speed_rad	Speed to judge increase d-axis current
	f_iq_limit	Limit of q-axis current [A]
	f_ol_fb_speed_limit_rate	Limit of speed reference
	f_natural_frequency	Natural frequency of observer
	u1_openloop_damping	Flag to select open loop damping (enable/disable) (No use in vector control with encoder)
	u1_flux_weakening	Flag to select flux weakening control function (enable/disable)
	u1_less_switch	Flag to select the tolerance function from open loop to sensorless (enable/disable) (No use in vector control with encoder)
	u1_observer_switich	Flag to select speed observer function
	observer_select	Selected method of speed observer
	ol_param	Structure of open loop control (No use in vector control with encoder)
	ol_sub_param	Structure of sub data of open loop control (No use in vector control with encoder)
	d_param	Designed parameters for PI control
	control_type	Method of motor control
	mtr_param	Structure of motor parameters

Table 9-33 List of structures and variables of speed control module [5/5] (rm_motor_speed.h)

Structure	Members	Description
motor_speed_instance_ctrl_t	u1_active	Flag of active
	u1_state_speed_ref	State of setting speed reference
	u1_flag_get_iref	Flag to get current reference
	u1_state_id_ref	State of calculation of d-axis current
	u1_state_iq_ref	State of calculation of q-axis current
	f_rpm2rad	Parameter to transform rpm => rad/s
	f_ref_speed_rad_ctrl	Internal speed reference (electrical) [rad/s]
	f_ref_speed_rad	Speed reference (electrical) [rad/s]
	f_speed_lpf_rad	Speed in LPF
	e_status	Status of speed control
	u1_flag_down_to_ol	Flag to switch to open loop (No use in vector control with encoder)
	f_ol_iq_down_step	Step of declaration of q-axis current at open loop [A] (No use in vector control with encoder)
	f_phase_err_rad_lpf	Phase error after LPF (No use in vector control with encoder)
	f_init_phase_err_rad	Initial value of phase error (No use in vector control with encoder)
	f_opl_torque_current	Torque current value to change open loop (No use in vector control with encoder)
	f_damp_comp_speed	Damping speed in open loop (electrical) [rad/s] (No use in vector control with encoder)
	f_damp_comp_gain	Damping gain of open loop (No use in vector control with encoder)
	f_fb_speed_limit_rate	Limit of speed feedback
	u1_enable_flux_weakning	Flag of selection of flux weakening control function (enable/disable)
	st_flxwkn	Structure for flux weakening control function
	*p_cfg	Address of structure of configuration data to refer
	pi_param	Structure for PI control
	st_input	Structure of input data from current control
	st_speed_lpf	Structure for speed LPF
	st_phase_err_lpf	Structure for phase error LPF (No use in vector control with encoder)
	st_observer	Structure of speed observer
	st_disturbance_observer	Structure of disturbance speed observer
	openloop_sub	Structure of sub data for open loop (No use in vector control with encoder)
	st_position_data	Structure of position control
	timer_args	Argument data for timer callback

9.7.5 Macro and enumeration definition

The macros and enumerations for speed control module are listed below.

Table 9-34 List of macros of speed control module [1/2]

File name	Name of MACRO	Defined value	Description
rm_motor_speed.c	MOTOR_SPEED_OPEN	('M' << 24U) ('T' << 16U) ('S' << 8U) ('P' << 0U)	Module opened
	MOTOR_SPEED_FLAG_CLEAR	0	Clear a flag
	MOTOR_SPEED_FLAG_SET	1	Set a flag
	MOTOR_SPEED_MULTIPLE_2	2.0F	2.0
	MOTOR_SPEED_TWOPI	2.0F * 3.1415926535F	2PI
	MOTOR_SPEED_TWOPI_60	MOTOR_SPEED_TWOPI / 60.0F	To transform rpm => rad/s
	MOTOR_SPEED_DIV_8BIT	1.0F / 256.0F	Divided by full 8bit
	MOTOR_SPEED_RAD_TRANS	3.1415926535F / 180.0F	To transform speed
	MOTOR_SPEED_ROOT3	1.7320508F	$\sqrt{3}$
	MOTOR_SPEED_SPEED_ZERO_CONST	0	Speed reference state Speed set 0 constancy
	MOTOR_SPEED_POSITION_CONTROL	1	Speed reference state Position control
	MOTOR_SPEED_SPEED_CHANGE	2	Speed reference state PI control
	MOTOR_SPEED_OPEN_LOOP_INDUCION	3	Speed reference state Induction calibration open loop (No use in vector control with encoder)
	MOTOR_SPEED_ID_UP	0	d-axis reference state d-axis increasing
	MOTOR_SPEED_ID_CONST	1	d-axis reference state d-axis constancy
	MOTOR_SPEED_ID_DOWN	2	d-axis reference state d-axis decreasing
	MOTOR_SPEED_ID_ZERO_CONST	3	d-axis reference state d-axis 0 constancy
	MOTOR_SPEED_ID_FLUXWKN	4	d-axis reference state using flux weakening process
	MOTOR_SPEED_ID_OPENLOOP	5	d-axis reference state Induction calibration open loop (No use in vector control with encoder)
	MOTOR_SPEED_IQ_ZERO_CONST	0	q-axis reference state q-axis 0 constancy
	MOTOR_SPEED_IQ_SPEED_PI_OUTPUT	1	q-axis reference state PI control
	MOTOR_SPEED_IQ_AUTO_ADJ	2	q-axis reference state Draw in at start up
	MOTOR_SPEED_IQ_DOWN	3	q-axis reference state q-axis decreasing

Table 9-35 List of macros of speed control module [2/2]

File name	Name of MACRO	Defined value	Description
rm_motor_speed.c	MOTOR_SPEED_CALCULATE_ANGLE_ADJUST_90DEG	1	Draw in to 90 degrees direction at start up
	MOTOR_SPEED_CALCULATE_ANGLE_ADJUST_0DEG	2	Draw in to 0 degree direction at start up
	MOTOR_SPEED_CALCULATE_ANGLE_ADJUST_FIN	3	Draw in finished
	MOTOR_SPEED_CALCULATE_ANGLE_ADJUST_OPENLOOP	4	Open loop runs at induction calibration (No use in vector control with encoder)

Table 9-36 List of Enumeration type for speed control module (rm_motor_speed_api.h)

Enumeration type name	Members	Defined value	Description
motor_speed_event_t	MOTOR_SPEED_EVENT_FORWARD	1	Event before cyclic speed control process
	MOTOR_SPEED_EVENT_BACKWARD	2	Event after cyclic speed control process
	MOTOR_SPEED_EVENT_ENCODER_CYCLIC	3	Event for cyclic encoder process
	MOTOR_SPEED_EVENT_ENCODER_ADJUST	4	Event for draw in process at using encoder sensor
motor_speed_loop_mode_t	MOTOR_SPEED_LOOP_MODE_SPEED	0	Speed control
	MOTOR_SPEED_LOOP_MODE_POSITION	1	Position control
motor_speed_step_t	MOTOR_SPEED_STEP_DISABLE	0	Calculate position reference
	MOTOR_SPEED_STEP_ENABLE	1	Linear follow position reference

Table 9-37 List of Enumeration type for speed control module (rm_motor_speed.h)

Enumeration type name	Members	Defined value	Description
motor_speed_control_type_t	MOTOR_SPEED_CONTROL_TYPE_SENSORLESS	0	Sensorless
	MOTOR_SPEED_CONTROL_TYPE_ENCODER	1	Use encoder sensor
	MOTOR_SPEED_CONTROL_TYPE_HALL	2	Use hall sensor
	MOTOR_SPEED_CONTROL_TYPE_INDUCTION	3	Use induction sensor
motor_speed_openloop_damping_t (No use in vector control with encoder)	MOTOR_SPEED_OPENLOOP_DAMPING_DISABLE	0	Disable open loop damping function
	MOTOR_SPEED_OPENLOOP_DAMPING_ENABLE	1	Enable open loop damping function
motor_speed_flux_weaken_t	MOTOR_SPEED_FLUX_WEAKEN_DISABLE	0	Disable flux weakening control function
	MOTOR_SPEED_FLUX_WEAKEN_ENABLE	1	Enable flux weakening control function
motor_speed_less_switch_t (No use in vector control with encoder)	MOTOR_SPEED_LESS_SWITCH_DISABLE	0	Disable switching function at open loop to PI control
	MOTOR_SPEED_LESS_SWITCH_ENABLE	1	Enable switching function at open loop to PI control
motor_speed_observer_switch_t	MOTOR_SPEED_OBSERVER_SWITCH_DISABLE	0	Disable speed observer function
	MOTOR_SPEED_OBSERVER_SWITCH_ENABLE	1	Enable speed observer function
motor_speed_observer_select_t	MOTOR_SPEED_OBSERVER_SELECT_NORMAL	0	Normal observer
	MOTOR_SPEED_OBSERVER_SELECT_DISTURBANCE	1	Disturbance observer
motor_speed_ctrl_status_t	MOTOR_SPEED_CTRL_STATUS_INIT	0	Status of speed control Initialize
	MOTOR_SPEED_CTRL_STATUS_BOOT	1	Status of speed control Boot
	MOTOR_SPEED_CTRL_STATUS_RUN	2	Status of speed control Run (PI control)

9.8 Current Control Module

Current control module calculates PI with current reference from speed control module and detected current by driver module. And it sets calculated PWM duty to driver module. This module has angle module (detect module). This module sets parameters from driver module to angle module and acquire speed and angle data from angle module. These data present to speed control module and interface module.

9.8.1 Functions

Functions of current control module are listed below.

Table 9-38 Functions of current control module

Function	Description
Current control	Calculate current PI and output PWM duty
Offset adjustment of current A/D	Calculate A/D offset at each phase current detection
Voltage error compensation	Compensation for the error of voltage by PWM deadtime
Transform of axis	Transform current data from U/V/W to d/q-axis. And retransform from d/q-axis to U/V/W.
Modulation	Modulate to PWM signal to improve efficiency.
Decoupling control	Avoid the interference between d-axis and q-axis.

9.8.2 Module configuration diagram

Figure 9-5 shows the module configuration diagram.

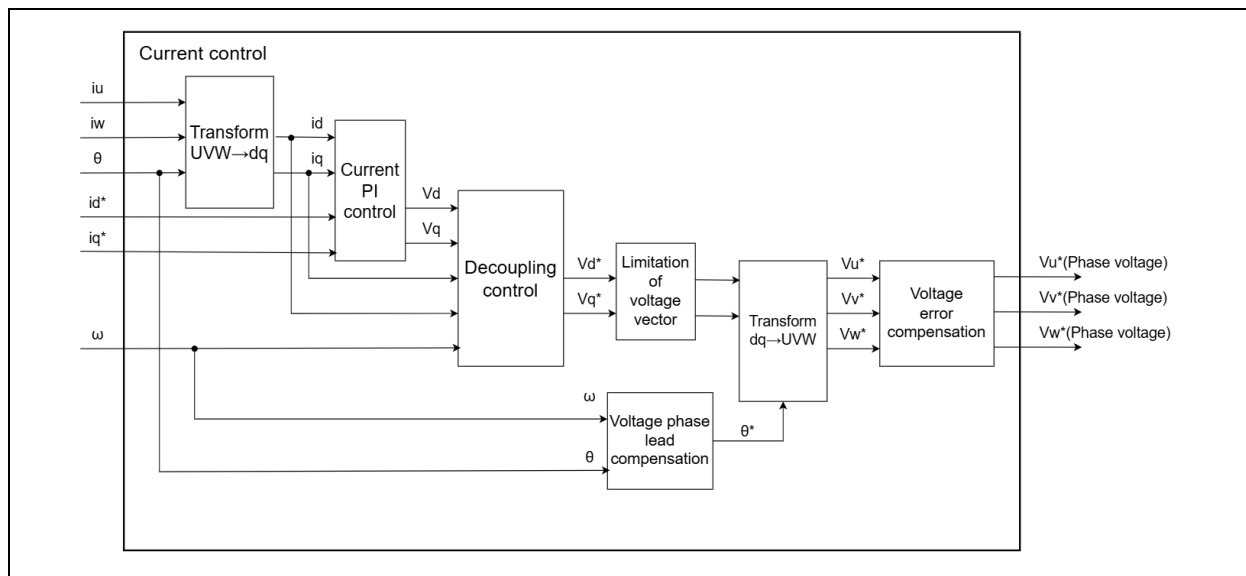


Figure 9-5 Module configuration diagram of current control module

9.8.3 API

API functions for current control are listed below.

Table 9-39 List of API functions for the current control module

API	Description
RM_MOTOR_CURRENT_Open	Generates instances of current control module and the modules to be used.
RM_MOTOR_CURRENT_Close	Close instances of current control module and the modules to be used.
RM_MOTOR_CURRENT_Reset	Initializes current control module and the modules to be used.
RM_MOTOR_CURRENT_Run	Activates current control module.
RM_MOTOR_CURRENT_ParameterSet	Set parameters from speed control module.
RM_MOTOR_CURRENT_CurrentReferenceSet	Set current reference from speed control module.
RM_MOTOR_CURRENT_SpeedPhaseSet	Set speed and phase information.
RM_MOTOR_CURRENT_CurrentSet	Set detected current data.
RM_MOTOR_CURRENT_ParameterGet	Get parameters about current control module. (These parameters are set to speed control module via interface module.)
RM_MOTOR_CURRENT_CurrentGet	Get current and voltage data.
RM_MOTOR_CURRENT_PhaseVoltageGet	Get phase voltage data.
RM_MOTOR_CURRENT_ParameterUpdate	Updates the control parameters by user setting.

9.8.4 Structure and variable information

Structures and variables of current control module are listed below.

Table 9-40 List of structures and variables for the current control module [1/2]
(rm_motor_current_api.h)

Structure	Members	Description
motor_current_callback_args_t	*p_context	Address of context data for callback function
	event	Event data of callback
motor_current_output_t	f_id	d-axis electrical current [A]
	f_iq	q-axis electrical current [A]
	f_vamax	Limit of voltage vector [V]
	f_speed_rad	Rotation speed (electrical) [rad/s]
	f_speed_rpm	Rotation speed (mechanical) [rpm]
	f_rotor_angle	Rotor angle [rad]
	f_position_rad	Position data [rad]
	f_ed	Estimated d-axis voltage [V] (No use in vector control with encoder)
	f_eq	Estimated q-axis voltage [V] (No use in vector control with encoder)
	f_phase_err_rad	Phase error [rad] (No use in vector control with encoder)
	u1_flag_get_iref	Flag of start to calculate current reference
	u1_adjust_status	Adjusting (draw in) status at start up
	u1_adjust_count_full	Flag of full of counter
	u1_openloop_status	Open loop status at induction calibration
	f_openloop_speed	Speed of open loop at induction calibration (No use in vector control with encoder)
	f_openloop_id_ref	d-axis current reference at induction calibration (No use in vector control with encoder)
motor_current_input_t	f_id_ref	d-axis current reference [A]
	f_iq_ref	q-axis current reference [A]
	f_ref_speed_rad_ctrl	Speed reference internally (electrical) [rad/s]
	f_damp_comp_speed	Speed at open loop damping (electrical) [rad/s] (No use in vector control with encoder)
	u1_flag_pi	Flag of start PI control
motor_current_input_current_t	iu	U phase electrical current [A]
	iv	V phase electrical current [A]
	iw	W phase electrical current [A]
motor_current_input_voltage_t	vdc	Inverter bus voltage [V]
	va_max	Limit of voltage vector [V]

Table 9-41 List of structures and variables for the current control module [2/2]
(rm_motor_current_api.h)

Structure	Members	Description
motor_current_get_voltage_t	u_voltage	U phase voltage [V] (No use in vector control with encoder)
	v_voltage	V phase voltage [V] (No use in vector control with encoder)
	w_voltage	W phase voltage [V] (No use in vector control with encoder)
	vd_reference	Reference of d-axis voltage
	*vq_reference	Address for reference of q-axis voltage
motor_current_cfg_t	*p_motor_driver_instance	Address of instance of driver module
	*p_motor_angle_instance	Address of instance of angle (detect) module
	*p_callback	Address of registered callback function
	*p_context	Address of context data for registered callback function
	*p_extend	Address of structure of extended configuration data to refer
motor_current_api_t	*open	Function address to open module
	*close	Function address to close module
	*reset	Function address to reset module
	*run	Function address to run module (start motor rotation)
	*parameterSet	Function address to set parameters from speed control module
	*currentReferenceSet	Function address to set current reference
	*speedPhaseSet	Function address to set rotation speed and rotor angle
	*currentSet	Function address to set each phase current
	*parameterGet	Function address to get parameters to output to speed control module
	*currentGet	Function address to get current data
	*phaseVoltageGet	Function address to get voltage data
	*parameterUpdate	Function address to update configuration
motor_current_instance_t	*p_ctrl	Address of structure to be used in the module
	*p_cfg	Address of structure of configuration data
	*p_api	Address of structure of API functions

Table 9-42 List of structures and variables for the current control module [1/4] (rm_motor_current.h)

Structure	Members	Description
motor_current_pi_params_t	f_err	Error
	f_kp	Gain parameter for proportional term
	f_ki	Gain parameter for integral term
	f_refi	Integral term
	f_imit	Limit of integral term
motor_current_design_parameter_t	f_current_omega	Natural frequency of current PI [Hz]
	f_current_zeta	Attenuation coefficient of current PI
motor_current_motor_parameter_t	u2_mtr_pp	Pole pairs
	f4_mtr_r	Resistance [ohm]
	f4_mtr_ld	d-axis inductance [H]
	f4_mtr_lq	q-axis inductance [H]
	f4_mtr_m	Magnetic flux [Wb]
	f4_mtr_j	Inertia [kgm ²]
motor_currnt_voltage_compensation_t	f_comp_v	Correction of voltage
	f_comp_i	Correction of current
	f_slope	Coefficient of line interpolation
	f_intcept	Coefficient of line interpolation
	f_volt_comp_array	Array of voltage compensation
	f_vdc	Inverter bus voltage [V]
	f_volt_comp_limit	Limit of voltage compensation
	u1_volt_err_comp_enable	Selection of voltage error compensation function (enable/disable)

Table 9-43 List of structures and variables for the current control module [2/4] (rm_motor_current.h)

Structure	Members	Description
motor_current_extended_cfg_t	u1_control_type	Sensor type (sensorless/encoder/hall/induction)
	shunt	Shunt type (1/2/3)
	f_comp_v	Table of voltage for voltage error compensation
	f_comp_i	Table of current for voltage error compensation
	vcomp_enable	Selection of voltage compensation function (enable/disable)
	u1_sample_delay_comp_enable	Selection of sample delay compensation function (enable/disable)
	f_period_magnitude_value	Ratio of period for sample delay compensation
	f_current_ctrl_period	Period of current control [sec]
	f_imit	Limit of current [A]
	*p_motor_parameter	Address of structure of motor parameters
	*p_design_parameter	Address of structure of current PI control

Table 9-44 List of structures and variables for the current control module [3/4] (rm_motor_current.h)

Structure	Members	Description
motor_current_instance_ctrl_t	open	Module opened information
	u1_active	A flag of module active
	f_vd_ref	d-axis voltage reference [V]
	f_vq_ref	q-axis voltage reference [V]
	f_id_ref	d-axis current reference [A]
	f_iq_ref	q-axis current reference [A]
	f_iu_ad	U phase current [A]
	f_iv_ad	V phase current [A]
	f_iw_ad	W phase current [A]
	f_id_ad	d-axis current [A]
	f_iq_ad	q-axis current [A]
	f_vdc_ad	Inverter bus voltage [V]
	f_speed_rad	Rotation speed (electrical) [rad/s]
	f_rotor_angle	Rotor angle [rad]
	f_position_rad	Position data [rad]
	f_refu	U phase voltage reference [V]
	f_refv	V phase voltage reference [V]
	f_refw	W phase voltage reference [V]
	f_va_max	Limit of voltage vector
	f_ed	Estimated d-axis voltage (No use in vector control with encoder)
	f_eq	Estimated q-axis voltage (No use in vector control with encoder)
	f_phase_err	Phase error (No use in vector control with encoder)
	u1_flag_crnt_offset	Flag of getting current offset
	f_sin_ad_data	Sine input data of induction sensor (No use in vector control with encoder)
	f_cos_ad_data	Cosine input data of induction sensor (No use in vector control with encoder)
	*p_cfg	Address of structure of configuration data to refer

Table 9-45 List of structures and variables for the current control module [4/4] (rm_motor_current.h)

Structure	Members	Description
motor_current_instance_ctrl _t	st_pi_id	Structure for d-axis PI control
	st_pi_iq	Structure for q-axis PI control
	st_vcomp	Structure for voltage error compensation
	st_input	Structure for input data from speed control module
	*p_angle_instance	Address of instance of angle (detect) module
	*p_driver_instance	Address of instance of driver module

9.8.5 Macro and enumeration definition

The macros and enumerations for current control module are listed below.

Table 9-46 List of macros of current control module

File name	Name of MACRO	Defined value	Description
rm_motor_current. c	MOTOR_CURRENT_OPEN	('M' << 24U) ('T' << 16U) ('C' << 8U) ('T' << 0U)	Opened information
	MOTOR_CURRENT_FLG_CLR	0	Clear a flag
	MOTOR_CURRENT_FLG_SET	1	Set a flag
	MOTOR_CURRENT_TWOP	2.0F * 3.141592653 5F	2PI
	MOTOR_CURRENT_60_TWOP I	60.0F / MOTOR_CU RRENT_TWO PI	To transform rad/s => rpm
	MOTOR_CURRENT_SQRT_2	1.41421356F	$\sqrt{2}$
	MOTOR_CURRENT_SQRT_3	1.7320508F	$\sqrt{3}$
	MOTOR_CURRENT_DIV_KHZ	0.001F	To transform kHz => Hz

Table 9-47 List of Enumeration type for current control module (rm_motor_current_api.h)

Enumeration type name	Members	Defined value	Description
motor_current_event_t	MOTOR_CURRENT_EVENT_FORWARD	1	Callback event before cyclic current control process
	MOTOR_CURRENT_EVENT_DATA_SET	2	Callback event for cyclic current control process
	MOTOR_CURRENT_EVENT_BACKWARD	3	Callback event after cyclic current control process

Table 9-48 List of Enumeration type for current control module (rm_motor_current_api.h)

Enumeration type name	Members	Defined value	Description
motor_current_control_type_t	MOTOR_CURRENT_CONTROL_TYPE_SENSORLESS	0	Sensorless
	MOTOR_CURRENT_CONTROL_TYPE_ENCODER	1	Encoder
	MOTOR_CURRENT_CONTROL_TYPE_HALL	2	Hall
	MOTOR_CURRENT_CONTROL_TYPE_INDUCION	3	Induction
motor_current_shunt_type_t	MOTOR_CURRENT_SHUNT_TYPE_1_SHUNT	1	1shunt
	MOTOR_CURRENT_SHUNT_TYPE_2_SHUNT	2	2shunts
	MOTOR_CURRENT_SHUNT_TYPE_3_SHUNT	3	3shunts
motor_current_voltage_compensation_select_t	MOTOR_CURRENT_VOLTAGE_COMPENSATION_SELECT_DISABLE	0	Disable voltage compensation function
	MOTOR_CURRENT_VOLTAGE_COMPENSATION_SELECT_ENABLE	1	Enable voltage compensation function
motor_current_sample_delay_compensation_t	MOTOR_CURRENT_SAMPLE_DELAY_COMPENSATION_DISABLE	0	Disable sample delay compensation function
	MOTOR_CURRENT_SAMPLE_DELAY_COMPENSATION_ENABLE	1	Enable sample delay compensation function

9.9 Position Control Module

Position control function generates the pattern of position reference with using position profile function according to input position reference. And it also output speed reference by feedback control of position and feedforward control of speed.

9.9.1 Functions

Functions of position control module are listed below.

Table 9-49 Functions of position control module

Function	Description
Position profile	Generate position reference pattern with error of position reference
Deadband control	Coordinate the difference between position and reference with detection of deadband
Position P control	Output speed reference with position P control
Position IPD control	Output speed reference with position IPD control
Speed feedforward control	Perform feedforward control to speed reference

9.9.2 Module configuration diagram

shows the module configuration diagram.

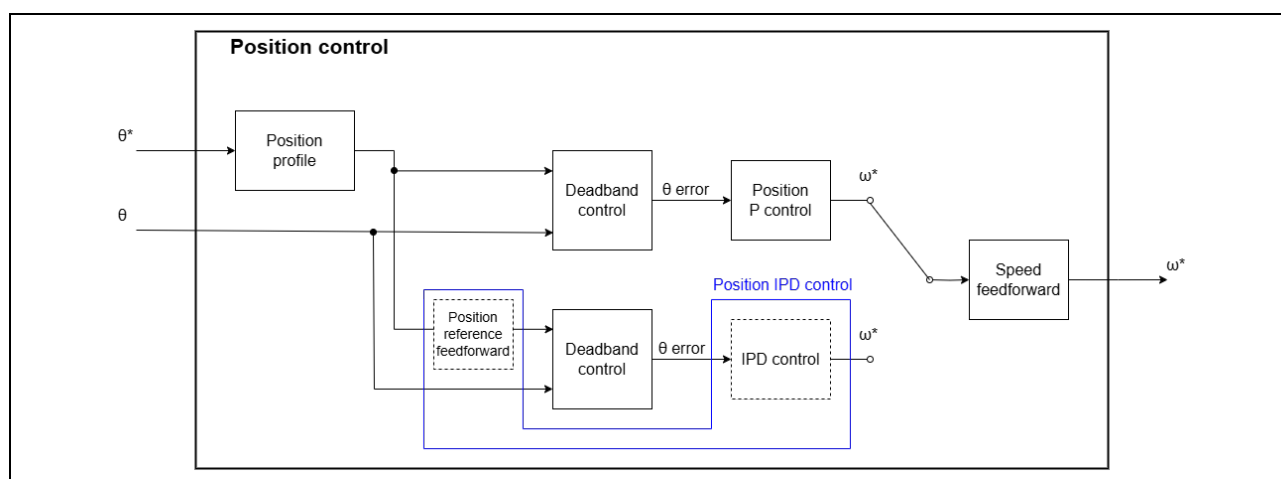


Figure 9-6 Module configuration diagram of position control module

9.9.3 API

API functions for position control are listed below.

Table 9-50 List of API functions for the position control module

API	Description
RM_MOTOR_POSITION_Open	Open the module
RM_MOTOR_POSITION_Close	Close the module
RM_MOTOR_POSITION_Reset	Reset the module
RM_MOTOR_POSITION_PositionGet	Get position information
RM_MOTOR_POSITION_PositionSet	Set position information
RM_MOTOR_POSITION_PositionReferenceSet	Set position reference
RM_MOTOR_POSITION_ControlModeSet	Set(select) control mode
RM_MOTOR_POSITION_PositionControl	Perform position control process
RM_MOTOR_POSITION_IpdSpeedPControl	Perform P control included IPD control
RM_MOTOR_POSITION_SpeedReferencePControlGet	Get speed reference by P control
RM_MOTOR_POSITION_SpeedReferenceIpdControlGet	Get speed reference by IPD control
RM_MOTOR_POSITION_SpeedReferenceFeedforwardGet	Get speed reference by feedforward control
RM_MOTOR_POSITION_InfoGet	Get position and position profile information
RM_MOTOR_POSITION_ParameterUpdate	Update user set configuration data

9.9.4 Structure and variable information

Structures and variables of position control module are listed below.

Table 9-51 List of structures and variables for the position control module (rm_motor_position_api.h)

Structure	Members	Description
motor_position_info_t	u1_state_position_profile	State of position profile
	s2_position_degree	Position information [degree]
motor_position_cfg_t	*p_context	Address of context data for callback function
	*p_extend	Address of structure of extended data
motor_position_api_t	*open	Function address to open this module
	*close	Function address to close this module
	*reset	Function address to reset this module
	*positionGet	Function address to get position data
	*positionSet	Function address to set position data
	*positionReferenceSet	Function address to set position reference
	*controlModeSet	Function address to set control mode
	*positionControl	Function address to perform position control
	*ipdSpeedPControl	Function address to perform speed P control in IPD control
	*speedReferencePControlGet	Function address to get speed reference by P control
	*speedReferenceIpdControlGet	Function address to get speed reference by IPD control
	*speedReferenceFeedforwardGet	Function address to get speed reference by feedforward control
	*infoGet	Function address to get position and position reference information
	*parameterUpdate	Function address to update configuration data
motor_position_instance_t	*p_ctrl	Address of structure of this module variables
	*p_cfg	Address of structure of this module configuration
	*p_api	Address of structure of API function addresses

Table 9-52 List of structures and variables for the position control module [1/2]
(rm_motor_position.h)

Structure	Members	Description
motor_position_motor_parameter_t	u2_mtr_pp	Pole pairs
	f4_mtr_r	Resistance [ohm]
	f4_mtr_ld	d-axis inductance [H]
	f4_mtr_lq	q-axis inductance [H]
	f4_mtr_m	Magnetic flux [Wb]
	f4_mtr_j	Rotor inertia [kgm ²]
motor_position_2nd_order_lpf_t	f4_pre_output	Previous output
	f4_pre2_output	Output value before last
	f4_pre_input	Previous input
	f4_pre2_input	Input value before last
	f4_omega_t	Natural frequency #1
	f4_omega2_t	Natural frequency #2
	f4_omega2_t2	Natural frequency #3
	f4_gain_ka	LPF gain a
	f4_gain_kb	LPF gain b
	f4_gain_kc	LPF gain c
motor_position_ipd_t	u1_ipd_lpf_flag	Enable/Disable of IPD LPF
	f4_ref_pos_pre_rad_ctrl	Previous position reference (mechanical) [rad]
	f4_ipd_pos_k	IPD position control gain
	f4_ipd_pos_1st_fb_rad	Detected position (mechanical) [rad]
	f4_ipd_pos_1st_fb_pre_rad	Previous detected position (mechanical) [rad]
	f4_ipd_pos_2nd_fb_rad	Term of position feedback (mechanical) [rad]
	f4_ipd_ref_pos_rad	Position reference of IPD control (mechanical) [rad]
	f4_ipd_err_rad	Error of IPD control (mechanical) [rad]
	f4_ipd_pos_fb_k	Gain of position feedback
	f4_ipd_pos_ff_rad	Position of feedforward (mechanical) [rad]
	f4_ipd_pos_ff_k	Gain of position feedforward
	f4_ipd_pos_p_rad	Term of position P control (mechanical) [rad]
	f4_ipd_pos_kp	Gain of position P control
motor_position_ipd_t	f4_ipd_pos_kp_ratio	Ratio of gain about position P control
	f4_ipd_pos_ff_ratio	Ratio of gain about position feedforward
	f4_ipd_speed_k	Speed gain of IPD
	f4_ipd_speed_k_ratio	Rate of gain about speed IPD
	f4_ipd_ref_speed_rad	Term of position IPD control (electrical) [rad/s]
	f4_ipd_err_limit_1	Limit of position error in position IPD (mechanical) [rad]
	f4_ipd_err_limit_2	Ratio of limit of maximum speed in IPD
	f4_ipd_lpf_omega	Natural frequency of LPF [Hz]
	f4_ipd_lpf_zeta	Attenuation coefficient of LPF
	f4_pos_omega	Natural frequency of position control [Hz]
	st_pos_lpf	Structure of LPF
	f4_ipd_pos_kp_ratio	Ratio of gain about position P control
motor_position_ipd_design_parameter_t	f4_ipd_pos_ff_ratio	Ratio of gain about position feedforward
	f4_ipd_speed_k_ratio	Ratio of gain of speed P control
	f4_ipd_err_limit_1	Limit of position error in IPD (mechanical) [rad]
	f4_ipd_err_limit_2	Ratio of limit of maximum speed in IPD
	f4_ipd_lpf_omega	Natural frequency of LPF [Hz]
	f4_ipd_lpf_zeta	Attenuation coefficient of LPF

Table 9-53 List of structures and variables for the position control module [2/2]
(rm_motor_position.h)

Structure	Members	Description
motor_position_profiling_t	u1_state_pos_pf	Status of position profiling
	u1_pos_ref_mode	Mode of position profiling
	u2_interval_time	Counts of interval
	u2_interval_time_buff	Buffer of counts of interval
	u2_interval_time_cnt	Counter of interval
	f4_accel_time	Acceleration time [s]
	f4_accel_time_buff	Buffer of acceleration time [s]
	f4_accel_time_inv	Inverse of acceleration time [1/s]
	f4_max_accel_time	Maximum period of acceleration [s]
	f4_accel_max_speed	Maximum speed (mechanical) [rad/s]
	f4_accel_max_speed_buff	Buffer of maximum speed (mechanical) [rad/s]
	f4_time_sec	Timer counter of position profiling [s]
	f4_pos_st_rad	Start position (mechanical) [rad]
	f4_pos_ed_rad	Stop position (mechanical) [rad]
	f4_pos_dt_rad	Position error of position profiling (mechanical) [rad]
	f4_pos_dt_time_sec	Start time to deceleration [s]
motor_position_profiling_setting_t	u2_interval_time	Set counts of interval
	f4_accel_time	Acceleration time [s]
	f4_max_accel	Maximum Acceleration [rad/s^2]
	f4_accel_max_speed	Maximum speed (mechanical) [rpm]
	f4_timer_update_step	Update period of position profile [s]
motor_position_extended_cfg_t	ipd_lpf	Enable/Disable IPD control
	st_ipd_design	Structure of position IPD design
	st_profiling_set	Structure to set position profiling
	u2_pos_dead_band	Deadband
	u2_pos_band_limit	Band to judge finish position control
	f_speed_ff_ratio	Ratio of gain of speed feedforward
	f_encd_angle_diff	Resolution of encoder (mechanical) [rad/count]
	f_pos_omega	Natural frequency of position control [Hz]
	f_accel_time	Acceleration time [s]
	f_speed_ctrl_period	Period of speed control [s]
	st_motor	Structure of motor parameters
motor_position_variable_s_t	f4_pos_kp	Gain of position P control
	f4_pos_rad	Current position (mechanical) [rad]
	f4_pos_err_rad	Error of position (mechanical) [rad]
	f4_ref_pos_rad	Position reference (user setting) (mechanical) [rad]
	f4_ref_pos_pre_rad	Previous position reference (user setting) (mechanical) [rad]
	f4_ref_pos_rad_ctrl	Position reference (input of position control) (mechanical) [rad]
	f4_speed_ff_rad	Value of speed feedforward (mechanical) [rad/s]
motor_position_instance_ctrl_t	open	Module opened information
	e_ctrl_mode	Control mode
	st_variable	Structure of variables
	st_ipd	Structure of IPD control
	st_profiling	Structure of position profiling
	*p_cfg	Address of structure of module configuration

9.9.5 Macro and enumeration definition

The macros and enumerations for position control module are listed below.

Table 9-54 List of macros of position control module

File name	Name of MACRO	Defined value	Description
rm_motor_position.c	MOTOR_POSITION_OPEN	('M' << 24U) ('T' << 16U) ('P' << 8U) ('S' << 0U)	Module opened information
	MOTOR_POSITION_LIMIT	(32767.0F * MOTOR_POSITION_TWOPI) / 360.0F	Limit of position control
	MOTOR_POSITION_CTRL_TRIANGLE	0	Mode of triangle
	MOTOR_POSITION_CTRL_TRAPEZOIDAL	1	Mode of trapezoidal
	MOTOR_POSITION_STEADY_STATE	0	Reached to required position
	MOTOR_POSITION_TRANSITION_STATE	1	Moving to required position
	MOTOR_POSITION_PROFILE_MULTIPLE_TWO	2.0F	2.0
	MOTOR_POSITION_PROFILE_MULTIPLE_THREE	3.0F	3.0
	MOTOR_POSITION_PROFILE_HALF	0.5F	0.5

Table 9-55 List of Enumeration type for position control module (rm_motor_position_api.h)

Enumeration type name	Members	Defined value	Description
motor_position_ctrl_mode_t	MOTOR_POSITION_CTRL_MODE_CONSTANT	0	Mode of triangle
	MOTOR_POSITION_CTRL_MODE_TRAPEZOID	1	Mode of trapezoidal
	MOTOR_POSITION_CTRL_MODE_STEP	2	Follow the reference immediately

Table 9-56 List of Enumeration type for position control module (rm_motor_position.h)

Enumeration type name	Members	Defined value	Description
motor_position_ipd_lpf_t	MOTOR_POSITION_IPD_LPF_DISABLE	0	Position IPD LPF disabled
	MOTOR_POSITION_IPD_LPF_ENABLE	1	Position IPD LPF enabled

9.10 Driver Module

The driver module works as an interface between each motor modules and MCU peripherals. Appropriately configuring the driver module allows you to use microcontroller function allocation and the differences of the board to be used without modifying the motor module.

9.10.1 Functions

Table 9-57 lists the functions of the driver module.

Table 9-57 List of functions of the driver module

Functions	Description
Acquisition of the A/D conversion value	Acquires A/D converted values such as the phase current and inverter bus voltage.
PWM duty setting	Sets the PWM duty value that is to be output to U, V, and W-phases.
PWM start/stop	Controls whether to start or stop (active or inactive) of PWM output.

9.10.2 Module configuration diagram

The module configuration of driver module is shown below.

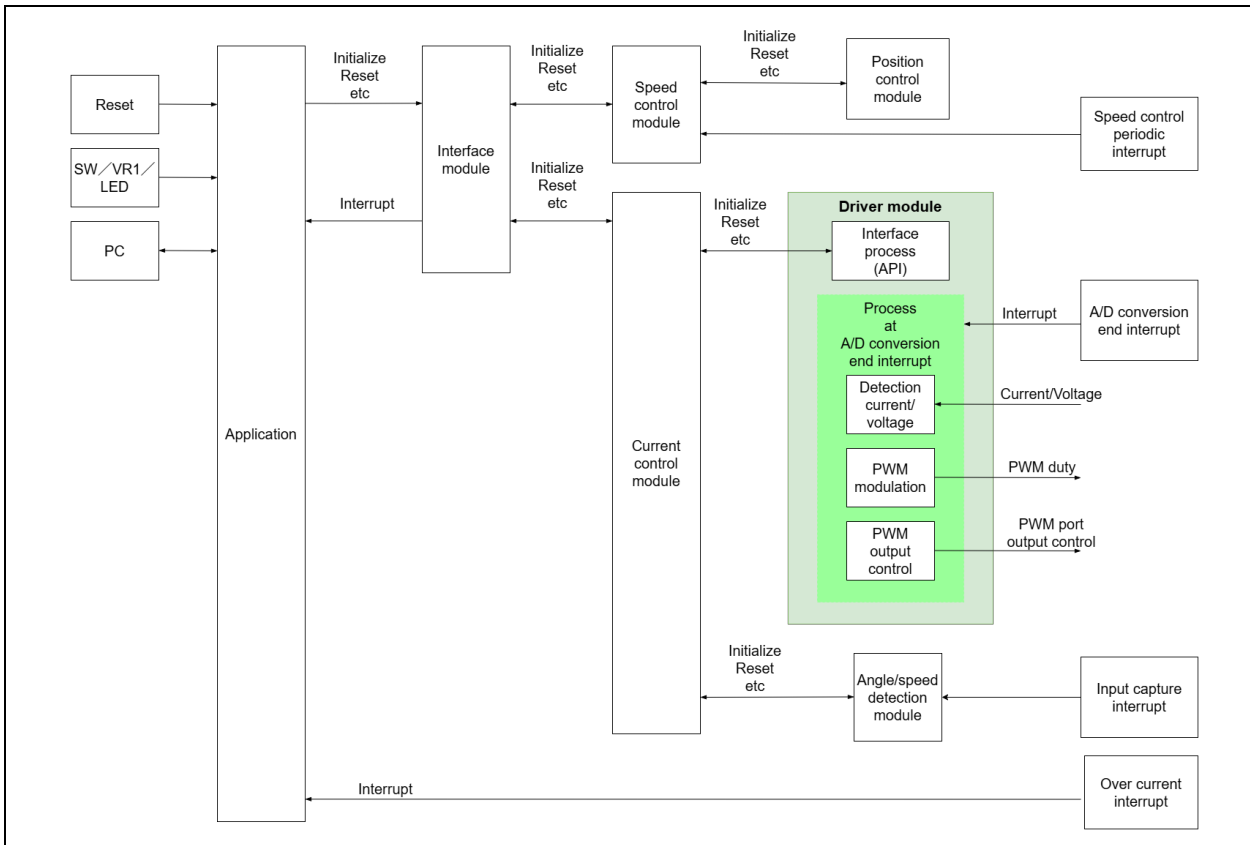


Figure 9-7 Module configuration diagram of driver module

9.10.3 API

Table 9-58 lists and describes the API functions for driver module.

Table 9-58 List of API functions for the driver module

API	Description
RM_MOTOR_DRIVER_Open	Generate instances of driver module and the modules to be used.
RM_MOTOR_DRIVER_Close	Close instances of driver module and the modules to be used.
RM_MOTOR_DRIVER_Reset	Reset the module.
RM_MOTOR_DRIVER_PhaseVoltageSet	Set phase and PWM voltage of each phase.
RM_MOTOR_DRIVER_CurrentGet	Get each phase current and inverter bus voltage.
RM_MOTOR_DRIVER_FlagCurrentOffsetGet	Perform the measurement of A/D offset and get the finish flag of measurement.
RM_MOTOR_DRIVER_CurrentOffsetRestart	Restart current offset measurement.
RM_MOTOR_DRIVER_ParameterUpdate	Updates the control parameters by user setting.

9.10.4 Structure and variable information

Structures and variables of driver module are listed below.

Table 9-59 List of structures and variables for driver module [1/2] (rm_motor_driver_api.h)

Structure	Members	Description
motor_driver_callback_args_t	event	Event data of callback
	*p_context	Address of context data for callback function
motor_driver_current_get_t	iu	U phase electrical current [A]
	iv	V phase electrical current [A]
	iw	W phase electrical current [A]
	vdc	Inverter bus voltage [V]
	va_max	Limit of voltage vector
	sin_ad	sine signal input of induction sensor (No use in vector control with encoder)
	cos_ad	cosine signal input of induction sensor (No use in vector control with encoder)
motor_driver_cfg_t	*p_adc_instance	Address of instance of A/D conversion module
	iu_ad_ch	A/D channel for U phase current
	iv_ad_ch	A/D channel for V phase current
	iw_ad_ch	A/D channel for W phase current
	vdc_ad_ch	A/D channel for inverter bus voltage
	sin_ad_ch	A/D channel for sine signal of induction sensor (No use in vector control with encoder)
	cos_ad_ch	A/D channel for cosine signal of induction sensor (No use in vector control with encoder)
	*p_adc2_instance	Address of instance of 2nd A/D conversion module (This is used at 2unit ADC peripheral using.)
	shunt	Shunt type
	*p_three_phase_instance	Address of instance of three phase PWM control module
	*p_callback	Address of registered callback function
	*p_context	Address of context data for registered callback function
	*p_extend	Address of structure of extended configuration data to refer

Table 9-60 List of structures and variables for driver module [2/2] (rm_motor_driver_api.h)

Structure	Members	Description
motor_driver_api_t	*open	Function address to open module
	*close	Function address to close module
	*reset	Function address to reset module
	*phaseVoltageSet	Function address to set each phase voltage
	*currentGet	Function address to get current and voltage data
	*flagCurrentOffsetGet	Function address to perform measurement of current offset and to get finish flag
	*currentOffsetRestart	Function address to restart measurement of current offset
	*parameterUpdate	Function address to update configuration
motor_driver_instance_t	*p_ctrl	Address of structure to be used in the module
	*p_cfg	Address of structure of configuration data
	*p_api	Address of structure of API functions

Table 9-61 List of structures and variables for driver module [1/4] (rm_motor_direver.h)

Structure	Members	Description
motor_driver_modulation_t	f4_vdc	Inverter bus voltage [V]
	f4_1_div_vdc	Divided by inverter bus voltage (to calculate)
	f4_voltage_error_ratio	Error ratio of voltage
	f4_max_duty	Maximum PWM duty
	f4_min_duty	Minimum PWM duty
	f4_neutral_duty	Neutral PWM duty (0[V] output)
	u1_sat_flag	Saturation flag
motor_driver_shared_instance_ctrl_t	open	Shared module open information
	registered_motor_count	Registered motor count in shared module
	*p_context	Address of context data for shared module
motor_driver_extended_shared_cfg_t	*p_adc_instance_first	Address of instance of 1st A/D conversion module
	*p_adc_instance_second	Address of instance of 2nd A/D conversion module
	*p_shared_instance_ctrl	Address of structure of variables to be used by shared module

Table 9-62 List of structures and variables for driver module [2/4] (rm_motor_direver.h)

Structure	Members	Description
motor_driver_extended_cfg_t	u2_pwm_timer_freq	PWM timer clock frequency [MHz]
	u2_pwm_carrier_freq	PWM carrier frequency [kHz]
	pwm_carrier_freq	PWM carrier frequency [kHz]
	u2_deadtime	Dead time
	f_current_range	Maximum detected current value [A]
	f_vdc_range	Maximum detected inverter bus voltage value [V]
	f_ad_resolution	Resolution of A/D conversion
	f_ad_current_offset	Current offset at A/D port (0[A] digits)
	f_ad_voltage_conversion	A/D conversion level
	u2_offset_calc_count	Counts to measure current offset
	modulation_method	Modulation method
	port_up	PWM U upper phase port number
	port_un	PWM U lower phase port number
	port_vp	PWM V upper phase port number
	port_vn	PWM V lower phase port number
	port_wp	PWM W upper phase port number
	port_wn	PWM W lower phase port number
	f_ad_current_adjust	Adjustment value for current conversion for 1shunt detection (No use in vector control with encoder)
	s4_difference_minimum	Minimum difference of PWM duty (No use in vector control with encoder)
	s4_adjust_adc_delay	Adjustment delay of A/D sampling timing for 1shunt detection (No use in vector control with encoder)
	trigger_phase	Trigger phase of interrupt to get 1shunt current (No use in vector control with encoder)

Table 9-63 List of structures and variables for driver module [3/4] (rm_motor_direver.h)

Structure	Members	Description
motor_driver_extended_cfg_t	adc_group	Which ADC scan group to use in ADC_B module
	iu_ad_unit	A/D unit number for U phase current
	iv_ad_unit	A/D unit number for V phase current
	iw_ad_unit	A/D unit number for W phase current
	vdc_ad_unit	A/D unit number for inverter bus voltage
	sin_ad_unit	A/D unit number for sine signal of induction sensor (No use in vector control with encoder)
	cos_ad_unit	A/D unit number for cosine signal of induction sensor (No use in vector control with encoder)
	mod_param	Structure of modulation variables
	interrupt_adc	Which ADC module happens A/D conversion end interrupt
	*p_shared_cfg	Address of configuration data of shared module

Table 9-64 List of structures and variables for driver module [4/4] (rm_motor_direver.h)

Structure	Members	Description
motor_driver_instance_ctrl_t	open	Module open information
	u2_carrier_base	PWM carrier counts
	u2_deadtime_count	Deadtime counts
	f_iu_ad	U phase electrical current [A]
	f_iv_ad	V phase electrical current [A]
	f_iw_ad	W phase electrical current [A]
	f_vdc_ad	Inverter bus voltage [V]
	f_sin_ad	sine signal input of induction sensor (No use in vector control with encoder)
	f_cos_ad	cosine signal input of induction sensor (No use in vector control with encoder)
	f_refu	U phase voltage reference [V]
	f_refv	V phase voltage reference [V]
	f_refw	W phase voltage reference [V]
	u1_flag_offset_calc	Flag of finish of current offset measurement
	u2_offset_calc_times	Counter to measure current offset
	f_offset_iu	Current offset of U phase current
	f_offset_iv	Current offset of V phase current
	f_offset_iw	Current offset of W phase current
	f_sum_iu_ad	Summation of current offset to calculate for U phase current
	f_sum_iv_ad	Summation of current offset to calculate for V phase current
	f_sum_iw_ad	Summation of current offset to calculate for W phase current
	min_phase	Minimum duty phase (for 1shunt) (No use in vector control with encoder)
	mid_phase	Medium duty phase (for 1shunt) (No use in vector control with encoder)
	u4_gtioca_low_cfg	GTIOCA configuration for low output
	u4_gtiocb_low_cfg	GTIOCB configuration for low output
	u1_flag_port_enable	Flag of PWM port active/inactive
	st_modulation	Structure of modulation
	*p_cfg	Address of configuration data to refer
	adc_callback_args	Arguments for A/D conversion end interrupt callback
	timer_callback_args	Arguments for timer interrupt callback
	*p_shared_instance_ctrl	Address of structure to be used in shared module

9.10.5 Macro and enumeration definition

The macros and enumerations for driver module are listed below.

Table 9-65 List of macros of driver module

File name	Name of MACRO	Defined value	Description
rm_motor_driver.c	MOTOR_DRIVER_OPEN	('M' << 24U) ('T' << 16U) ('D' << 8U) ('R' << 0U)	Open information of driver module
	MOTOR_DRIVER_SHARED_ADC_OPEN	('M' << 24U) ('T' << 16U) ('S' << 8U) ('A' << 0U)	Open information of shared module
	MOTOR_DRIVER_FLG_CLR	0	Clear a flag
	MOTOR_DRIVER_FLG_SET	1	Set a flag
	MOTOR_DRIVER_KHZ_TRANS	1000U	To transform kHz => Hz
	MOTOR_DRIVER_DEF_HALF	0.5F	0.5
	MOTOR_DRIVER_MULTIPLE_TWO	2.0F	2.0
	MOTOR_DRIVER_ADC_DATA_MASK	0x00000FFF	Mask of A/D converted data
	MOTOR_DRIVER_METHOD_SPWM	0	Modulation method SPWM
	MOTOR_DRIVER_METHOD_SVPWM	1	Modulation method SVPWM
	MOTOR_DRIVER_SATFLAG_BITU	1 << 0	Shift data of Saturation bit for U phase
	MOTOR_DRIVER_SATFLAG_BITV	1 << 1	Shift data of Saturation bit for V phase
	MOTOR_DRIVER_SATFLAG_BITW	1 << 2	Shift data of Saturation bit for W phase
	MOTOR_DRIVER_VDC_TO_VA_MAX_MULT	0.6124F	Coefficient to transform limit of voltage vector
	MOTOR_DRIVER_SVPWM_MULTIPLY	1.155F	$\sqrt{4/3}$
	MOTOR_DRIVER_IO_PORT_CFG_LOW	0x3000004	IO port configuration for output low level
	MOTOR_DRIVER_IO_PORT_CFG_HIGH	0x3000005	IO port configuration for output high level
	MOTOR_DRIVER_IO_PORT_PERIPHERAL_MASK	0x0010000	Mask of IO port configuration for peripheral mode
	MOTOR_DRIVER_IO_PORT_GENERAL_MASK	0xFFEFFFF	Mask of IO port configuration for general mode

Table 9-66 List of Enumeration type for driver module (rm_motor_driver_api.h)

Enumeration	Members	Defined value	Description
motor_driver_event_t	MOTOR_DRIVER_EVENT_FORWARD	1	Callback event before driver module process (A/D conversion end interrupt)
	MOTOR_DRIVER_EVENT_CURRENT	2	Callback event for calculation of A/D converted data (A/D conversion end interrupt)
	MOTOR_DRIVER_EVENT_BACKWARD	3	Callback event after driver module process (A/D conversion end interrupt)
motor_driver_shunt_type_t	MOTOR_DRIVER_SHUNT_TYPE_1_SHUNT	1	1shunt
	MOTOR_DRIVER_SHUNT_TYPE_2_SHUNT	2	2shunts
	MOTOR_DRIVER_SHUNT_TYPE_3_SHUNT	3	3shunts

Table 9-67 List of Enumeration type for driver module (rm_motor_driver.h)

Enumeration	Members	Defined value	Description
motor_driver_select_adc_instance_t	MOTOR_DRIVER_SELECT_ADC_INSTANCE_FIRST	0	1 st ADC module instance
	MOTOR_DRIVER_SELECT_ADC_INSTANCE_SECOND	1	2 nd ADC module instance
motor_driver_modulation_method_t	MOTOR_DRIVER_MODULATION_METHOD_SPWM	0	Modulation method SPWM
	MOTOR_DRIVER_MODULATION_METHOD_SVPWM	1	Modulation method SVPWM
motor_driver_phase_t	MOTOR_DRIVER_PHASE_U_PHASE	0	U phase
	MOTOR_DRIVER_PHASE_V_PHASE	1	V phase
	MOTOR_DRIVER_PHASE_W_PHASE	2	W phase

9.11 Detection of Angle/Speed Module

Detection module detect rotation speed and rotor angle using the method described 7.6.

9.11.1 Functions

Table 9-68 lists the functions of the detect module.

Table 9-68 List of functions of the detect module

Functions	Description
Detection of speed and angle	Detect rotation speed and rotor angle with encoder.

9.11.2 Module configuration diagram

Figure 9-5 shows the module configuration diagram.

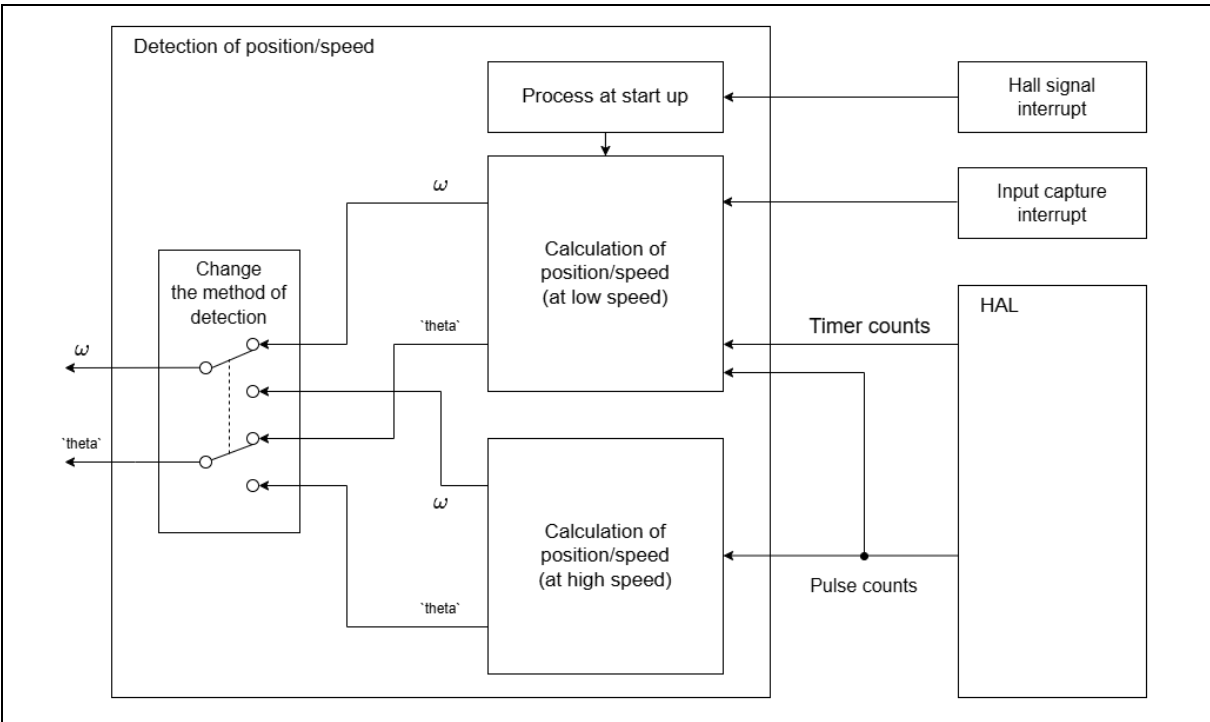


Figure 9-8 Module configuration diagram of detect module

9.11.3 API

Table 9-69 lists and describes the API functions for detect module.

Table 9-69 List of API functions for detect module

API	Description
RM_MOTOR_SENSE_ENCODER_Open	Generate instance of detect module.
RM_MOTOR_SENSE_ENCODER_Close	Close instance of detect module.
RM_MOTOR_SENSE_ENCODER_Reset	Reset the module.
RM_MOTOR_SENSE_ENCODER_CurrentSet	Set current data. (Unsupported in vector control with encoder)
RM_MOTOR_SENSE_ENCODER_SpeedSet	Set speed (electrical) [rad/s] data. (Unsupported in vector control with encoder)
RM_MOTOR_SENSE_ENCODER_FlagPiCtrlSet	Set a flag to start PI control. (Unsupported in vector control with encoder)
RM_MOTOR_SENSE_ENCODER_AngleSpeedGet	Get detected rotor angle and rotation speed.
RM_MOTOR_SENSE_ENCODER_EstimatedComponentGet	Get detected voltages. (Unsupported in vector control with encoder)
RM_MOTOR_SENSE_ENCODER_ParameterUpdate	Updates the control parameters by user setting.
RM_MOTOR_SENSE_ENCODER_InternalCalculate	Perform internal calculation.
RM_MOTOR_SENSE_ENCODER_AngleAdjust	Perform a draw in at start up.
RM_MOTOR_SENSE_ENCODER_EncoderCyclic	Perform cyclic process for encoder.
RM_MOTOR_SENSE_ENCODER_InfoGet	Get information about calibration of induction sensors.
RM_MOTOR_SENSE_ENCODER_CyclicProcess	Perform cyclic process at period interrupt.
RM_MOTOR_SENSE_ENCODER_SensorDataSet	Set data of induction sensors. (Unsupported in vector control with encoder)

9.11.4 Structure and variable information

Structures and variables of detect module are listed below.

Table 9-70 Structures of detect module [1/2] (rm_motor_angle_api.h)

Structure	Member	Description
motor_angle_cfg_t	*p_context	Address of context data of detection of angle/speed module
	*p_extend	Address of extended configuration data to refer
motor_angle_current_t	id	d-axis electrical current [A]
	iq	q-axis electrical current [A]
motor_angle_voltage_reference_t	vd	d-axis voltage reference [V]
	vq	q-axis voltage reference [V]
motor_angle_ad_data_t (No use in vector control with encoder)	sin_ad_data	sin signal data of induction sensor
	cos_ad_data	cos signal data of induction sensor
motor_angle_encoder_info_t	e_adjust_status	Draw in status at start up
	u1_adjust_count_full	Flag of counter full about time manage at start up
	e_open_loop_status	Open loop status of induction calibration (No use in vector control with encoder)
	f_openloop_speed	Speed of open loop at induction calibration (No use in vector control with encoder)
	f_openloop_id_ref	d-axis current of open loop at induction calibration (No use in vector control with encoder)

Table 9-71 Structures of detect module [2/2] (rm_motor_angle_api.h)

Structure	Member	Description
motor_angle_api_t	*open	Function address to open module
	*close	Function address to close module
	*reset	Function address to reset module
	*currentSet	Function address to set current data (Unsupported in vector control with encoder)
	*speedSet	Function address to set speed (electrical) [rad/s] data (Unsupported in vector control with encoder)
	*flagPiCtrlSet	Function address to set a flag of start PI control (Unsupported in vector control with encoder)
	*internalCalculate	Function address to perform internal calculation
	*angleSpeedGet	Function address to get rotation speed and rotor angle
	*angleAdjust	Function address to perform draw in at start up
	*encoderCyclic	Function address to perform cyclic process of encoder
	*cyclicProcess	Function address to perform cyclic process
	*sensorDataSet	Function address to set induction sensor data (Unsupported in vector control with encoder)
	*estimatedComponentGet	Function address to get estimated component (Unsupported in vector control with encoder)
	*infoGet	Function address to get information about encoder draw in
	*parameterUpdate	Function address to update configuration
motor_angle_instance_t	*p_ctrl	Address of structure to be used in the module
	*p_cfg	Address of structure of configuration data
	*p_api	Address of structure of API functions

Table 9-72 Structures of detect module [1/3] (rm_motor_sense_encoder.h)

Structure	Member	Description
motor_sense_encoder_motor_parameter_t	u2_mtr_pp	Pole pairs
	f4_mtr_r	Resistance [ohm]
	f4_mtr_ld	d-axis inductance [H]
	f4_mtr_lq	q-axis inductance [H]
	f4_mtr_m	Magnetic flux [Wb]
	f4_mtr_j	Rotor inertia [kgm ²]
motor_sense_encoder_parameter_t	u1_encoder_angle_adj_status	Status at draw in
	u2_encoder_angle_adj_time	Time to wait draw in
	u2_encoder_angle_adj_count	Counter of waiting draw in
	u2_encoder_pre_phase_count	Previous encoder counts
	u4_encoder_timer_capture	Timer counts buffer to get input capture period
	u4_encoder_timer_pre_capture	Previous timer counts of input capture period
	u2_encoder_timer_cnt_num	Number of buffer array of timer counts for speed calculation
	s2_encoder_cpr	Encoder counts per one rotation (mechanical)
	s4_encoder_timer_count_buff	Buffer of timer counts for speed calculation
	s4_encoder_pulse_width	Buffer of timer counts in one encoder pulse
	s4_encoder_pulse_width_buff	Buffer array of timer counts of encoder pulse
	s4_encoder_pulse_width_sum	Summation of timer counts of encoder pulse
	s4_encoder_angle_count	Pulse counts per one degree
	f4_encoder_angle_difference	Previous difference of rotor angle
	f4_encoder_cpr_inverse	Inverse of encoder counts per one rotation (for calculation)
	f4_encoder_speed_pre_rad	Previous measured rotation speed (mechanical) [rad/s]
	f4_encoder_speed_rad	Measured rotation speed (mechanical) [rad/s]
	f4_encoder_position_rad	Measured rotor position [rad]

Table 9-73 Structures of detect module [2/3] (rm_motor_sense_encoder.h)

Structure	Member	Description
motor_sense_encoder_highspeed_t	u1_encoder_position_speed_calc_mode	Mode of calculation of position/speed
	u1_encoder_interrupt_on_flag	The flag of occurrence of encoder interrupt
	u1_encoder_position_speed_counter	Counter to measure rotation speed
	u2_encoder_highspeed_pre_phase_count	Previous value of encoder phase counter for high speed mode
	s4_encoder_highspeed_angle_count	Counter of encoder position for high speed mode
	f4_encoder_highspeed_position_rad	Encoder rotor position angle [rad] (mechanical)
	f4_encoder_highspeed_previous_rad	Previous value of encoder rotor position angle [rad] (mechanical)
	f4_encoder_highspeed_speed_rad	Rotation speed detected at encoder interrupt [rad/s] (mechanical)
	f4_encoder_highspeed_speed_pre_rad	Previous detected rotation speed [rad/s] (mechanical)
	f4_encoder_highspeed_toggle_speed_rad	Toggle speed for high speed mode [rad/s] (mechanical)
	f4_encoder_highspeed_toggle_speed_margin_rad	Margin of toggle speed for high speed mode [rad/s] (mechanical)
motor_sense_encoder_hall_t	u1_hall_signal	Detected hall pattern
	u1_hall_pre_signal	Previous detected hall pattern
	u1_hall_interrupt_flag	Flag of hall interrupt
	f4_hall_angle_rad	Initial offset angle set according to hall pattern [rad]
motor_sense_encoder_config_t	f_carrier_frequency	PWM carrier frequency [kHz]
	u1_interrupt_decimation	Decimation of carrier interrupt
	u2_cpr	Encoder counts per one rotation
	u2_angle_adjust_time	Time for draw in at start up
	u4_zero_speed_count	Limit counts of encoder interrupt at zero speed
	f_speed_timer_frequency	Timer frequency of free run counter [MHz]
	f_occupancy_time	Current control occupancy time
	f_carrier_time	Period of current control interrupt [sec]
	f_process_time	Encoder count capture processing time [sec]
	u2_highspeed_change_margin_rpm	Margin rotational speed to change high speed mode (mechanical) [rpm]
	f_highspeed_lpf_parameter	LPF parameter for highspeed filter
	u1_position_speed_change_counts	Counts to judge the change of speed mode

Table 9-74 Structures of detect module [3/3] (rm_motor_sense_encoder.h)

Structure	Member	Description
motor_sense_encoder _extended_cfg_t	*p_timer_instance	Address of free run timer module instance
	*p_input_capture_instance	Address of input capture timer module instance
	*p_u_hall_irq_instance	Address of external interrupt module instance for hall U phase
	*p_v_hall_irq_instance	Address of external interrupt module instance for hall V phase
	*p_w_hall_irq_instance	Address of external interrupt module instance for hall W phase
	u_phase_port	Port number of hall U phase
	v_phase_port	Port number of hall V phase
	w_phase_port	Port number of hall W phase
	u1_hall_pattern[]	Array of hall pattern
	f_current_ctrl_period	Period of current control [s]
	f_speed_ctrl_period	Period of speed control [s]
	loop_mode	Control mode speed/position
	encoder_config	Structure of encoder configuration
	st_motor_params	Structure of motor parameters
motor_sense_encoder _instance_ctrl_t	open	Module opened information
	u1_direction	Rotation direction
	f_speed_rad	Measured rotation speed (electrical) [rad/s]
	f_angle_radian	Measured rotor angle [rad]
	u4_last_encoder_interrupt_counts	Last counts of encoder input capture interrupt
	f_last_angle	Last measured rotor angle [rad]
	u2_maximum_carrier_pulse_width_count	Maximum counts of pulse width between carrier interrupts
	f_input_capture_timer_frequency	Timer frequency of input capture timer [Hz]
	u4_interrupt_time_correct	= pulse width limit value + sampling time[clock]
	u1_interrupt_disable	Encoder interrupt disable(guard) flag
	s4_pulse_counts	Captured pulse counts during speed calculation cycle
	s2_speed_interrupt_counts	Counter of speed cyclic interrupt
	freerun_timer_info	Timer information of free run timer
	input_capture_info	Timer information of input capture timer
	e_loop_mode	Control mode speed/position
	e_move_mode	Moving status
	st_encoder_parameter	Structure of encoder parameters
	st_encoder_highspeed	Structure to calculate high speed
	st_encoder_hall	Structure of hall sensor parameters
	*p_timer	Address of free run timer module
	*p_input_capture	Address of input capture timer module
	*p_cfg	Address of structure of module configuration
	input_capture_args	Callback arguments for input capture interrupt
	hall_interrupt_args	Callback arguments for hall interrupt

9.11.5 Macro and enumeration definition

The macros and enumerations for detect module are listed below.

Table 9-75 List of macros of detect module

File name	Name of MACRO	Defined value	Description
rm_motor_sense_encoder.c	MOTOR_SENSE_ENCODER_OPEN	('M' << 24U) ('T' << 16U) ('S' << 8U) ('E' << 0U)	Module open information
	MOTOR_SENSE_ENCODER_QUARTER	0.25F	0.25 (quarter)
	MOTOR_SENSE_ENCODER_FLAG_CLEAR	0U	Clear a flag
	MOTOR_SENSE_ENCODER_FLAG_SET	1U	Set a flag
	MOTOR_SENSE_ENCODER_CW	0	Rotation direction clockwise
	MOTOR_SENSE_ENCODER_CCW	1	Rotation direction counterclockwise
	MOTOR_SENSE_ENCODER_TWOPI	2.0F 3.1415926535F *	2π
	MOTOR_SENSE_ENCODER_16BIT	0x10000U	16bits over
	MOTOR_SENSE_ENCODER_ENCD_INTERRUPT	0	Type of interrupt : encoder input capture
	MOTOR_SENSE_ENCODER_CTRL_INTERRUPT	1	Type of interrupt : current control interrupt
	MOTOR_SENSE_ENCODER_CALCULATE_KHz	1000.0F	Conversion kHz=>Hz
	MOTOR_SENSE_ENCODER_CALCULATE_60	60.0F	60

Table 9-76 List of enumeration of detect module (rm_motor_angle_api.h)

Enumeration	Member	Value	Description
motor_sense_encoder_angle_adjust_t	MOTOR_SENSE_ENCODER_ANGLE_ADJUST_90_DEGREE	1	Draw in 90-degree direction at start up
	MOTOR_SENSE_ENCODER_ANGLE_ADJUST_0_DEGREE	2	Draw in 0 degree direction at start up
	MOTOR_SENSE_ENCODER_ANGLE_ADJUST_FINISH	3	Draw in finished
	MOTOR_SENSE_ENCODER_ANGLE_ADJUST_OPENLOOP	4	Open loop at induction sensor calibration
motor_angle_open_loop_t (No use in vector control with encoder)	MOTOR_ANGLE_OPEN_LOOP_INACTIVE	0	Open loop is inactive at Induction sensor calibration
	MOTOR_ANGLE_OPEN_LOOP_ACTIVE	1	Open loop is active at induction sensor calibration
motor_angle_error_t (No use in vector control with encoder)	MOTOR_ANGLE_ERROR_NONE	0	Induction sensor calibration is success
	MOTOR_ANGLE_ERROR_INDUCED	1	Induction sensor calibration is error

Table 9-77 List of enumeration of detect module (rm_motor_sense_encoder.h)

Enumeration	Member	Value	Description
motor_sense_encoder_loop_t	MOTOR_SENSE_ENCODER_LOOP_SPEED	0	Speed control
	MOTOR_SENSE_ENCODER_LOOP_POSITION	1	Position control
motor_sense_encoder_mode_t	MOTOR_SENSE_ENCODER_MODE_INIT	0	Moving status : Initialize
	MOTOR_SENSE_ENCODER_MODE_BOOT	1	Moving status : Boot
	MOTOR_SENSE_ENCODER_MODE_DRIVE	2	Moving status : Drive

10. Setting the parameters

10.1 Overview

In this sample program, initial data of each module can be set by FSP configurator. Set values are automatically reflected to `common_data.c/h` and `hal_data.c/h` at code generation. Set values are also included to need parameters of each module at initial process (open process).

A part of parameter can be changed by RMW. Target parameters are listed in "9.5.3". How to change values is referred to RMW manual.

10.2 List of Interface module parameters

The changeable parameters that are used in Interface module are listed in Table 10-1. And initial value are listed in Table 10-2 and Table 10-3. Setting can be changed in "Property" TAB on e² studio FSP. About other modules, same method can be used.

Table 10-1 Configuration Options (rm_motor_encoder)

Option name	Description
Limit of over current (A)	When electric current over this value, PWM ports are set to OFF.
Limit of over voltage (V)	When entered inverter bus voltage over this value, PWM ports are set to OFF.
Limit of over speed (rpm)	When rotation speed over this value, PWM ports are set to OFF.
Limit of low voltage (V)	When entered inverter bus voltage below this value, PWM ports are set to OFF.
Callback	Callback function to be called at Speed/Current cyclic process.

Table 10-2 Initial value of configuration options [1/2] (rm_motor_encoder)

Option name	RA6T2	RA6T3	RA4T1
Limit of over current (A)	1.8	1.8	1.8
Limit of over voltage (V)	60.0	60.0	60.0
Limit of over speed (rpm)	4500.0	4500.0	4500.0
Limit of low voltage (V)	8.0	8.0	8.0
Callback	mtr_callback_encoder	mtr_callback_encoder	mtr_callback_encoder

Table 10-3 Initial value of configuration options [2/2] (rm_motor_encoder)

Option name	RA8T1	RA8T2
Limit of over current (A)	1.8	1.8
Limit of over voltage (V)	60.0	60.0
Limit of over speed (rpm)	4500.0	4500.0
Limit of low voltage (V)	8.0	8.0
Callback	mtr_callback_encoder	mtr_callback_encoder

10.3 List of Speed control module parameters

The changeable parameters that are used in speed control module and these initial values are listed below.

Table 10-4 Configuration Options (rm_motor_speed)

Options	Description
Common Position support	Support position control
General Speed control period (sec)	The period of speed control process [sec].
General Step of speed climbing (rpm)	The step of speed fluctuation (mechanical) [rpm]. Program controls speed by this step at acceleration and deceleration.
General Maximum rotational speed (rpm)	Maximum rotational speed (mechanical) [rpm]
General Speed LPF omega	Speed LPF parameter omega [Hz].
General Limit of q-axis current (A)	Limit of q-axis current [A].
General Step of speed feedback at open-loop	Rate of reference speed for feedback speed limiter at Open loop.
General Natural frequency	Natural frequency for disturbance speed observer.
General Open-loop damping	Select enable/disable of damping control at Open loop.
General Flux weakening	Select enable/disable of flux weakening control at high speed.
General Torque compensation for sensorless transition	Select enable/disable of soft switching at the transition from Open loop to PI control.
General Speed observer	Select enable/disable of speed observer process
General Selection of speed observer	Select the method of speed observer
General Control method	Select the position control method.
Open-Loop Step of d-axis current climbing	The d-axis current reference ramping up rate [A/msec].
Open-Loop Step of d-axis current descending	The d-axis current reference ramping down rate [A/msec].
Open-Loop Step of q-axis current descending ratio	The q-axis current reference ramping down proportion to reference before open loop [A/msec].
Open-Loop Reference of d-axis current	The d-axis current reference in open loop drive [A].
Open-Loop Threshold of speed control descending	The speed threshold to ramp down the d-axis current (mechanical) [rpm].
Open-Loop Threshold of speed control climbing	The speed threshold to ramp up the d-axis current (mechanical) [rpm].
Open-Loop Period between open-loop to BEMF (sec)	Time to switch open loop to sensorless [sec].
Open-Loop Phase error(degree) to decide sensor-less switch timing	Phase error to decide sensorless switch timing (electrical angle) [degree].
Design parameter Speed PI loop omega	Speed PI Control parameter omega.
Design parameter Speed PI loop zeta	Speed PI Control parameter zeta.
Design parameter Estimated d-axis HPF omega	Natural frequency [Hz] for HPF in open loop damping gain design.
Design parameter Open-loop damping zeta	Damping ratio for open loop damping gain design.
Design parameter Cutoff frequency of phase error LPF	The cut-off frequency [Hz] of phase error LPF gain design.
Design parameter Speed observer omega	Speed observer omega.
Design parameter Speed observer zeta	Speed observer zeta.
Motor Parameter Pole pairs	Pole pairs of target motor.
Motor Parameter Resistance (ohm)	Resistance of motor [ohm].
Motor Parameter Inductance of d-axis (H)	D-axis inductance [H].
Motor Parameter Inductance of q-axis (H)	Q-axis inductance [H].
Motor Parameter Permanent magnetic flux (Wb)	Magnetic flux [Wb].
Motor Parameter Rotor inertia (kgm^2)	Rotor inertia [kgm^2].

Table 10-5 Configuration Options initial value [1/2] (rm_motor_speed)

Options	RA6T2	RA6T3	RA4T1
Common Position support	Enable	Enable	Enable
General Speed control period (sec)	0.0005	0.0005	0.001
General Step of speed climbing (rpm)	0.5	0.5	1.0
General Maximum rotational speed (rpm)	4000.0	4000.0	4000.0
General Speed LPF omega	250.0	250.0	250.0
General Limit of q-axis current (A)	1.8	1.8	1.8
General Step of speed feedback at open-loop	0.2	0.2	0.2
General Natural frequency	100.0	100.0	100.0
General Open-loop damping	Disable	Disable	Disable
General Flux weakening	Disable	Disable	Disable
General Torque compensation for sensorless transition	Disable	Disable	Disable
General Speed observer	Enable	Enable	Enable
General Selection of speed observer	Disturbance	Disturbance	Disturbance
General Control method	PID	PID	PID
Open-Loop Step of d-axis current climbing	1.0	1.0	2.0
Open-Loop Step of d-axis current descending	0.3	0.3	0.3
Open-Loop Step of q-axis current descending ratio	1.0	1.0	1.0
Open-Loop Reference of d-axis current	1.0	1.0	1.0
Open-Loop Threshold of speed control descending	600	600	600
Open-Loop Threshold of speed control climbing	500	500	500
Open-Loop Period between open-loop to BEMF (sec)	0.025	0.025	0.025
Open-Loop Phase error(degree) to decide sensor-less switch timing	10	10	10
Design parameter Speed PI loop omega	3.0	3.0	3.0
Design parameter Speed PI loop zeta	1.0	1.0	1.0
Design parameter Estimated d-axis HPF omega	2.5	2.5	2.5
Design parameter Open-loop damping zeta	1.0	1.0	1.0
Design parameter Cutoff frequency of phase error LPF	10.0	10.0	10.0
Design parameter Speed observer omega	100.0	100.0	100.0
Design parameter Speed observer zeta	1.0	1.0	1.0
Motor Parameter Pole pairs	4	4	4
Motor Parameter Resistance (ohm)	0.84	0.84	0.84
Motor Parameter Inductance of d-axis (H)	0.0011	0.0011	0.0011
Motor Parameter Inductance of q-axis (H)	0.0011	0.0011	0.0011
Motor Parameter Permanent magnetic flux (Wb)	0.00623	0.00623	0.00623
Motor Parameter Rotor inertia (kgm^2)	0.0000041	0.0000041	0.0000041

Table 10-6 Configuration Options initial value [2/2] (rm_motor_speed)

Options	RA8T1	RA8T2
Common Position support	Enable	Enable
General Speed control period (sec)	0.0005	0.0005
General Step of speed climbing (rpm)	0.5	0.5
General Maximum rotational speed (rpm)	4000.0	4000.0
General Speed LPF omega	250.0	250.0
General Limit of q-axis current (A)	1.8	1.8
General Step of speed feedback at open-loop	0.2	0.2
General Natural frequency	100.0	100.0
General Open-loop damping	Disable	Disable
General Flux weakening	Disable	Disable
General Torque compensation for sensorless transition	Disable	Disable
General Speed observer	Enable	Enable
General Selection of speed observer	Disturbance	Disturbance
General Control method	PID	PID
Open-Loop Step of d-axis current climbing	1.0	1.0
Open-Loop Step of d-axis current descending	0.3	0.3
Open-Loop Step of q-axis current descending ratio	1.0	1.0
Open-Loop Reference of d-axis current	1.0	1.0
Open-Loop Threshold of speed control descending	600	600
Open-Loop Threshold of speed control climbing	500	500
Open-Loop Period between open-loop to BEMF (sec)	0.025	0.025
Open-Loop Phase error(degree) to decide sensor-less switch timing	10	10
Design parameter Speed PI loop omega	3.0	3.0
Design parameter Speed PI loop zeta	1.0	1.0
Design parameter Estimated d-axis HPF omega	2.5	2.5
Design parameter Open-loop damping zeta	1.0	1.0
Design parameter Cutoff frequency of phase error LPF	10.0	10.0
Design parameter Speed observer omega	100.0	100.0
Design parameter Speed observer zeta	1.0	1.0
Motor Parameter Pole pairs	4	4
Motor Parameter Resistance (ohm)	0.84	0.84
Motor Parameter Inductance of d-axis (H)	0.0011	0.0011
Motor Parameter Inductance of q-axis (H)	0.0011	0.0011
Motor Parameter Permanent magnetic flux (Wb)	0.00623	0.00623
Motor Parameter Rotor inertia (kgm^2)	0.0000041	0.0000041

10.4 List of Current control module parameters

The changeable parameters that are used in current control module and these initial values are listed below.

Table 10-7 Configuration options of current control (rm_motor_current)

Option name	Description
General Shunt type	Selects how many shunt resistances to use current detection.
General Current control decimation	Counts of decimation about current control period interrupt
General PWM carrier frequency (kHz)	PWM carrier frequency [kHz]
General Input voltage (V)	Input voltage [V]
General Sample delay compensation	Selects whether to “enable” or “disable” sample delay compensation
General Period magnification value	Period magnification value for sampling delay compensation.
General Voltage error compensation	Selects whether to “enable” or “disable” voltage error compensation.
General Voltage error compensation table of voltage 1	Table of voltage error compensation about voltage #1
General Voltage error compensation table of voltage 2	Table of voltage error compensation about voltage #2
General Voltage error compensation table of voltage 3	Table of voltage error compensation about voltage #3
General Voltage error compensation table of voltage 4	Table of voltage error compensation about voltage #4
General Voltage error compensation table of voltage 5	Table of voltage error compensation about voltage #5
General Voltage error compensation table of current 1	Table of voltage error compensation about current #1
General Voltage error compensation table of current 2	Table of voltage error compensation about current #2
General Voltage error compensation table of current 3	Table of voltage error compensation about current #3
General Voltage error compensation table of current 4	Table of voltage error compensation about current #4
General Voltage error compensation table of current 5	Table of voltage error compensation about current #5
Design Parameter Current PI loop omega	Current PI control omega parameter [Hz].
Design Parameter Current PI loop zeta	Current PI control zeta parameter.
Motor Parameter Pole pairs	Pole pairs of target motor.
Motor Parameter Resistance (ohm)	Resistance of motor [ohm].
Motor Parameter Inductance of d-axis (H)	D-axis inductance [H].
Motor Parameter Inductance of q-axis (H)	Q-axis inductance [H].
Motor Parameter Permanent magnetic flux (Wb)	Magnetic flux [Wb].
Motor Parameter Rotor inertia (kgm ²)	Rotor inertia [kgm ²].

Table 10-8 Configuration Options initial value [1/2] (rm_motor_current)

Option name	RA6T2	RA6T3	RA4T1
General Shunt type	2shunt	2shunt	2shunt
General Current control decimation	0	0	1
General PWM carrier frequency (kHz)	20.0	20.0	20.0
General Input voltage (V)	24.0	24.0	24.0
General Sample delay compensation	Enable	Enable	Enable
General Period magnification value	1.5	1.5	2.0
General Voltage error compensation	Enable	Enable	Enable
General Voltage error compensation table of voltage 1	0.477	0.477	0.477
General Voltage error compensation table of voltage 2	0.742	0.742	0.742
General Voltage error compensation table of voltage 3	0.892	0.892	0.892
General Voltage error compensation table of voltage 4	0.979	0.979	0.979
General Voltage error compensation table of voltage 5	1.009	1.009	1.009
General Voltage error compensation table of current 1	0.021	0.021	0.021
General Voltage error compensation table of current 2	0.034	0.034	0.034
General Voltage error compensation table of current 3	0.064	0.064	0.064
General Voltage error compensation table of current 4	0.158	0.158	0.158
General Voltage error compensation table of current 5	0.400	0.400	0.400
Design Parameter Current PI loop omega	300.0	300.0	300.0
Design Parameter Current PI loop zeta	1.0	1.0	1.0
Motor Parameter Pole pairs	4	4	4
Motor Parameter Resistance (ohm)	0.84	0.84	0.84
Motor Parameter Inductance of d-axis (H)	0.0011	0.0011	0.0011
Motor Parameter Inductance of q-axis (H)	0.0011	0.0011	0.0011
Motor Parameter Permanent magnetic flux (Wb)	0.00623	0.00623	0.00623
Motor Parameter Rotor inertia (kgm ²)	0.0000041	0.0000041	0.0000041

Table 10-9 Configuration Options initial value [2/2] (rm_motor_current)

Option name	RA8T1	RA8T2
General Shunt type	2shunt	2shunt
General Current control decimation	0	0
General PWM carrier frequency (kHz)	20.0	20.0
General Input voltage (V)	24.0	24.0
General Sample delay compensation	Enable	Enable
General Period magnification value	1.5	1.5
General Voltage error compensation	Enable	Enable
General Voltage error compensation table of voltage 1	0.477	0.477
General Voltage error compensation table of voltage 2	0.742	0.742
General Voltage error compensation table of voltage 3	0.892	0.892
General Voltage error compensation table of voltage 4	0.979	0.979
General Voltage error compensation table of voltage 5	1.009	1.009
General Voltage error compensation table of current 1	0.021	0.021
General Voltage error compensation table of current 2	0.034	0.034
General Voltage error compensation table of current 3	0.064	0.064
General Voltage error compensation table of current 4	0.158	0.158
General Voltage error compensation table of current 5	0.400	0.400
Design Parameter Current PI loop omega	300.0	300.0
Design Parameter Current PI loop zeta	1.0	1.0
Motor Parameter Pole pairs	4	4
Motor Parameter Resistance (ohm)	0.84	0.84
Motor Parameter Inductance of d-axis (H)	0.0011	0.0011
Motor Parameter Inductance of q-axis (H)	0.0011	0.0011
Motor Parameter Permanent magnetic flux (Wb)	0.00623	0.00623
Motor Parameter Rotor inertia (kgm ²)	0.0000041	0.0000041

10.5 List of Position module parameters

The changeable parameters that are used in position control module and these initial values are listed below.

Table 10-10 Configuration options of position module (rm_motor_position)

Options		Description
General	Position dead band	Position dead band
General	Position band limit	Zero position error range
General	Speed feedforward ratio	Speed feedforward ratio
General	Encoder counts per one rotation	Encoder count per revolution
General	Position omega	Position control omega parameter [Hz]
General	Period of speed control (sec)	Speed control execution cycle [s]
IPD	IPD LPF	IPD LPF process enable or disable
IPD	Position Kp ratio	Position Kp ratio
IPD	Position feedforward ratio	Position feedforward ratio
IPD	Speed K ratio	Speed K ratio
IPD	Error Limit #1	Error limitation #1
IPD	Error limit #2	Error limitation #2
IPD	LPF omega	LPF omega [Hz]
IPD	LPF zeta	LPF zeta
Position Profiling	Interval time	Position response steady-state waiting time
Position Profiling	Accel time	Acceleration time [s]
Position Profiling	Maximum accel time	Maximum acceleration time calculation parameter
Position Profiling	Acceleration maximum speed	Position profile maximum rotation speed (mechanical) [rpm]
Position Profiling	Update step of timer	Position profile update cycle [s]
Motor Parameter	Pole pairs	Pole pairs of target motor
Motor Parameter	Resistance (ohm)	Resistance of motor [ohm]
Motor Parameter	Inductance of d-axis (H)	D-axis inductance [H]
Motor Parameter	Inductance of q-axis (H)	Q-axis inductance [H]
Motor Parameter	Permanent magnetic flux (Wb)	Magnetic flux [Wb]
Motor Parameter	Rotor inertia (kgm ²)	Rotor inertia [kgm ²]

Table 10-11 Configuration Options initial value [1/2] (rm_motor_position)

Options		RA6T2	RA6T3	RA4T1
General	Position dead band	1	1	1
General	Position band limit	3	3	3
General	Speed feedforward ratio	0.8	0.8	0.8
General	Encoder counts per one rotation	4000.0	4000.0	4000.0
General	Position omega	4.0	4.0	4.0
General	Period of speed control (sec)	0.0005	0.0005	0.001
IPD	IPD LPF	Disable	Disable	Disable
IPD	Position Kp ratio	0.3	0.3	0.3
IPD	Position feedforward ratio	0.9	0.9	0.9
IPD	Speed K ratio	2.5	2.5	2.5
IPD	Error Limit #1	10.0	10.0	10.0
IPD	Error limit #2	0.2	0.2	0.2
IPD	LPF omega	200.0	200.0	200.0
IPD	LPF zeta	1.0	1.0	1.0
Position Profiling	Interval time	800	800	800
Position Profiling	Accel time	0.3	0.3	0.3
Position Profiling	Maximum accel time	11077.904	11077.904	11077.904
Position Profiling	Acceleration maximum speed	4000.0	4000.0	4000.0
Position Profiling	Update step of timer	0.0005	0.0005	0.001
Motor Parameter	Pole pairs	4	4	4
Motor Parameter	Resistance (ohm)	0.84	0.84	0.84
Motor Parameter	Inductance of d-axis (H)	0.0011	0.0011	0.0011
Motor Parameter	Inductance of q-axis (H)	0.0011	0.0011	0.0011
Motor Parameter	Permanent magnetic flux (Wb)	0.00623	0.00623	0.00623
Motor Parameter	Rotor inertia (kgm ²)	0.0000041	0.0000041	0.0000041

Table 10-12 Configuration Options initial value [2/2] (rm_motor_position)

Options		RA8T1	RA8T2
General	Position dead band	1	1
General	Position band limit	3	3
General	Speed feedforward ratio	0.8	0.8
General	Encoder counts per one rotation	4000.0	4000.0
General	Position omega	4.0	4.0
General	Period of speed control (sec)	0.0005	0.0005
IPD	IPD LPF	Disable	Disable
IPD	Position Kp ratio	0.3	0.3
IPD	Position feedforward ratio	0.0	0.0
IPD	Speed K ratio	2.0	2.0
IPD	Error Limit #1	10.0	10.0
IPD	Error limit #2	0.2	0.2
IPD	LPF omega	500.0	500.0
IPD	LPF zeta	1.0	1.0
Position Profiling	Interval time	400	400
Position Profiling	Accel time	0.3	0.3
Position Profiling	Maximum accel time	11077.904	11077.904
Position Profiling	Acceleration maximum speed	4000.0	4000.0
Position Profiling	Update step of timer	0.0005	0.0005
Motor Parameter	Pole pairs	4	4
Motor Parameter	Resistance (ohm)	0.84	0.84
Motor Parameter	Inductance of d-axis (H)	0.0011	0.0011
Motor Parameter	Inductance of q-axis (H)	0.0011	0.0011
Motor Parameter	Permanent magnetic flux (Wb)	0.00623	0.00623
Motor Parameter	Rotor inertia (kgm ²)	0.0000041	0.0000041

10.6 List of Driver module parameters

The changeable parameters that are used in driver control module and these initial values are listed below.

Table 10-13 Configuration options of driver module [1/2] (rm_motor_driver)

Option name	Description
Common ADC_B Support	ADC_B module support
Common Shared ADC support	Selection of using shared ADC module
Common Supported Motor Number	Number of driven motors
General Shunt type	Current detection method selection
General Modulation method	Selection of the method of modulation
General PWM output port UP	Port setting of U phase upper arm
General PWM output port UN	Port setting of U phase lower arm
General PWM output port VP	Port setting of V phase upper arm
General PWM output port VN	Port setting of V phase lower arm
General PWM output port WP	Port setting of W phase upper arm
General PWM output port WN	Port setting of W phase lower arm
General PWM Timer Frequency (MHz)	PWM Timer Clock Frequency [MHz]
General PWM Carrier Period (Microseconds)	PWM Carrier Period [Micro seconds]
General Dead Time (Raw Counts)	PWM Dead time [raw counts]
General Current Range (A)	Measurement Range of Electric current [A]
General Voltage Range (V)	Measurement Range of Inverter Voltage [V]
General Counts for current offset measurement	Counts of measurement the offset of A/D Conversion at electric current input.
General A/D conversion channel for U Phase current	A/D channel for U-phase current
General A/D conversion channel for W Phase current	A/D channel for W-phase current
General A/D conversion channel for Main Line Voltage	A/D channel for inverter bus voltage
General A/D conversion channel for V Phase current	A/D channel for V-phase current
General A/D conversion channel for sin signal	A/D channel for sin signal
General A/D conversion channel for cos signal	A/D channel for cos signal
General Using ADC scan group	Set ADC scan group according to ADC module setting.
General A/D conversion unit for U Phase current	Select the A/D conversion module for U phase current
General A/D conversion unit for W Phase current	Select the A/D conversion module for W phase current
General A/D conversion unit for main line voltage	Select the A/D conversion module for inverter bus voltage
General A/D conversion unit for V Phase current	Select the A/D conversion module for V phase current

Table 10-14 Configuration options of driver module [2/2] (rm_motor_driver)

Option name		Description
General	A/D conversion unit for sin signal	Select the A/D conversion module for sin signal
General	A/D conversion unit for cos signal	Select the A/D conversion module for cos signal
General	ADC interrupt module	Select from which module ADC interrupt happens
General	Adjustment value to current A/D	Current A/D timing adjustment (for 1shunt)
General	Minimum difference of PWM duty	Minimum difference of PWM duty setting (for 1shunt)
General	Adjustment delay of A/D conversion	A/D conversion delay timing adjustment (for 1shunt)
General	1shunt interrupt phase	Which phase is used to detect 1shunt current (for 1shunt)
General	Input Voltage (V)	Range of input for inverter bus voltage
General	Resolution of A/D conversion	Resolution of A/D conversion Please set same value with ADC module setting.
General	Offset of A/D conversion for current	Offset level of A/D conversion input for current Please set according to the circuit.
General	Conversion level of A/D conversion for voltage	Conversion level of A/D conversion for voltage Please set when the MCU main voltage is different.
General	GTIOCA stop level	Output level of upper arm at stop status
General	GTIOCB stop level	Output level of lower arm at stop status
Modulation	Maximum duty	Maximum duty of PWM Maximum duty except dead time.

Table 10-15 Configuration Options initial value [1/4] (rm_motor_driver)

Option name	RA6T2	RA6T3	RA4T1
Common ADC_B Support	Enabled	-	-
Common Shared ADC support	Disabled	Disabled	Disabled
Common Supported Motor Number	1	1	1
General Shunt type	2shunt	2shunt	2shunt
General Modulation method	SVPWM	SVPWM	SVPWM
General PWM output port UP	BSP_IO_PORT _11_PIN_04	BSP_IO_PORT _04_PIN_09	BSP_IO_PORT _04_PIN_09
General PWM output port UN	BSP_IO_PORT _11_PIN_05	BSP_IO_PORT _04_PIN_08	BSP_IO_PORT _04_PIN_08
General PWM output port VP	BSP_IO_PORT _11_PIN_06	BSP_IO_PORT _01_PIN_03	BSP_IO_PORT _01_PIN_03
General PWM output port VN	BSP_IO_PORT _11_PIN_07	BSP_IO_PORT _01_PIN_02	BSP_IO_PORT _01_PIN_02
General PWM output port WP	BSP_IO_PORT _11_PIN_08	BSP_IO_PORT _01_PIN_11	BSP_IO_PORT _01_PIN_11
General PWM output port WN	BSP_IO_PORT _11_PIN_09	BSP_IO_PORT _01_PIN_12	BSP_IO_PORT _01_PIN_12
General PWM Timer Frequency (MHz)	120	100	100
General PWM Carrier Period (Microseconds)	50	50	50
General Dead Time (Raw Counts)	240	200	200
General Current Range (A)	16.5	16.5	16.5
General Voltage Range (V)	73.51	73.51	73.51
General Counts for current offset measurement	500	500	500
General A/D conversion channel for U Phase current	4	0	0
General A/D conversion channel for W Phase current	0	2	2
General A/D conversion channel for Main Line Voltage	Ver.1: 6 Ver.2: 7	4	4
General A/D conversion channel for V Phase current	-	-	-
General A/D conversion channel for sin signal	-	-	-
General A/D conversion channel for cos signal	-	-	-
General Using ADC scan group	0	-	-
General A/D conversion unit for U Phase current	-	0	0
General A/D conversion unit for W Phase current	-	0	0
General A/D conversion unit for main line voltage	-	0	0

Table 10-16 Configuration Options initial value [2/4] (rm_motor_driver)

Option name	RA8T1	RA8T2
Common ADC_B Support	-	Enabled
Common Shared ADC support	Disabled	Disabled
Common Supported Motor Number	1	1
General Shunt type	2shunt	2shunt
General Modulation method	SVPWM	SVPWM
General PWM output port UP	BSP_IO_PORT _01_PIN_15	BSP_IO_PORT _06_PIN_05
General PWM output port UN	BSP_IO_PORT _06_PIN_09	BSP_IO_PORT _06_PIN_04
General PWM output port VP	BSP_IO_PORT _01_PIN_13	BSP_IO_PORT _06_PIN_03
General PWM output port VN	BSP_IO_PORT _01_PIN_14	BSP_IO_PORT _06_PIN_02
General PWM output port WP	BSP_IO_PORT _03_PIN_00	BSP_IO_PORT _06_PIN_12
General PWM output port WN	BSP_IO_PORT _01_PIN_12	BSP_IO_PORT _06_PIN_13
General PWM Timer Frequency (MHz)	120	250
General PWM Carrier Period (Microseconds)	50	50
General Dead Time (Raw Counts)	240	500
General Current Range (A)	16.5	16.5
General Voltage Range (V)	73.51	73.51
General Counts for current offset measurement	500	500
General A/D conversion channel for U Phase current	0	6
General A/D conversion channel for W Phase current	2	10
General A/D conversion channel for Main Line Voltage	8	7
General A/D conversion channel for V Phase current	-	-
General A/D conversion channel for sin signal	-	-
General A/D conversion channel for cos signal	-	-
General Using ADC scan group	-	0
General A/D conversion unit for U Phase current	0	-
General A/D conversion unit for W Phase current	0	-
General A/D conversion unit for main line voltage	0	-

Table 10-17 Configuration Options initial value [3/4] (rm_motor_driver)

Option name	RA6T2	RA6T3	RA4T1
General A/D conversion unit for V Phase current	-	-	-
General A/D conversion unit for sin signal	-	-	-
General A/D conversion unit for cos signal	-	-	-
General ADC interrupt module	-	1st	1st
General Adjustment value to current A/D	-	-	-
General Minimum difference of PWM duty	-	-	-
General Adjustment delay of A/D conversion	-	-	-
General 1shunt interrupt phase	-	-	-
General Input Voltage (V)	24.0	24.0	24.0
General Resolution of A/D conversion	0xFFFF	0xFFFF	0xFFFF
General Offset of A/D conversion for current	0x7FF	0x7FF	0x7FF
General Conversion level of A/D conversion for voltage	1.0	1.0	1.0
General GTIOCA stop level	Pin Level Low	Pin Level Low	Pin Level Low
General GTIOCB stop level	Pin Level High	Pin Level High	Pin Level High
Modulation Maximum duty	0.9375	0.9375	0.9375

Table 10-18 Configuration Options initial value [4/4] (rm_motor_driver)

Option name	RA8T1	RA8T2
General A/D conversion unit for V Phase current	-	-
General A/D conversion unit for sin signal	-	-
General A/D conversion unit for cos signal	-	-
General ADC interrupt module	1st	-
General Adjustment value to current A/D	-	-
General Minimum difference of PWM duty	-	-
General Adjustment delay of A/D conversion	-	-
General 1shunt interrupt phase	-	-
General Input Voltage (V)	24.0	24.0
General Resolution of A/D conversion	0xFFFF	0xFFFF
General Offset of A/D conversion for current	0x7FF	0x7FF
General Conversion level of A/D conversion for voltage	1.0	1.0
General GTIOCA stop level	Pin Level Low	Pin Level Low
General GTIOCB stop level	Pin Level High	Pin Level High
Modulation Maximum duty	0.9375	0.9375

10.7 List of Detect speed and angle module parameters

The changeable parameters that are used in detect speed and angle module and these initial values are listed below.

Table 10-19 Configuration options of detect module (rm_motor_sense_encoder)

Option name	Description
Hall sensor U phase input port	Port number of hall sensor input for U phase
Hall sensor V phase input port	Port number of hall sensor input for V phase
Hall sensor W phase input port	Port number of hall sensor input for W phase
Hall sensor sensor pattern #1	Hall pattern #1
Hall sensor sensor pattern #2	Hall pattern #2
Hall sensor sensor pattern #3	Hall pattern #3
Hall sensor sensor pattern #4	Hall pattern #4
Hall sensor sensor pattern #5	Hall pattern #5
Hall sensor sensor pattern #6	Hall pattern #6
Motor Parameter Pole pairs	Pole pairs of target motor.
Motor Parameter Resistance (ohm)	Resistance of motor [ohm].
Motor Parameter Inductance of d-axis (H)	D-axis inductance [H].
Motor Parameter Inductance of q-axis (H)	Q-axis inductance [H].
Motor Parameter Permanent magnetic flux (Wb)	Magnetic flux [Wb].
Motor Parameter Rotor inertia (kgm ²)	Rotor inertia [kgm ²].
Control type	Selection of speed or position control
Period of current control (kHz)	Period of current control [kHz]
Period of speed control (sec)	Period of speed control [sec]
PWM carrier frequency (kHz)	PWM carrier frequency [kHz]
Decimation of interrupt	Decimation counts of interrupt
Counts per rotation	Encoder counts per one rotation
Counts for angle adjust	Counts for adjustment of angle initialization
Zero speed counts	Encoder counts to judge zero speed
Occupancy time	Current control occupancy time
Carrier time	Current control time
Process time	Encoder count capture processing time
High speed change margin (rpm)	Margin rotation speed to change high speed mode (mechanical) [rpm]
LPF parameter for highspped filter	LPF parameter for highspped filter
Counts to change speed	Speed calculation mode change count
Speed Detection Type	Select the method of speed detection Use capture width/Use carrier interrupt

Table 10-20 Configuration Options initial value [1/2] (rm_motor_sense_encoder)

Option name	RA6T2	RA6T3	RA4T1
Hall sensor U phase input port	Ver.1: BSP_IO_PORT _12_PIN_04 Ver.2 : BSP_IO_PORT _11_PIN_02	BSP_IO_PORT _00_PIN_08	BSP_IO_PORT _00_PIN_08
Hall sensor V phase input port	Ver.1: BSP_IO_PORT _12_PIN_05 Ver.2 : BSP_IO_PORT _12_PIN_00	BSP_IO_PORT _00_PIN_06	BSP_IO_PORT _00_PIN_06
Hall sensor W phase input port	Ver.1: BSP_IO_PORT _11_PIN_01 Ver.2 : BSP_IO_PORT _11_PIN_10	BSP_IO_PORT _00_PIN_15	BSP_IO_PORT _00_PIN_15
Hall sensor sensor pattern #1	1	1	1
Hall sensor sensor pattern #2	5	5	5
Hall sensor sensor pattern #3	4	4	4
Hall sensor sensor pattern #4	6	6	6
Hall sensor sensor pattern #5	2	2	2
Hall sensor sensor pattern #6	3	3	3
Motor Parameter Pole pairs	4	4	4
Motor Parameter Resistance (ohm)	0.84	0.84	0.84
Motor Parameter Inductance of d-axis (H)	0.0011	0.0011	0.0011
Motor Parameter Inductance of q-axis (H)	0.0011	0.0011	0.0011
Motor Parameter Permanent magnetic flux (Wb)	0.00623	0.00623	0.00623
Motor Parameter Rotor inertia (kgm ²)	0.0000041	0.0000041	0.0000041
Control type	Position	Position	Position
Period of current control (kHz)	20.0	20.0	10.0
Period of speed control (sec)	0.0005	0.0005	0.001
PWM carrier frequency (kHz)	20.0	20.0	20.0
Decimation of interrupt	0	0	1
Counts per Rotation	4000	4000	4000
Counts for Angle Adjust	512	512	512
Zero speed counts	20000000	20000000	20000000
Occupancy Time	0.6	0.6	0.6
Carrier Time	0.00004	0.000041	0.000063
Process Time	0.000004	0.0000012	0.0000043
Highspeed Change Margin (rpm)	150	150	150
LPF parameter for Highspeed Filter	0.1	0.1	0.1
Counts to change speed	8	8	8
Speed Detection Type	Use capture width	Use capture width	Use capture width

Table 10-21 Configuration Options initial value [2/2] (rm_motor_sense_encoder)

Option name	RA8T1	RA8T2
Hall sensor U phase input port	BSP_IO_PORT _09_PIN_07	BSP_IO_PORT _10_PIN_08
Hall sensor V phase input port	BSP_IO_PORT _09_PIN_05	BSP_IO_PORT _10_PIN_10
Hall sensor W phase input port	BSP_IO_PORT _09_PIN_06	BSP_IO_PORT _10_PIN_09
Hall sensor sensor pattern #1	1	1
Hall sensor sensor pattern #2	5	5
Hall sensor sensor pattern #3	4	4
Hall sensor sensor pattern #4	6	6
Hall sensor sensor pattern #5	2	2
Hall sensor sensor pattern #6	3	3
Motor Parameter Pole pairs	4	4
Motor Parameter Resistance (ohm)	0.84	0.84
Motor Parameter Inductance of d-axis (H)	0.0011	0.0011
Motor Parameter Inductance of q-axis (H)	0.0011	0.0011
Motor Parameter Permanent magnetic flux (Wb)	0.00623	0.00623
Motor Parameter Rotor inertia (kgm ²)	0.0000041	0.0000041
Control type	Position	Position
Period of current control (kHz)	20.0	20.0
Period of speed control (sec)	0.0005	0.0005
PWM carrier frequency (kHz)	20.0	20.0
Decimation of interrupt	0	0
Counts per Rotation	4000	4000
Counts for Angle Adjust	512	512
Zero speed counts	20000000	20000000
Occupancy Time	0.6	0.6
Carrier Time	0.00002	0.00002
Process Time	0.000002	0.000002
Highspeed Change Margin (rpm)	150	150
LPF parameter for Highspeed Filter	0.1	0.1
Counts to change speed	8	8
Speed Detection Type	Use capture width	Use capture width

10.8 Parameters about protection function

rm_motor_encoder / Limit of over current

Set the threshold to judge overcurrent. Actual value is calculated by "input value * sqrt(2) * 1.5".

rm_motor_encoder / Limit of over voltage

Set the threshold to judge over voltage error. Please select reasonable value with your environment.

rm_motor_encoder / Limit of low voltage

Set the threshold to judge low voltage error. Please select reasonable value with your environment.

10.9 Changing the PWM carrier frequency

If you want to change PWM carrier frequency, please change below items.

rm_motor_driver / PWM Carrier Period

Set the period of PWM carrier.

rm_motor_current / PWM carrier frequency

Set the frequency of PWM carrier.

rm_motor_sense_encoder / Period of current control (kHz)

Set the period of PWM carrier.

10.10 modulation method

In this sample program, one of two pulse-width modulation drive modes can be selected. The default is the space vector PWM (MOD_METHOD_SVPWM). You can select the method at "Modulation method" option in driver module.

If the pulse-width modulation drive mode is changed to sinusoidal PWM, the voltage utilization is limited to 86%, whereby the appropriate voltage cannot be output to the motor, and the inverter bus voltage must be set higher to obtain the desired voltage. When space vector PWM is used, the voltage utilization is 100% with respect to the inverter bus voltage.

rm_motor_driver / Maximum duty

Maximum duty of PWM. Please use default setting "0.9375" normally.

10.11 Parameters for inverter

10.11.1 Deadtime

rm_motor_driver / Dead Time (Raw Counts)

Set dead time which is written in specification or design document about the inverter as counts of the timer (GPT). For example, if the timer clock is "120[MHz]" and deadtime is "2[μs]", please set "240".

10.11.2 Current detection gain

rm_motor_driver / Current Range (A)

Set the range to detect electrical current. In the specification of MCILV-1, when 0.0 to 3.3[V] input, ± 8.25 [A] (peak to peak 16.5[A]) is detected. Please set value of "peak to peak".

Table 10-22 Current signal specifications for MCI-LV-1

3-phase output current value	ADC Input voltage value	ADC conversion value
+8.25A	3.3V	4095
0A	1.65V	2047
-8.25A	0V	0

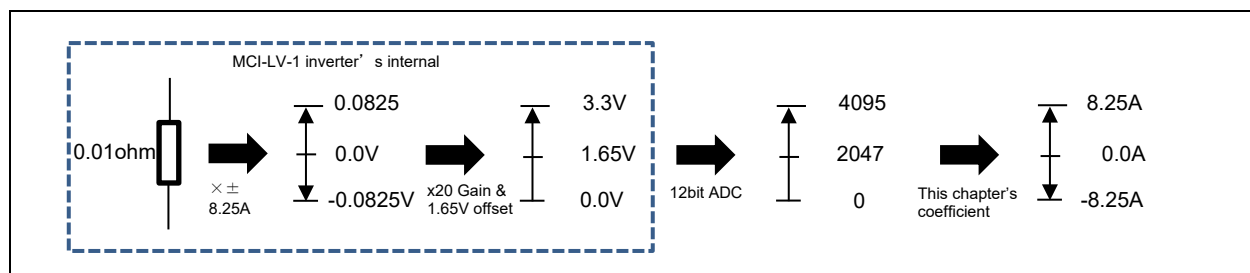


Figure 10-1 Current detection calculation flow

10.11.3 Voltage detection gain

rm_motor_driver / Voltage Range (V)

Set the value when maximum digits (12bit conversion : 4095) is detected, how match inverter bus voltage is inputted. For MCI-LV-1, when ADC input is 3.3[V], detected voltage is correspond to 73.51[V] (this ratio depends on circuit). Therefore, set "73.51" in this configuration.

Table 10-23 Inverter bus voltage signal specifications for MCI-LV-1

Inverter bus voltage value	ADC Input voltage value	ADC conversion value
0V	0V	0
73.51V	3.3V	4095

10.11.4 Voltage error compensation parameters

Performing a switching test using an actual inverter, or creating a voltage compensation table using the voltage error value for dead time obtained from the relationship between dead time and carrier period. The relationship between current and voltage obtained in the switching test yields a configurable value for a more effective voltage compensation table.

The limit of the compensation voltage value can be calculated by the following formula.

Compensation voltage limit = (carrier frequency [kHz] × dead time [μs] ÷ 1000) × inverter bus voltage value

If the relationship between I_u and V_u (I_v - V_v , I_w - V_w) cannot be obtained experimentally for the slope near the zero cross, it is necessary to calculate the table by considering the above equation and the characteristics of the main circuit.

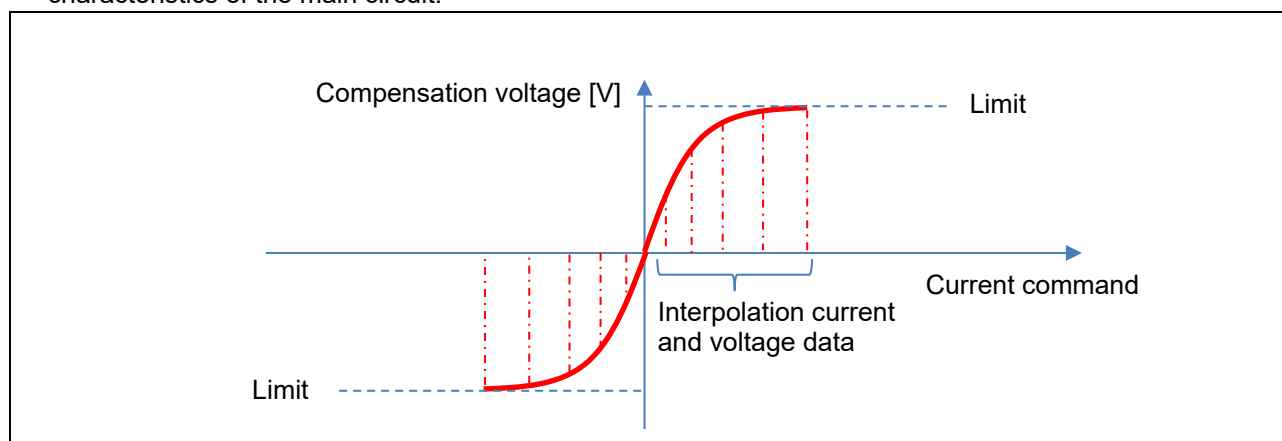


Figure 10-2 Relationship between the compensation voltage value/limit and current command value

Table 10-24 Example of setting for compensation about current and voltage

No.	rm_motor_current/Voltage error compensation table of current	rm_motor_current/Voltage error compensation table of voltage
0	0.477	0.021
1	0.742	0.034
2	0.892	0.064
3	0.979	0.158
4	1.009	0.400

10.12 Motor parameters

If motor parameter information is not available from the motor manufacturer, motor parameters R , L_d , and L_q can be obtained simply by using an LCR meter. The inductive voltage can also be obtained simply by using an oscilloscope. The methods described here are simplified methods that does not take into account magnetic saturation or other phenomenon and is intended to turn the motor quickly, being subject to individual differences and measurement errors. Therefore, when using the parameters in actual product development, measurement should be performed using measurement equipment whose accuracy is ensured.

The LCR meter should be calibrated periodically, and measurement should be made in a warm-up complete state after at least 30 minutes of power on. In addition, perform open compensation and short compensation in advance to reduce probe errors using the 4-terminal pair method. For details, refer to the LCR meter's instruction manual.

Pole pairs

Set the number of pole pairs of the motor. The number of pole pairs is $1/2$ the number of poles. Refer to the motor specifications.

Resistance

For wiring when measuring with an LCR meter, select two of the motor's three-phase output wires U, V, and W and connect the probes to them. To measure the resistance, use the DC resistance (DCR) mode. Because the resistance value obtained is the composite resistance of the two phases, the resistance value of the motor for one phase can be obtained by halving it. The unit is ohm.

Inductance of d-axis, Inductance of q-axis

For wiring when measuring with an LCR meter, select two of the motor's three-phase output wires U, V, and W and connect the probes to them. For the measurement mode, use the series equivalent circuit mode (Ls). For detailed measurement methods, refer to the LCR meter's instruction manual.

Turn the axis slowly and note down the maximum and minimum inductance values that are displayed. Here, $1/2$ of the maximum value is L_q and $1/2$ of the minimum value is L_d .

Set the obtained L_d and L_q . The unit is H (henry).

Roter inertia

Specify the inertia (moment of inertia) of the motor's rotor and shaft. The unit is kg m^2 . Usually, you can find a description in the documentation provided with the motor. If a load is installed, inertia on the load side should also be added to the setting.


Nominal current

Specify the motor's rated current (RMS). The unit is ampere. It is indicated on the nameplate of the motor or in the accompanying documentation.

Permanent magnetic flux

Select two of the motor's three-phase output wires U, V, and W and connect them to the oscilloscope. For example, connect the oscilloscope probes to the U and V phases so that the voltages can be measured. The U-V phase line voltage value can be obtained by connecting a motor that can rotate at the rated speed to the end of the motor shaft and rotating it at the rated speed. Dividing the line voltage value by $\sqrt{3}$ gives the peak value of inductive voltage per phase. You can obtain the magnetic flux linkage Ψ from the equation of the inductive voltage $= \omega \Psi$. Convert the rated speed to the electrical angular speed frequency $f[\text{Hz}]$, substitute ω with $2\pi f$ to make the inductive voltage $= 2\pi f \Psi$, rearrange the equation, substitute a value to obtain the magnetic flux linkage $\Psi[\text{Wb}]$.

In cases where a motor cannot be mounted on the end of the shaft, a simple method of obtaining voltage waveforms by quickly rotating the motor by hand can also be used. However, accuracy cannot be guaranteed, and the method can only be used for test run purposes. When turned by hand, the voltage waveform similar to the following image is obtained. In this case, select a cycle close to a constant speed with a sine wave, and find the peak and cycle of the voltage.

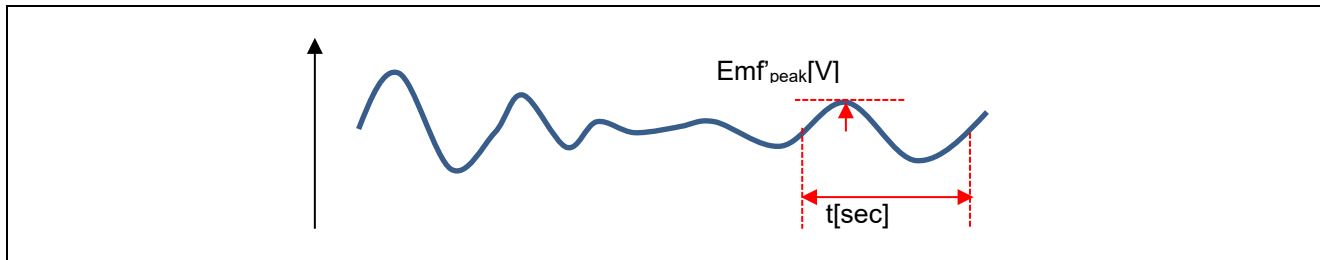

In this algorithm, the peak value must be converted to an RMS value. Therefore, divide it by $\sqrt{2}$ to obtain the RMS value, Emf'_{rms} .

$$Emf'_{rms}[V] = Emf'_{peak}[V] \times \frac{1}{\sqrt{2}}$$

To convert the obtained time $t[sec]$ to Hz, apply the formula $f' = 1/t$. Find the ratio of the obtained $f[Hz]$ to the electrical angular frequency $[Hz]$ obtained from the rated speed of this IPM motor, and multiply the voltage $Emf'_{rms}[V]$ obtained simultaneously by the ratio.

$$Emf[V] = Emf'_{rms}[V] \times \frac{\text{electrical angular frequency}[Hz]}{f'[Hz]}$$

As a result, the inductive voltage $[V]$ that is generated when this IPM motor rotates at its rated speed can be determined simply. To determine the inductive voltage, it must be measured by rotating the motor shaft at the rated speed using a load test device.

Next, the magnetic flux linkage $\Psi[Wb]$ is obtained from the inductive voltage. In general, inductive voltage and magnetic flux linkage have the relationship as below. f is the electric angular frequency $[Hz]$ at rated speed.

$$Emf[V] = \omega\Psi = 2\pi f\Psi$$

The magnetic flux linkage $\Psi[Wb]$ can be obtained by rearranging the equation and substituting the inductive voltage $Emf[V]$ obtained above and the electric angular frequency $[Hz]$ during rated speed operation.

$$\Psi = \frac{Emf[V]}{2\pi f}$$

Specify the obtained magnetic flux linkage Ψ to Magnetic Flux of each module.

10.13 Parameters for current control

rm_motor_current / Current PI loop omega, rm_motor_current / Current PI loop zeta

The control gain is adjusted by tuning the natural frequency for the current control system and the attenuation coefficient for the current control system. Set the natural frequency for the current control system in proportion to the frequency at which to perform current control. The natural frequency can be set to about 1/10 of the current control frequency (PWM carrier frequency). However, in many cases, a lower value may be set with a margin in consideration of noise during position detection and current detection.

For example, if the current control frequency is 20 kHz (current control operates at 50 μ s intervals), you can specify a current control system intrinsic frequency of 2 kHz because it can be set up to 1/10. In practice, however, a high natural frequency may be too sensitive due to the electrical constants of the motor parameters, and is often set at a frequency below 2 kHz (for example from 500 Hz to 1 kHz).

For the attenuation coefficient for the current control system, a value in the range from 0.7 to 1.0 is ordinarily set. Setting a value nearer to 1.0 makes response more stable and moderate.

10.14 Parameters for speed control

rm_motor_speed/Speed PI loop omega, rm_motor_speed/Speed PI loop zeta

In the speed control module, the control gain is adjusted by tuning the natural frequency for the speed control system (Speed PI loop omega) and the attenuation coefficient for the speed control system (Speed PI loop zeta). Increasing the natural frequency for the speed control system improves the responsiveness, expanding the following capability of the speed to the commanded speed. The maximum settable natural frequency for speed control is limited to 1/3 of the maximum settable natural frequency for current control to prevent interference with current control. If the natural frequency of the current control system is 500 Hz, then $500 \text{ Hz}/3 = 166 \text{ Hz}$.

For the attenuation coefficient for the speed control system, a value in the range from 0.7 to 1.0 is ordinarily set. Setting a value nearer to 1.0 makes response more stable and moderate. Make adjustment while checking the speed responsiveness.

rm_motor_speed/Step of speed climbing

Set the rate at which the speed increases (acceleration) when the speed command value is set. If set value is big, speed increases faster. When "1" is set, the speed is increased by 1rpm per speed control period.

10.15 Parameters for sample delay compensation

rm_motor_current/Period magnification value

Set the value which compensates the period from current detection timing to PWM duty set timing.

11. Control flowcharts

11.1 Main process

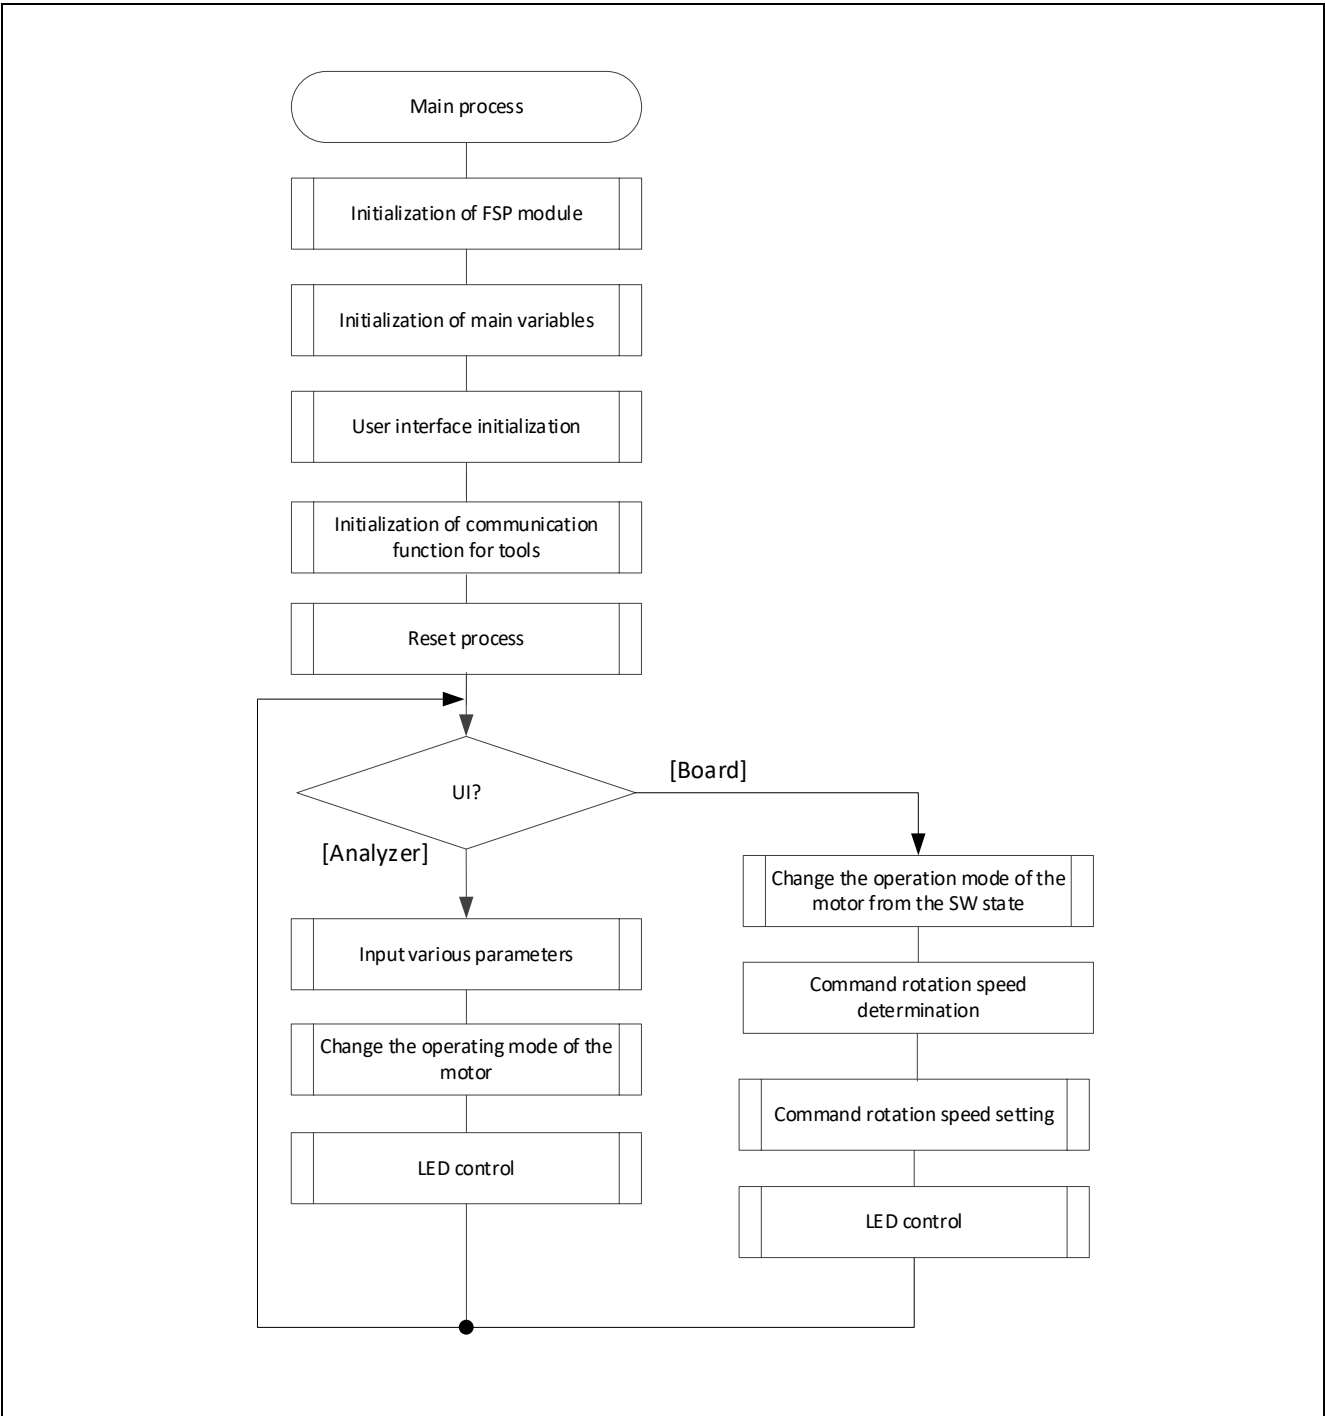


Figure 11-1 Main Process Flowchart

11.2 Current Control Period Interrupt Process

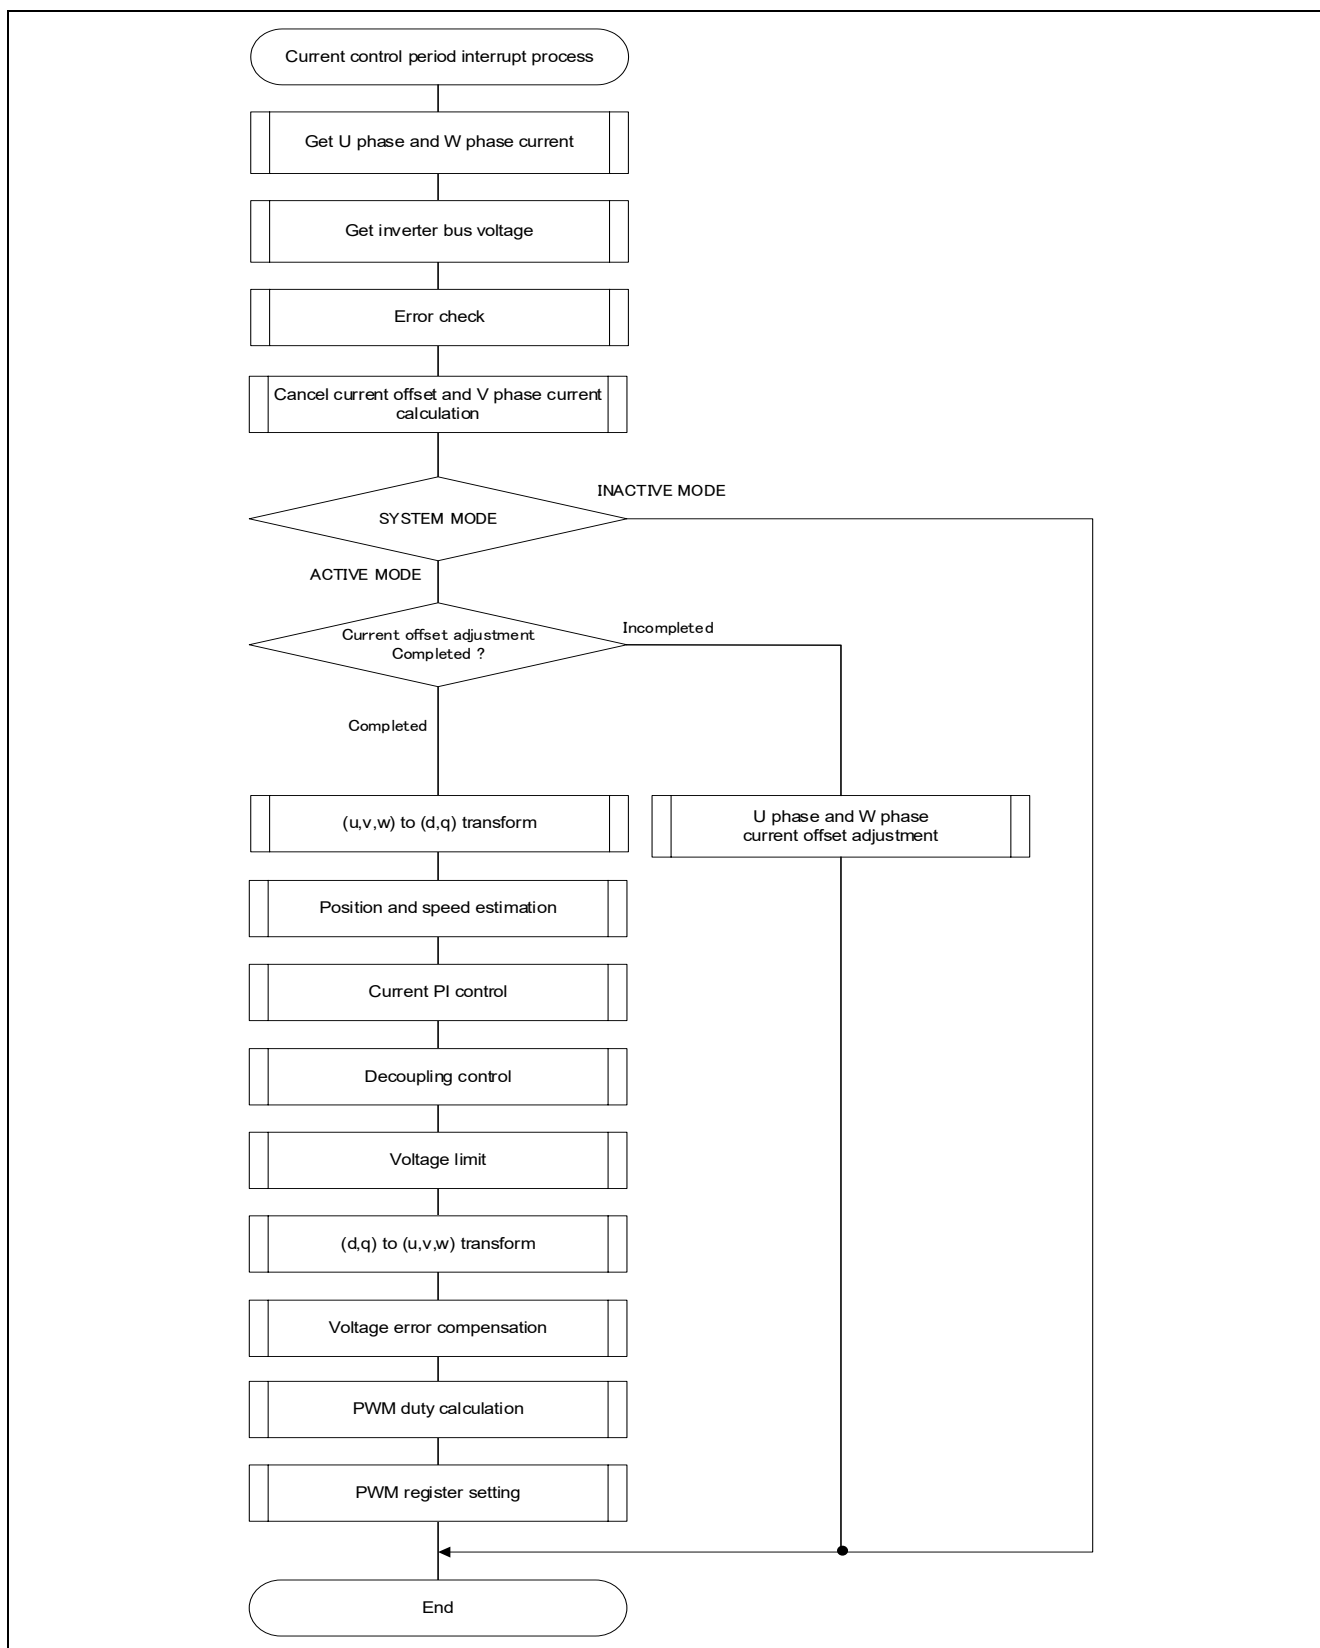


Figure 11-2 Current control Period Interrupt Process Flowchart

11.3 Speed control Period Interrupt Process

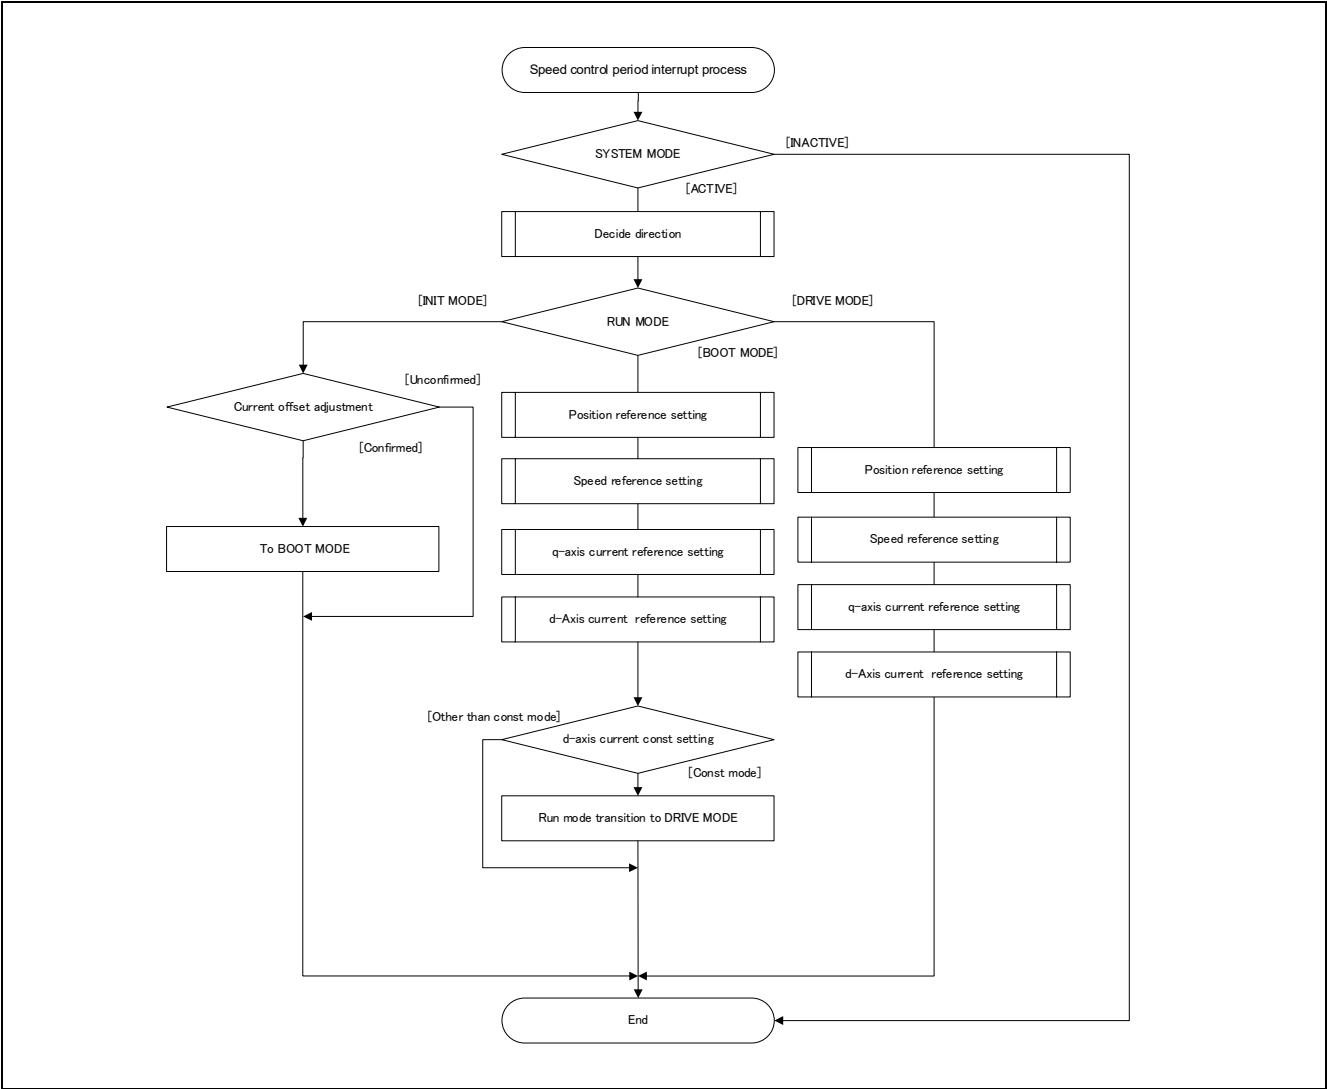


Figure 11-3 Speed Control Period Interrupt Process Flowchart

11.4 Over Current Detection Interrupt Process

The overcurrent detection interrupt is an interrupt that occurs when an external overcurrent detection signal is input. The PWM output terminal are put in the high impedance state. Therefore, at the start of execution of this interrupt processing, the PWM output terminal is already in the high impedance state and the output to the motor had been stopped.

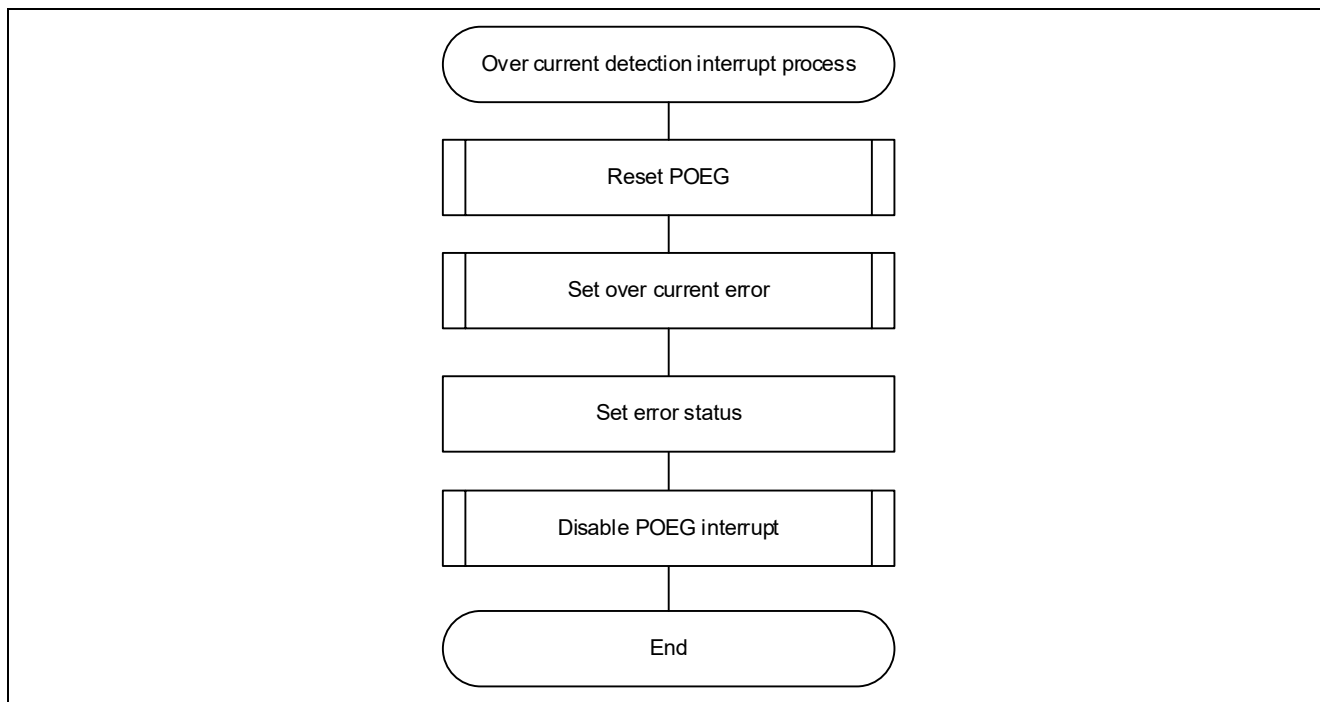


Figure 11-4 Over Current Detection Interrupt Process Flowchart

11.5 Encoder input capture interrupt

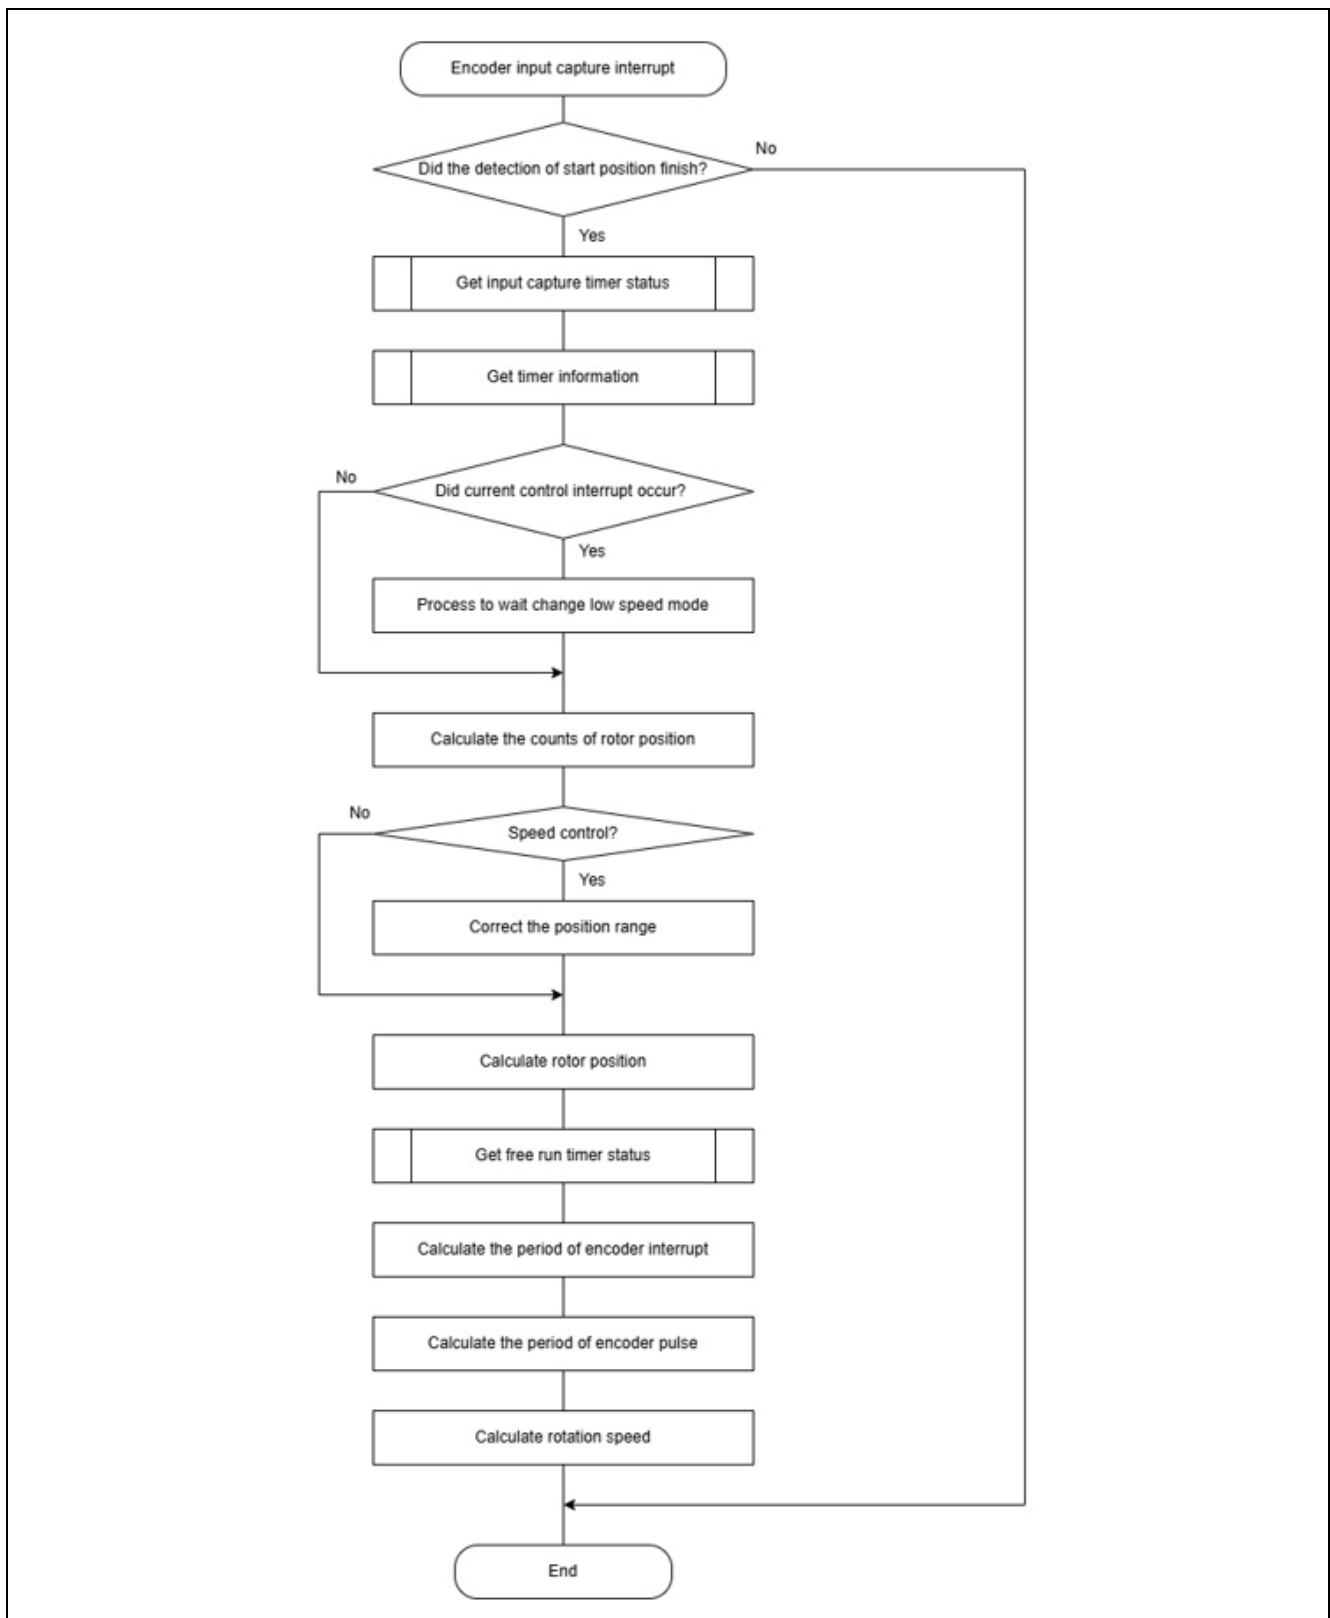


Figure 11-5 Encoder input capture Interrupt Process Flowchart

12. FAQ

12.1 Troubleshooting

Table 12-1 shows typical phenomena and their solutions.

Table 12-1 List of phenomena and their solutions

Phenomena	Solution
When a load is applied, the motor keeps turning at a speed other than the setting.	The motor is stepped out. The motor is out of control and must be stopped immediately. Inappropriate motor parameters or control parameters or hardware performance limitations such as sensors may prevent control. Reconsider the design.
Motor cannot rotate after stopping due to an error.	For details, see 6.7 c). It explains how to recover from errors.
The motor stops with an error even after starting.	See 6.7 c) for the cause of the error. After that, please confirm settings about the cause of errors.
The values set from RMW are not reflected.	Manipulate variables in com_u1_enable_write to rewrite the parameters. When the timing for writing values to com_u1_enable_write is prior to writing parameters, the internal reflection process operates first. Address as the following: • Put com_u1_enable_write on the last line. • Write com_u1_enable_write twice or toggle write

12.2 Frequently asked questions

12.2.1 The value of a variable displayed in RMW is abnormal.

When any change is made to the software, it is necessary to register the Map file “src/application/rmw/*.map” with RMW to update the variable status of the software. If you omit this step, the variable may not display correctly. For details, see 6.5.

Revision History

Rev.	Date of issue	Amendments	
		Page	Point
1.00	May 23, 2023	-	First edition issued
1.10	Jan 23, 2024	-	Added description related to RA8T1
1.11	Dec 23, 2024	-	Update target software
1.20	Sep 2, 2025	-	- Added RA8T2 - Updated chapter titles
1.21	Oct 21, 2025	-	Update the FSP version of the target software to v6.2.0
1.22	Oct 31, 2025	-	- Added RA6T2 ver.2 - Fixed incorrect entries

General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

1. Precaution against Electrostatic Discharge (ESD)

A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity. Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.

2. Processing at power-on

The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.

3. Input of signal during power-off state

Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.

4. Handling of unused pins

Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.

5. Clock signals

After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.

6. Voltage application waveform at input pin

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between V_{IL} (Max.) and V_{IH} (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between V_{IL} (Max.) and V_{IH} (Min.).

7. Prohibition of access to reserved addresses

Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not guaranteed.

8. Differences between products

Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
8. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
13. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
14. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,
Koto-ku, Tokyo 135-0061, Japan

www.renesas.com

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:

www.renesas.com/contact/.