

QCIOT56-ISL12022EVZ

RTC Pmod™ Board

The QCIOT56-ISL12022EVZ device is a low power real time clock (RTC) with an embedded temperature sensor and crystal. Device functions include oscillator compensation, clock/calendar, power fail and low battery monitors, brownout indicator, one-time, periodic or polled alarms, intelligent battery backup switching, Battery Reseal™ function and 128 bytes of battery-backed user SRAM. Backup battery current draw is less than 1.6µA over the temperature range. The RTC tracks time with separate registers for hours, minutes, and seconds. Daylight Savings time adjustment is done automatically, using parameters entered by the user. Power fail and battery monitors offer user-selectable trip levels.

The QCIOT56-ISL12022EVZ features Pmod™ connectors on both sides of the board to allow additional Type 6/6A boards to be connected in a daisy-chained solution with multiple sensors on the same MCU Pmod connector. Software support present in the Renesas IDE ([e2 studio](#)) provides code generation to connect the sensor and the MCU, thereby significantly reducing development time. With its standard connector and software support, the QCIOT56-ISL12022EVZ is ideal for Renesas [Quick-Connect IoT](#) to rapidly create an IoT system.

Kit Contents

- QCIOT56-ISL12022EVZ Pmod Board

Features

- On-chip oscillator temperature compensation
- Embedded 32.768kHz quartz crystal in the package
- 10-bit digital temperature sensor output
- 15 selectable frequency outputs
- Interrupt for alarm or 15 selectable frequency outputs
- Automatic backup to battery or supercapacitor
- Standardized Type 6A Pmod connector supports I²C extended interface
- Dual connectors allow pass-through signals for daisy-chained solutions
- Software support in e2 studio minimizes development time with one-click code generation

Related Documents

- [ISL12022MA](#) Datasheet
- [Renesas Quick-Connect IoT Manual](#)

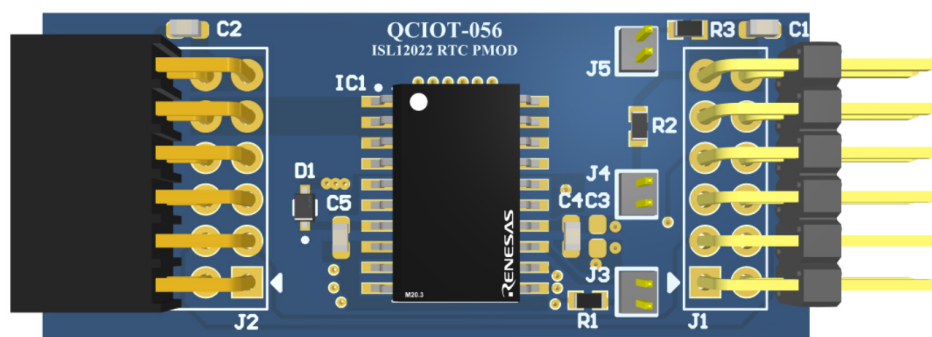


Figure 1. QCIOT56-ISL12022EVZ RTC Pmod Board

Contents

1. Functional Description.....	3
1.1 Operating Environment.....	3
2. Setup.....	4
2.1 Required or Recommended User Equipment.....	4
2.2 Software Tools and Versions Required	4
2.3 Kit Hardware Connections	4
3. Programming Interface	5
4. Board Design	9
4.1 Application Schematic Diagram.....	9
4.2 Bill of Materials (BOM).....	10
4.3 Board Layout	11
5. Ordering Information.....	11
6. Revision History	11

Figures

Figure 1. QCIOT56-ISL12022EVZ RTC Pmod Board	1
Figure 2. Evaluation Kit Connections using the QCIOT56-ISL12022EVZ and EK-RA6M4.....	3
Figure 3. Evaluation Kit Connections.....	5
Figure 4. Debugging the Board	6
Figure 5. Steps for Flashing and Flash Programmer Settings	7
Figure 6. J-Link Terminal Window – Serial Data Output.....	8
Figure 7. QCIOT56-ISL12022EVZ RTC Pmod Board (Top).....	9
Figure 8. Application Schematic	9
Figure 9. Silkscreen Top.....	11
Figure 10. Silkscreen Bottom	11
Figure 11. Copper Top	11
Figure 12. Copper Bottom	11
Figure 13. Internal Plane-1 (GND).....	11
Figure 14. Internal Plane-2 (PWR)	11

1. Functional Description

The QCIOT56-ISL12022EVZ functions as an external Real Time Clock (RTC) converter building block to create a custom system solution. Use the board individually or with a combination of other sensors by using the Pmod Type 6A interface (see the Renesas [Quick-Connect IoT](#) web page for a list of available Pmod sensors boards.)

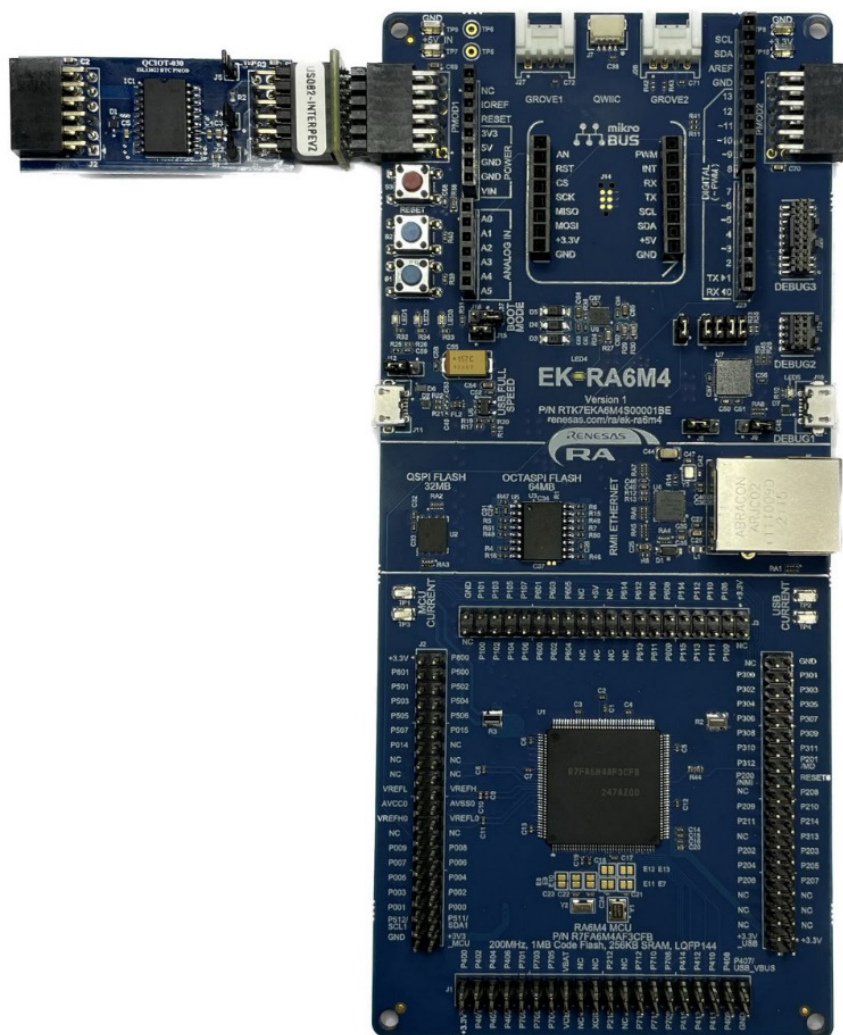


Figure 2. Evaluation Kit Connections using the QCIOT56-ISL12022EVZ and EK-RA6M4

1.1 Operating Environment

The operation of this software project has been confirmed with the following environment.

Table 1. Operating Environment

Item	Description
Demonstration Board	RTK7EKA6M4S00001BE (EK-RA6M4)
Microcontroller	RA6M4
Operating Frequency	48MHz
Operating Voltage	+3.3V
Integrated Development Environment	e2 Studio 2023-04
C-compiler	GCC 10.3.1.20210824

Item	Description
Flexible Software Package (FSP)	v3.3.0
RTOS	N/A
Emulator	On-board (J-LINK)
Interposer Board	Interposer Board to convert Type2/3 to Type 6A Pmod standard (US082-INTERPEVZ)
RTC Board	QCIOT56-ISL12022EVZ Pmod Board

2. Setup

2.1 Required or Recommended User Equipment

The following additional lab equipment (sold separately) is required for using the board:

- Any MCU/MPU board that supports Type 6A Pmods
- The [US082-INTERPEVZ](#) interposer board when using one of the Renesas MCU kits shown in [Table 2](#)

Table 2. MCU Evaluation Kits Capable of Supporting Type 6A Pmods when used with the QCIOT56-ISL12022EVZ

RA	RX	Synergy
EK-RA2A1	RX111-Starter-Kit	PK-S5D9
EK-RA4M1	RX231-Starter-Kit	DK-S3A7
EK-RA4W1	RX23W-Starter-Kit	DK-S128
EK-RA6M1	RX23T-Starter-Kit	TB-S1JA
EK-RA6M2	RX24T-Starter-Kit	TB-S3A6
EK-RA6M3	RX24U-Starter-Kit	DK-S7G2
EK-RA6M3G	-	-

Note: This table is not a comprehensive list of supported MCU Kits. See the evaluation kit hardware manual to confirm Pmod pinout.

2.2 Software Tools and Versions Required

SST software tool is available by request, which includes raw lux data collecting demo.

Note: Only RZ solution is available now. Other MCU software is in development.

For more information about creating a customized system solution, see the [Quick-Connect IoT](#) web page.

2.3 Kit Hardware Connections

Use the following procedures to set up the kit.

- Ensure the MCU evaluation kit being used has a Pmod connector set to Type 6A (refer to the kit hardware manual to confirm).
 - If no Type 6A Pmod is available, ensure the MCU evaluation kit can use the Pmod interposer board and insert the board into the MCU connector before adding any sensor boards.
- Plug in the QCIOT56-ISL12022EVZ to the Type 6A connector, taking care to align Pin 1 on the sensor board and MCU kit.
- Connect the J3, J4 and J5 jumpers to place 1kΩ pull-up resistors on the IRQ and I²C bus lines.

- a. Only one set of pull-up resistors should be used on the I²C bus lines. If multiple sensor boards are used, only one board should have the jumpers present.
- b. MCU kits typically do not have pull-up resistors present on these lines. Ensure to check for them.
4. The sensor is now ready to be used in the system. Follow the MCU kit instructions for connecting and powering up the evaluation kit.

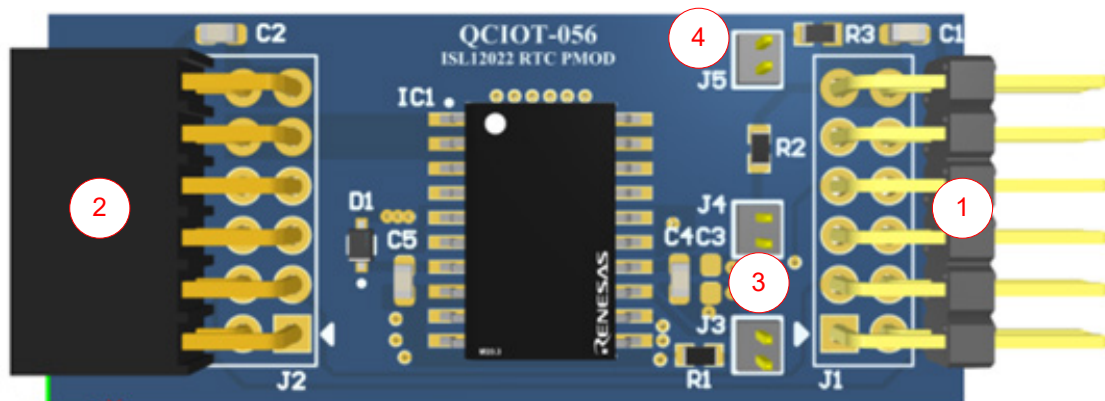


Figure 3.Evaluation Kit Connections

Number	Function
1	Connect to Board
2	Other Pmod connects here
3	I ² C pull-up BUS
4	IRQ pull-up

3. Programming Interface

Programming of the system is accomplished through the Renesas IDE, [e2 studio](#). To set up the initial project in e2 studio, see the MCU evaluation kit documentation. As the project is initialized, adding the ISL76683 sensor to the project only takes a few steps.

1. Project settings, configuration, and Source code building:

IDE environment used for code development is e2-studio, and Toolchain is Renesas CCRL. [Figure 4](#) shows the screenshots and steps to debug the board for the first time.

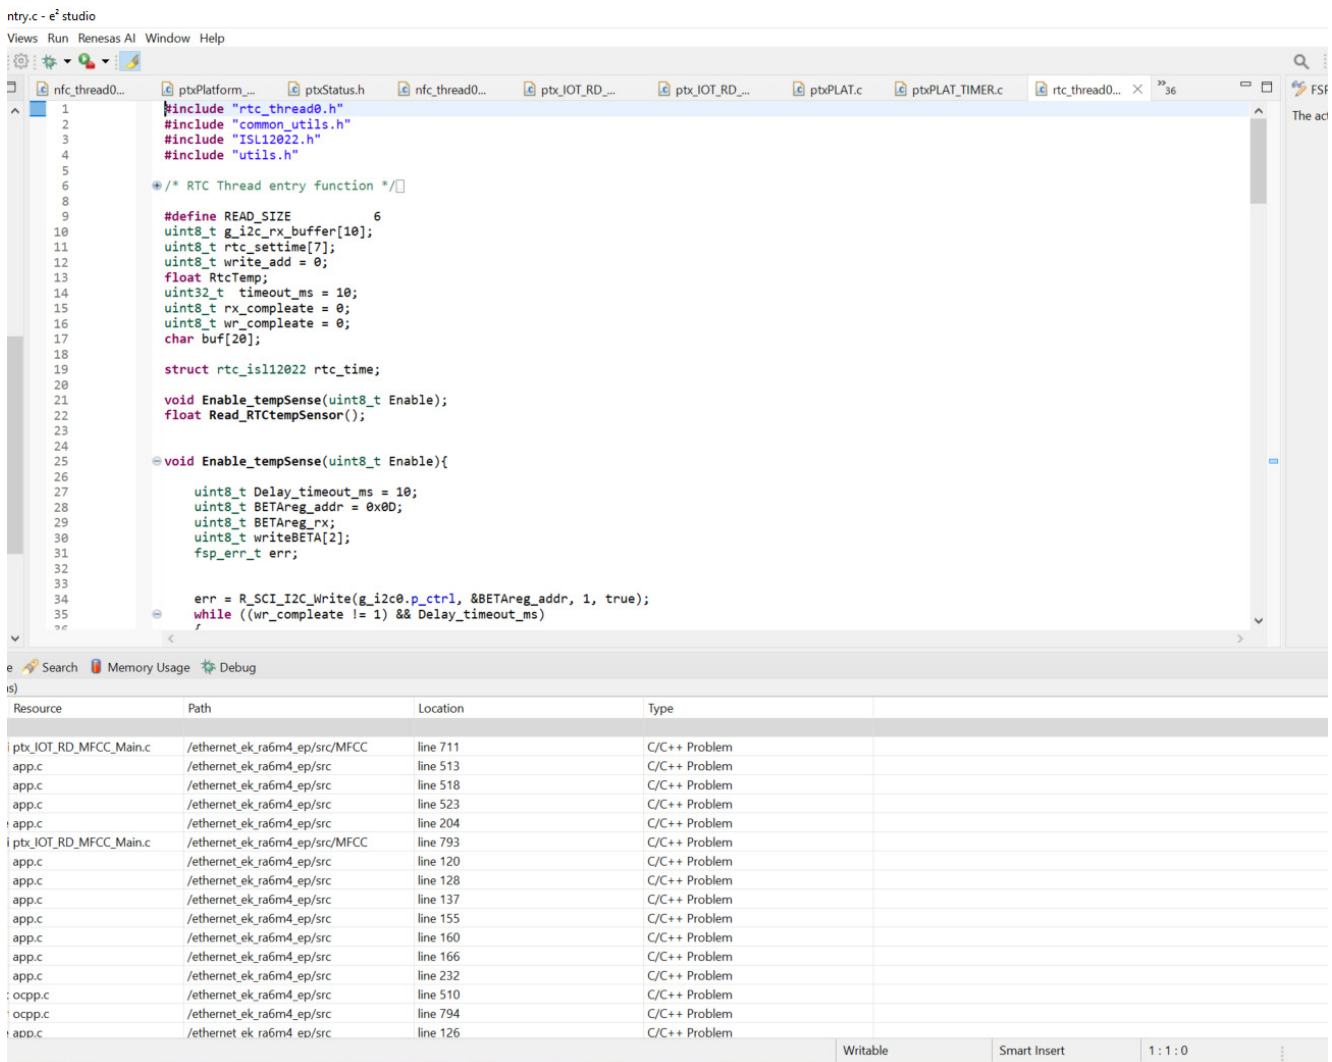
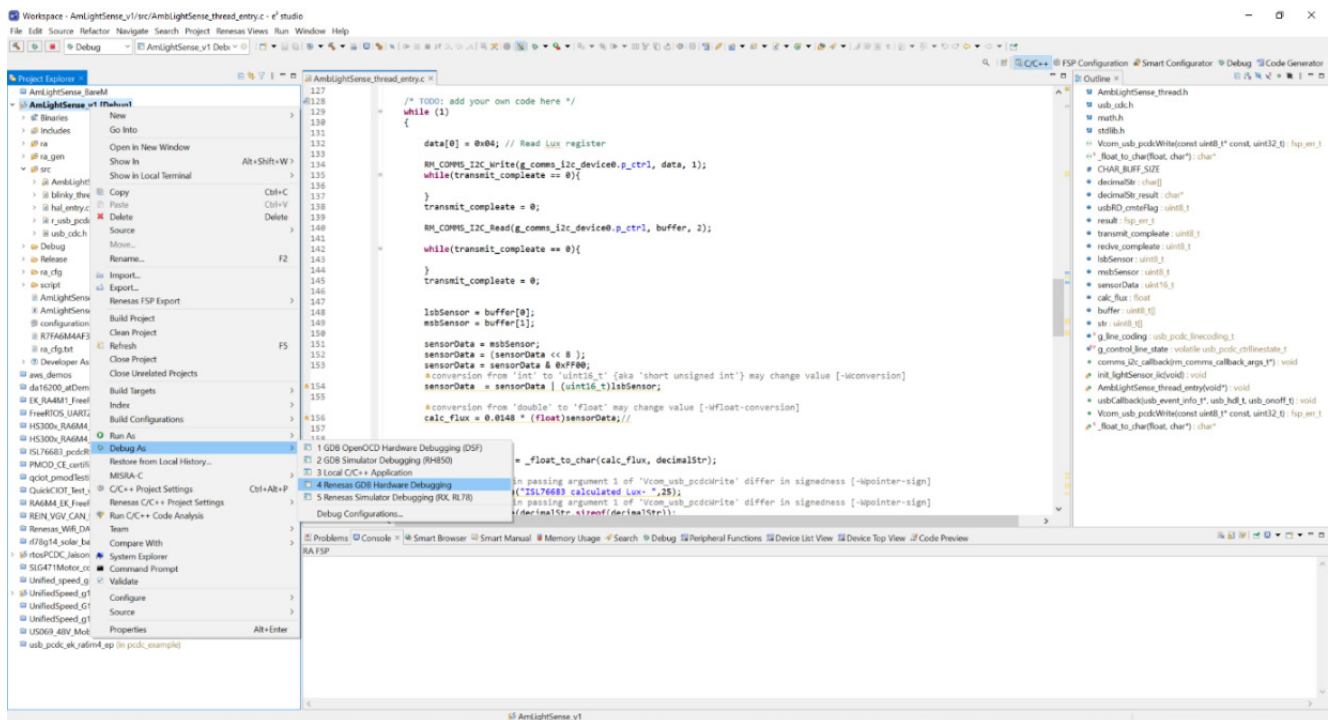


Figure 4. Debugging the Board

2. Flashing and Flash Programmer Settings (see [Figure 5](#)):

Tool: E2 Emulator Lite, Speed Setting: 9600

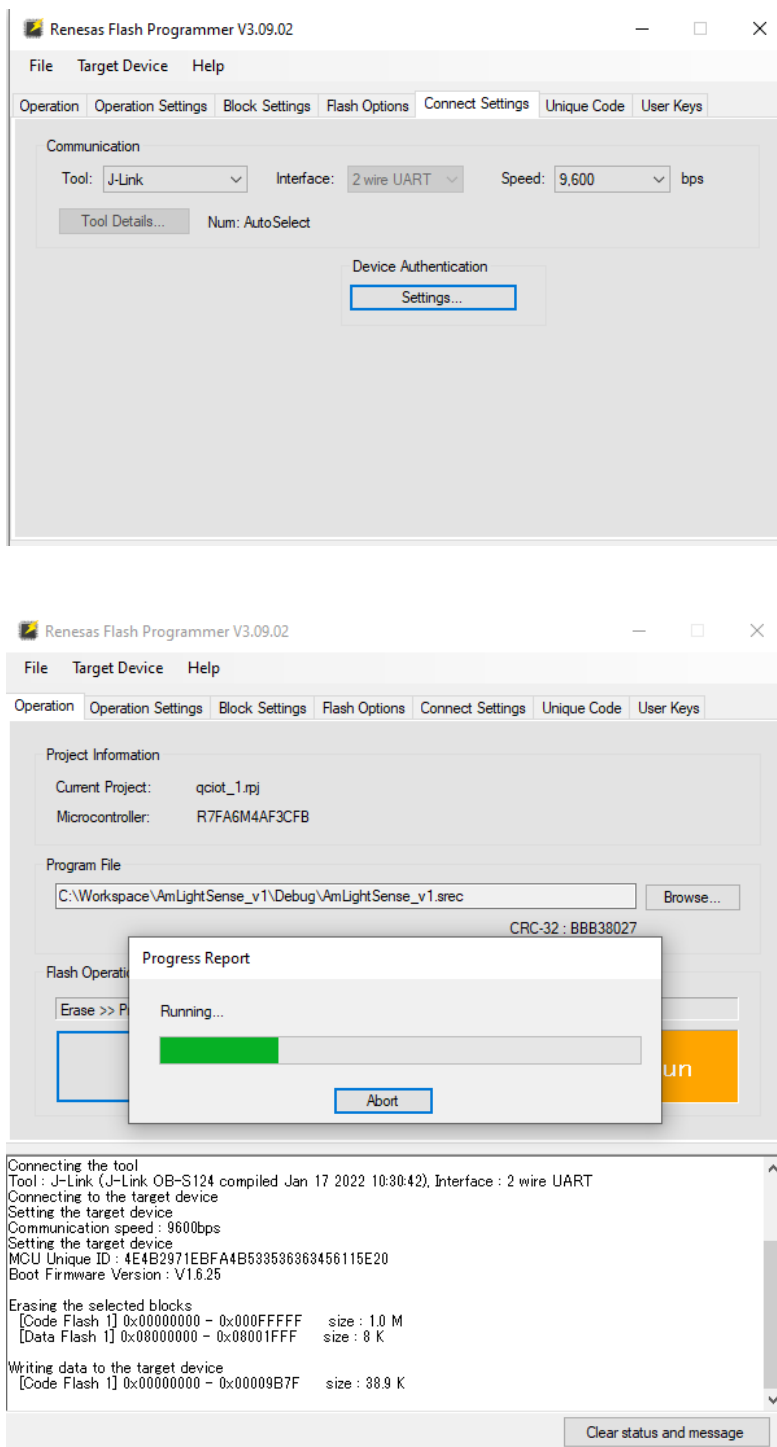


Figure 5. Steps for Flashing and Flash Programmer Settings

- After debug is complete, the lux data can be viewed from the Tera Term software as shown in the [Figure 6](#).

```

J-Link RTT Viewer V7.92f
File Terminals Input Logging Help
All Terminals Terminal 0
00> Time: 12:30:16
00> Date: 2/8/24
00> RTC Temp: 22.00'C
00> Time: 12:30:17
00> Date: 2/8/24
00> RTC Temp: 22.00'C
00> Time: 12:30:18
00> Date: 2/8/24
00> RTC Temp: 22.00'C
00> Time: 12:30:19
00> Date: 2/8/24
00> RTC Temp: 22.00'C
00> Time: 12:30:20
00> Date: 2/8/24
00> RTC Temp: 22.00'C
00> Time: 12:30:21
00> Date: 2/8/24
00> RTC Temp: 22.00'C
00> Time: 12:30:22
00> Date: 2/8/24
00> RTC Temp: 22.00'C
00> Time: 12:30:23
00> Date: 2/8/24
00> RTC Temp: 22.00'C
00> Time: 12:30:24
00> Date: 2/8/24
00> RTC Temp: 22.00'C

LOG: [1][2]: E0002000 CID B105900D PID 000BBD21 DEVARCH 47701A03 DEVTYPE 00 PFB
LOG: [1][3]: E0000000 CID B105900D PID 000BBD21 DEVARCH 47701A01 DEVTYPE 43 ITM
LOG: [1][5]: E0041000 CID B105900D PID 002BBD21 DEVARCH 47724A13 DEVTYPE 13 ETM
LOG: [1][6]: E0042000 CID B105900D PID 000BBD21 DEVARCH 47701A14 DEVTYPE 14 CSS600-CTI
LOG: RTT Viewer connected.
LOG: Terminal 0 added.

```

Figure 6. J-Link Terminal Window – Serial Data Output

4. Board Design

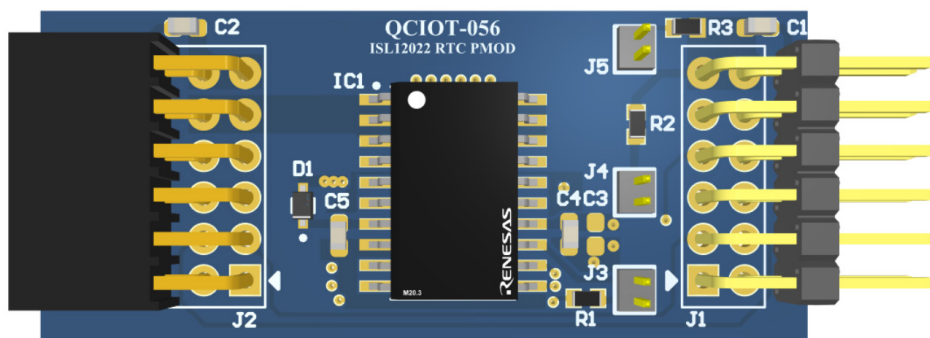


Figure 7. QCIOT56-ISL12022EVZ RTC Pmod Board (Top)

4.1 Application Schematic Diagram

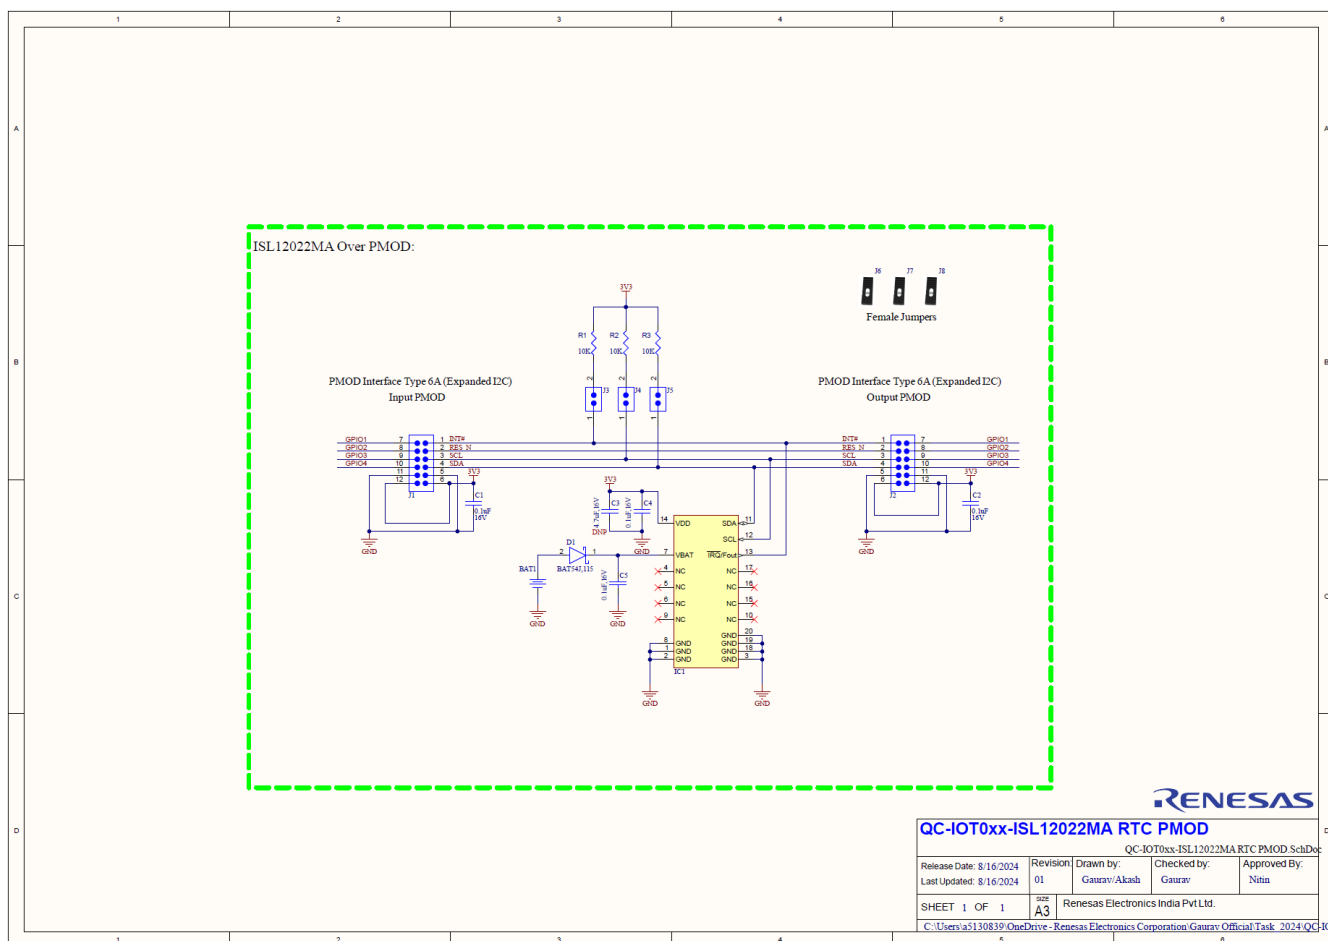


Figure 8. Application Schematic

4.2 Bill of Materials (BOM)

Qty	Reference Designator	Description	Manufacturer	Manufacturer Part Number
1	BAT1	Keystone CR1220 Battery Coin Cell holder	Keystone Electronics	3000TR
2	C1, C2	0.1 μ F $\pm$ 10% 16V Ceramic Capacitor X7R 0603 (1608 Metric)	Würth Elektronik	885012206046
0	C3	4.7 μ F $\pm$ 10% 16V Ceramic Capacitor X7R 0603 (1608 Metric)	Würth Elektronik	CC0603KRX5R7BB475
2	C4, C5	0.1 μ F $\pm$ 10% 16V Ceramic Capacitor X7R 0603 (1608 Metric)	Würth Elektronik	885012206046
1	D1	DIODE SCHOTTKY 30V 200MA SOD323F	Nexperia USA Inc.	BAT54J,115
1	IC1	Real Time Clock (RTC) IC Clock/Calendar 128B I2C, 2-Wire Serial 20-SOIC (0.295", 7.50mm Width)	Renesas	ISL12022MAIBZ
1	J1	Connector Header Through Hole, Right Angle 12 Position 0.100" (2.54mm)	Würth Elektronik	61301221021
1	J2	12 Position Receptacle Connector 0.100" (2.54mm) Through Hole, Right Angle Gold	Würth Elektronik	613012243121
3	J3, J4, J5	CONN HEADER VERT 2POS 1.27 MM	Samtec Inc.	FTS-102-01-L-S
3	J6, J7, J8	2 (1 $\times$ 2) Position Shunt Connector Black Closed Top, Grip 0.050" (1.27mm) Gold	Harwin Inc.	M50-2000005
3	R1, R2, R3	Chip Resistor, 10kOhm, $\pm$ 1%, 01W, -55 to 155 °C, 0603 (1608 Metric)	YAGEO	RC0603FR-0710KL

4.3 Board Layout

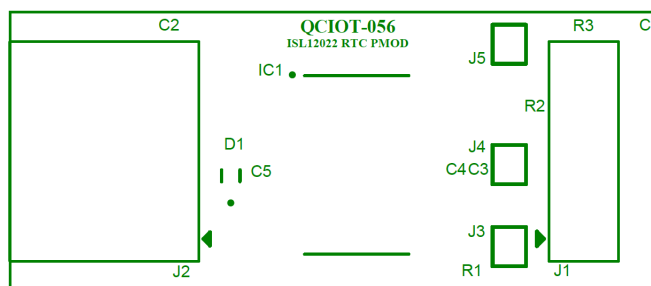


Figure 9. Silkscreen Top



Figure 10. Silkscreen Bottom

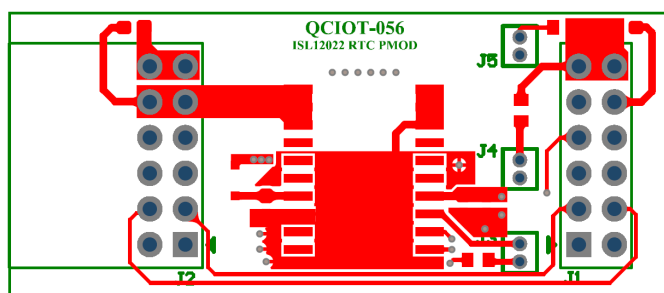


Figure 11. Copper Top

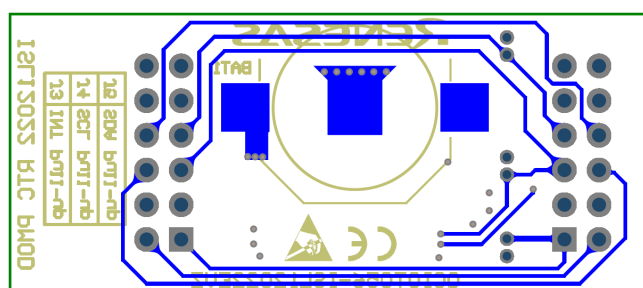


Figure 12. Copper Bottom

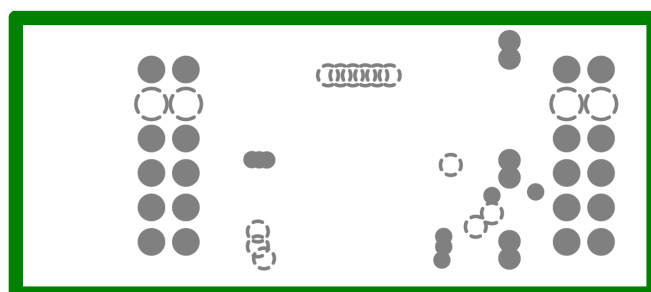


Figure 13. Internal Plane-1 (GND)

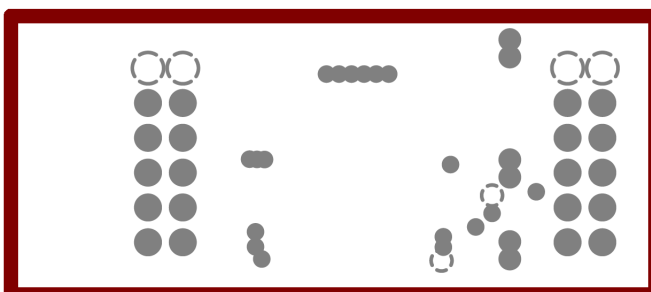


Figure 14. Internal Plane-2 (PWR)

5. Ordering Information

Part Number	Description
QCIOT56-ISL12022EVZ	ISL12022MA RTC Pmod Board
US082-INTERPEVZ	PMOD™ interposer board to convert Type 2A and 3A to Type 6A on older Renesas MCU kits

6. Revision History

Revision	Date	Description
1.01	Jun 6, 2025	Changed part number and orderable part number from QCOIT056-ISL12022MAEVZ to QCIOT56-ISL12022EVZ.
1.00	Oct 22, 2024	Initial release.

IMPORTANT NOTICE AND DISCLAIMER

RENESAS ELECTRONICS CORPORATION AND ITS SUBSIDIARIES ("RENESAS") PROVIDES TECHNICAL SPECIFICATIONS AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT OF THIRD-PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for developers who are designing with Renesas products. You are solely responsible for (1) selecting the appropriate products for your application, (2) designing, validating, and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements. These resources are subject to change without notice. Renesas grants you permission to use these resources only to develop an application that uses Renesas products. Other reproduction or use of these resources is strictly prohibited. No license is granted to any other Renesas intellectual property or to any third-party intellectual property. Renesas disclaims responsibility for, and you will fully indemnify Renesas and its representatives against, any claims, damages, costs, losses, or liabilities arising from your use of these resources. Renesas' products are provided only subject to Renesas' Terms and Conditions of Sale or other applicable terms agreed to in writing. No use of any Renesas resources expands or otherwise alters any applicable warranties or warranty disclaimers for these products.

(Disclaimer Rev.1.01)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,
Koto-ku, Tokyo 135-0061, Japan
www.renesas.com

Contact Information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit www.renesas.com/contact-us/.

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.