

RX140 Group

Smart Wakeup Solution (Touchless Demo)

Introduction

This application note describes a touchless demonstration applying the RX140 Group Smart Wakeup Solution.

Target Device

RX140 (R5F51406ADFN)

Related Documents

1. RX140 Group Capacitive Touch Evaluation System User's Manual (r12uz0102ej0100)
2. RX140 Group Smart Wakeup Solution (r11an0613jj0100)
3. RA2L1 Group Touchless Button Demo Solution (Hardware) (r01an5812ej0101)

Contents

1. Outline	3
2. Operation Environment	4
3. Regarding the Demonstration	4
3.1 Demonstration Configuration	4
3.2 operation procedures	4
4. Software Functions	5
4.1 Low Power Consumption Standby	5
4.2 Normal Operation After Waking up	6
5. Software Specifications	7
5.1 Software Structure	7
5.2 File Structure	8
6. Capacitive Touch Setting	9
6.1 Touch Interface Configuration	9
6.2 Configuration (method) Setting	9
6.3 Tuning Result	10
7. Power Consumption Measurement	11
7.1 Operating Conditions of Low Power Consumption Standby	11
7.2 Current Consumption Measurement	11
Revision History	12

1. Outline

This software performs standby with low power consumption by using the automatic judgment function of CTSU2SL and the multi-electrode connection (All TS Pin Output Control bit: enabled) function installed in RX140. After waking up from the low power consumption standby mode, the LED lights up according to the touch operation. Figure 1.1 shows software operation image.

- Multiple electrode connection function:

This function can measure as one electrode by connecting multiple self-capacitance electrodes inside the MCU. Since multiple electrodes can be measured at one time, measurement time can be shortened, and power consumption can be reduced. An example of use is a system that waking up from the low power consumption mode by any button, and usability can be improved by changing the conventional system that waking up only with the power button to a system that waking up with multiple buttons.

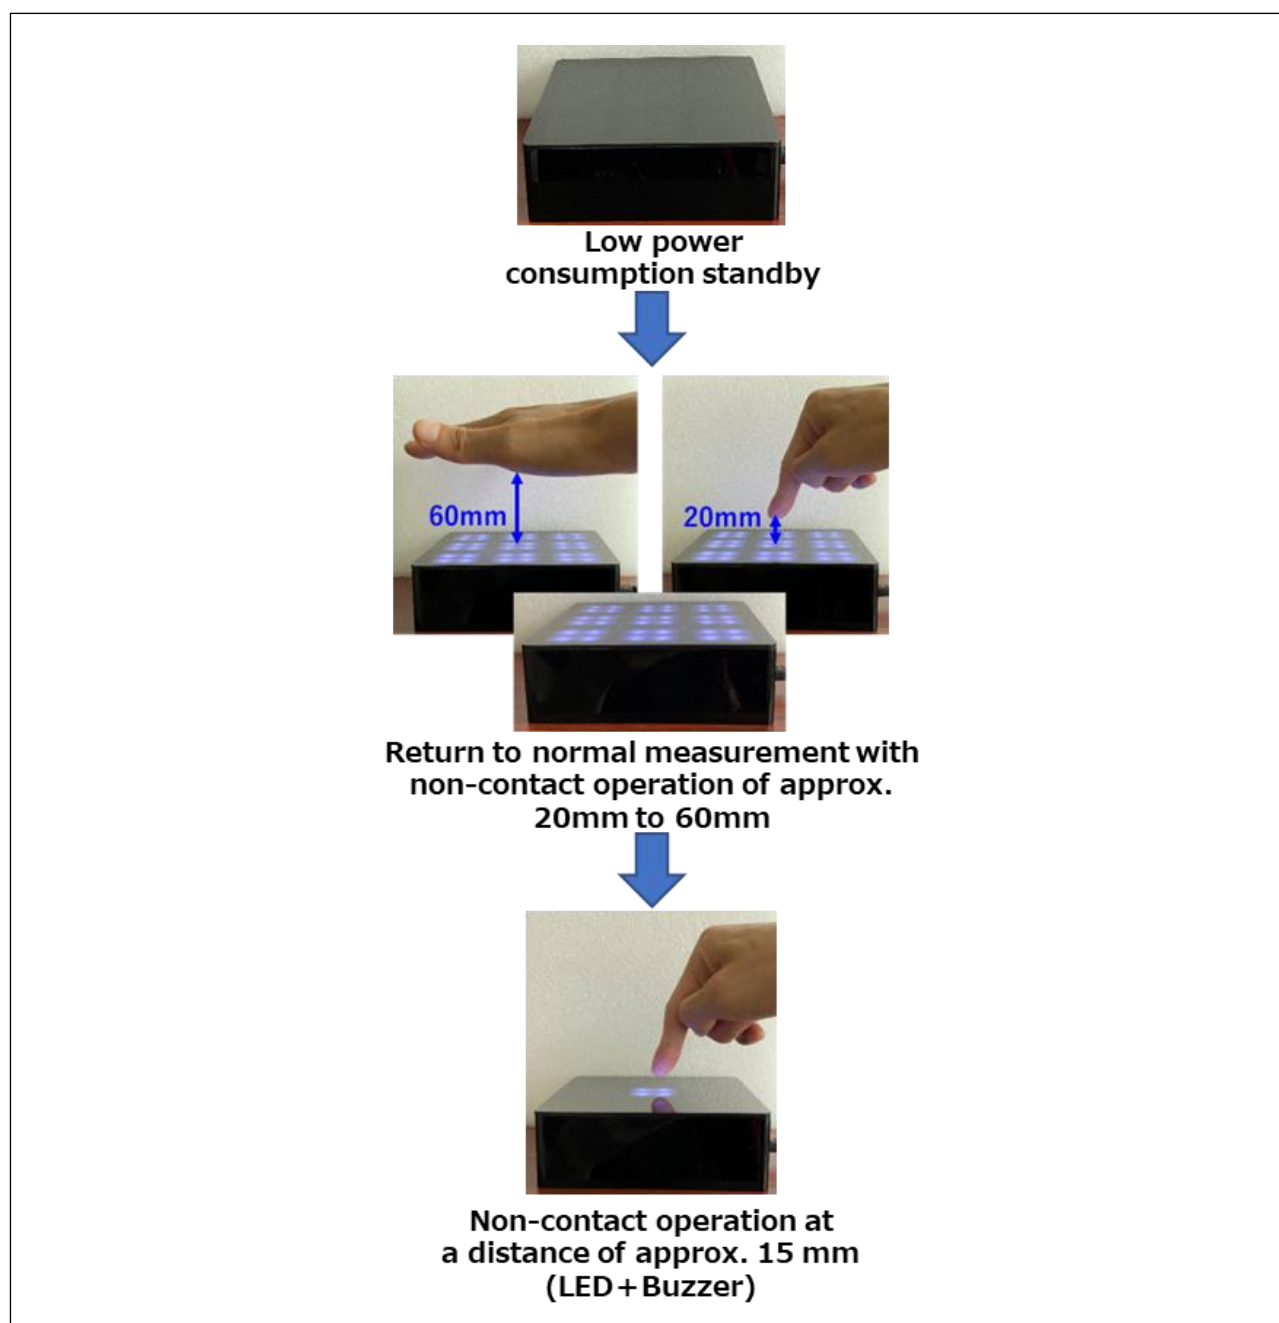


Figure 1.1 Software operation image

2. Operation Environment

Table 2.1 shows confirmed operation environment of this software.

Table 2.1 Operation confirmed environment

Item	Contents
MCU	R5F51406ADFN (RX140 MCU Group)
Operating frequency	48MHz
Operating voltage	5V
Integrated development environment	e ² Studio 2022-04
C compiler	CC-RX v3.04.00
OCD emulator	E2 emulator Lite
QE for Capacitive Touch	V3.10
CTSU QE API (r_ctsu_qe) [QE CTSU module Firmware Integration Technology]	V2.10
Touch QE API (rm_touch_qe) [QE TOUCH module Firmware Integration Technology]	V2.10

3. Regarding the Demonstration

3.1 Demonstration Configuration

This demonstration consists of the RA2L1 CPU board mounted on the touchless button demonstration (model name: RTK0EG0036D01001BJ) replaced with the RX140 CPU board (model name: RTK0EG0038C01001BJ).

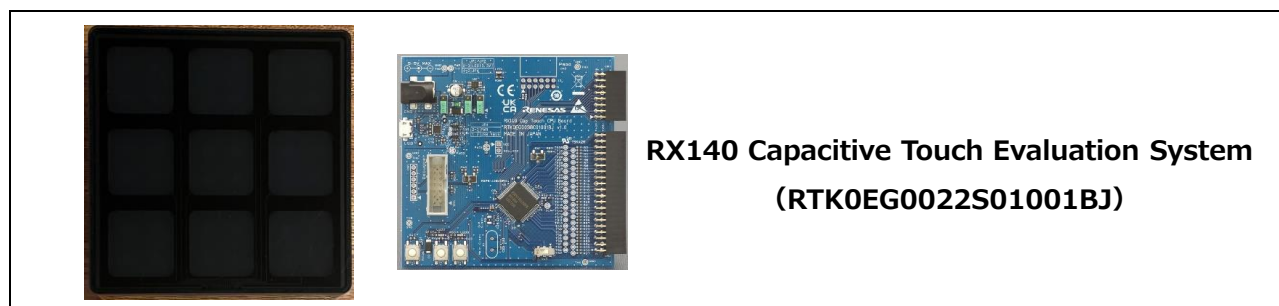


Figure 3.1 CPU board

3.2 operation procedures

The demonstration is started by supplying power to the USB connector in the blue boxed area in Figure 3.2.

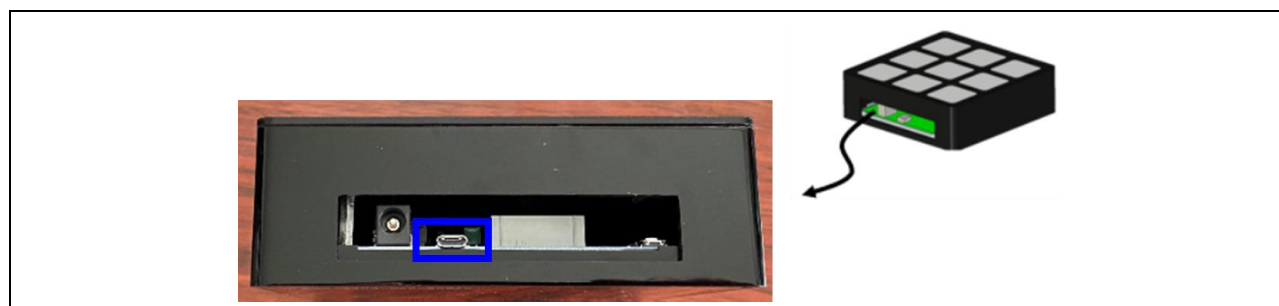


Figure 3.2 Power supply unit

4. Software Functions

The software operates as follows.

1. Low power consumption standby using automatic judgment function and multi-electrode connection function
2. Normal operation after waking up (LED lights up according to the touch operation)

4.1 Low Power Consumption Standby

Use the CTSU2SL module, the DTC module, the LPC module, the LPT module and the ELC module.

- Use the LPC to transition MCU(R5FA51406ADFN) to low power consumption mode.
- Set the measurement start trigger to the external trigger of the LPT compare match interrupt (event input from ELC), and measure CTSU2SL at 100 msec intervals during software standby mode.
- DTC is used for CTSU measurement operation in snooze mode.
- By using the automatic judgment function of CTSU2SL, if the touch ON judgment is not detected because of CTSU measurement during snooze mode, the software standby is entered again without starting the CPU.
- By using the multiple electrode connection function of CTSU2SL, 9ch can be measured at once to reduce power consumption.
- The following non-contact operation shifts the device from the low-power standby mode to the normal operation mode.
 - Finger close to one button: approx. 20 mm
 - 9 buttons palm: approx. 60 mm

Figure 4.1 shows an image of the CPU operating mode and CTSU operating status

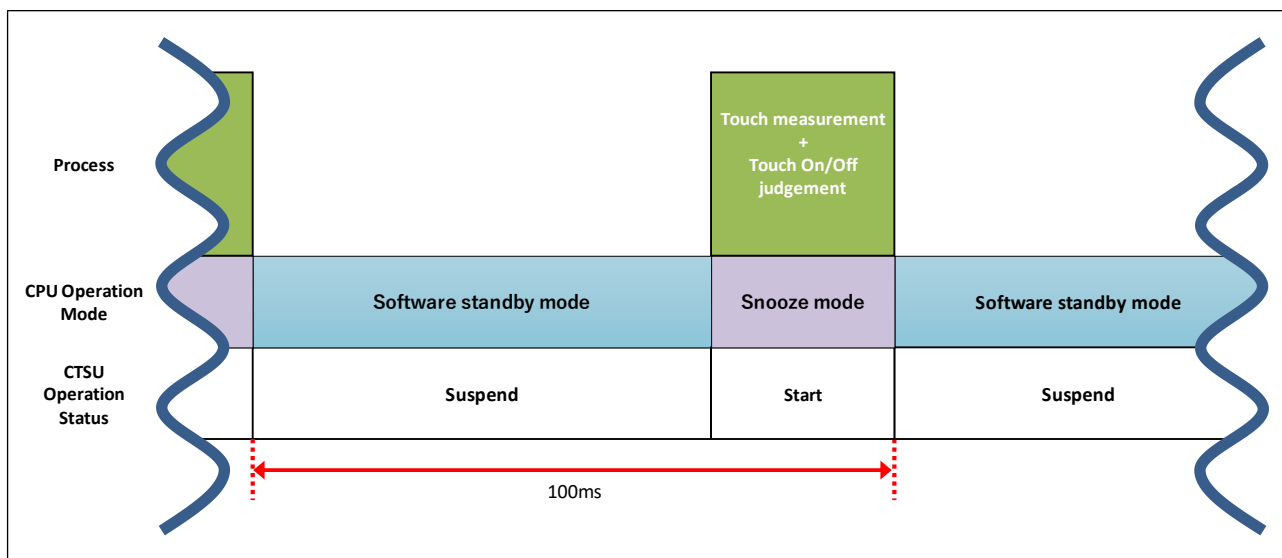


Figure 4.1 Image of CPU operating mode and CTSU operating status

4.2 Normal Operation After Waking up

The software uses the CTSU2SL module.

- LED lighting and buzzer sound are output by non-contact operation of approx. 15 mm for each button.
- The normal operation mode is shifted to the low-power-consumption standby mode after 15 seconds in the non-touch state or by recognizing two diagonal buttons simultaneously for 3 seconds as shown in Figure 4.2.

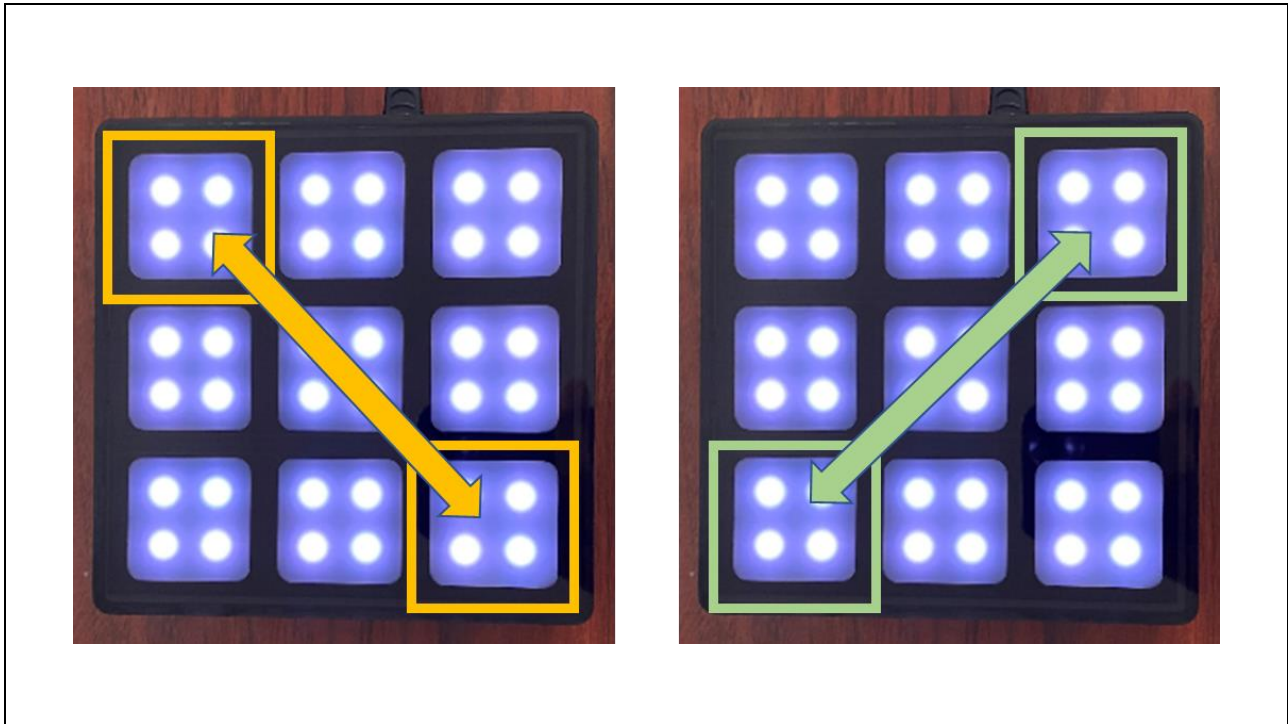


Figure 4.2 How to transition to low power consumption standby mode by operation

5. Software Specifications

5.1 Software Structure

Figure 5.1 shows the software structure diagram.

By using QE for Capacitive Touch and RX Smart Configurator, the following modules are added to create an application.

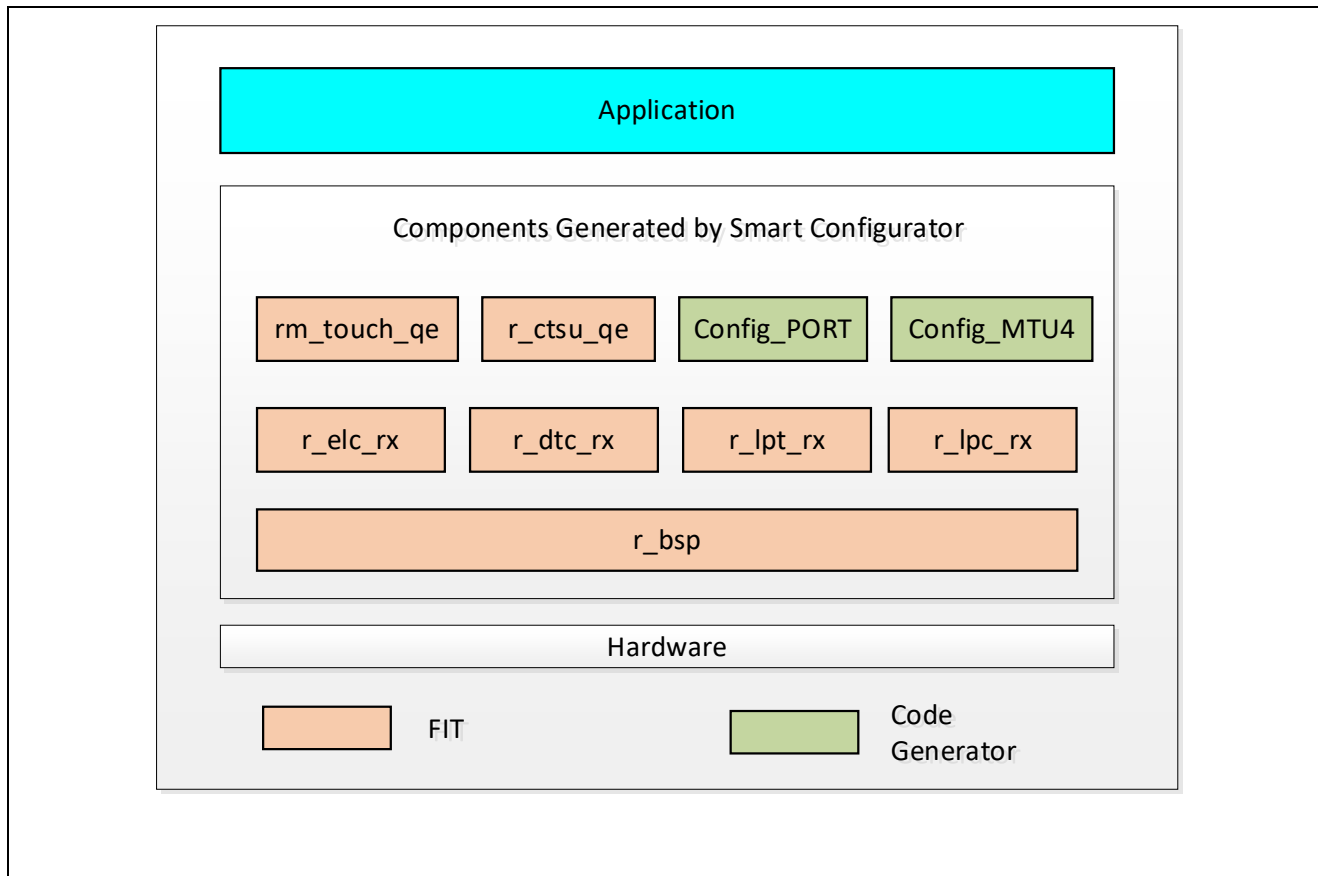


Figure 5.1 Software structure diagram

The component is shown in Table 5.1. See the Smart Configurator for component settings.

Table 5.1 Component

Component	Version
r_bsp	7.10
r_lpc_rx	2.03
r_ctsu_qe	2.10
r_dtc_rx	3.90
r_elc_rx	2.01
r_lpt_rx	3.01
rm_touch_qe	2.10
Config_PORT	2.3.0
Config_MTU4	1.11.0

5.2 File Structure

Figure 5.2 shows the source file tree. (Omit the smart configurator file.)

```

|— qe_gen
|   qe_touch_config.c . . . . . Touch QE Configuration definition source file
|   qe_touch_config.h . . . . . Touch QE Configuration definition header file
|   qe_touch_define.h . . . . . Touch QE Configuration definition header file
|   qe_touch_sample.c . . . . . Touch QE Application file
|— src
|   r_board_control.c . . . . . Board control source file
|   r_board_control.h . . . . . Board control header file
|   smart_wakeup_rx140_touchless.c . Main source file
|— QE-Touch
    smart_wakeup_rx140_touchless.tifcfg . Configuration file

```

Figure 5.2 Source file tree

Table 5.2 shows the source files.

Table 5.2 The source files

File name	Contents
smart_wakeup_rx140_touchless.c	Main source file
r_board_control.c	Board control source file
qe_touch_config.c	Touch QE Configuration definition header file
qe_touch_sample.c	Touch QE Application file

Table 5.3 shows the header files.

Table 5.3 The header files

File name	Contents
r_board_control.h	Board control header file
qe_touch_config.h	Touch QE Configuration definition header file
qe_touch_define.h	Touch QE Configuration definition header file

6. Capacitive Touch Setting

The Capacitive touch setting of this software is shown.

6.1 Touch Interface Configuration

Figure 6.1 shows the touch interface configuration.

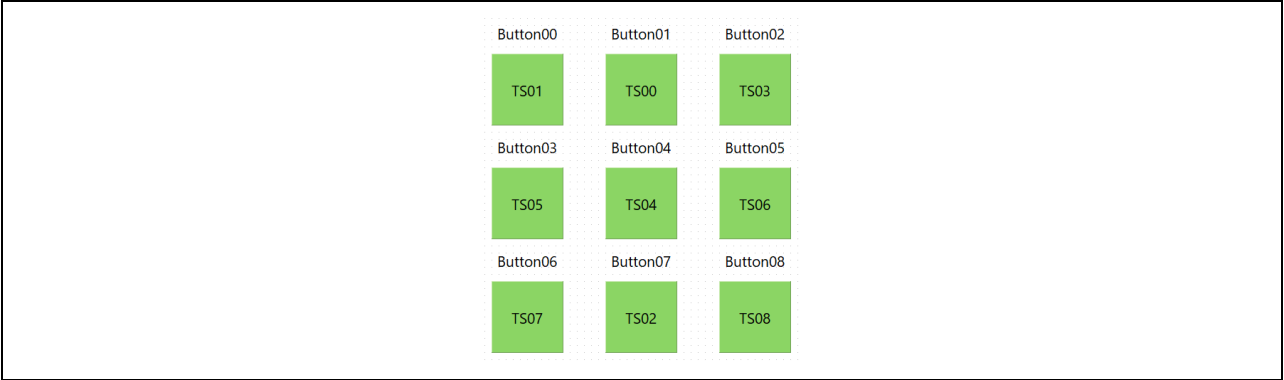


Figure 6.1 Touch interface configuration

6.2 Configuration (method) Setting

Figure 6.2 shows the touch interface settings.

Both config01 and config02 are set as all buttons. The automatic judgment function and multiple electrode connection are set to enable only for config01.

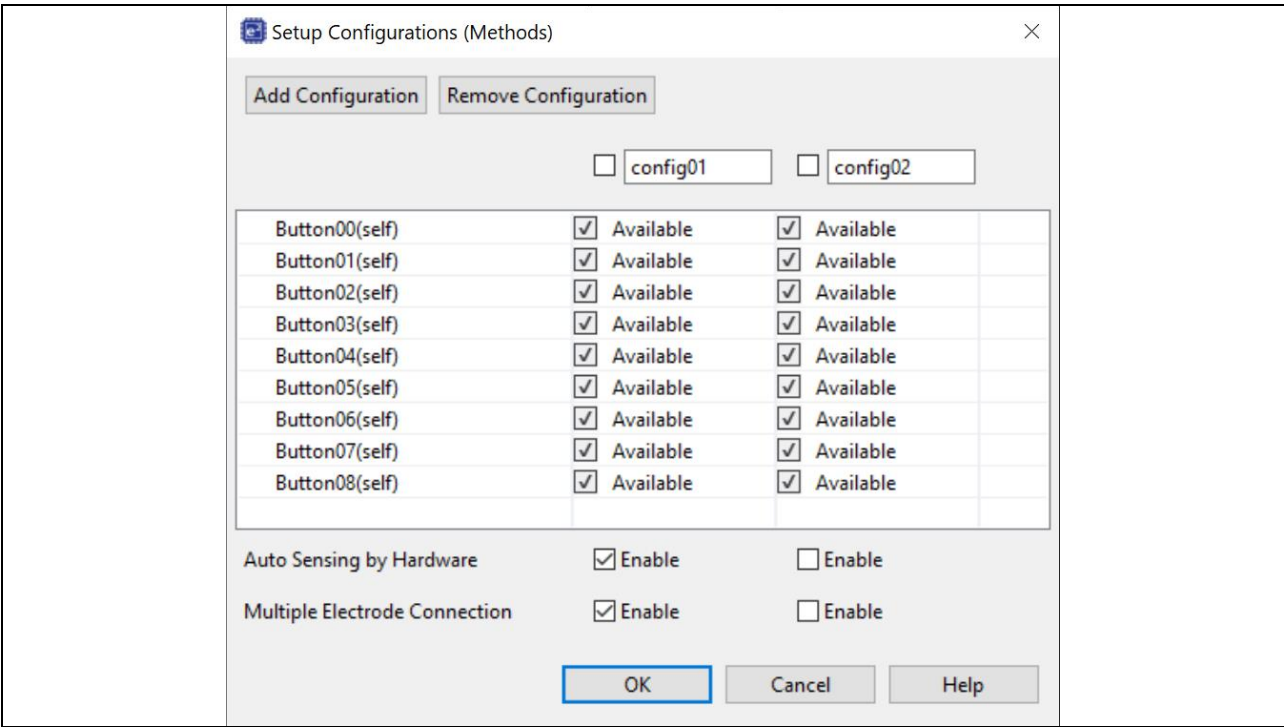


Figure 6.2 Touch Interface setting

6.3 Tuning Result

Table 6.1 shows the tuning result of QE. This software operates with the settings shown in Table 6.1.

Configuration	Name	Touch Sensor	Parasitic capacitance [pF]	Sensor drive pulse frequency [MHz]	Touch Threshold	Measurement time [ms]	so	snum	sdpa
config01	mec00	TS00	219.208	0.5	120	0.064	0x3BE	0x03	0x1F
config02	Button00	TS01	32.757	1	120	0.128	0x0C3	0x07	0x0F
config02	Button01	TS00	30.819	1	120	0.128	0x0B7	0x07	0x0F
config02	Button02	TS03	28.354	1	120	0.128	0x09F	0x07	0x0F
config02	Button03	TS05	32.576	1	120	0.128	0x0C7	0x07	0x0F
config02	Button04	TS04	29.708	1	120	0.128	0x0AC	0x07	0x0F
config02	Button05	TS06	29.347	1	120	0.128	0x0A7	0x07	0x0F
config02	Button06	TS07	30.965	1	120	0.128	0x0B6	0x07	0x0F
config02	Button07	TS02	27.889	1	120	0.128	0x09A	0x07	0x0F
config02	Button08	TS08	29.806	1	120	0.128	0x0AC	0x07	0x0F

so : Variables for sensor offset settings

snum : Variables for setting the measurement period

sdpa : Clock division setting variable

*1: The values in the result list depend on the operating environment at the time of QE tuning, so these values may change when QE tuning is performed again.

*2: The value of the yellow marker part was changed manually.

*3: Manually changed a part of the setting of "g_qe_ctsu_cfg_config01" in "qe_touch_config.c".

tlot = 2 → 1 / thot = 2 → 1 / ajbmat = 7 → 4

7. Power Consumption Measurement

7.1 Operating Conditions of Low Power Consumption Standby

Table 7.1 shows the operation condition of low power consumption standby.

Table 7.1 Operating conditions of low power consumption standby

Item	Description
Operating frequency	24MHz High-speed on-chip oscillator (HOCO) 32KHz Low-speed on-chip oscillator (LOCO)
System clock (ICLK)	6MHz
Peripheral module clock B (PCLKB)	6MHz
Peripheral module clock D (PCLKD)	6MHz
Capacitive Touch measurement cycle	100ms
Sensor drive pulse frequency	0.5MHz
CTSU Measurement Mode	Self-capacitance method (MD1 = 1)
CTSU Scan Mode	Multi-scan mode (MD0 = 0)
CTSU Measurement Operation Start Trigger Select	External trigger (CAP = 1)
CTSU Wait State Power-Saving Enable	Enable power-saving function during wait state (SNZ = 1)
CTSU Power Supply Operating Mode	Normal voltage operating mode (ATUNE0 = 0)
CTSU Current Range Adjustment	40μA (ATUNE1 = 1, ATUNE2 = 0)
CTSU Non-measurement Channel Output Select (POSEL)	GPIO LOW Output (POSEL = 0)
CTSU Sensor Drive Pulse Select (SDPSEL)	High resolution pulse mode (SDPSEL = 1)
CTSU Sensor Stabilization Wait Time Setting (SST)	64μs (Recommended value) (SST = 0x1F)
CTSU Multi-Clock	3 frequencies (MCA0, MCA1, MCA2: Available)
CTSU Measurement Count	64μs (SNUM= 3)

7.2 Current Consumption Measurement

For information on how to measure and calculate current consumption, refer to "6. Current Consumption Measurement" in "RX140 Group Smart Wakeup Solution (r11an0613ej0100)".

Revision History

Rev.	Date	Description	
		Page	Summary
1.00	Jul.29.22	-	First edition issued

General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

1. Precaution against Electrostatic Discharge (ESD)

A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity.

Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.

2. Processing at power-on

The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.

3. Input of signal during power-off state

Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.

4. Handling of unused pins

Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.

5. Clock signals

After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.

6. Voltage application waveform at input pin

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between V_{IL} (Max.) and V_{IH} (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between V_{IL} (Max.) and V_{IH} (Min.).

7. Prohibition of access to reserved addresses

Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not guaranteed.

8. Differences between products

Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.

7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
8. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
13. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
14. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,
Koto-ku, Tokyo 135-0061, Japan
www.renesas.com

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:
www.renesas.com/contact/.