Description

The 89TSF5xx is a complete switch fabric, consisting of two chips:

89TSF552 (queuing engine, 10 Gbps).

89TSF500 (crossbar and scheduler).

The 89TSF5xx switch fabric is a system of one or more queueing engines and one or more crossbar/schedulers. The main function of the 89TSF5xx is to route traffic from the source to the destination in a fair and efficient way. It can be configured in many ways that achieve fairness, balance loads, minimize traffic congestion, and protect against failure. These devices interconnect using sets of high-speed SerDes links. They are scalable, and bandwidth increases linearly when you add multiple 89TSF500s. A functional block diagram of the 89TSF500 is shown in Figure 1.

The 89TSF552 is the interface of a system port (usually equivalent to a line card[1]) to the 89TSF5xx switch fabric. The 89TSF500 is the "switch" of the 89TSF5xx switch fabric. Combined, they provide up to 10 Gbps switching bandwidth per system port and up to 32 system ports or 64 system subports[2] per system.

The 89TSF5xx switch fabric devices interconnect using high speed, serial links. The 89TSF5xx system can be implemented on a single shelf or on multiple shelves. Figure 2 is an example of a single-shelf system, while Figures 3 and 4 illustrate multiple-shelf systems.

The 89TSF5xx switch fabric has a modular and scalable architecture that gives system designers maximum flexibility and performance. This architecture allows a switch to be implemented either on a single shelf using an electrical backplane or on multiple shelves connected by optical transceivers, thus helping system vendors overcome physical space constraints.

The 89TSF500 consists of an integrated crossbar and a scheduler. It has a non-blocking architecture and supports up to 8 classes of service and spatial multicasting. It performs data switching and circuit switching concurrently, providing guaranteed bandwidth and fixed jitter for the circuit paths.

A single 89TSF500 has an aggregate bandwidth of 64 Gbps, full duplex, providing the benefits of high density, low cost, and low power. Multiple 89TSF500s can be combined to support system configurations up to 32 line cards at 10 Gbps, full duplex.

1. A 10 Gbps line card would have a single 89TSF552 and therefore that line card would be equivalent to a system port. However, a 20 Gbps line card would have two 89TSF552s and therefore that line card is equivalent to 2 system ports.

2. One 89TSF552 can support up to 4 system subports.

89TSF5xx Features

- **Up to 32 switch ports, with 24 Gbps available per switch port.**
- **Variable length CSIX payload (up to 132 bytes) that supports any type of traffic.**
- **Virtual output queues (VOQs) in the ingress direction that eliminate head-of-line blocking. The 256 unicast VOQs provide:**
  - *A maximum of 32 ports with 8 CoS, or*
  - *A maximum of 16 ports with 4 subports and 4 CoS.*
- **Spatial multicast support with up to 4K global multicast labels. Each multicast label can specify from 1 to 32 ports.**
- **Efficient backpressure mechanism that eliminates cell loss caused by congestion.**
- **In-service scalable architecture.**
- **"Stackable" architecture. Total aggregate bandwidth is linearly proportional to the number of 89TSF500s. Port rate is configurable up to OC-192.**
- **Always non-blocking architecture across destination, traffic type (cell, packet), and class of service (CoS).**
- **Supports up to 4 egress subports per switch port.**
- **Carrier class reliability features:**
  - *Flexible architecture that allows the 89TSF switch fabric to be employed in a single switch shelf or in multiple switch shelves.*
  - *Automatic link diagnostics that detect faulty link connections.*
  - *Both n+m (load-sharing mode) and 1:1 protection (active/standby mode) on serial links.*
  - *Patented error correction scheme to reduce the system bit error rate by 10^5.*
  - *Line cord redundancy via Redundant Destination Mapping (RDM) and Queue-Mapped Redundancy (QMR).*
  - *Dynamic 89TSF500 rerouting that avoids congested or faulty 89TSF500s.*
  - *Zero cell loss during controlled switchover to standby 89TSF500s.*
- **Advanced diagnostic features including multiple loopback paths.**
- **Unicast and multicast traffic with up to 8 classes of service.**
- **Industry-standard CSIX-over-LVDS interface.**
- **Backward compatibility with IDT's ZSF200 switch fabric.**

89TSF500 Features

- **32 embedded SerDes links per device at 2.5 Gbps per link.**
- **Linear scalability for higher aggregate port density.**
- **Combined unicast and multicast scheduling.**
- **Clock synchronization and cell alignment across the fabric.**
- **External processor interface for register config. and status.**

IDT and the IDT logo are trademarks of Integrated Device Technology, Inc.

© 2019 Renesas Electronics Corporation

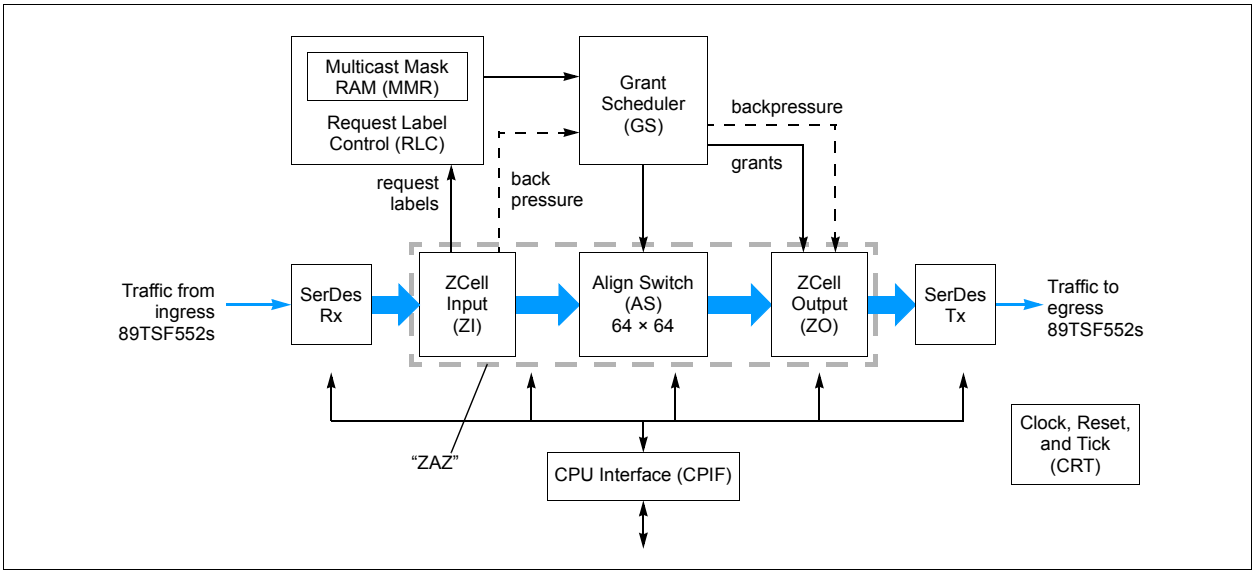

Figure 1 89TSF500 Functional Block Diagram

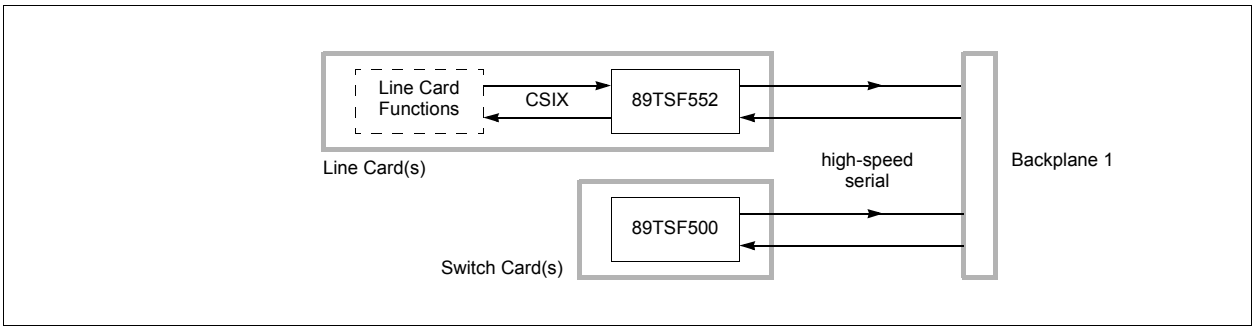

Figure 2 Single-Shelf System

© 2019 Renesas Electronics Corporation

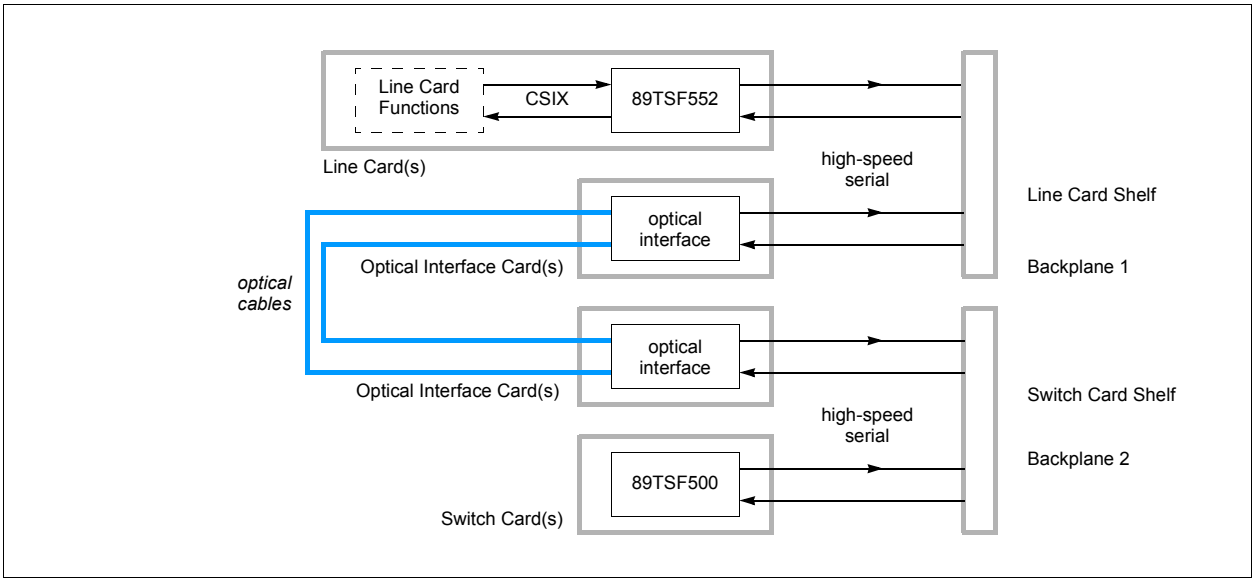

Figure 3 Multiple-Shelf System with Single Switch Shelf

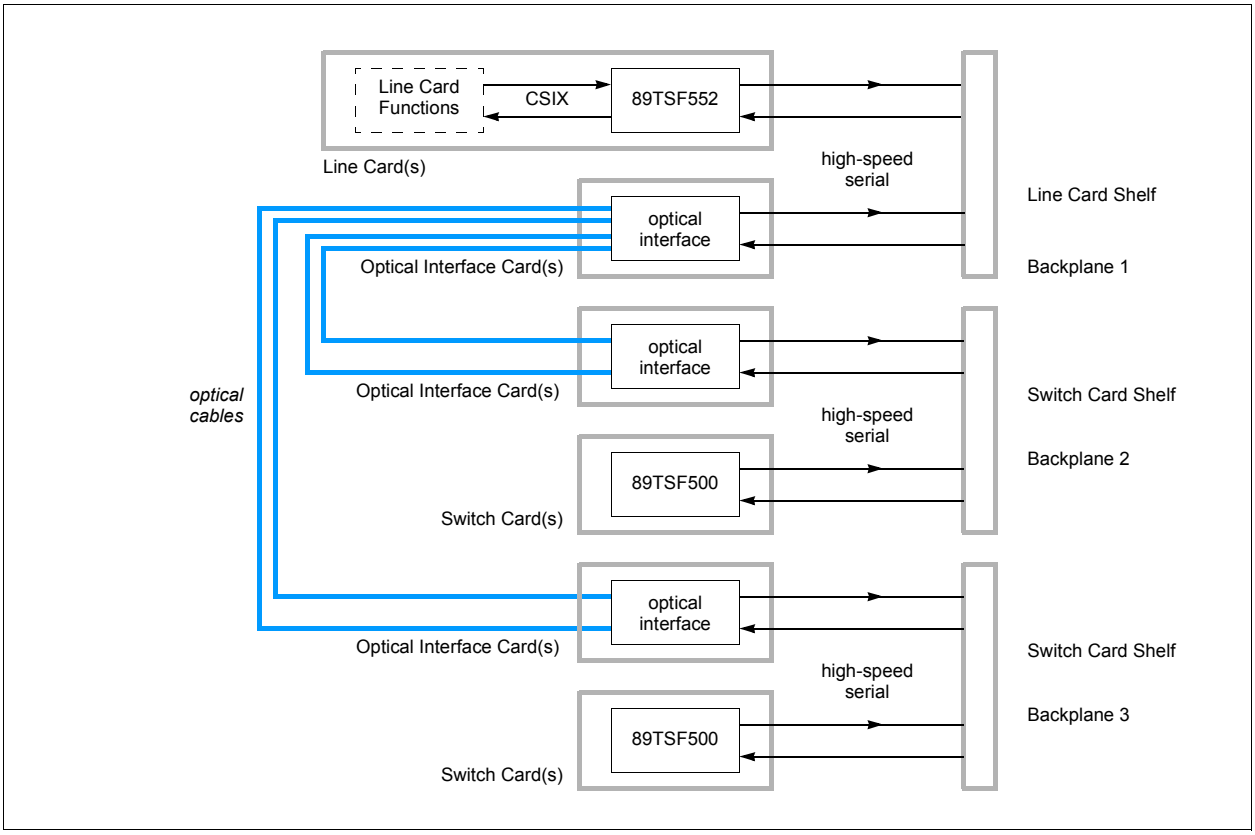

Figure 4 Multiple-Shelf System with Multiple Switch Shelves

© 2019 Renesas Electronics Corporation

89TTSF500 Pin Description

Note: Information in this section is subject to change. Contact your IDT FAE before making design decisions.

In this data sheet, direction is indicated as follows: I for In, O for Out, B for Bidirectional, and P for power.

Signal Name	I/O Type	Dir.	Freq.	Remarks
SYS_CLK (pin AA1)	3.3V LVTTL	I	125 MHz	N/A
PLL_CORE_LCK (pin AA3)	3.3V LVTTL	O	—	N/A
PLL_SYS_LCK (pin W3)	3.3V LVTTL	O	—	N/A
PLL_DIV_RST_N (pin U2)	3.3V LVTTL	I	—	33K Ω internal pullup
PLL_RST (pin AB3)	3.3V LVTTL	I	—	33K Ω internal pullup
PLL_CORE_VDDA (pin AB8)	1.8V AVDD	P	—	Supply
PLL_CORE_VSSA (pin AA8)	AVSS	P	—	Supply
PLL_CORE_VDD (pin AB6)	1.8V AVDD	P	—	Supply
PLL_CORE_VSS (pin AA6)	VSS	P	—	Supply
PLL_SYS_VDDA (pin V6)	3.3V AVDD	P	—	Supply
PLL_SYS_VSSA (pin W6)	AVSS	P	—	Supply
PLL_SYS_VDD (pin V8)	1.8V AVDD	P	—	Supply
PLL_SYS_VSS (pin W8)	VSS	P	—	Supply

Table 1 89TSF500 PLL Control and Power Pins

Signal Name	I/O Type	Dir.	Freq.	Remarks
SD[2:0]_REFCLKN (pins A24, Y39, AW25)	Serdes diff clock	I	250MHz	Reference clocks for both Rx and Tx. The reference clock (SD[n]_REFCLKN and SD[n]_REFCLKP) must be synchronous to twice the system clock (SYS_CLK) input. If an entire SerDes group is not used, the reference clock pins for that group should be pulled down to VSS using a 300Ω to 1kΩ resistor.
SD[2:0]_REFCLKP (pins A25, AA39, AW24)	Serdes diff clock	I	250MHz	
SD[2:0]_REF_RES (pins D25, AA36, AT24)	Serdes Bidi	O	—	Reference resistor pins used to generate bias currents for both Rx and Tx. To ensure proper biasing, connect each of these to VSS through a 3.09 kΩ 1% resistor. If an entire SerDes group is not used, the reference resistor pins for that group should be connected to VDD_SD (1.8V).
VDD_SD[2:0]_PLL (pins J23, Y31, AL23)	VAA18	P	—	SerDes common VDD = 1.8V. These are PLL analog power pins and must be well filtered.
VSS_SD[2:0]_PLL (pins K22, W30, AK24)	VSS	P	—	SerDes PLL ground
VDD_REFCLK[2:0] (pins J24, AA31, AL22)	VAA33	P	—	SerDes common VDD = 3.3V

Table 2 89TSF500 SerDes Pins (Part 1 of 2)

© 2019 Renesas Electronics Corporation

Signal Name	I/O Type	Dir.	Freq.	Remarks
RXN[31:0]	Serdes diff input	I	—	SerDes Rx pairs. Unused pins may be left unconnected.
RXP[31:0]	Serdes diff input	I	—	
TXN[31:0]	Serdes diff output	O	—	SerDes Tx pairs. Unused pins may be left unconnected.
TXP[31:0]	Serdes diff outpu	O	—	
VDD_SD	VAA18	P	—	SerDes VDD = 1.8V
VDD_TX	VAA25	P	—	SerDes Tx VDD (2.5V)

Table 2 89TSF500 SerDes Pins (Part 2 of 2)

Signal Name	Type	Dir.	Freq.	Remarks
ZBUS_AVALID_N (pin AT5)	3.3V LVTTL	I	33MHz	33K Ω internal pullup
ZBUS_CLK (pin AV3)	3.3V LVTTL	I	33MHz	N/A
ZBUS_AD[15:0]	3.3V LVTTL	B	33MHz	33K Ω internal pullup
ZBUS_DEVID[4:0]	3.3V LVTTL	I	—	33K Ω internal pullup
ZBUS_DVALID_N (pin AV10)	3.3V LVTTL	B	33MHz	33K Ω internal pullup
ZBUS_INT_N[2:0] (pins AW11, AU11, AW9)	3.3V LVTTL	O	—	33K Ω internal pullup
ZBUS_PRTY (pin AV9)	3.3V LVTTL	B	33MHz	33K Ω internal pullup

Table 3 89TSF500 ZBus Pins

Signal Name	I/O Type	Dir.	Freq.	Remarks
TCK (pin A11)	3.3V LVTTL	I	—	33K internal pullup
TDI (pin A10)	3.3V LVTTL	I	—	33K internal pullup
TDO (pin B11)	3.3V LVTTL	O	—	33K internal pullup
TMS (pin C11)	3.3V LVTTL	I	—	33K internal pullup
TRST_N (pin B10)	3.3V LVTTL	I	—	33K internal pullup

Table 4 89TSF500 Test and Debugging Pins

© 2019 Renesas Electronics Corporation

Signal Name	I/O Type	Dir.	Freq.	Remarks
ZTICK (pin V4)	3.3V LVTTL	I	—	External reference ZTick input to which the internal ZTick logic will synchronize. If ZTICK_MODE is 0, ZTICK can be left open.
ZTICK_MODE (pin V2)	3.3V LVTTL	I	—	External ZTick select. 1 = Device uses externally generated ZTicks 0 = Device uses internally generated ZTicks. Pin(s) must be stable at least 16 ns before the deassertion of the RESET_N input. Any change in pin(s) after 16 ns before the deassertion of the RESET_N input must be concurrent with, or followed by, an assertion of the RESET_N input.

Table 5 89TSF500 ZTick Management Pins

Signal Name	I/O Type	Dir.	Freq.	Remarks
RESET_N (pin AR3)	3.3V LVTTL	I	Async	100K internal pullup
CHN_DET_MODE (pin AU2)	3.3V LVTTL	I	N/A	33K pullup
VDD	VDD18	P	—	1.8V
VDD_IO	VDD33	P	—	3.3V
VSS	VSS	P	—	Ground

Table 6 89TSF500 Misc. Pins

89TSF500 Electrical Specifications

Some data are TBD and will be published as they become available.

The specifications are subject to change without notice.

89TSF500 Absolute Maximum Ratings

The absolute maximum ratings are the maximum conditions that the device can withstand without sustaining permanent damage. Exceeding any of these conditions could result in permanent damage to the device. Normal operation should not be expected at these conditions. In addition, exposure to absolute maximum rated conditions (or near absolute maximum rated conditions) for extended periods may affect device reliability.

Operation of the device is not guaranteed at the absolute maximum ratings, but rather at the operating conditions outlined in Table 8.

Symbol	Parameter	Min	Max	Units	Conditions
T_{JMAX}	Junction temperature under bias	—	105	°C	
$T_{STORAGE}$	Storage temperature	—	150	°C	
	Storage temperature range	–40	85	°C	Long term storage
T_{SOLDER}	Soldering temperature	—	215	°C	
T_{REWORK}	Rework temperature	—	204	°C	

Table 7 89TSF500 Absolute Maximum Ratings (Part 1 of 2)

© 2019 Renesas Electronics Corporation

Symbol	Parameter	Min	Max	Units	Conditions
T_{GP_SOLDER}	Soldering temperature for green package	—	245	°C	
T_{GP_REWORK}	Rework temperature for green package	—	245	°C	
V_{IO}	I/O terminal voltage	–0.6	VDD+0.6	V	longer than 1 ns
		–1.0	VDD+1.0	V	pulse ≤ 1 ns

Table 7 89TSF500 Absolute Maximum Ratings (Part 2 of 2)

89TSF500 Operating Ranges

Symbol	Parameter	Min	Typical	Max	Units	Conditions
T_J	Operating junction temperature range	0	—	85	°C	
V_{VDD}	Core digital 1.8V power supply	1.71	1.8	1.89	V	±5%
$V_{PLL_SYS_VDD}$, $V_{PLL_CORE_VDD}$	PLL digital 1.8V power supply	1.71	1.8	1.89	V	±5%
$V_{PLL_SYS_VDDA}$, $V_{PLL_CORE_VDDA}$	PLL analog 3.3V power supply	3.135	3.3	3.465	V	±5%
V_{VDD_IO}	LVTTL 3.3V I/O 3.3V power supply	3.135	3.3	3.465	V	±5%
V_{VDD_SD}	SerDes Core 1.8V power supply	1.71	1.8	1.89	V	±5%
$V_{VDD_SD_PLL}$	SerDes PLL 1.8V power supply	1.71	1.8	1.89	V	±5%
V_{VDD_TX}	SerDes transmit 2.5V power supply	2.375	2.5	2.625	V	±5%
V_{VDD_REFCLK}	SerDes reference clock 3.3V power supply	3.135	3.3	3.465	V	±5%
—	SerDes power supply voltage noise (all power supplies)	—	—	TBD	mV	Peak-to-peak (50 kHz to 100 MHz)
Power Dissipation		—	17.39	21.06	W	Max. values use the maximum voltages and current listed in this table and typical values use the typical voltages and current.

Table 8 89TSF500 Operating Ranges

89TSF500 DC Characteristics

Unless otherwise stated, the following parameters are provided given the conditions outlined in Table 8.

© 2019 Renesas Electronics Corporation

Symbol	Parameter	Min	Typical	Max	Units	Conditions
I_{VDD}	Input current for core digital 1.8V power supply	—	4250	4930	mA	"Typical" here means max. load, nominal voltage
$I_{PLL_SYS_VDD}$, $I_{PLL_CORE_VDD}$	Input current for PLL digital 1.8V power supply	—	1.7	1.9	mA	"Typical" here means max. load, nominal voltage
$I_{PLL_SYS_VDDA}$, $I_{PLL_CORE_VDDA}$	Input current for PLL analog 3.3V power supply	—	0.35	0.4	mA	"Typical" here means max. load, nominal voltage
I_{VDD_IO}	Input current for LVTTL 3.3V I/O power supply	—	160	187	mA	"Typical" here means max. load, nominal voltage
I_{VDD_SD}	Input current for SerDes core 1.8V power supply	—	3300	3764	mA	"Typical" here means max. load, nominal voltage
$I_{VDD_SD_PLL}$	Input current for SerDes PLL 1.8V power supply	—	210	270	mA	"Typical" here means max. load, nominal voltage
I_{VDD_TX}	Input current for SerDes transmitters 2.5V power supply	—	1150	1317	mA	"Typical" here means max. load, nominal voltage
I_{VDD_REFCLK}	Input current for SerDes reference clock buffer 3.3V power supply	—	3	3	mA	"Typical" here means max. load, nominal voltage
I_{IL33}	Input leakage low current for 3.3V I/O	–5	—	5	µA	
I_{IH33}	Input leakage high current for 3.3V I/O	–5	—	5	µA	
I_{IL33PU}	Input leakage low current for 3.3V I/O with internal pullup	–80	—	5	µA	
I_{IH33PU}	Input leakage high current for 3.3V I/O with internal pullup	–5	—	5	µA	
I_{IL33PD}	Input leakage low current for 3.3V I/O with internal pulldown	–5	—	5	µA	
I_{IH33PD}	Input leakage high current for 3.3V I/O with internal pulldown	+5	—	+200	µA	
V_{IL33}	Input low voltage for 3.3V I/O	–0.3	—	0.8	V	
V_{IH33}	Input high voltage for 3.3V I/O	2.0	—	$VDD_{LVTTL33}$+0.5	V	
V_{OL33}	Output low voltage for 3.3V I/O	—	—	0.5	V	I = 12 mA for 12 mA drivers and 16 mA for 16 mA drivers
V_{OH33}	Output high voltage for 3.3V I/O	2.4	—	—	V	I = –12 mA for 12 mA drivers and –16 mA for 16 mA drivers

Table 9 89TSF500 DC Characteristics

© 2019 Renesas Electronics Corporation

89TSF500 AC Characteristics

Unless otherwise stated, the following parameters are provided given the conditions outlined in Table 8.

Symbol	Parameter	Min	Typical	Max	Units
f_{SYS}	System clock frequency (125 MHz ±0.1 MHz)	124.9	125	125.1	MHz
T_{JSYS}	Jitter requirements (peak to peak) for system clock. Peak to peak jitter requirements apply to entire range of allowed system clock frequencies.	—	—	100	ps
D_{SYS}	Percentage duty cycle for system clock	45	50	55	%

Table 10 89TSF500 System Clock Timing

Symbol	Parameter	Min	Typical	Max	Units
f_{ZB}	ZBus clock frequency	30	f_{SYS} / 4	33.1	MHz
D_{ZB}	Percentage duty cycle for ZBus clock	45	50	55	%

Table 11 89TSF500 ZBus Clock Timing

Symbol	Parameter	Min	Typical	Max	Units
T_{KQVZB}	ZBus clock rising edge to output valid	—	—	13.0	ns
T_{KQXZB}	ZBus clock rising edge to output invalid	1.0	—		ns
T_{KQLZZB}	ZBus clock rising edge to output low Z	1.0	—	10.0	ns
T_{KQHZZB}	ZBus clock rising edge to output high Z	1.0	—	10.0	ns
T_{SZB}	Input setup time from ZBus clock rising edge	5.0	—	—	ns
T_{HZB}	Input hold time from ZBus clock rising edge	1.0	—	—	ns

Table 12 89TSF500 ZBus Interface Timing

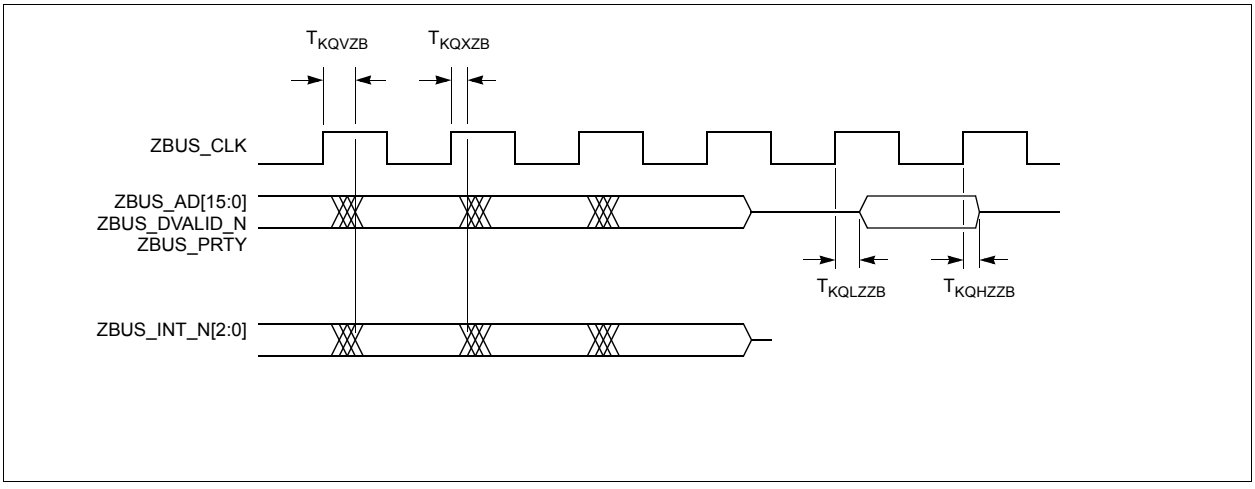

Figure 5 89TSF500 ZBus Interface Output Timing

© 2019 Renesas Electronics Corporation

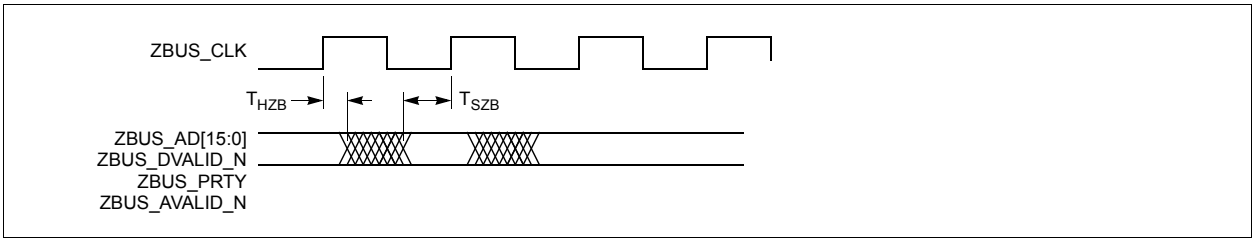

Figure 6 89TSF500 ZBus Interface Input Timing

Symbol	Parameter	Min	Typical	Max	Units
T_{SZT}	Input setup time from system clock (SYS_CLK pin) rising edge	3.0	—	—	ns
T_{HZT}	Input hold time from system clock rising edge	1.0	—	—	ns

Table 13 89TSF500 ZTick Interface Timing

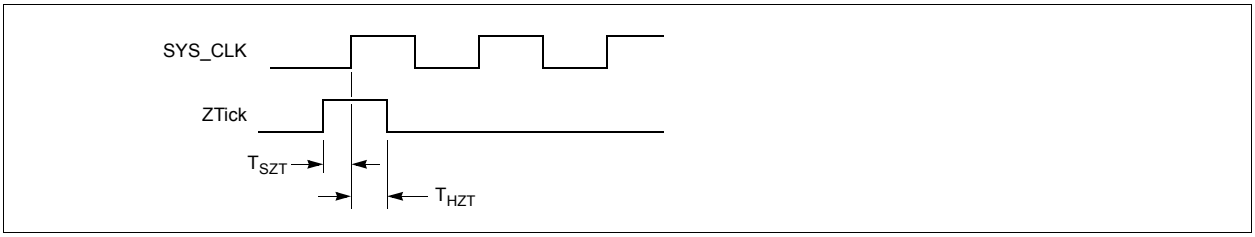

Figure 7 89TSF500 ZTick Interface Input Timing

Symbol	Parameter	Min	Typical	Max	Units	Conditions
	Common mode range	1.5	2	3	V	
V_{PP} (differential)	"Eye" opening	300	400	—	mV	Common mode should be VDD_REFCLK – 1/2 eye opening
f_{SDREF}	SerDes reference clock frequency	$2 \times f_{SYS}$			MHz	The expected frequency is 250 MHz (2 × 125 MHz)
D_{SDREF}	Percentage duty cycle for SerDes reference clock	40	—	60	%	
J_{SDREF}	Random jitter for SerDes reference clock	—	—	5	ps	RMS
fo_{SDREF}	Frequency offset between source and destination SerDes reference clocks	–100	—	+100	ppm	

Table 14 89TSF500 SerDes Reference Clock Characteristics

© 2019 Renesas Electronics Corporation

Symbol	Parameter	Min	Typical	Max	Units	Notes
J_{DR}	Deterministic Jitter at receiver	—	—	0.37	UI	
J_{TR}	Total jitter at receiver	—	—	0.52	UI	at 10^{-12} BER
Z_{RTERM}	Single-ended termination of differential inputs	45	—	55	Ohm	
V_{RSense}	Input sensitivity	200	—	—	mV	Differential peak-peak
V_{MAX}	Maximum input voltage	—	—	2000	mV	Differential peak-peak
T_{reye}	"Eye" opening	190	—	—	ps	
I_{roff}	Off current	-50	—	50	mA	Maximum current into a pin with power off
X_{tkr}	Crosstalk from adjacent RX link	—	—	-40	db	

Table 15 89TSF500 SerDes Interface Receiver Characteristics

Symbol	Parameter	Min	Typical[1]	Max	Units	Notes
V_{DIFF1}	Differential output (without pre-emphasis) (amplitude setting 1)	430	680	—	mV	Refer to Table 17.
V_{DIFF2}	Differential output (without pre-emphasis) (amplitude setting 2)	660	1100	—	mV	Refer to Table 18.
V_{DIFF3}	Differential output (without pre-emphasis) (amplitude setting 3)	700	1200	—	mV	Refer to Table 19.
t_{drf}	Driver rise/fall time					
	Amplitude Setting 1	—	—	240	ps	Measured at 20–80%
	Amplitude Setting 3	—	—	270	ps	Measured at 20–80%
Z_D	Differential output impedance	—	100	—	Ohm	100 MHz to 1.875 GHz
Z_{SE}	Single-ended output impedance	—	50	—	Ohm	100 MHz to 1.875 GHz
Z_{MSE}	Single-ended output impedance matching	3	—	8	%	100 MHz to 1.875 GHz
J_D	Deterministic jitter	—	—	0.14	UI	Without pre-emphasis
J_T	Total jitter	—	—	0.38	UI	At 10^{12} BER
X_{tkt}	Crosstalk from adjacent TX link	—	—	-40	db	
t_{skew}	Skew between P and N outputs of a given link	0	—	10	ps	

Table 16 89TSF500 SerDes Interface Transmitter Characteristics

1. The typical amplitude values are obtained when V_{DD_TX}=2.5V, and V_{DD_SD}=1.8V

© 2019 Renesas Electronics Corporation

Register Field Value[1]	Normalized Increase in Amplitude[2]	Deviation in Amplitude from Nominal (%)
0	0.00	0.0%
1	0.31	15.5%
2	0.46	23%
3	0.77	38.5%
4	0.61	30.5%
5	0.91	45.5%
6	1.05	52.5%
7	1.29	64.5%

Table 17 SERDES Tx Typical Pre-Emphasis Levels for Tx Amplitude Setting 1 (680mV typical)

1. Differential voltage values are configurable via settings in the SerDes Group Link Configuration Registers. Refer to the 89TSF5xx User Manual for additional information.

2. Amount “a” in Figure 8.

Register Field Value[1]	Normalized Increase in Amplitude[2]	Deviation in Amplitude from Nominal (%)
0	0.00	0.0%
1	0.17	8.5%
2	0.26	13%
3	0.44	22%
4	0.35	17.5%
5	0.52	26%
6	0.60	30%
7	0.73	36.5%

Table 18 SERDES Tx Typical Pre-Emphasis Levels for Tx Amplitude Setting 2 (1100mV typical)

1. Differential voltage values are configurable via settings in the SerDes Group Link Configuration Registers. Refer to the 89TSF5xx User Manual for additional information.

2. Amount “a” in Figure 8.

© 2019 Renesas Electronics Corporation

Register Field Value[1]	Normalized Increase in Amplitude[2]	Deviation in Amplitude from Nominal (%)
0	0.00	0.0%
1	0.16	8.0%
2	0.24	12%
3	0.40	20%
4	0.31	15.5%
5	0.47	23.5%
6	0.54	27%
7	0.65	32.5%

Table 19 SERDES Tx Typical Pre-Emphasis Levels for Tx Amplitude Setting 3 (1200mV typical)

1. Differential voltage values are configurable via settings in the SerDes Group Link Configuration Registers. Refer to the 89TSF5xx User Manual for additional information.

2. Amount "a" in Figure 8.

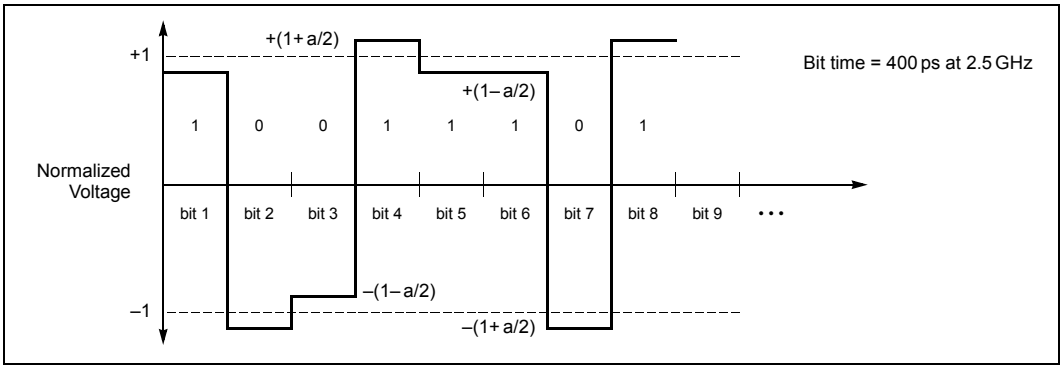

Figure 8 Output with Pre-Emphasis

89TSF500 AC Test Conditions

Input Rise/Fall Time	1 V / ns (20% / 80%)
Output timing measurement reference level (V_{REF}) for 3.3V interfaces.	1.65V
Output load	As shown in Figure 9

Table 20 89TSF500 AC Test Conditions

© 2019 Renesas Electronics Corporation

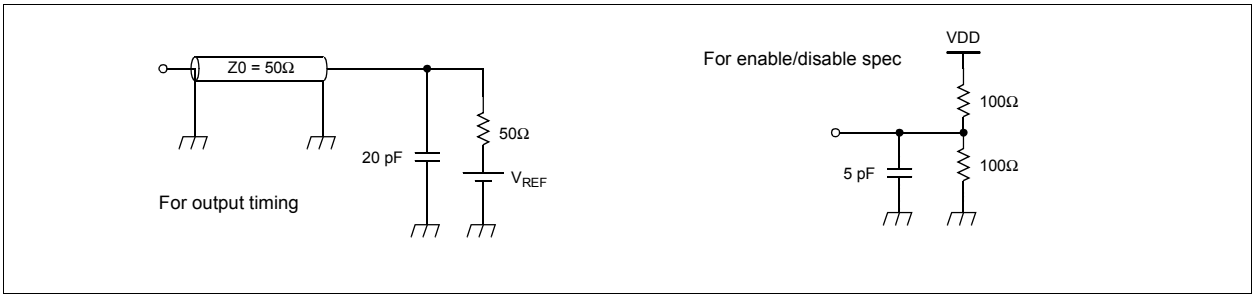

Figure 9 89TSF500 AC Test Load

89TSF500 Thermal Considerations

This section describes the temperature and heat sink calculations for flip-chip BGA devices.

Symbol	Parameter	Value	Units	Conditions
$Ø_{JA}$	Thermal resistance, junction to ambient (no heat sink)	9.0	°C / W	Still air
		5.5	°C / W	200 FPM
		4.5	°C / W	500 FPM
$Ø_{JB}$	Estimated thermal resistance, junction to board	2.2	°C / W	
$Ø_{JC}$	Thermal resistance, junction to case	0.19	°C / W	

Table 21 89TSF500 Thermal Characteristics

The thermal circuit is as shown below.

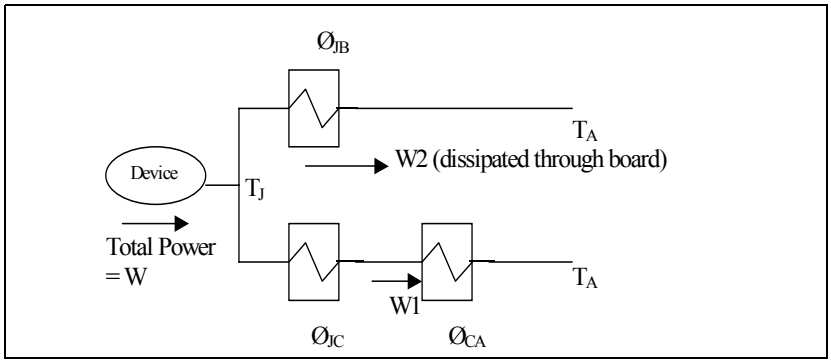

Figure 10 89TSF500 Thermal Circuit

For flip-chip BGA devices, there are two paths for heat dissipation: one through the package balls to the board and other through the package case to air. The device specifications provide $Ø_{JB}$ and $Ø_{JC}$ numbers. The $Ø_{CA}$ number comes from the heat sink manufacturer and depends on type of heat sink (area, height, fin type, etc.) and the airflow across the heat sink. The device specifications also provide the maximum operating junction temperature (T_J) that will not degrade the device reliability. The system designer should ensure that the device maximum junction temperature is not exceeded under any operating condition. One method of accomplishing this is to calculate the maximum ambient temperature (T_A) that can be tolerated based on the above device parameters. The formula is shown below.

$$T_A = T_J - W \times \frac{Ø_{JB} \times (Ø_{JC} + Ø_{CA})}{Ø_{JB} + Ø_{JC} + Ø_{CA}}$$

© 2019 Renesas Electronics Corporation

The following graph depicts the ambient temperature (T_A) versus $Ø_{CA}$.

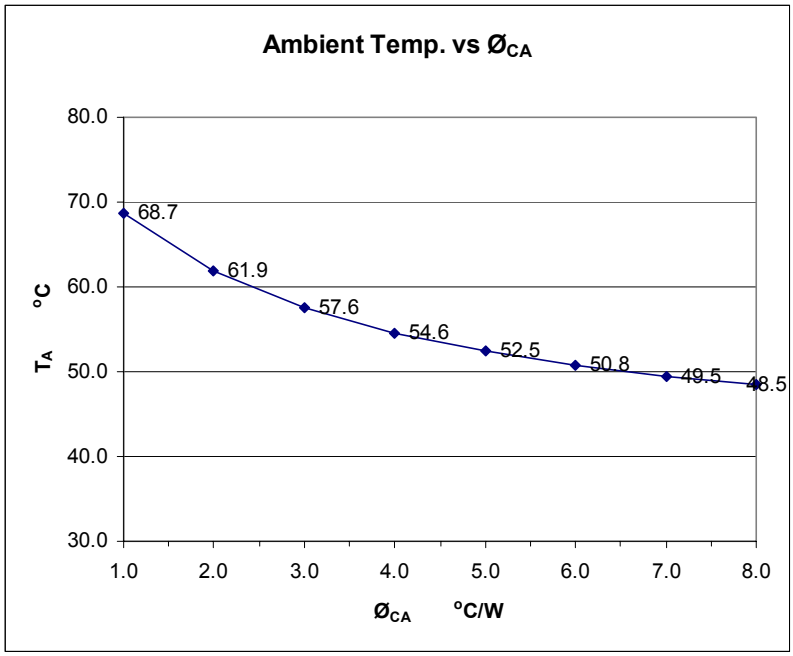

Figure 11 89TSF500 Ambient Temperature Curve

For system designers, specification of the maximum device junction temperature (operating) is critical, since it allows them to select a heat sink that meets the maximum ambient temperature requirements of their system.

The other parameter that is device package-specific is $Ø_{JA}$, without a heat sink, and is specified for various air-flow conditions. This is the intrinsic thermal resistance of the package (junction to case + case to ambient) and is mainly specified as a reference parameter. (This is when a heat sink is not present and the top surface of the package is essentially acting as the heat sink). However, in devices that have high power dissipation, heat sink usage is highly desirable. Consequently, system designers may have limited use for this parameter.

© 2019 Renesas Electronics Corporation

89TSF500 Power, Reset, and Initialization Sequencing Requirements

Power Supply Power-Up Sequence

There is a power supply power-up sequence requirement that addresses potential latchup issues with some I/O buffers. All 3.3V I/O power must ramp up before all other power supply pins:

- *3.3V I/O (VDD_IO, VDDP33, VDD_REFCLKn)*
- *All other power supply pins*

Further, IDT recommends that the designer use current limiting resistors on the bidirectional ZBus pins to limit potential high transient current from short-circuit current or bus contention during the power-up period. Such events can occur because of an unknown state of output enable of the bidirectional buffers. After core power ramps up (with RESET_N asserted), the bidirectional I/O lines enter normal operating mode.

Power Supply Power-Down Sequence

Because the power supply power-off state clears any latchup condition, the power-down sequence is not dictated by latchup. However, potential high transient current from short-circuit current or bus contention can also occur during the power-down period. We recommend appropriate sequencing. All 3.3V I/O power should ramp down before the 1.8V core (VDD) power:

- *3.3V I/O (VDD_IO)*
- *1.8V core (VDD)*

However, if appropriate current limiting techniques (e.g., series resistors) are employed and the 2.5V and 1.5V power supplies ramp down soon after the 1.8V core power supply (within about 50 ms), the system designer can safely ignore this recommendation.

PLL Power-Up Initialization

PLL inputs into the 89TSF500, from an external device such as the ZBus bridge in IDT's reference system, require a special initialization sequence. Figure 12 shows the initialization sequence.

PLL initialization is necessary only at power-up. If the PLLs fail to lock, repeatedly assert PLL_RST until they do.

> **Note:** The 89TSF500 must be reset *after* PLL initialization. Hold RESET_N low for at least 16 clocks (SYS_CLK) after PLL initialization completes.

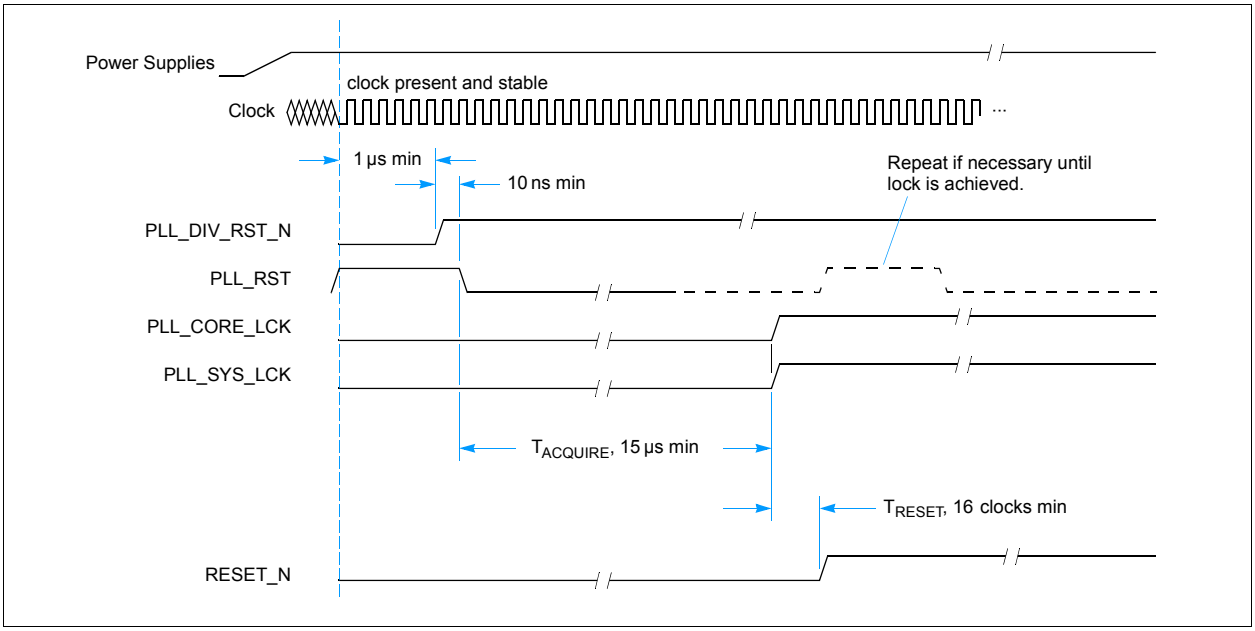

Figure 12 PLL Power-Up Initialization for the 89TSF500

© 2019 Renesas Electronics Corporation

Device Reset

It is possible to reset the entire 89TSF500 except for the PLL. To reset the device without being required to re-initialize the PLL, assert the RESET_N pin (low) for at least 16 clocks (SYS_CLK) and then deassert it.

Pin List I/O Description

The 89TSF500 Pin List on page 18 uses the following I/O notations:

I	Input
O	Output
B	Bidirectional
P	Power
DNC	Do not connect
RPD	Reserved, pulldwn. Pin **must** be connected to VSS through a 300 - 1K Ω resistor.
RPU	Reserved, pullup. Pin is connected to VDD_IO (3.3V) through a 1K - 10K Ω resistor.

© 2019 Renesas Electronics Corporation

89TSF500 Pin List

Pin	Signal	I/O	Type
A2	DNC	DNC	do not connect
A3	DNC	DNC	do not connect
A4	VDD_IO	P	VDD33
A5	DNC	DNC	do not connect
A6	VSS	P	VSS
A7	DNC	DNC	do not connect
A8	VDD_IO	P	VDD33
A9	DNC	DNC	do not connect
A10	TDI	I	3.3V LVTTL
A11	TCK	I	3.3V LVTTL
A12	VSS	P	VSS
A13	DNC	DNC	do not connect
A14	VSS	P	VSS
A15	RXN[31]	I	Serdes diff input
A16	RXP[31]	I	Serdes diff input
A17	RXN[30]	I	Serdes diff input
A18	RXP[30]	I	Serdes diff input
A19	RXN[29]	I	Serdes diff input
A20	RXP[29]	I	Serdes diff input
A21	RXN[28]	I	Serdes diff input
A22	RXP[28]	I	Serdes diff input
A23	VSS	P	VSS
A24	SD2_REFCLKN	I	Serdes diff clock
A25	SD2_REFCLKP	I	Serdes diff clock
A26	VSS	P	VSS
A27	RXN[27]	I	Serdes diff input
A28	RXP[27]	I	Serdes diff input
A29	RXN[26]	I	Serdes diff input
A30	RXP[26]	I	Serdes diff input
A31	RXN[25]	I	Serdes diff input
A32	RXP[25]	I	Serdes diff input
A33	RXN[24]	I	Serdes diff input
A34	RXP[24]	I	Serdes diff input
A35	VSS	P	VSS
A36	VSS	P	VSS
A37	VSS	P	VSS
A38	VSS	P	VSS
B1	VDD_IO	P	VDD33
B2	DNC	DNC	do not connect
B3	DNC	DNC	do not connect
B4	DNC	DNC	do not connect
B5	DNC	DNC	do not connect
B6	DNC	DNC	do not connect
B7	DNC	DNC	do not connect
B8	DNC	DNC	do not connect
B9	RPD	I	RPD
B10	TRST_N	I	3.3V LVTTL
B11	TDO	I	3.3V LVTTL
B12	VSS	P	VSS
B13	DNC	DNC	do not connect
B14	VSS	P	VSS
B15	VSS	P	VSS
B16	VSS	P	VSS
B17	VSS	P	VSS
B18	VSS	P	VSS
B19	VSS	P	VSS
B20	VSS	P	VSS
B21	VSS	P	VSS
B22	VSS	P	VSS
B23	VSS	P	VSS
B24	VSS	P	VSS
B25	VSS	P	VSS
B26	VSS	P	VSS
B27	VSS	P	VSS
B28	VSS	P	VSS
B29	VSS	P	VSS
B30	VSS	P	VSS
B31	VSS	P	VSS
B32	VSS	P	VSS
B33	VSS	P	VSS
B34	VSS	P	VSS
B35	VSS	P	VSS
B36	VSS	P	VSS
B37	VSS	P	VSS
B38	VSS	P	VSS
B39	VSS	P	VSS
C1	VSS	P	VSS
C2	DNC	DNC	do not connect
C3	DNC	DNC	do not connect
C4	DNC	DNC	do not connect
C5	DNC	DNC	do not connect
C6	DNC	DNC	do not connect
C7	DNC	DNC	do not connect
C8	DNC	DNC	do not connect
C9	DNC	DNC	do not connect

© 2019 Renesas Electronics Corporation

Pin	Signal	I/O	Type
C10	RPU	I	RPU
C11	TMS	I	3.3V LVTTL
C12	VSS	P	VSS
C13	DNC	DNC	do not connect
C14	VSS	P	VSS
C15	TXN[31]	O	Serdes diff output
C16	TXP[31]	O	Serdes diff output
C17	TXN[30]	O	Serdes diff output
C18	TXP[30]	O	Serdes diff output
C19	TXN[29]	O	Serdes diff output
C20	TXP[29]	O	Serdes diff output
C21	TXN[28]	O	Serdes diff output
C22	TXP[28]	O	Serdes diff output
C23	VSS	P	VSS
C24	DNC	DNC	do not connect
C25	RPD	I	RPD
C26	VSS	P	VSS
C27	TXN[27]	O	Serdes diff output
C28	TXP[27]	O	Serdes diff output
C29	TXN[26]	O	Serdes diff output
C30	TXP[26]	O	Serdes diff output
C31	TXN[25]	O	Serdes diff output
C32	TXP[25]	O	Serdes diff output
C33	TXN[24]	O	Serdes diff output
C34	TXP[24]	O	Serdes diff output
C35	VSS	P	VSS
C36	VSS	P	VSS
C37	TXN[23]	O	Serdes diff output
C38	VSS	P	VSS
C39	RXN[23]	I	Serdes diff input
D1	DNC	DNC	do not connect
D2	DNC	DNC	do not connect
D3	DNC	DNC	do not connect
D4	VSS	P	VSS
D5	DNC	DNC	do not connect
D6	VDD_IO	P	VDD33
D7	DNC	DNC	do not connect
D8	VSS	P	VSS
D9	DNC	DNC	do not connect
D10	RPU	I	RPU
D11	RPU	I	RPU
D12	VSS	P	VSS
D13	DNC	DNC	do not connect
D14	VSS	P	VSS
D15	VSS	P	VSS
D16	VSS	P	VSS
D17	VSS	P	VSS
D18	VSS	P	VSS
D19	VSS	P	VSS
D20	VSS	P	VSS
D21	VSS	P	VSS
D22	VSS	P	VSS
D23	VSS	P	VSS
D24	DNC	DNC	do not connect
D25	SD2_REF_RES	B	Serdes Bidi
D26	VSS	P	VSS
D27	VSS	P	VSS
D28	VSS	P	VSS
D29	VSS	P	VSS
D30	VSS	P	VSS
D31	VSS	P	VSS
D32	VSS	P	VSS
D33	VSS	P	VSS
D34	VSS	P	VSS
D35	VSS	P	VSS
D36	VSS	P	VSS
D37	TXP[23]	O	Serdes diff output
D38	VSS	P	VSS
D39	RXP[23]	I	Serdes diff input
E1	DNC	DNC	do not connect
E2	DNC	DNC	do not connect
E3	DNC	DNC	do not connect
E4	DNC	DNC	do not connect
E5	DNC	DNC	do not connect
E6	DNC	DNC	do not connect
E7	DNC	DNC	do not connect
E8	DNC	DNC	do not connect
E9	DNC	DNC	do not connect
E10	DNC	DNC	do not connect
E11	DNC	DNC	do not connect
E12	DNC	DNC	do not connect
E13	DNC	DNC	do not connect
E14	DNC	DNC	do not connect
E15	DNC	DNC	do not connect
E16	DNC	DNC	do not connect
E17	DNC	DNC	do not connect

© 2019 Renesas Electronics Corporation

Pin	Signal	I/O	Type
E18	DNC	DNC	do not connect
E19	DNC	DNC	do not connect
E20	DNC	DNC	do not connect
E21	DNC	DNC	do not connect
E22	DNC	DNC	do not connect
E23	DNC	DNC	do not connect
E24	DNC	DNC	do not connect
E25	VSS	P	VSS
E26	DNC	DNC	do not connect
E27	DNC	DNC	do not connect
E28	DNC	DNC	do not connect
E29	DNC	DNC	do not connect
E30	DNC	DNC	do not connect
E31	DNC	DNC	do not connect
E32	DNC	DNC	do not connect
E33	DNC	DNC	do not connect
E34	DNC	DNC	do not connect
E35	DNC	DNC	do not connect
E36	VSS	P	VSS
E37	TXN[22]	O	Serdes diff output
E38	VSS	P	VSS
E39	RXN[22]	I	Serdes diff input
F1	VSS	P	VSS
F2	DNC	DNC	do not connect
F3	DNC	DNC	do not connect
F4	VDD_IO	P	VDD33
F5	DNC	DNC	do not connect
F6	DNC	DNC	do not connect
F7	DNC	DNC	do not connect
F8	DNC	DNC	do not connect
F9	DNC	DNC	do not connect
F10	DNC	DNC	do not connect
F11	DNC	DNC	do not connect
F12	DNC	DNC	do not connect
F13	DNC	DNC	do not connect
F14	DNC	DNC	do not connect
F15	DNC	DNC	do not connect
F16	DNC	DNC	do not connect
F17	DNC	DNC	do not connect
F18	DNC	DNC	do not connect
F19	DNC	DNC	do not connect
F20	DNC	DNC	do not connect
F21	DNC	DNC	do not connect
F22	DNC	DNC	do not connect
F23	DNC	DNC	do not connect
F24	DNC	DNC	do not connect
F25	VSS	P	VSS
F26	DNC	DNC	do not connect
F27	DNC	DNC	do not connect
F28	DNC	DNC	do not connect
F29	DNC	DNC	do not connect
F30	DNC	DNC	do not connect
F31	DNC	DNC	do not connect
F32	DNC	DNC	do not connect
F33	DNC	DNC	do not connect
F34	DNC	DNC	do not connect
F35	DNC	DNC	do not connect
F36	VSS	P	VSS
F37	TXP[22]	O	Serdes diff output
F38	VSS	P	VSS
F39	RXP[22]	I	Serdes diff input
G1	DNC	DNC	do not connect
G2	DNC	DNC	do not connect
G3	DNC	DNC	do not connect
G4	DNC	DNC	do not connect
G5	DNC	DNC	do not connect
G6	DNC	DNC	do not connect
G7	DNC	DNC	do not connect
G8	DNC	DNC	do not connect
G9	DNC	DNC	do not connect
G10	DNC	DNC	do not connect
G11	DNC	DNC	do not connect
G12	DNC	DNC	do not connect
G13	DNC	DNC	do not connect
G14	DNC	DNC	do not connect
G15	DNC	DNC	do not connect
G16	DNC	DNC	do not connect
G17	DNC	DNC	do not connect
G18	DNC	DNC	do not connect
G19	DNC	DNC	do not connect
G20	DNC	DNC	do not connect
G21	DNC	DNC	do not connect
G22	DNC	DNC	do not connect
G23	DNC	DNC	do not connect
G24	DNC	DNC	do not connect
G25	DNC	DNC	do not connect

© 2019 Renesas Electronics Corporation

Pin	Signal	I/O	Type
G26	DNC	DNC	do not connect
G27	DNC	DNC	do not connect
G28	DNC	DNC	do not connect
G29	DNC	DNC	do not connect
G30	DNC	DNC	do not connect
G31	DNC	DNC	do not connect
G32	DNC	DNC	do not connect
G33	DNC	DNC	do not connect
G34	DNC	DNC	do not connect
G35	DNC	DNC	do not connect
G36	VSS	P	VSS
G37	TXN[21]	O	Serdes diff output
G38	VSS	P	VSS
G39	RXN[21]	I	Serdes diff input
H1	VDD_IO	P	VDD33
H2	DNC	DNC	do not connect
H3	DNC	DNC	do not connect
H4	VSS	P	VSS
H5	DNC	DNC	do not connect
H6	DNC	DNC	do not connect
H7	DNC	DNC	do not connect
H8	DNC	DNC	do not connect
H9	DNC	DNC	do not connect
H10	DNC	DNC	do not connect
H11	DNC	DNC	do not connect
H12	DNC	DNC	do not connect
H13	DNC	DNC	do not connect
H14	DNC	DNC	do not connect
H15	DNC	DNC	do not connect
H16	DNC	DNC	do not connect
H17	DNC	DNC	do not connect
H18	DNC	DNC	do not connect
H19	DNC	DNC	do not connect
H20	DNC	DNC	do not connect
H21	DNC	DNC	do not connect
H22	DNC	DNC	do not connect
H23	DNC	DNC	do not connect
H24	DNC	DNC	do not connect
H25	DNC	DNC	do not connect
H26	DNC	DNC	do not connect
H27	DNC	DNC	do not connect
H28	DNC	DNC	do not connect
H29	DNC	DNC	do not connect

Pin	Signal	I/O	Type
H30	DNC	DNC	do not connect
H31	DNC	DNC	do not connect
H32	DNC	DNC	do not connect
H33	DNC	DNC	do not connect
H34	DNC	DNC	do not connect
H35	DNC	DNC	do not connect
H36	VSS	P	VSS
H37	TXP[21]	O	Serdes diff output
H38	VSS	P	VSS
H39	RXP[21]	I	Serdes diff input
J1	DNC	DNC	do not connect
J2	DNC	DNC	do not connect
J3	DNC	DNC	do not connect
J4	DNC	DNC	do not connect
J5	DNC	DNC	do not connect
J6	DNC	DNC	do not connect
J7	DNC	DNC	do not connect
J8	DNC	DNC	do not connect
J9	DNC	DNC	do not connect
J10	DNC	DNC	do not connect
J11	DNC	DNC	do not connect
J12	DNC	DNC	do not connect
J13	DNC	DNC	do not connect
J14	DNC	DNC	do not connect
J15	DNC	DNC	do not connect
J16	DNC	DNC	do not connect
J17	DNC	DNC	do not connect
J18	DNC	DNC	do not connect
J19	DNC	DNC	do not connect
J20	DNC	DNC	do not connect
J21	DNC	DNC	do not connect
J22	DNC	DNC	do not connect
J23	VDD_SD2_PLL	P	VAA18
J24	VDD_REFCLK2	P	VAA33
J25	DNC	DNC	do not connect
J26	DNC	DNC	do not connect
J27	VSS	P	VSS
J28	DNC	DNC	do not connect
J29	DNC	DNC	do not connect
J30	DNC	DNC	do not connect
J31	DNC	DNC	do not connect
J32	DNC	DNC	do not connect
J33	DNC	DNC	do not connect

© 2019 Renesas Electronics Corporation

Pin	Signal	I/O	Type
J34	DNC	DNC	do not connect
J35	DNC	DNC	do not connect
J36	VSS	P	VSS
J37	TXN[20]	O	Serdes diff output
J38	VSS	P	VSS
J39	RXN[20]	I	Serdes diff input
K1	VSS	P	VSS
K2	DNC	DNC	do not connect
K3	DNC	DNC	do not connect
K4	VDD_IO	P	VDD33
K5	DNC	DNC	do not connect
K6	DNC	DNC	do not connect
K7	DNC	DNC	do not connect
K8	DNC	DNC	do not connect
K9	DNC	DNC	do not connect
K10	VSS	P	VSS
K11	VSS	P	VSS
K12	VSS	P	VSS
K13	VSS	P	VSS
K14	VSS	P	VSS
K15	VSS	P	VSS
K16	VSS	P	VSS
K17	VSS	P	VSS
K18	DNC	DNC	do not connect
K19	VSS	P	VSS
K20	VSS	P	VSS
K21	VSS	P	VSS
K22	VSS_SD2_PLL	P	VSS
K23	VSS	P	VSS
K24	VSS	P	VSS
K25	VSS	P	VSS
K26	VSS	P	VSS
K27	VSS	P	VSS
K28	VSS	P	VSS
K29	VSS	P	VSS
K30	VSS	P	VSS
K31	DNC	DNC	do not connect
K32	DNC	DNC	do not connect
K33	DNC	DNC	do not connect
K34	DNC	DNC	do not connect
K35	DNC	DNC	do not connect
K36	VSS	P	VSS
K37	TXP[20]	O	Serdes diff output
K38	VSS	P	VSS
K39	RXP[20]	I	Serdes diff input
L1	DNC	DNC	do not connect
L2	DNC	DNC	do not connect
L3	DNC	DNC	do not connect
L4	DNC	DNC	do not connect
L5	DNC	DNC	do not connect
L6	DNC	DNC	do not connect
L7	DNC	DNC	do not connect
L8	DNC	DNC	do not connect
L9	DNC	DNC	do not connect
L10	VSS	P	VSS
L11	VSS	P	VSS
L12	VSS	P	VSS
L13	VSS	P	VSS
L14	VSS	P	VSS
L15	VSS	P	VSS
L16	VSS	P	VSS
L17	VSS	P	VSS
L18	DNC	DNC	do not connect
L19	VSS	P	VSS
L20	VSS	P	VSS
L21	VSS	P	VSS
L22	VSS	P	VSS
L23	VSS	P	VSS
L24	VSS	P	VSS
L25	VSS	P	VSS
L26	VSS	P	VSS
L27	VSS	P	VSS
L28	VSS	P	VSS
L29	VSS	P	VSS
L30	VSS	P	VSS
L31	DNC	DNC	do not connect
L32	DNC	DNC	do not connect
L33	DNC	DNC	do not connect
L34	DNC	DNC	do not connect
L35	DNC	DNC	do not connect
L36	VSS	P	VSS
L37	TXN[19]	O	Serdes diff output
L38	VSS	P	VSS
L39	RXN[19]	I	Serdes diff input
M1	VDD_IO	P	VDD33
M2	DNC	DNC	do not connect

© 2019 Renesas Electronics Corporation

Pin	Signal	I/O	Type
M3	DNC	DNC	do not connect
M4	VSS	P	VSS
M5	DNC	DNC	do not connect
M6	DNC	DNC	do not connect
M7	DNC	DNC	do not connect
M8	DNC	DNC	do not connect
M9	DNC	DNC	do not connect
M10	VSS	P	VSS
M11	VSS	P	VSS
M12	VDD_IO	P	VDD33
M13	VDD_IO	P	VDD33
M14	VDD_IO	P	VDD33
M15	VDD_IO	P	VDD33
M16	VDD_IO	P	VDD33
M17	VDD_IO	P	VDD33
M18	DNC	DNC	do not connect
M19	VDD_TX	P	VAA25
M20	VDD_TX	P	VAA25
M21	VDD_TX	P	VAA25
M22	VDD_TX	P	VAA25
M23	VDD_TX	P	VAA25
M24	VDD_TX	P	VAA25
M25	VDD_TX	P	VAA25
M26	VDD_TX	P	VAA25
M27	VDD_TX	P	VAA25
M28	VDD_TX	P	VAA25
M29	VSS	P	VSS
M30	VSS	P	VSS
M31	DNC	DNC	do not connect
M32	DNC	DNC	do not connect
M33	DNC	DNC	do not connect
M34	DNC	DNC	do not connect
M35	DNC	DNC	do not connect
M36	VSS	P	VSS
M37	TXP[19]	O	Serdes diff output
M38	VSS	P	VSS
M39	RXP[19]	I	Serdes diff input
N1	DNC	DNC	do not connect
N2	DNC	DNC	do not connect
N3	DNC	DNC	do not connect
N4	DNC	DNC	do not connect
N5	DNC	DNC	do not connect
N6	DNC	DNC	do not connect

Pin	Signal	I/O	Type
N7	DNC	DNC	do not connect
N8	DNC	DNC	do not connect
N9	DNC	DNC	do not connect
N10	VSS	P	VSS
N11	VSS	P	VSS
N12	VDD_IO	P	VDD33
N13	VDD	P	VDD18
N14	VDD	P	VDD18
N15	VDD	P	VDD18
N16	VDD	P	VDD18
N17	VDD	P	VDD18
N18	DNC	DNC	do not connect
N19	VDD_SD	P	VAA18
N20	VDD_SD	P	VAA18
N21	VDD_SD	P	VAA18
N22	VDD_SD	P	VAA18
N23	VDD_SD	P	VAA18
N24	VDD_SD	P	VAA18
N25	VDD_SD	P	VAA18
N26	VDD_SD	P	VAA18
N27	VDD_SD	P	VAA18
N28	VDD_TX	P	VAA25
N29	VSS	P	VSS
N30	VSS	P	VSS
N31	DNC	DNC	do not connect
N32	DNC	DNC	do not connect
N33	DNC	DNC	do not connect
N34	DNC	DNC	do not connect
N35	DNC	DNC	do not connect
N36	VSS	P	VSS
N37	TXN[18]	O	Serdes diff output
N38	VSS	P	VSS
N39	RXN[18]	I	Serdes diff input
P1	VSS	P	VSS
P2	DNC	DNC	do not connect
P3	DNC	DNC	do not connect
P4	VDD_IO	P	VDD33
P5	RPD	I	RPD
P6	DNC	DNC	do not connect
P7	DNC	DNC	do not connect
P8	DNC	DNC	do not connect
P9	DNC	DNC	do not connect
P10	VSS	P	VSS

© 2019 Renesas Electronics Corporation

Pin	Signal	I/O	Type
P11	VSS	P	VSS
P12	VDD_IO	P	VDD33
P13	VDD	P	VDD18
P14	VSS	P	VSS
P15	VSS	P	VSS
P16	VSS	P	VSS
P17	VSS	P	VSS
P18	VSS	P	VSS
P19	VSS	P	VSS
P20	VSS	P	VSS
P21	VSS	P	VSS
P22	VSS	P	VSS
P23	VSS	P	VSS
P24	VSS	P	VSS
P25	VSS	P	VSS
P26	VSS	P	VSS
P27	VDD_SD	P	VAA18
P28	VDD_TX	P	VAA25
P29	VSS	P	VSS
P30	VSS	P	VSS
P31	DNC	DNC	do not connect
P32	DNC	DNC	do not connect
P33	DNC	DNC	do not connect
P34	DNC	DNC	do not connect
P35	DNC	DNC	do not connect
P36	VSS	P	VSS
P37	TXP[18]	O	Serdes diff output
P38	VSS	P	VSS
P39	RXP[18]	I	Serdes diff input
R1	DNC	DNC	do not connect
R2	DNC	DNC	do not connect
R3	DNC	DNC	do not connect
R4	DNC	DNC	do not connect
R5	DNC	DNC	do not connect
R6	DNC	DNC	do not connect
R7	DNC	DNC	do not connect
R8	DNC	DNC	do not connect
R9	DNC	DNC	do not connect
R10	VSS	P	VSS
R11	VSS	P	VSS
R12	VDD_IO	P	VDD33
R13	VDD	P	VDD18
R14	VSS	P	VSS

Pin	Signal	I/O	Type
R15	VSS	P	VSS
R16	VSS	P	VSS
R17	VSS	P	VSS
R18	VSS	P	VSS
R19	VSS	P	VSS
R20	VSS	P	VSS
R21	VSS	P	VSS
R22	VSS	P	VSS
R23	VSS	P	VSS
R24	VSS	P	VSS
R25	VSS	P	VSS
R26	VSS	P	VSS
R27	VDD_SD	P	VAA18
R28	VDD_TX	P	VAA25
R29	VSS	P	VSS
R30	VSS	P	VSS
R31	DNC	DNC	do not connect
R32	DNC	DNC	do not connect
R33	DNC	DNC	do not connect
R34	DNC	DNC	do not connect
R35	DNC	DNC	do not connect
R36	VSS	P	VSS
R37	TXN[17]	O	Serdes diff output
R38	VSS	P	VSS
R39	RXN[17]	I	Serdes diff input
T1	VDD_IO	P	VDD33
T2	DNC	DNC	do not connect
T3	DNC	DNC	do not connect
T4	VSS	P	VSS
T5	DNC	DNC	do not connect
T6	DNC	DNC	do not connect
T7	DNC	DNC	do not connect
T8	DNC	DNC	do not connect
T9	DNC	DNC	do not connect
T10	VSS	P	VSS
T11	VSS	P	VSS
T12	VDD_IO	P	VDD33
T13	VDD	P	VDD18
T14	VSS	P	VSS
T15	VSS	P	VSS
T16	VDD	P	VDD18
T17	VDD	P	VDD18
T18	VDD	P	VDD18

© 2019 Renesas Electronics Corporation

Pin	Signal	I/O	Type
T19	VDD	P	VDD18
T20	VDD	P	VDD18
T21	VDD	P	VDD18
T22	VDD	P	VDD18
T23	VDD	P	VDD18
T24	VDD	P	VDD18
T25	VSS	P	VSS
T26	VSS	P	VSS
T27	VDD_SD	P	VAA18
T28	VDD_TX	P	VAA25
T29	VSS	P	VSS
T30	VSS	P	VSS
T31	DNC	DNC	do not connect
T32	DNC	DNC	do not connect
T33	DNC	DNC	do not connect
T34	DNC	DNC	do not connect
T35	DNC	DNC	do not connect
T36	VSS	P	VSS
T37	TXP[17]	O	Serdes diff output
T38	VSS	P	VSS
T39	RXP[17]	I	Serdes diff input
U1	VSS	P	VSS
U2	PLL_DIV_RST_N	I	3.3V LVTTL
U3	DNC	DNC	do not connect
U4	DNC	DNC	do not connect
U5	DNC	DNC	do not connect
U6	DNC	DNC	do not connect
U7	DNC	DNC	do not connect
U8	DNC	DNC	do not connect
U9	DNC	DNC	do not connect
U10	VSS	P	VSS
U11	VSS	P	VSS
U12	VDD_IO	P	VDD33
U13	VDD	P	VDD18
U14	VSS	P	VSS
U15	VSS	P	VSS
U16	VDD	P	VDD18
U17	VSS	P	VSS
U18	VSS	P	VSS
U19	VSS	P	VSS
U20	VSS	P	VSS
U21	VSS	P	VSS
U22	VSS	P	VSS

Pin	Signal	I/O	Type
U23	VSS	P	VSS
U24	VDD	P	VDD18
U25	VSS	P	VSS
U26	VSS	P	VSS
U27	VDD_SD	P	VAA18
U28	VDD_TX	P	VAA25
U29	VSS	P	VSS
U30	VSS	P	VSS
U31	DNC	DNC	do not connect
U32	DNC	DNC	do not connect
U33	DNC	DNC	do not connect
U34	DNC	DNC	do not connect
U35	DNC	DNC	do not connect
U36	VSS	P	VSS
U37	TXN[16]	O	Serdes diff output
U38	VSS	P	VSS
U39	RXN[16]	I	Serdes diff input
V1	DNC	DNC	do not connect
V2	ZTICK_MODE	I	3.3V LVTTL
V3	RPU	I	RPU
V4	ZTICK	I	3.3V LVTTL
V5	DNC	DNC	do not connect
V6	PLL_SYS_VDDA	P	3.3V AVDD
V7	DNC	DNC	do not connect
V8	PLL_SYS_VDD	P	1.8V AVDD
V9	DNC	DNC	do not connect
V10	VSS	P	VSS
V11	VSS	P	VSS
V12	VDD_IO	P	VDD33
V13	VDD	P	VDD18
V14	VSS	P	VSS
V15	VSS	P	VSS
V16	VDD	P	VDD18
V17	VSS	P	VSS
V18	VSS	P	VSS
V19	VSS	P	VSS
V20	VSS	P	VSS
V21	VSS	P	VSS
V22	VSS	P	VSS
V23	VSS	P	VSS
V24	VDD	P	VDD18
V25	VSS	P	VSS
V26	VSS	P	VSS

© 2019 Renesas Electronics Corporation

Pin	Signal	I/O	Type
V27	VDD_SD	P	VAA18
V28	VDD_TX	P	VAA25
V29	VSS	P	VSS
V30	VSS	P	VSS
V31	DNC	DNC	do not connect
V32	DNC	DNC	do not connect
V33	DNC	DNC	do not connect
V34	DNC	DNC	do not connect
V35	DNC	DNC	do not connect
V36	VSS	P	VSS
V37	TXP[16]	O	Serdes diff output
V38	VSS	P	VSS
V39	RXP[16]	I	Serdes diff input
W1	DNC	DNC	do not connect
W2	RPU	I	RPU
W3	PLL_SYS_LCK	O	3.3V LVTTL
W4	VSS	P	VSS
W5	DNC	DNC	do not connect
W6	PLL_SYS_VSSA	P	AVSS
W7	DNC	DNC	do not connect
W8	PLL_SYS_VSS	P	VSS
W9	DNC	DNC	do not connect
W10	VSS	P	VSS
W11	VSS	P	VSS
W12	VDD_IO	P	VDD33
W13	VDD	P	VDD18
W14	VSS	P	VSS
W15	VSS	P	VSS
W16	VDD	P	VDD18
W17	VSS	P	VSS
W18	VSS	P	VSS
W19	VSS	P	VSS
W20	VDD	P	VDD18
W21	VDD	P	VDD18
W22	VSS	P	VSS
W23	VSS	P	VSS
W24	VDD	P	VDD18
W25	VSS	P	VSS
W26	VSS	P	VSS
W27	VDD_SD	P	VAA18
W28	VDD_TX	P	VAA25
W29	VSS	P	VSS
W30	VSS_SD1_PLL	P	VSS
W31	DNC	DNC	do not connect
W32	DNC	DNC	do not connect
W33	DNC	DNC	do not connect
W34	DNC	DNC	do not connect
W35	DNC	DNC	do not connect
W36	VSS	P	VSS
W37	VSS	P	VSS
W38	VSS	P	VSS
W39	VSS	P	VSS
Y1	VSS	P	VSS
Y2	VSS	P	VSS
Y3	VSS	P	VSS
Y4	VSS	P	VSS
Y5	DNC	DNC	do not connect
Y6	DNC	DNC	do not connect
Y7	DNC	DNC	do not connect
Y8	DNC	DNC	do not connect
Y9	DNC	DNC	do not connect
Y10	VSS	P	VSS
Y11	VSS	P	VSS
Y12	VDD_IO	P	VDD33
Y13	VDD	P	VDD18
Y14	VSS	P	VSS
Y15	VSS	P	VSS
Y16	VDD	P	VDD18
Y17	VSS	P	VSS
Y18	VSS	P	VSS
Y19	VSS	P	VSS
Y20	VDD	P	VDD18
Y21	VDD	P	VDD18
Y22	VSS	P	VSS
Y23	VSS	P	VSS
Y24	VDD	P	VDD18
Y25	VSS	P	VSS
Y26	VSS	P	VSS
Y27	VDD_SD	P	VAA18
Y28	VDD_TX	P	VAA25
Y29	VSS	P	VSS
Y30	VSS	P	VSS
Y31	VDD_SD1_PLL	P	VAA18
Y32	DNC	DNC	do not connect
Y33	DNC	DNC	do not connect
Y34	DNC	DNC	do not connect

© 2019 Renesas Electronics Corporation

Pin	Signal	I/O	Type
Y35	DNC	DNC	do not connect
Y36	DNC	DNC	do not connect
Y37	DNC	DNC	do not connect
Y38	VSS	P	VSS
Y39	SD1_REFCLKN	I	Serdes diff clock
AA1	SYS_CLK	I	3.3V LVTTL
AA2	VSS	P	VSS
AA3	PLL_CORE_LCK	O	3.3V LVTTL
AA4	RPU	I	RPU
AA5	DNC	DNC	do not connect
AA6	PLL_CORE_VSS	P	VSS
AA7	DNC	DNC	do not connect
AA8	PLL_CORE_VSSA	P	AVSS
AA9	DNC	DNC	do not connect
AA10	VSS	P	VSS
AA11	VSS	P	VSS
AA12	VDD_IO	P	VDD33
AA13	VDD	P	VDD18
AA14	VSS	P	VSS
AA15	VSS	P	VSS
AA16	VDD	P	VDD18
AA17	VSS	P	VSS
AA18	VSS	P	VSS
AA19	VSS	P	VSS
AA20	VDD	P	VDD18
AA21	VDD	P	VDD18
AA22	VSS	P	VSS
AA23	VSS	P	VSS
AA24	VDD	P	VDD18
AA25	VSS	P	VSS
AA26	VSS	P	VSS
AA27	VDD_SD	P	VAA18
AA28	VDD_TX	P	VAA25
AA29	VSS	P	VSS
AA30	VSS	P	VSS
AA31	VDD_REFCLK1	P	VAA33
AA32	DNC	DNC	do not connect
AA33	VSS	P	VSS
AA34	VSS	P	VSS
AA35	VSS	P	VSS
AA36	SD1_REF_RES	B	Serdes Bidi
AA37	RPD	I	RPD
AA38	VSS	P	VSS
AA39	SD1_REFCLKP	I	Serdes diff clock
AB1	VSS	P	VSS
AB2	VSS	P	VSS
AB3	PLL_RST	I	3.3V LVTTL
AB4	RPD	I	RPD
AB5	DNC	DNC	do not connect
AB6	PLL_CORE_VDD	P	1.8V AVDD
AB7	DNC	DNC	do not connect
AB8	PLL_CORE_VDDA	P	3.3V AVDD
AB9	DNC	DNC	do not connect
AB10	VSS	P	VSS
AB11	VSS	P	VSS
AB12	VDD_IO	P	VDD33
AB13	VDD	P	VDD18
AB14	VSS	P	VSS
AB15	VSS	P	VSS
AB16	VDD	P	VDD18
AB17	VSS	P	VSS
AB18	VSS	P	VSS
AB19	VSS	P	VSS
AB20	VSS	P	VSS
AB21	VSS	P	VSS
AB22	VSS	P	VSS
AB23	VSS	P	VSS
AB24	VDD	P	VDD18
AB25	VSS	P	VSS
AB26	VSS	P	VSS
AB27	VDD_SD	P	VAA18
AB28	VDD_TX	P	VAA25
AB29	VSS	P	VSS
AB30	VSS	P	VSS
AB31	DNC	DNC	do not connect
AB32	DNC	DNC	do not connect
AB33	DNC	DNC	do not connect
AB34	DNC	DNC	do not connect
AB35	DNC	DNC	do not connect
AB36	VSS	P	VSS
AB37	VSS	P	VSS
AB38	VSS	P	VSS
AB39	VSS	P	VSS
AC1	DNC	DNC	do not connect
AC2	RPD	I	RPD
AC3	RPD	I	RPD

© 2019 Renesas Electronics Corporation

Pin	Signal	I/O	Type
AC4	RPD	I	RPD
AC5	DNC	DNC	do not connect
AC6	DNC	DNC	do not connect
AC7	DNC	DNC	do not connect
AC8	DNC	DNC	do not connect
AC9	DNC	DNC	do not connect
AC10	VSS	P	VSS
AC11	VSS	P	VSS
AC12	VDD_IO	P	VDD33
AC13	VDD	P	VDD18
AC14	VSS	P	VSS
AC15	VSS	P	VSS
AC16	VDD	P	VDD18
AC17	VSS	P	VSS
AC18	VSS	P	VSS
AC19	VSS	P	VSS
AC20	VSS	P	VSS
AC21	VSS	P	VSS
AC22	VSS	P	VSS
AC23	VSS	P	VSS
AC24	VDD	P	VDD18
AC25	VSS	P	VSS
AC26	VSS	P	VSS
AC27	VDD_SD	P	VAA18
AC28	VDD_TX	P	VAA25
AC29	VSS	P	VSS
AC30	VSS	P	VSS
AC31	DNC	DNC	do not connect
AC32	DNC	DNC	do not connect
AC33	DNC	DNC	do not connect
AC34	DNC	DNC	do not connect
AC35	DNC	DNC	do not connect
AC36	VSS	P	VSS
AC37	TXN[15]	O	Serdes diff output
AC38	VSS	P	VSS
AC39	RXN[15]	I	Serdes diff input
AD1	VDD_IO	P	VDD33
AD2	DNC	DNC	do not connect
AD3	DNC	DNC	do not connect
AD4	DNC	DNC	do not connect
AD5	DNC	DNC	do not connect
AD6	DNC	DNC	do not connect
AD7	DNC	DNC	do not connect

Pin	Signal	I/O	Type
AD8	DNC	DNC	do not connect
AD9	DNC	DNC	do not connect
AD10	VSS	P	VSS
AD11	VSS	P	VSS
AD12	VDD_IO	P	VDD33
AD13	VDD	P	VDD18
AD14	VSS	P	VSS
AD15	VSS	P	VSS
AD16	VDD	P	VDD18
AD17	VDD	P	VDD18
AD18	VDD	P	VDD18
AD19	VDD	P	VDD18
AD20	VDD	P	VDD18
AD21	VDD	P	VDD18
AD22	VDD	P	VDD18
AD23	VDD	P	VDD18
AD24	VDD	P	VDD18
AD25	VSS	P	VSS
AD26	VSS	P	VSS
AD27	VDD_SD	P	VAA18
AD28	VDD_TX	P	VAA25
AD29	VSS	P	VSS
AD30	VSS	P	VSS
AD31	DNC	DNC	do not connect
AD32	DNC	DNC	do not connect
AD33	DNC	DNC	do not connect
AD34	DNC	DNC	do not connect
AD35	DNC	DNC	do not connect
AD36	VSS	P	VSS
AD37	TXP[15]	O	Serdes diff output
AD38	VSS	P	VSS
AD39	RXP[15]	I	Serdes diff input
AE1	DNC	DNC	do not connect
AE2	DNC	DNC	do not connect
AE3	DNC	DNC	do not connect
AE4	DNC	DNC	do not connect
AE5	DNC	DNC	do not connect
AE6	DNC	DNC	do not connect
AE7	DNC	DNC	do not connect
AE8	DNC	DNC	do not connect
AE9	DNC	DNC	do not connect
AE10	VSS	P	VSS
AE11	VSS	P	VSS

© 2019 Renesas Electronics Corporation

Pin	Signal	I/O	Type
AE12	VDD_IO	P	VDD33
AE13	VDD	P	VDD18
AE14	VSS	P	VSS
AE15	VSS	P	VSS
AE16	VSS	P	VSS
AE17	VSS	P	VSS
AE18	VSS	P	VSS
AE19	VSS	P	VSS
AE20	VSS	P	VSS
AE21	VSS	P	VSS
AE22	VSS	P	VSS
AE23	VSS	P	VSS
AE24	VSS	P	VSS
AE25	VSS	P	VSS
AE26	VSS	P	VSS
AE27	VDD_SD	P	VAA18
AE28	VDD_TX	P	VAA25
AE29	VSS	P	VSS
AE30	VSS	P	VSS
AE31	DNC	DNC	do not connect
AE32	DNC	DNC	do not connect
AE33	DNC	DNC	do not connect
AE34	DNC	DNC	do not connect
AE35	DNC	DNC	do not connect
AE36	VSS	P	VSS
AE37	TXN[14]	O	Serdes diff output
AE38	VSS	P	VSS
AE39	RXN[14]	I	Serdes diff input
AF1	VSS	P	VSS
AF2	DNC	DNC	do not connect
AF3	DNC	DNC	do not connect
AF4	VDD_IO	P	VDD33
AF5	DNC	DNC	do not connect
AF6	DNC	DNC	do not connect
AF7	DNC	DNC	do not connect
AF8	DNC	DNC	do not connect
AF9	DNC	DNC	do not connect
AF10	VSS	P	VSS
AF11	VSS	P	VSS
AF12	VDD_IO	P	VDD33
AF13	VDD	P	VDD18
AF14	VSS	P	VSS
AF15	VSS	P	VSS

Pin	Signal	I/O	Type
AF16	VSS	P	VSS
AF17	VSS	P	VSS
AF18	VSS	P	VSS
AF19	VSS	P	VSS
AF20	VSS	P	VSS
AF21	VSS	P	VSS
AF22	VSS	P	VSS
AF23	VSS	P	VSS
AF24	VSS	P	VSS
AF25	VSS	P	VSS
AF26	VSS	P	VSS
AF27	VDD_SD	P	VAA18
AF28	VDD_TX	P	VAA25
AF29	VSS	P	VSS
AF30	VSS	P	VSS
AF31	DNC	DNC	do not connect
AF32	DNC	DNC	do not connect
AF33	DNC	DNC	do not connect
AF34	DNC	DNC	do not connect
AF35	DNC	DNC	do not connect
AF36	VSS	P	VSS
AF37	TXP[14]	O	Serdes diff output
AF38	VSS	P	VSS
AF39	RXP[14]	I	Serdes diff input
AG1	DNC	DNC	do not connect
AG2	DNC	DNC	do not connect
AG3	DNC	DNC	do not connect
AG4	DNC	DNC	do not connect
AG5	DNC	DNC	do not connect
AG6	DNC	DNC	do not connect
AG7	DNC	DNC	do not connect
AG8	DNC	DNC	do not connect
AG9	DNC	DNC	do not connect
AG10	VSS	P	VSS
AG11	VSS	P	VSS
AG12	VDD_IO	P	VDD33
AG13	VDD	P	VDD18
AG14	VDD	P	VDD18
AG15	VDD	P	VDD18
AG16	VDD	P	VDD18
AG17	VDD	P	VDD18
AG18	DNC	DNC	do not connect
AG19	VDD_SD	P	VAA18

© 2019 Renesas Electronics Corporation

Pin	Signal	I/O	Type
AG20	VDD_SD	P	VAA18
AG21	VDD_SD	P	VAA18
AG22	VDD_SD	P	VAA18
AG23	VDD_SD	P	VAA18
AG24	VDD_SD	P	VAA18
AG25	VDD_SD	P	VAA18
AG26	VDD_SD	P	VAA18
AG27	VDD_SD	P	VAA18
AG28	VDD_TX	P	VAA25
AG29	VSS	P	VSS
AG30	VSS	P	VSS
AG31	DNC	DNC	do not connect
AG32	DNC	DNC	do not connect
AG33	DNC	DNC	do not connect
AG34	DNC	DNC	do not connect
AG35	DNC	DNC	do not connect
AG36	VSS	P	VSS
AG37	TXN[13]	O	Serdes diff output
AG38	VSS	P	VSS
AG39	RXN[13]	I	Serdes diff input
AH1	DNC	DNC	do not connect
AH2	DNC	DNC	do not connect
AH3	DNC	DNC	do not connect
AH4	DNC	DNC	do not connect
AH5	DNC	DNC	do not connect
AH6	DNC	DNC	do not connect
AH7	DNC	DNC	do not connect
AH8	DNC	DNC	do not connect
AH9	DNC	DNC	do not connect
AH10	VSS	P	VSS
AH11	VSS	P	VSS
AH12	VDD_IO	P	VDD33
AH13	VDD_IO	P	VDD33
AH14	VDD_IO	P	VDD33
AH15	VDD_IO	P	VDD33
AH16	VDD_IO	P	VDD33
AH17	VDD_IO	P	VDD33
AH18	DNC	DNC	do not connect
AH19	VDD_TX	P	VAA25
AH20	VDD_TX	P	VAA25
AH21	VDD_TX	P	VAA25
AH22	VDD_TX	P	VAA25
AH23	VDD_TX	P	VAA25
AH24	VDD_TX	P	VAA25
AH25	VDD_TX	P	VAA25
AH26	VDD_TX	P	VAA25
AH27	VDD_TX	P	VAA25
AH28	VDD_TX	P	VAA25
AH29	VSS	P	VSS
AH30	VSS	P	VSS
AH31	DNC	DNC	do not connect
AH32	DNC	DNC	do not connect
AH33	DNC	DNC	do not connect
AH34	DNC	DNC	do not connect
AH35	DNC	DNC	do not connect
AH36	VSS	P	VSS
AH37	TXP[13]	O	Serdes diff output
AH38	VSS	P	VSS
AH39	RXP[13]	I	Serdes diff input
AJ1	DNC	DNC	do not connect
AJ2	DNC	DNC	do not connect
AJ3	DNC	DNC	do not connect
AJ4	DNC	DNC	do not connect
AJ5	DNC	DNC	do not connect
AJ6	DNC	DNC	do not connect
AJ7	DNC	DNC	do not connect
AJ8	DNC	DNC	do not connect
AJ9	DNC	DNC	do not connect
AJ10	VSS	P	VSS
AJ11	VSS	P	VSS
AJ12	VSS	P	VSS
AJ13	VSS	P	VSS
AJ14	VSS	P	VSS
AJ15	VSS	P	VSS
AJ16	VSS	P	VSS
AJ17	VSS	P	VSS
AJ18	DNC	DNC	do not connect
AJ19	VSS	P	VSS
AJ20	VSS	P	VSS
AJ21	VSS	P	VSS
AJ22	VSS	P	VSS
AJ23	VSS	P	VSS
AJ24	VSS	P	VSS
AJ25	VSS	P	VSS
AJ26	VSS	P	VSS
AJ27	VSS	P	VSS

© 2019 Renesas Electronics Corporation

Pin	Signal	I/O	Type
AJ28	VSS	P	VSS
AJ29	VSS	P	VSS
AJ30	VSS	P	VSS
AJ31	DNC	DNC	do not connect
AJ32	DNC	DNC	do not connect
AJ33	DNC	DNC	do not connect
AJ34	DNC	DNC	do not connect
AJ35	DNC	DNC	do not connect
AJ36	VSS	P	VSS
AJ37	TXN[12]	O	Serdes diff output
AJ38	VSS	P	VSS
AJ39	RXN[12]	I	Serdes diff input
AK1	VSS	P	VSS
AK2	DNC	DNC	do not connect
AK3	DNC	DNC	do not connect
AK4	VDD_IO	P	VDD33
AK5	DNC	DNC	do not connect
AK6	DNC	DNC	do not connect
AK7	DNC	DNC	do not connect
AK8	DNC	DNC	do not connect
AK9	DNC	DNC	do not connect
AK10	VSS	P	VSS
AK11	VSS	P	VSS
AK12	VSS	P	VSS
AK13	VSS	P	VSS
AK14	VSS	P	VSS
AK15	VSS	P	VSS
AK16	VSS	P	VSS
AK17	VSS	P	VSS
AK18	DNC	DNC	do not connect
AK19	VSS	P	VSS
AK20	VSS	P	VSS
AK21	VSS	P	VSS
AK22	VSS	P	VSS
AK23	VSS	P	VSS
AK24	VSS_SD0_PLL	P	VSS
AK25	VSS	P	VSS
AK26	VSS	P	VSS
AK27	VSS	P	VSS
AK28	VSS	P	VSS
AK29	VSS	P	VSS
AK30	VSS	P	VSS
AK31	DNC	DNC	do not connect

Pin	Signal	I/O	Type
AK32	DNC	DNC	do not connect
AK33	DNC	DNC	do not connect
AK34	DNC	DNC	do not connect
AK35	DNC	DNC	do not connect
AK36	VSS	P	VSS
AK37	TXP[12]	O	Serdes diff output
AK38	VSS	P	VSS
AK39	RXP[12]	I	Serdes diff input
AL1	DNC	DNC	do not connect
AL2	DNC	DNC	do not connect
AL3	DNC	DNC	do not connect
AL4	DNC	DNC	do not connect
AL5	DNC	DNC	do not connect
AL6	DNC	DNC	do not connect
AL7	DNC	DNC	do not connect
AL8	DNC	DNC	do not connect
AL9	DNC	DNC	do not connect
AL10	DNC	DNC	do not connect
AL11	DNC	DNC	do not connect
AL12	DNC	DNC	do not connect
AL13	DNC	DNC	do not connect
AL14	DNC	DNC	do not connect
AL15	DNC	DNC	do not connect
AL16	DNC	DNC	do not connect
AL17	DNC	DNC	do not connect
AL18	DNC	DNC	do not connect
AL19	VSS	P	VSS
AL20	DNC	DNC	do not connect
AL21	DNC	DNC	do not connect
AL22	VDD_REFCLK0	P	VAA33
AL23	VDD_SD0_PLL	P	VAA18
AL24	DNC	DNC	do not connect
AL25	DNC	DNC	do not connect
AL26	DNC	DNC	do not connect
AL27	DNC	DNC	do not connect
AL28	DNC	DNC	do not connect
AL29	DNC	DNC	do not connect
AL30	DNC	DNC	do not connect
AL31	DNC	DNC	do not connect
AL32	DNC	DNC	do not connect
AL33	DNC	DNC	do not connect
AL34	DNC	DNC	do not connect
AL35	DNC	DNC	do not connect

© 2019 Renesas Electronics Corporation

Pin	Signal	I/O	Type
AL36	VSS	P	VSS
AL37	TXN[11]	O	Serdes diff output
AL38	VSS	P	VSS
AL39	RXN[11]	I	Serdes diff input
AM1	DNC	DNC	do not connect
AM2	DNC	DNC	do not connect
AM3	DNC	DNC	do not connect
AM4	DNC	DNC	do not connect
AM5	DNC	DNC	do not connect
AM6	DNC	DNC	do not connect
AM7	DNC	DNC	do not connect
AM8	DNC	DNC	do not connect
AM9	DNC	DNC	do not connect
AM10	DNC	DNC	do not connect
AM11	DNC	DNC	do not connect
AM12	DNC	DNC	do not connect
AM13	DNC	DNC	do not connect
AM14	DNC	DNC	do not connect
AM15	DNC	DNC	do not connect
AM16	DNC	DNC	do not connect
AM17	DNC	DNC	do not connect
AM18	DNC	DNC	do not connect
AM19	DNC	DNC	do not connect
AM20	DNC	DNC	do not connect
AM21	DNC	DNC	do not connect
AM22	DNC	DNC	do not connect
AM23	DNC	DNC	do not connect
AM24	DNC	DNC	do not connect
AM25	DNC	DNC	do not connect
AM26	DNC	DNC	do not connect
AM27	DNC	DNC	do not connect
AM28	DNC	DNC	do not connect
AM29	DNC	DNC	do not connect
AM30	DNC	DNC	do not connect
AM31	DNC	DNC	do not connect
AM32	DNC	DNC	do not connect
AM33	DNC	DNC	do not connect
AM34	DNC	DNC	do not connect
AM35	DNC	DNC	do not connect
AM36	VSS	P	VSS
AM37	TXP[11]	O	Serdes diff output
AM38	VSS	P	VSS
AM39	RXP[11]	I	Serdes diff input

Pin	Signal	I/O	Type
AN1	DNC	DNC	do not connect
AN2	DNC	DNC	do not connect
AN3	DNC	DNC	do not connect
AN4	DNC	DNC	do not connect
AN5	DNC	DNC	do not connect
AN6	DNC	DNC	do not connect
AN7	DNC	DNC	do not connect
AN8	DNC	DNC	do not connect
AN9	DNC	DNC	do not connect
AN10	DNC	DNC	do not connect
AN11	DNC	DNC	do not connect
AN12	DNC	DNC	do not connect
AN13	DNC	DNC	do not connect
AN14	DNC	DNC	do not connect
AN15	DNC	DNC	do not connect
AN16	DNC	DNC	do not connect
AN17	DNC	DNC	do not connect
AN18	DNC	DNC	do not connect
AN19	DNC	DNC	do not connect
AN20	DNC	DNC	do not connect
AN21	DNC	DNC	do not connect
AN22	DNC	DNC	do not connect
AN23	DNC	DNC	do not connect
AN24	DNC	DNC	do not connect
AN25	DNC	DNC	do not connect
AN26	DNC	DNC	do not connect
AN27	DNC	DNC	do not connect
AN28	DNC	DNC	do not connect
AN29	DNC	DNC	do not connect
AN30	DNC	DNC	do not connect
AN31	DNC	DNC	do not connect
AN32	DNC	DNC	do not connect
AN33	DNC	DNC	do not connect
AN34	DNC	DNC	do not connect
AN35	DNC	DNC	do not connect
AN36	VSS	P	VSS
AN37	TXN[10]	O	Serdes diff output
AN38	VSS	P	VSS
AN39	RXN[10]	I	Serdes diff input
AP1	DNC	DNC	do not connect
AP2	DNC	DNC	do not connect
AP3	DNC	DNC	do not connect
AP4	DNC	DNC	do not connect

© 2019 Renesas Electronics Corporation

Pin	Signal	I/O	Type
AP5	DNC	DNC	do not connect
AP6	DNC	DNC	do not connect
AP7	DNC	DNC	do not connect
AP8	DNC	DNC	do not connect
AP9	DNC	DNC	do not connect
AP10	DNC	DNC	do not connect
AP11	DNC	DNC	do not connect
AP12	DNC	DNC	do not connect
AP13	DNC	DNC	do not connect
AP14	DNC	DNC	do not connect
AP15	DNC	DNC	do not connect
AP16	DNC	DNC	do not connect
AP17	DNC	DNC	do not connect
AP18	DNC	DNC	do not connect
AP19	DNC	DNC	do not connect
AP20	DNC	DNC	do not connect
AP21	DNC	DNC	do not connect
AP22	DNC	DNC	do not connect
AP23	DNC	DNC	do not connect
AP24	DNC	DNC	do not connect
AP25	DNC	DNC	do not connect
AP26	DNC	DNC	do not connect
AP27	DNC	DNC	do not connect
AP28	DNC	DNC	do not connect
AP29	DNC	DNC	do not connect
AP30	DNC	DNC	do not connect
AP31	DNC	DNC	do not connect
AP32	DNC	DNC	do not connect
AP33	DNC	DNC	do not connect
AP34	DNC	DNC	do not connect
AP35	DNC	DNC	do not connect
AP36	VSS	P	VSS
AP37	TXP[10]	O	Serdes diff output
AP38	VSS	P	VSS
AP39	RXP[10]	I	Serdes diff input
AR1	DNC	DNC	do not connect
AR2	DNC	DNC	do not connect
AR3	RESET_N	I	3.3V LVTTL
AR4	DNC	DNC	do not connect
AR5	ZBUS_DEVID[2]	I	3.3V LVTTL
AR6	ZBUS_DEVID[4]	I	3.3V LVTTL
AR7	ZBUS_DEVID[3]	I	3.3V LVTTL
AR8	DNC	DNC	do not connect

Pin	Signal	I/O	Type
AR9	DNC	DNC	do not connect
AR10	DNC	DNC	do not connect
AR11	DNC	DNC	do not connect
AR12	DNC	DNC	do not connect
AR13	DNC	DNC	do not connect
AR14	DNC	DNC	do not connect
AR15	DNC	DNC	do not connect
AR16	DNC	DNC	do not connect
AR17	DNC	DNC	do not connect
AR18	DNC	DNC	do not connect
AR19	DNC	DNC	do not connect
AR20	DNC	DNC	do not connect
AR21	DNC	DNC	do not connect
AR22	DNC	DNC	do not connect
AR23	DNC	DNC	do not connect
AR24	VSS	P	VSS
AR25	DNC	DNC	do not connect
AR26	DNC	DNC	do not connect
AR27	DNC	DNC	do not connect
AR28	DNC	DNC	do not connect
AR29	DNC	DNC	do not connect
AR30	DNC	DNC	do not connect
AR31	DNC	DNC	do not connect
AR32	DNC	DNC	do not connect
AR33	DNC	DNC	do not connect
AR34	DNC	DNC	do not connect
AR35	DNC	DNC	do not connect
AR36	VSS	P	VSS
AR37	TXN[09]	O	Serdes diff output
AR38	VSS	P	VSS
AR39	RXN[09]	I	Serdes diff input
AT1	DNC	DNC	do not connect
AT2	DNC	DNC	do not connect
AT3	ZBUS_DEVID[0]	I	3.3V LVTTL
AT4	VDD_IO	P	VDD33
AT5	ZBUS_AVALID_N	I	3.3V LVTTL
AT6	VSS	P	VSS
AT7	ZBUS_AD[04]	B	3.3V LVTTL
AT8	VDD_IO	P	VDD33
AT9	ZBUS_AD[12]	B	3.3V LVTTL
AT10	VSS	P	VSS
AT11	DNC	DNC	do not connect
AT12	VSS	P	VSS

© 2019 Renesas Electronics Corporation

Pin	Signal	I/O	Type
AT13	DNC	DNC	do not connect
AT14	VSS	P	VSS
AT15	VSS	P	VSS
AT16	VSS	P	VSS
AT17	VSS	P	VSS
AT18	VSS	P	VSS
AT19	VSS	P	VSS
AT20	VSS	P	VSS
AT21	VSS	P	VSS
AT22	VSS	P	VSS
AT23	VSS	P	VSS
AT24	SD0_REF_RES	B	Serdes Bidi
AT25	DNC	DNC	do not connect
AT26	VSS	P	VSS
AT27	VSS	P	VSS
AT28	VSS	P	VSS
AT29	VSS	P	VSS
AT30	VSS	P	VSS
AT31	VSS	P	VSS
AT32	VSS	P	VSS
AT33	VSS	P	VSS
AT34	VSS	P	VSS
AT35	VSS	P	VSS
AT36	VSS	P	VSS
AT37	TXP[09]	O	Serdes diff output
AT38	VSS	P	VSS
AT39	RXP[09]	I	Serdes diff input
AU1	VSS	P	VSS
AU2	CHN_DET_MODE	I	3.3V LVTTL
AU3	DNC	DNC	do not connect
AU4	ZBUS_AD[01]	B	3.3V LVTTL
AU5	ZBUS_AD[03]	B	3.3V LVTTL
AU6	ZBUS_AD[05]	B	3.3V LVTTL
AU7	ZBUS_AD[06]	B	3.3V LVTTL
AU8	ZBUS_AD[11]	B	3.3V LVTTL
AU9	ZBUS_AD[14]	B	3.3V LVTTL
AU10	DNC	DNC	do not connect
AU11	ZBUS_INT_N[1]	O	3.3V LVTTL
AU12	VSS	P	VSS
AU13	DNC	DNC	do not connect
AU14	VSS	P	VSS
AU15	TXP[00]	O	Serdes diff output
AU16	TXN[00]	O	Serdes diff output
AU17	TXP[01]	O	Serdes diff output
AU18	TXN[01]	O	Serdes diff output
AU19	TXP[02]	O	Serdes diff output
AU20	TXN[02]	O	Serdes diff output
AU21	TXP[03]	O	Serdes diff output
AU22	TXN[03]	O	Serdes diff output
AU23	VSS	P	VSS
AU24	RPD	I	RPD
AU25	DNC	DNC	do not connect
AU26	VSS	P	VSS
AU27	TXP[04]	O	Serdes diff output
AU28	TXN[04]	O	Serdes diff output
AU29	TXP[05]	O	Serdes diff output
AU30	TXN[05]	O	Serdes diff output
AU31	TXP[06]	O	Serdes diff output
AU32	TXN[06]	O	Serdes diff output
AU33	TXP[07]	O	Serdes diff output
AU34	TXN[07]	O	Serdes diff output
AU35	VSS	P	VSS
AU36	VSS	P	VSS
AU37	TXN[08]	O	Serdes diff output
AU38	VSS	P	VSS
AU39	RXN[08]	I	Serdes diff input
AV1	VDD_IO	P	VDD33
AV2	ZBUS_DEVID[1]	I	3.3V LVTTL
AV3	ZBUS_CLK	I	3.3V LVTTL
AV4	ZBUS_AD[02]	B	3.3V LVTTL
AV5	ZBUS_AD[07]	B	3.3V LVTTL
AV6	ZBUS_AD[08]	B	3.3V LVTTL
AV7	ZBUS_AD[10]	B	3.3V LVTTL
AV8	ZBUS_AD[13]	B	3.3V LVTTL
AV9	ZBUS_PRTY	B	3.3V LVTTL
AV10	ZBUS_DVALID_N	B	3.3V LVTTL
AV11	RPD	I	RPD
AV12	VSS	P	VSS
AV13	DNC	DNC	do not connect
AV14	VSS	P	VSS
AV15	VSS	P	VSS
AV16	VSS	P	VSS
AV17	VSS	P	VSS
AV18	VSS	P	VSS
AV19	VSS	P	VSS
AV20	VSS	P	VSS

© 2019 Renesas Electronics Corporation

Pin	Signal	I/O	Type
AV21	VSS	P	VSS
AV22	VSS	P	VSS
AV23	VSS	P	VSS
AV24	VSS	P	VSS
AV25	VSS	P	VSS
AV26	VSS	P	VSS
AV27	VSS	P	VSS
AV28	VSS	P	VSS
AV29	VSS	P	VSS
AV30	VSS	P	VSS
AV31	VSS	P	VSS
AV32	VSS	P	VSS
AV33	VSS	P	VSS
AV34	VSS	P	VSS
AV35	VSS	P	VSS
AV36	VSS	P	VSS
AV37	TXP[08]	O	Serdes diff output
AV38	VSS	P	VSS
AV39	RXP[08]	I	Serdes diff input
AW2	ZBUS_AD[00]	B	3.3V LVTTL
AW3	VDD_IO	P	VDD33
AW4	VSS	P	VSS
AW5	ZBUS_AD[09]	B	3.3V LVTTL
AW6	VDD_IO	P	VDD33
AW7	ZBUS_AD[15]	B	3.3V LVTTL
AW8	VSS	P	VSS
AW9	ZBUS_INT_N[0]	O	3.3V LVTTL
AW10	VDD_IO	P	VDD33
AW11	ZBUS_INT_N[2]	O	3.3V LVTTL
AW12	VSS	P	VSS
AW13	DNC	DNC	do not connect
AW14	VSS	P	VSS
AW15	RXP[00]	I	Serdes diff input
AW16	RXN[00]	I	Serdes diff input
AW17	RXP[01]	I	Serdes diff input
AW18	RXN[01]	I	Serdes diff input
AW19	RXP[02]	I	Serdes diff input
AW20	RXN[02]	I	Serdes diff input
AW21	RXP[03]	I	Serdes diff input
AW22	RXN[03]	I	Serdes diff input
AW23	VSS	P	VSS
AW24	SD0_REFCLKP	I	Serdes diff clock
AW25	SD0_REFCLKN	I	Serdes diff clock
AW26	VSS	P	VSS
AW27	RXP[04]	I	Serdes diff input
AW28	RXN[04]	I	Serdes diff input
AW29	RXP[05]	I	Serdes diff input
AW30	RXN[05]	I	Serdes diff input
AW31	RXP[06]	I	Serdes diff input
AW32	RXN[06]	I	Serdes diff input
AW33	RXP[07]	I	Serdes diff input
AW34	RXN[07]	I	Serdes diff input
AW35	VSS	P	VSS
AW36	VSS	P	VSS
AW37	VSS	P	VSS
AW38	VSS	P	VSS

© 2019 Renesas Electronics Corporation

89TSF500 Package Diagram

The 89TSF500 package is an Amkor FCBGA, having 1517 pins, with 1 mm pitch; a 39x39 pin array; and a 40x40 mm enclosure. The package geometry is shown below.

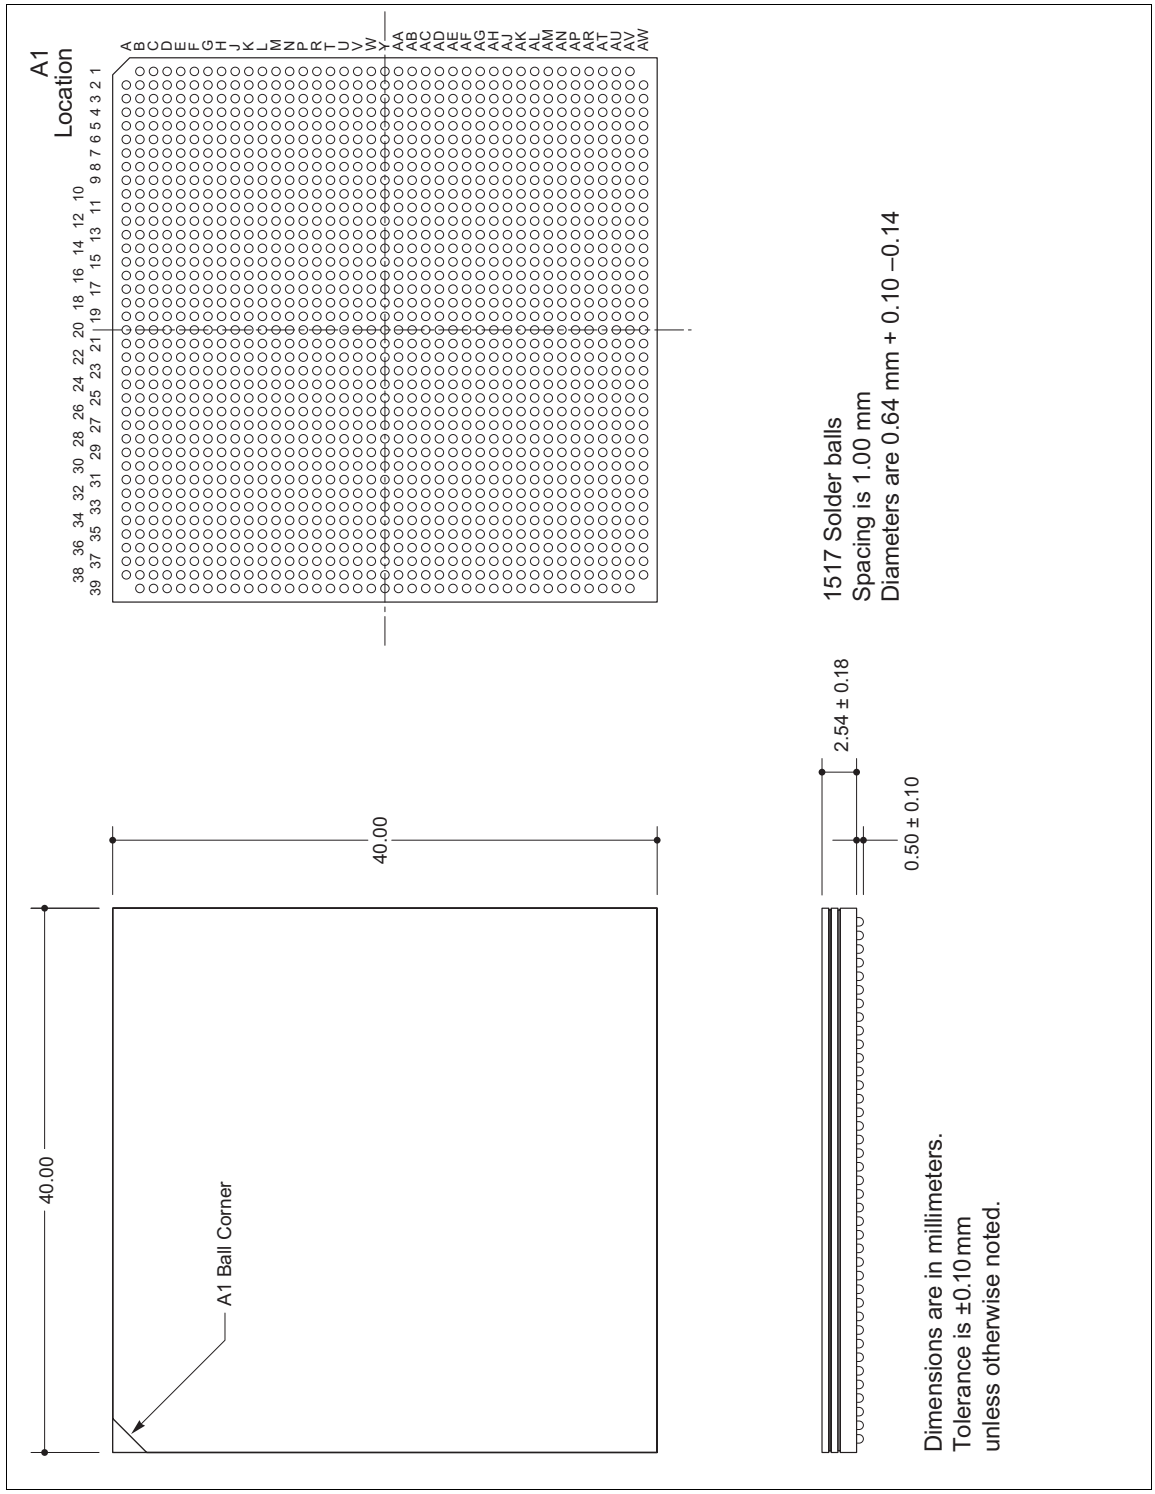

© 2019 Renesas Electronics Corporation

Ordering Information

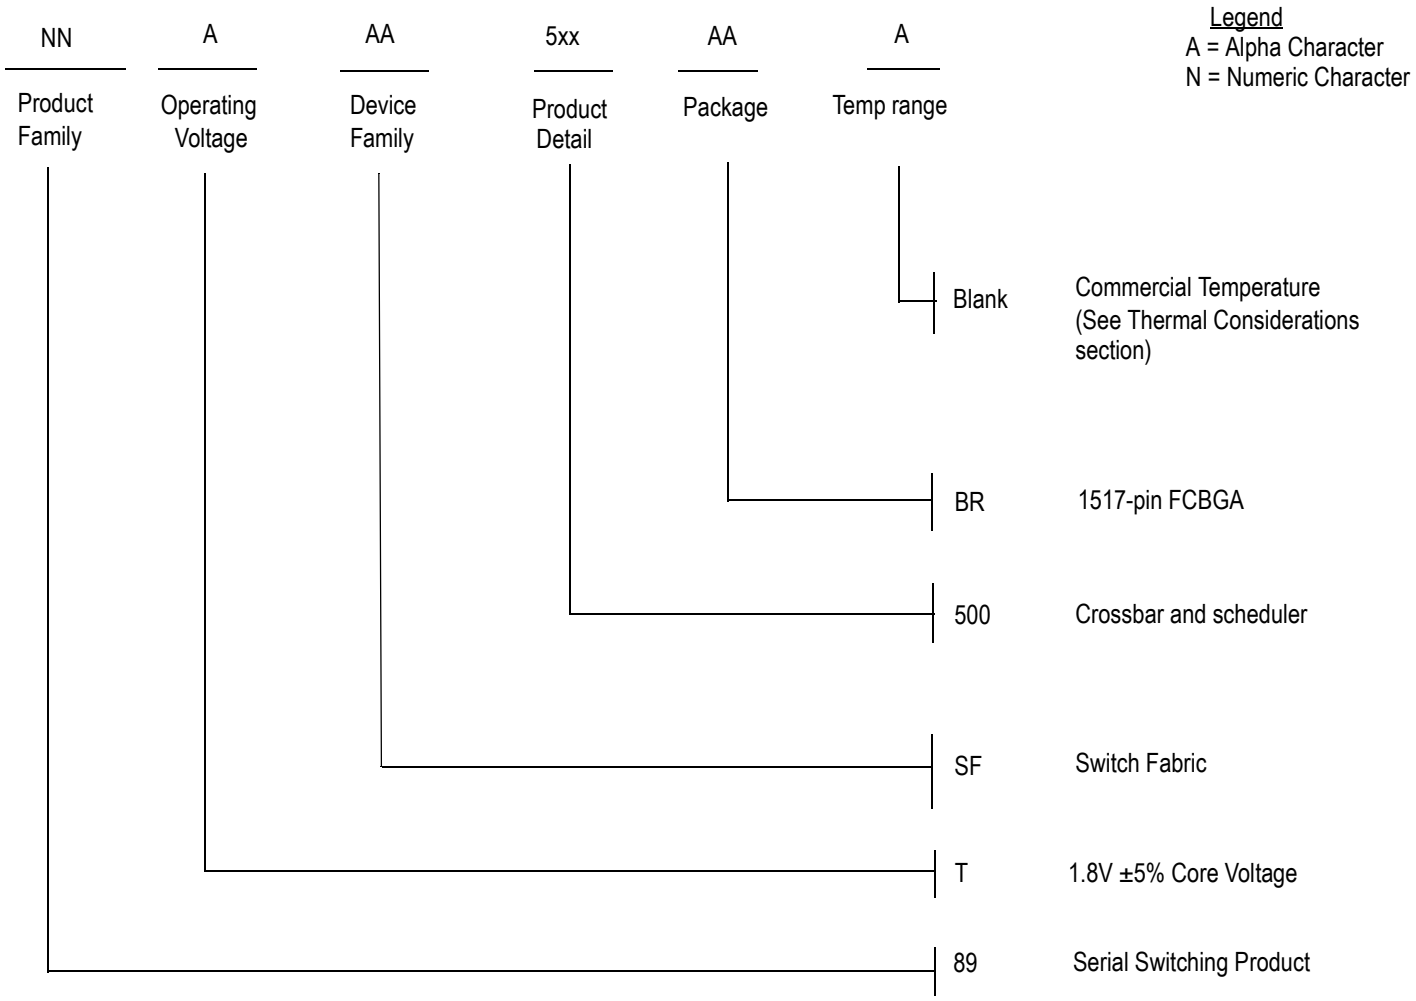

Valid Combinations

89TSF500BR	1517-pin FCBGA package, Commercial Temperature

Revision History

November 23, 2004: Initial publication by IDT.

April 13, 2005: Changes to Tables 9 through 19. Publication of Final data sheet.

IMPORTANT NOTICE AND DISCLAIMER

RENESAS ELECTRONICS CORPORATION AND ITS SUBSIDIARIES (“RENESAS”) PROVIDES TECHNICAL SPECIFICATIONS AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES “AS IS” AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT OF THIRD-PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for developers who are designing with Renesas products. You are solely responsible for (1) selecting the appropriate products for your application, (2) designing, validating, and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements. These resources are subject to change without notice. Renesas grants you permission to use these resources only to develop an application that uses Renesas products. Other reproduction or use of these resources is strictly prohibited. No license is granted to any other Renesas intellectual property or to any third-party intellectual property. Renesas disclaims responsibility for, and you will fully indemnify Renesas and its representatives against, any claims, damages, costs, losses, or liabilities arising from your use of these resources. Renesas' products are provided only subject to Renesas' Terms and Conditions of Sale or other applicable terms agreed to in writing. No use of any Renesas resources expands or otherwise alters any applicable warranties or warranty disclaimers for these products.

(Disclaimer Rev.1.01)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,
Koto-ku, Tokyo 135-0061, Japan
www.renesas.com

Contact Information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit www.renesas.com/contact-us/.

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

© 2026 Renesas Electronics Corporation. All rights reserved.