

NEC

Preliminary User's Manual

IE-703157-MC-EM1

In-circuit Emulator Optional Board

Target device
V850E/CG1™/ CARGATE

Document No. U15048EE1V0UM00 (1st edition)
Date Published August 2000 N CP(K)

© NEC Corporation 2000
Printed in Germany

[MEMO]

V850E/CA1 is a trademark of NEC Corporation.

Windows is either a registered trademark or a trademark of Microsoft Corporation in the United States and/or other countries.

PC/AT is a trademark of International Business Machines Corporation.

Ethernet is a trademark of Xerox Corporation.

UNIX is a registered trademark in the United States and other countries, licensed exclusively through X/Open Company Limited.

The information in this document is subject to change without notice.

No part of this document may be copied or reproduced in any form or by any means without the prior written consent of NEC Corporation. NEC Corporation assumes no responsibility for any errors which may appear in this document.

NEC Corporation does not assume any liability for infringement of patents, copyrights or other intellectual property rights of third parties by or arising from use of a device described herein or any other liability arising from use of such device. No license, either express, implied or otherwise, is granted under any patents, copyrights or other intellectual property rights of NEC Corporation or of others.

Regional Information

Some information contained in this document may vary from country to country. Before using any NEC product in your application, please contact the NEC office in your country to obtain a list of authorized representatives and distributors. They will verify:

- Device availability
- Ordering information
- Product release schedule
- Availability of related technical literature
- Development environment specifications (for example, specifications for third-party tools and components, host computers, power plugs, AC supply voltages, and so forth)
- Network requirements

In addition, trademarks, registered trademarks, export restrictions, and other legal issues may also vary from country to country.

NEC Electronics Inc. (U.S.)

Santa Clara, California
Tel: 408-588-6000
800-366-9782
Fax: 408-588-6130
800-729-9288

NEC Electronics (Germany) GmbH

Duesseldorf, Germany
Tel: 0211-65 03 02
Fax: 0211-65 03 490

NEC Electronics (UK) Ltd.

Milton Keynes, UK
Tel: 01908-691-133
Fax: 01908-670-290

NEC Electronics Italiana s.r.l.

Milano, Italy
Tel: 02-66 75 41
Fax: 02-66 75 42 99

NEC Electronics (Germany) GmbH

Benelux Office
Eindhoven, The Netherlands
Tel: 040-2445845
Fax: 040-2444580

NEC Electronics (France) S.A.

Velizy-Villacoublay, France
Tel: 01-30-67 58 00
Fax: 01-30-67 58 99

NEC Electronics (France) S.A.

Spain Office
Madrid, Spain
Tel: 01-504-2787
Fax: 01-504-2860

NEC Electronics (Germany) GmbH

Scandinavia Office
Taebby, Sweden
Tel: 08-63 80 820
Fax: 08-63 80 388

NEC Electronics Hong Kong Ltd.

Hong Kong
Tel: 2886-9318
Fax: 2886-9022/9044

NEC Electronics Hong Kong Ltd.

Seoul Branch
Seoul, Korea
Tel: 02-528-0303
Fax: 02-528-4411

NEC Electronics Singapore Pte. Ltd.

United Square, Singapore 1130
Tel: 65-253-8311
Fax: 65-250-3583

NEC Electronics Taiwan Ltd.

Taipei, Taiwan
Tel: 02-2719-2377
Fax: 02-2719-5951

NEC do Brasil S.A.

Electron Devices Division
Rodovia Presidente Dutra, Km 214
07210-902-Guarulhos-SP Brasil
Tel: 55-11-6465-6810
Fax: 55-11-6465-6829

INTRODUCTION

- Readers** This manual is intended for users who design and develop application systems using the V850E/CG1™ / CARGATE.
- Purpose** The purpose of this manual is to describe the proper operation of the IE-703157-MC-EM1, and their basic specifications.
- Organization** This manual is broadly divided into the following parts.
- Overview
 - Name and function of components
 - Cautions

How to Read This Manual It is assumed that the reader of this manual has general knowledge of electrical engineering, logic circuits, and microcontrollers.

The IE-703157-MC-EM1 are used connected to the IE-V850E-MC in-circuit emulator. This manual explains the basic setup procedure and switch settings of the IE-703157-MC-EM1. For the names and functions, and the connection of parts, refer to the **IE-V850E-MC User's Manual**, which is a separate volume.

To understand the basic specifications and operation methods broadly
→ Read this manual in the order listed in **CONTENTS**.

To know the operation methods and command functions of the IE-V850E-MC, IE-703157-MC-EM1.
→ Read the user's manual of the debugger (separate volume) that is used.

- Conventions**
- Note:** Footnote for item marked with **Note** in the text
- Caution:** Information requiring particular attention
- Remark:** Supplementary information
- Numeral representations:** Binary ... xxxx or xxxxB
Decimal ... xxxx
Hexadecimal ... xxxxH
- Prefixes representing the powers of 2 (address space, memory capacity):**
K (kilo): $2^{10} = 1024$
M (mega): $2^{20} = 1024^2$

Terminology The meanings of terms used in this manual are listed below.

Target device	Device that is emulated.
Target system	The system (user-built system) to be debugged. This includes the target program and user-configured hardware.

Product Names Unless otherwise specified, the IE-703157-MC-EM1 is treated as the representative model in this manual

Related Documents The related documents indicated in this publication may include preliminary versions. However, preliminary versions are not marked as such.

○ **Documents related to V850E/CG1**

Document Name	Document Number
V850E/CG1 User's Manual-Hardware	To be prepared
V850E1 User's Manual-Architecture	U14559EJ1V0UM00
μPD70F3157 Data Sheet	To be prepared

○ **Documents related to development tools (User's Manual)**

Product Name	Document Number
IE-V850E-MC (In-circuit emulator)	U14487EJ1V0UM00
IE-703157-MC-EM1 (In-circuit emulator optional board)	This manual

CONTENTS

CHAPTER 1 OVERVIEW	11
1.1 Hardware Configuration	12
1.2 Features (When Connected to IE-V850E-MC)	13
1.3 Function Specifications (When Connected to IE-V850E-MC)	14
1.4 System Configuration	15
1.5 Contents in Carton	16
1.6 Connection between IE-V850E-MC and IE-703157-MC-EM1	17
CHAPTER 2 NAME AND FUNCTION OF COMPONENTS	19
2.1 Component Name and Function of IE-703157-MC-EM1	19
2.2 Clock Setting	22
2.3 MODE Pin Setting	23
2.3.1 MODE pin setting when emulator is used as stand-alone unit	23
2.3.2 MODE pin setting when emulator is used connected to target system	23
CHAPTER 3 FACTORY SETTINGS	25
CHAPTER 4 CAUTIONS	27
4.2 X1 Signal	27
4.3 Pin Termination	27
(4.4 Internal RAM and ROM	28
4.5 Port PAL, PHL, PDL, PCT and PCS	29
4.6 Bus Interface Pin	30
4.7 Emulation Memory Operation Timing Difference	31
APPENDIX A PACKAGE DRAWINGS	33
APPENDIX B EXAMPLE OF USE OF CONNECTOR FOR TARGET CONNECTION	39
APPENDIX C CONNECTORS FOR TARGET CONNECTION	41
C.1 Use	41
C.2 Cautions on Handling Connectors	43
APPENDIX D MOUNTING OF PLASTIC SPACER	45

LIST OF FIGURES

Figure No.	Title	Page
Figure 1-1.	System Configuration.....	15
Figure 1-2.	Contents in Carton	16
Figure 1-3.	Connection between IE-V850E-MC and IE-703157-MC-EM1 (1/2)	17
Figure 1-3.	Connection between IE-V850E-MC and IE-703157-MC-EM1 (2/2)	18
Figure 2-1.	IE-703157-MC-EM1	19
Figure 4-2.	Diagram of X1 Signal Flow.....	27
Figure 4-4.	Circuit Diagram of Port 1 to 4, A, and B	29
Figure C-1.	Mounting of NQPACK100SD.....	40
Figure C-2.	Mounting Device.....	41
Figure C-3.	NQPACK100SD and Device Pin	41
Figure D-1.	Mounting Method of Plastic Spacer	44

LIST OF TABLES

Table No.	Title	Page
Table 2-3.	MODE Pin Setting when Emulator is Used as Stand-Alone Unit	23
Table 2-4.	MODE Pin Setting when Emulator is Used Connected to Target System.....	23
Table 4-1.	Memory Capacity Limitation List	28
Table 4-2.	Bus Interface Pin Operation List (1/2)	30
Table 4-2.	Bus Interface Pin Operation List (2/2)	31

[MEMO]


CHAPTER 1 OVERVIEW

The IE-703157-MC-EM1 is an optional board for the in-circuit emulator IE-V850E-MC. By connecting the IE-703157-MC-EM1 to IE-V850E-MC, hardware and software can be debugged efficiently in system development using the V850E/CG1 (CARGATE).

IE-703157-MC-EM1 is an optional board when **HV_{DD} = 5 V**

In this manual, the basic setup sequences and switch settings of the IE-703157-MC-EM1 when connecting it to the IE-V850E-MC are described. For the names and functions of the parts of the IE-V850E-MC, and for the connection of elements, refer to the **IE-V850E-MC User's Manual** which is a separate volume.

1.1 Hardware Configuration

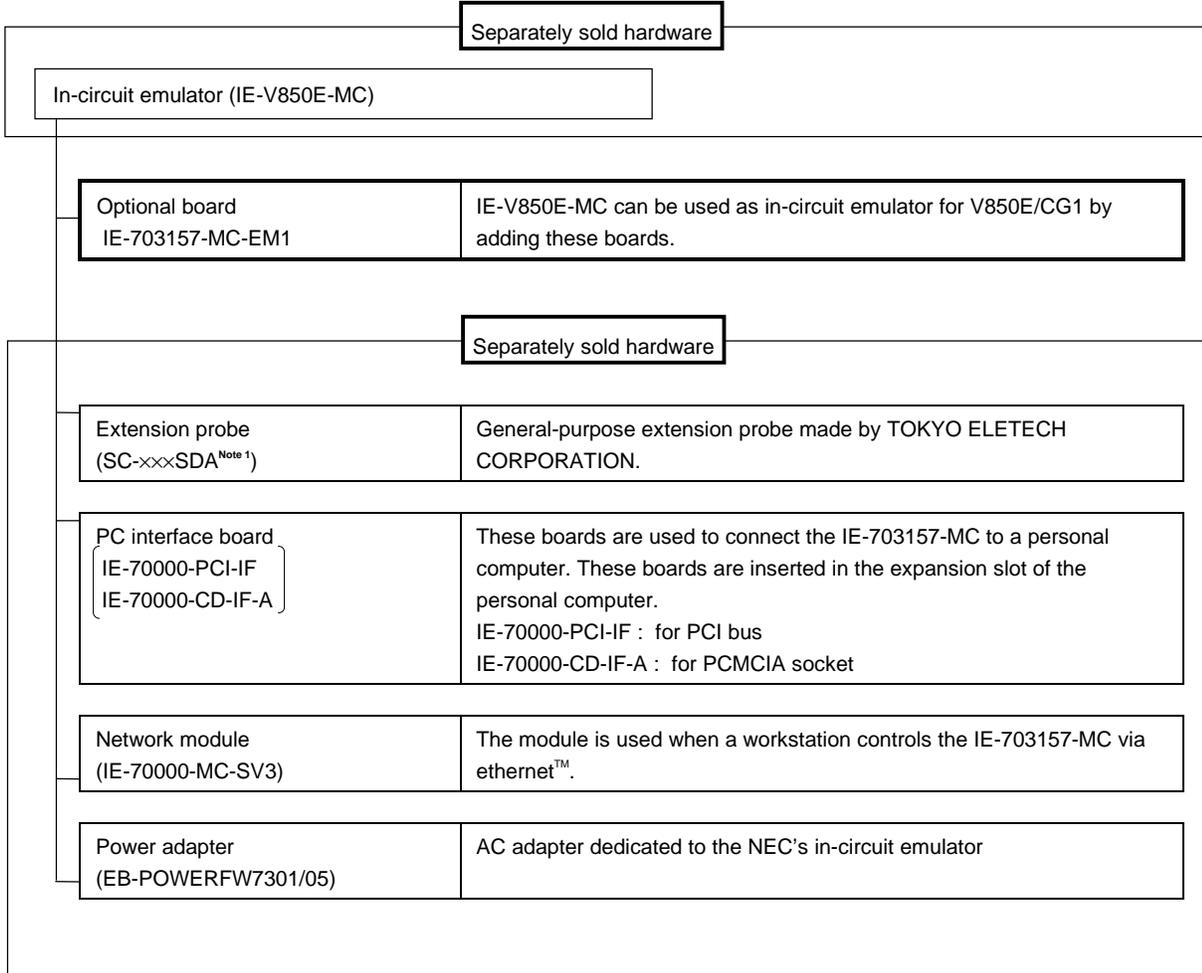

- Notes** 1. For further information, contact Daimaru Kogyo Co., Ltd.
 Tokyo Electronic Components Division (TEL +81-3-3820-7112)
 Osaka Electronic Components Division (TEL +81-6-244-6672)

1.2 Features (When Connected to IE-V850E-MC)

- Maximum operation frequency: 24 MHz (HV_{DD} = 5.0 V operation)
- Maximum operating frequency of the quartz oscillator 6MHz
- Extremely lightweight and compact
- Higher equivalence with target device can be achieved by omitting buffer between signal cables.
- Following pins can be masked.
RESET, NMI, WAIT
- Two methods of connection to target system:
 - Direct connection of the IE-703157-MC-EM1
 - Attach an extension probe (sold separately) to the connection tab of the IE-703157-MC-EM1.
- Dimensions of the IE-703157-MC-EM1 are as follows.

Parameter		Value
Power dissipation		0.6 W (at 24-MHz operation frequency) ^{Note}
External dimensions (Refer to APPENDIX A DIMENSIONS)	Height	41 mm
	Length	246 mm
	Width	101 mm
Weight		240 g

Note The power dissipation is 11.6 W when IE-V850E-MC + IE-703157-MC-EM1.

1.3 Function Specifications (When Connected to IE-V850E-MC)


Parameter		Specification	
Emulation memory capacity	Internal ROM	1 Mbyte	
	External memory	4 Mbytes (mounted on the option board)	
Execution/pass detection Coverage memory capacity	Internal ROM	1 Mbyte (standart)	
	External memory	In ROM-less mode	2 Mbytes
		When using iROM	1 Mbyte
Memory access detection Coverage memory capacity	External memory	1 Mbyte	
Trace memory capacity		168 bits × 32 Kframes	
Time measurement function		Can be measured with time tag and timers (3 lines)	
External logic probe		8-bit external trace is possible	
		Event setting for trace/break is possible	
Break function		Event break	
		Step execution break	
		Forced break	
		Fail safe break <ul style="list-style-type: none"> • Illegal access to peripheral I/O • Access to guard space • Write to the ROM space 	

Caution Some of the functions may not be supported depending on the debugger used.

1.4 System Configuration

The system configuration when connecting the IE-703157-MC-EM1 to the IE-V850E-MC, which is then connected to a personal computer (PC/AT compatible) is shown below.


Figure 1-1. System Configuration

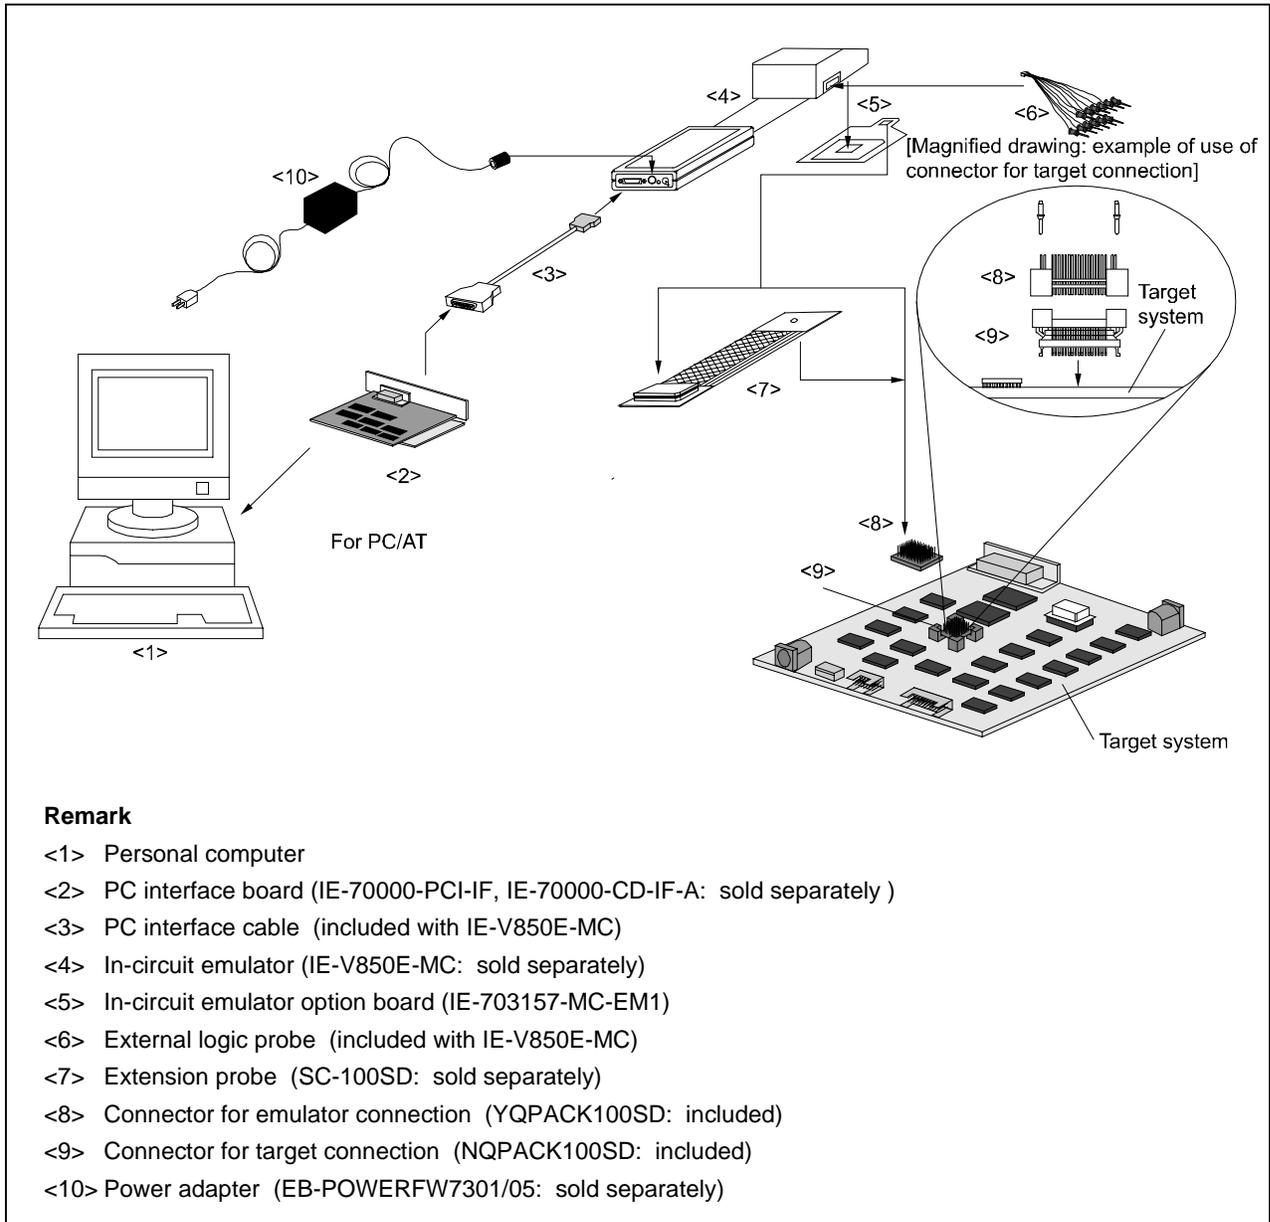

1.5 Contents in Carton

The carton of the IE-703157-MC-EM1 contains a main unit, guarantee card, packing list, and accessory bag. Make sure that the accessory bag contains this manual and connector accessories. In case of missing or damaged contents, contact an NEC sales representative or an NEC distributor.

Figure 1-2. Contents in Carton

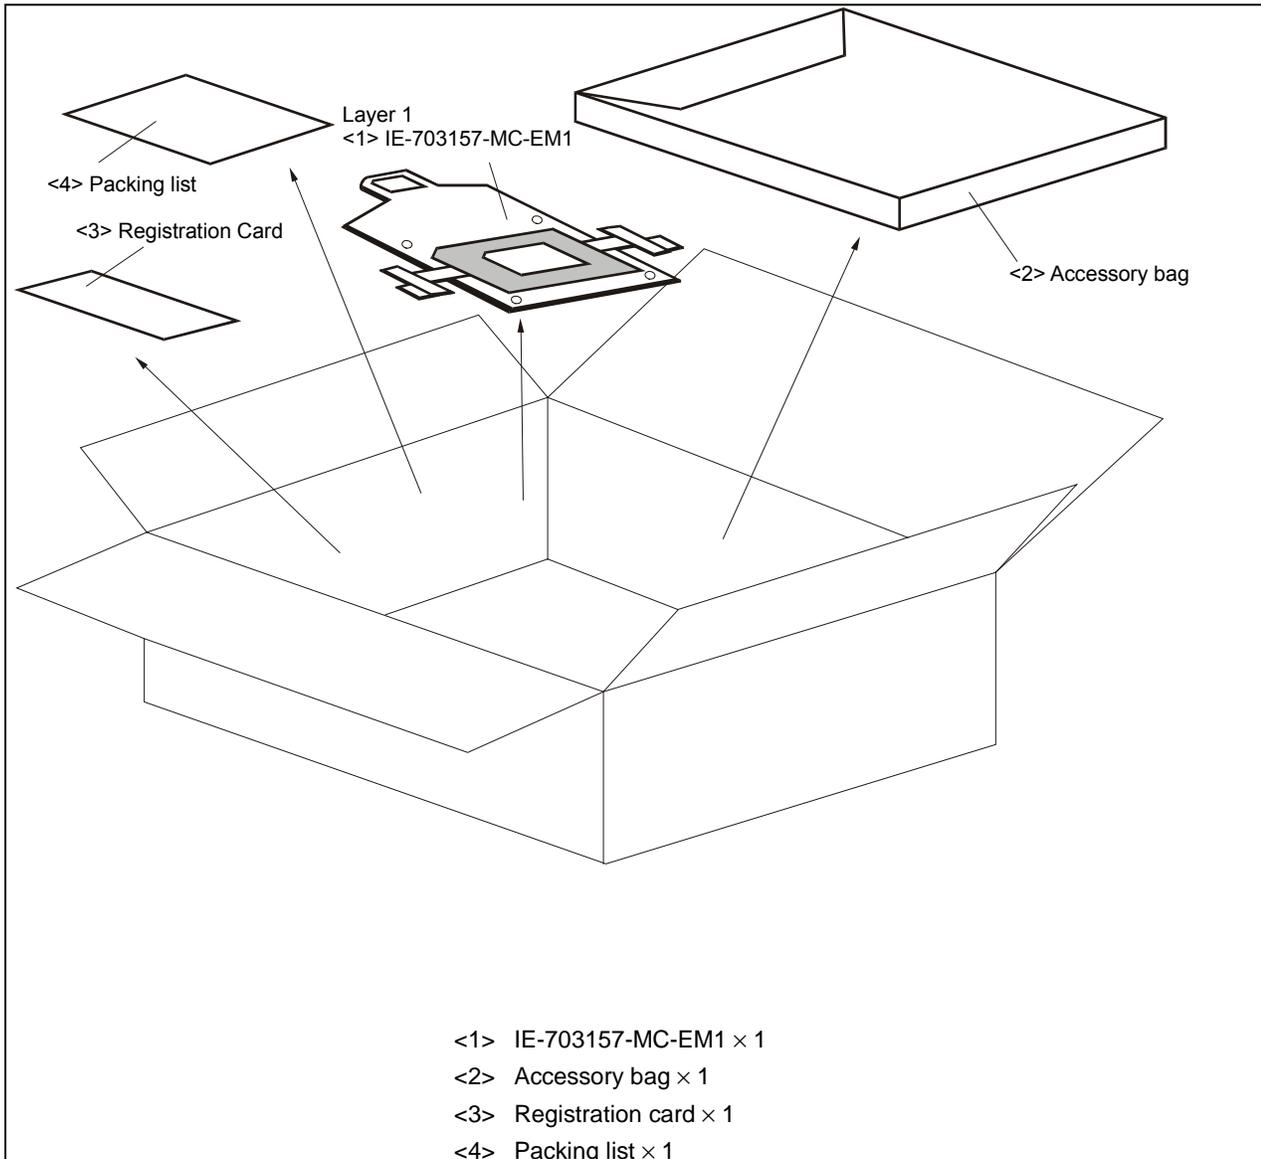

Make sure that the accessory bag contains this manual and an accessory list (1 sheet).

1.6 Connection between IE-V850E-MC and IE-703157-MC-EM1

The procedure for connecting the IE-V850E-MC and IE-703157-MC-EM1 is described below.

Caution Connect carefully so as not to break or bend connector pins.

- <1> Remove the pod cover (upper and lower) of the IE-V850E-MC.
- <2> Set the PGA socket lever of the IE-703157-MC-EM1 to the OPEN position as shown in Figure 1-3 (b).
- <3> Connect the IE-703157-MC-EM1 to the PGA socket at the back of the pod (refer to **Figure 1-3 (c)**). When connecting, position the IE-V850E-MC and IE-703157-MC-EM1 so that they are horizontal. Spacers can be connected to fix the pod. (refer to **APPENDIX D MOUNTING OF PLASTIC SPACER**)
- <4> Set the PGA socket lever of the IE-703157-MC-EM1 to the CLOSE position as shown in Figure 1-3 (b).
- <5> Fix the IE-703157-MC-EM1 between the pod covers (upper and lower) with nylon rivets.
- <6> Secure the pod cover (upper) end with nylon rivets.

Figure 1-3. Connection between IE-V850E-MC and IE-703157-MC-EM1 (1/2)


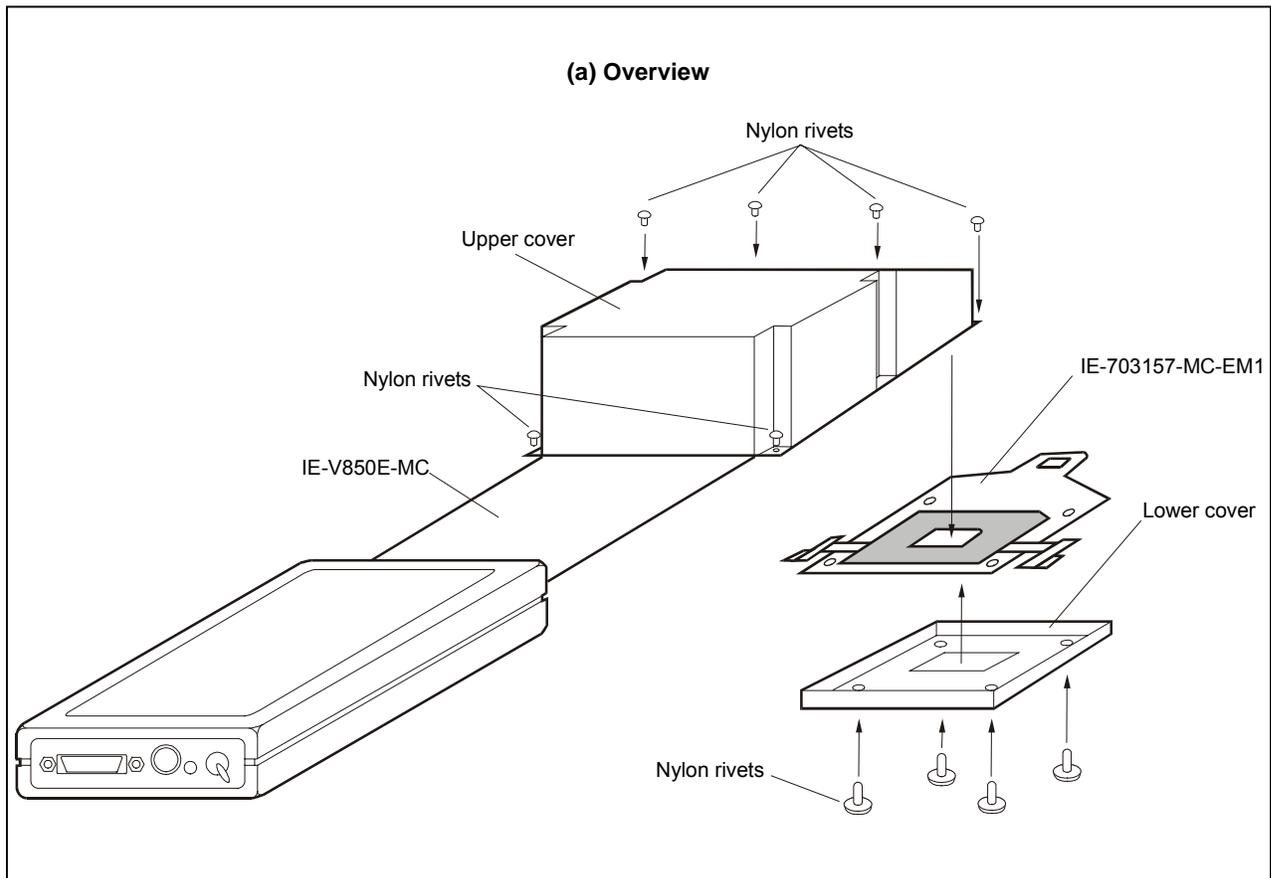


Figure 1-3. Connection between IE-V850E-MC and IE-703157-MC-EM1 (2/2)

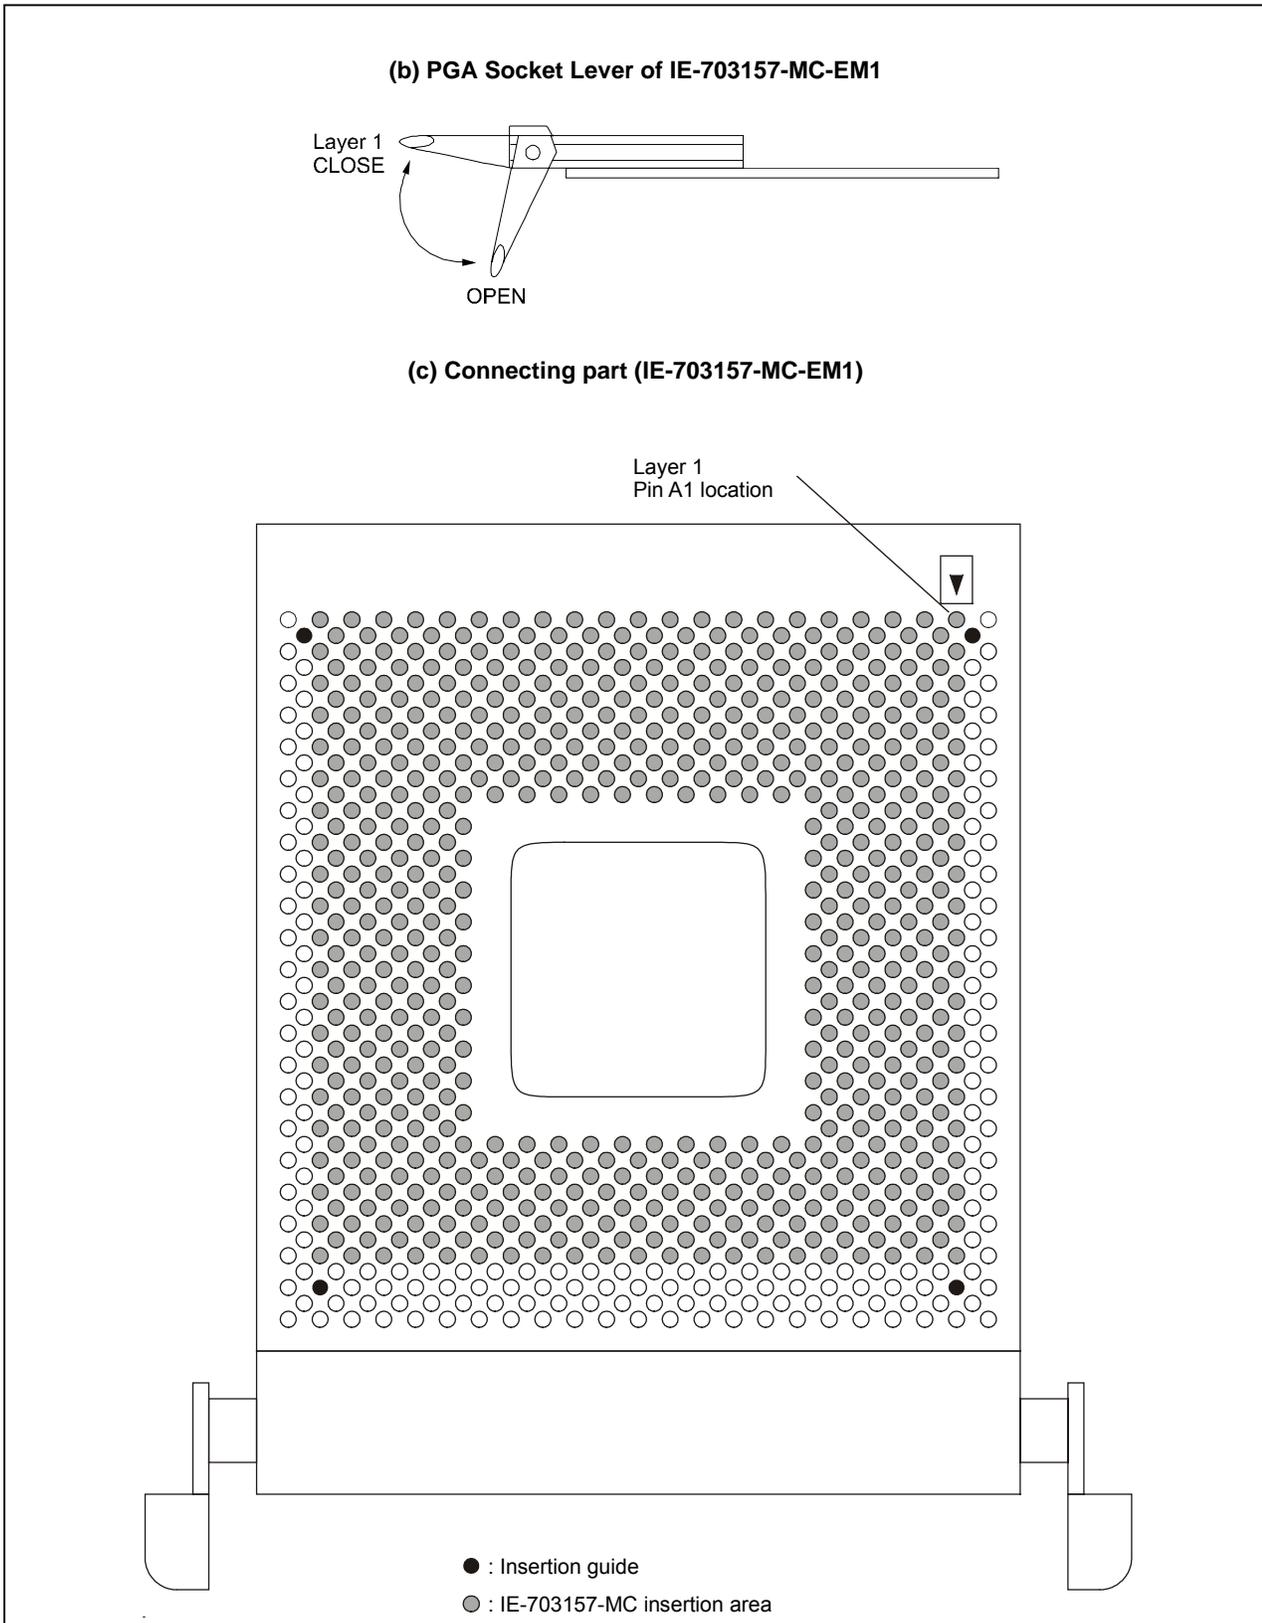


CHAPTER 2 NAME AND FUNCTION OF COMPONENTS

This chapter describes the names, functions, and switch settings of components comprising the IE-703157-MC-EM1. For the details of the pod, jumper, and switch positions, etc., refer to the **IE-V850E-MC User's Manual**.

2.1 Component Name and Function of IE-703157-MC-EM1

Figure 2-1. IE-703157-MC-EM1

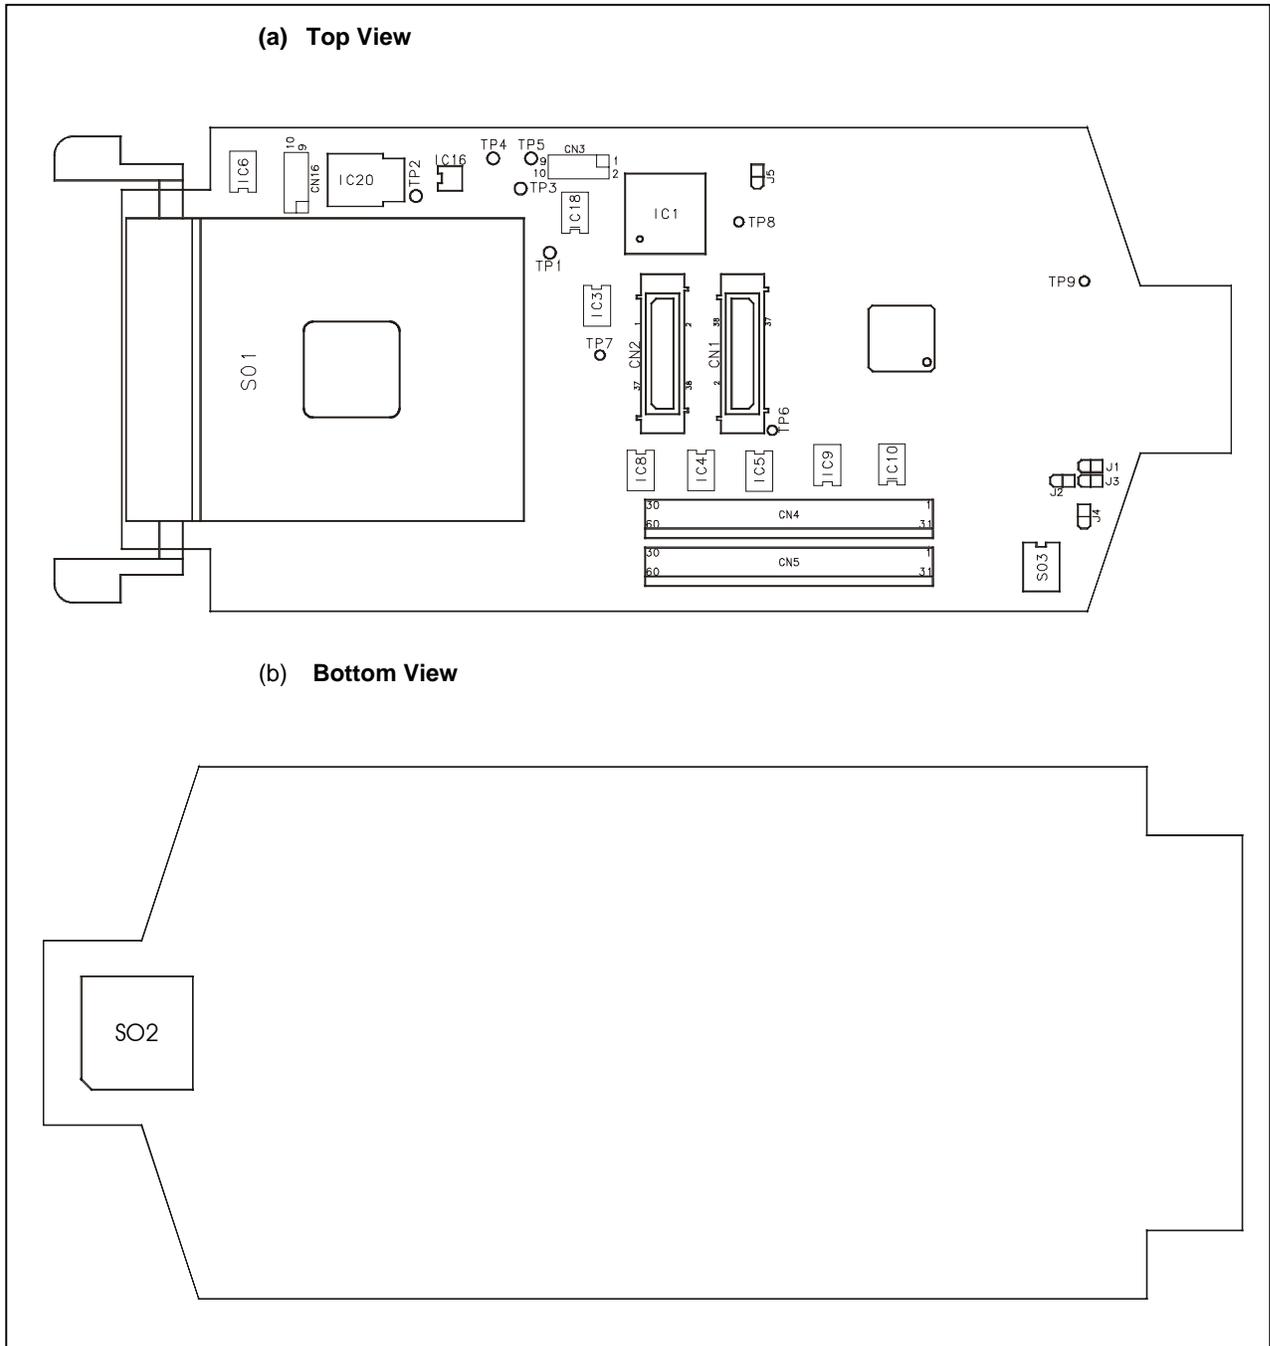

Default settings

(1) Test pin (TP1 to TP9)

Test Pins	Function
TP1	V _{CC}
TP2	V _{DD}
TP3	EMV _{DD}
TP4	(internal use)
TP5	Target Power signal
TP6 – TP9	GND

(3) Connector List (CN1-CN18)

Connector	Function
CN1,CN2	(internal use)
CN3	CPLD(internal use)
CN4	Alternative Memory Bank1
CN5	Alternative Memory Bank2 *
CN16	Ext. Trigger Signals xxx**
CN18	(internal use)

* not supported

** Please refer to IE-V850E-MC User`s Manual

(4)

Socket	Function
SO3	Quartz oscillator module for oscillator -mode (3 - 6 MHz)

(5) Jumper List

Jumper	Function	Open	Closed
J1	AVDD	Target	Internal 5V
J2	AVSS	Target	Internal GND
J3	AVREF	Target	Internal 5V
J4,J5	(internal use)		

(6) Connector for IE-V850E-MC connection (SO1)

This is a connector for connecting the IE-V850E-MC.

(7) Connector for target connection (SO2)

This is a connector for connecting the target system or the extension probe.

2.2 Clock Setting

The oscillator mode of the real chip is supported with quartz oscillator on the socket SO3. The operating frequency setting of the oscillator on the socket SO3 must be from 3 to 6 MHz.

2.3 MODE Pin Setting

The emulator operation mode can be changed with the MODE pin setting.

2.3.1 MODE pin setting when emulator is used as stand-alone unit

When the emulator is used as a stand-alone unit, MODE0, MODE1 and MODE2 in the emulator are set as follows. The setting cannot be changed.

Table 2-3. MODE Pin Setting when Emulator is Used as Stand-Alone Unit

Emulator Operation	Settings Inside Emulator		
	MODE2	MODE1	MODE0
Single-chip mode 0	Not connected to pull up or pull down resistor		

2.3.2 MODE pin setting when emulator is used connected to target system

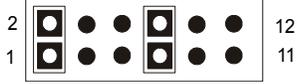
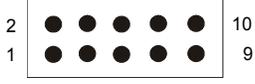
When the emulator is connected to a target system, set the MODE pins of the target system as follows based on the emulator operations.

Table 2-4. MODE Pin Setting when Emulator is Used Connected to Target System

Emulator Operation	Target System Setting		
	MODE2	MODE1	MODE0
Single-chip mode 0	Low-level input	High-level input	Low-level input
Single-chip mode 1	Low-level input	High-level input	High-level input
	Do not use another setting		

[MEMO]

CHAPTER 3 FACTORY SETTINGS

Item	Setting	Remark
JP2		All settings other than those set in the factory are prohibited. (Relationship EVA-chip↔IO-chip)
CN1		Only for internal use.
Jumper EM1-board	Please refer to default settings (chap 2.1(1))	
Crystal oscillator	6.000-MHz crystal oscillator is mounted.	


[MEMO]

CHAPTER 4 CAUTIONS

4.2 X1 Signal

The input signal (X1 signal) from the target system is delayed because it passes through LV125 before it is input to the I/O chip of the emulator.

Figure 4-2. Diagram of X1 Signal Flow

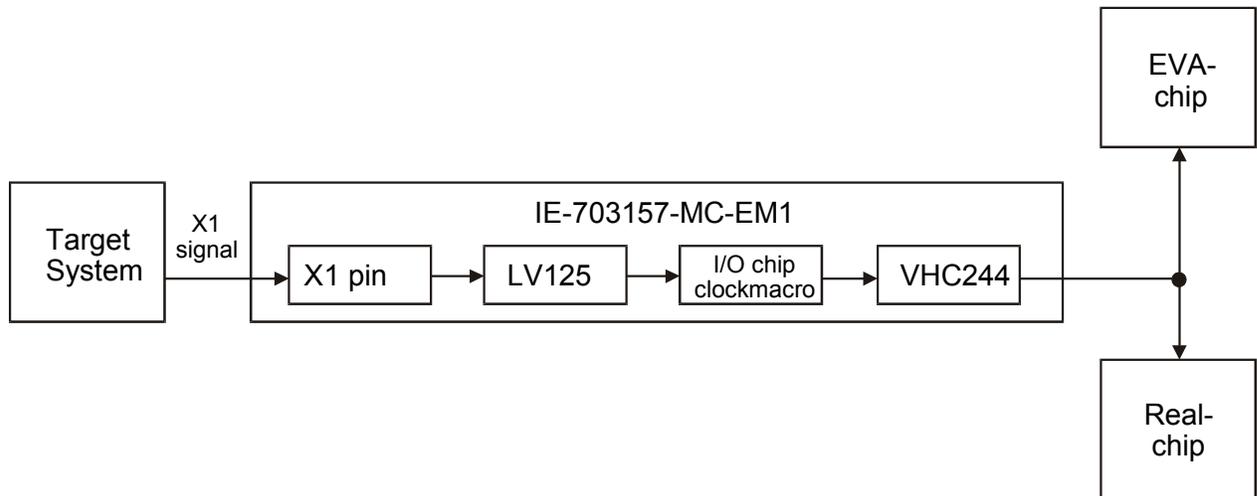

4.3 Pin Termination

(1) MODE0 to MODE2 pins

When the emulator operates as a stand-alone unit, the operation mode of the emulator is single-chip mode 0. The MODE0 to MODE2 pins are connected as follows.

- MODE0: Connected to target connector (no pull up / pull down)
- MODE1: Connected to target connector (no pull-up / pull down)
- MODE2: Connected to target connector (no pull-up / pull down)

(2) $\overline{\text{RESET}}$ pin

This pin is connected to V_{DD} via a resistor (10k Ω). (Pull-up)

(5) Vpp pin

This pin is connected to V_{SS} via a resistor (10k Ω). (Pull-down)

(4.4 Internal RAM and ROM)

Because the internal RAM (iRAM) and internal ROM (iROM) capacities of the emulator are set in steps, the memory capacity is different from that of the target device. If access is performed to addresses that exceed the target device capacity, the memory of the emulator is accessed. Memory capacities are as follows.


Table 4-1. Memory Capacity Limitation List

(a) iRAM capacity (Unit: byte)		(b) iROM capacity (Unit: byte)	
Target Device	Emulator	Target Device	Emulator (Emulation Memory)
1 K	1 K	1 K to 32 K	32 K
2 K	2 K	33 K to 64 K	64 K
3 K	3 K	65 K to 128 K	128 K
4 K	4 K	129 K to 256 K	256 K
5 K to 6 K	6 K	257 K to 512 K	512 K ^{Note}
7 K to 8 K	8 K		
9 K to 10 K	10 K		
11 K to 12 K	12 K		
13 K to 16 K	16 K		
17 K to 20 K	20 K		
21 K to 24 K	24 K		
25 K to 28 K	28 K		
29 K to 36 K	36 K		
37 K to 44 K	44 K		
45 K to 52 K	52 K		
53 K to 60 K	60 K		

Note The emulator is mounted iROM emulation memory of 512 Kbytes.

4.5 Port PAL, PHL, PDL, PCT and PCS

Figure 4-4. Circuit Diagram of Port 1 to 4, A, and B

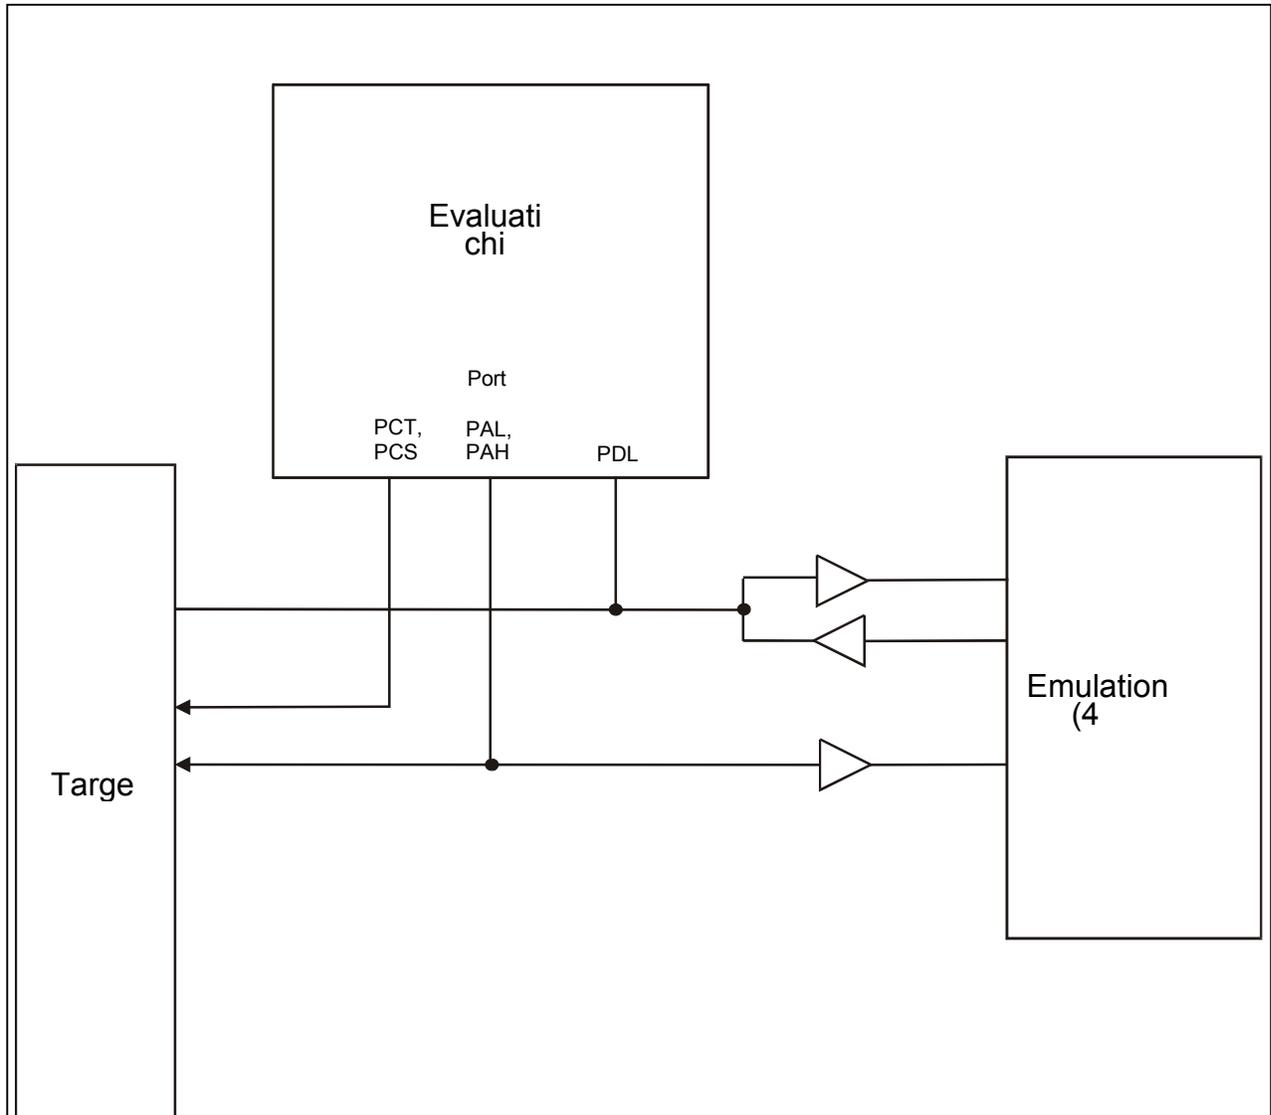

4.6 Bus Interface Pin

There are the following differences between the emulator and the target device in the operation of the pins for bus interface.

Table 4-2. Bus Interface Pin Operation List (1/2)
(a) During break

Pin Name	Waiting for Emulator Command	Internal Memory					External Memory			
		Internal ROM	Internal RAM		Internal Peripheral I/O		Emulation RAM		Target System	
		R	R	W	R	W	R	W	R	W
A0 to A23	Note	Note					Note		Note	
D0 to D15	Hi-Z	Hi-Z					Note		Note	
$\overline{WR0}$ / $\overline{WR1}$	H	H					H		Note	
\overline{RD}	H	H					H		Note	
$\overline{CS2}$ to $\overline{CS4}$	H	H					H		Note	
\overline{WAIT}	Invalid	Note					Maskable			

Note Performs the same operation as the cycle that is generated by the target device program execution.

- Remarks**
1. R : Read
W : Write
 2. H : High-level output
Hi-Z: High-impedance

Table 4-2. Bus Interface Pin Operation List (2/2)
(b) During user program execution

Pin Name	Internal Memory							External Memory					
	Internal ROM		Internal RAM			Internal Peripheral I/O		Emulation RAM			Target System		
	F	R	F	R	W	R	W	F	R	W	F	R	W
A0 to A23	Note							Note			Note		
D0 to D15	Hi-Z							Note			Note		
$\overline{WR0} / \overline{WR1}$	H							H			Note		
\overline{RD}	H							H			Note		
$\overline{CS2}$ to $\overline{CS4}$	H							H			Note		
\overline{WAIT}	Note							Maskable					

Note Performs the same operation as the cycle that is generated by the target device program execution.

- Remarks**
1. F : Fetch
R : Read
W : Write
 2. H : High-level output
Hi-Z: High-impedance

4.7 Emulation Memory Operation Timing Difference

This IE-703157-MC-EM1 Emulator Option Board is a real chip based board. The following table shows the functions, which are not or not complete emulated by the real chip itself. This means it could differ to real chip function.

Table 1 Not in real Chip realised Emulation Functions

Emulation	Function
Special Eval. Chip D703191	External Memory Access
Special Eval. Chip D703191	Alphanumeric Ports
Special Eval. Chip D703191	RESET
Special Eval. Chip D703191	MODE pins

memory access timing that is actually used.


When the area of the page ROM in the target system has been allocated to the emulation memory, the operation timing is the SRAM access timing.

When measuring the performance by using the emulation memory, adjust the setting so that the wait set matches the *Emulation source / Differences to Real chip*


[MEMO]

APPENDIX A PACKAGE DRAWINGS


(1) IE-V850E-MC + IE-703157-MC-EM1 (Unit: mm)

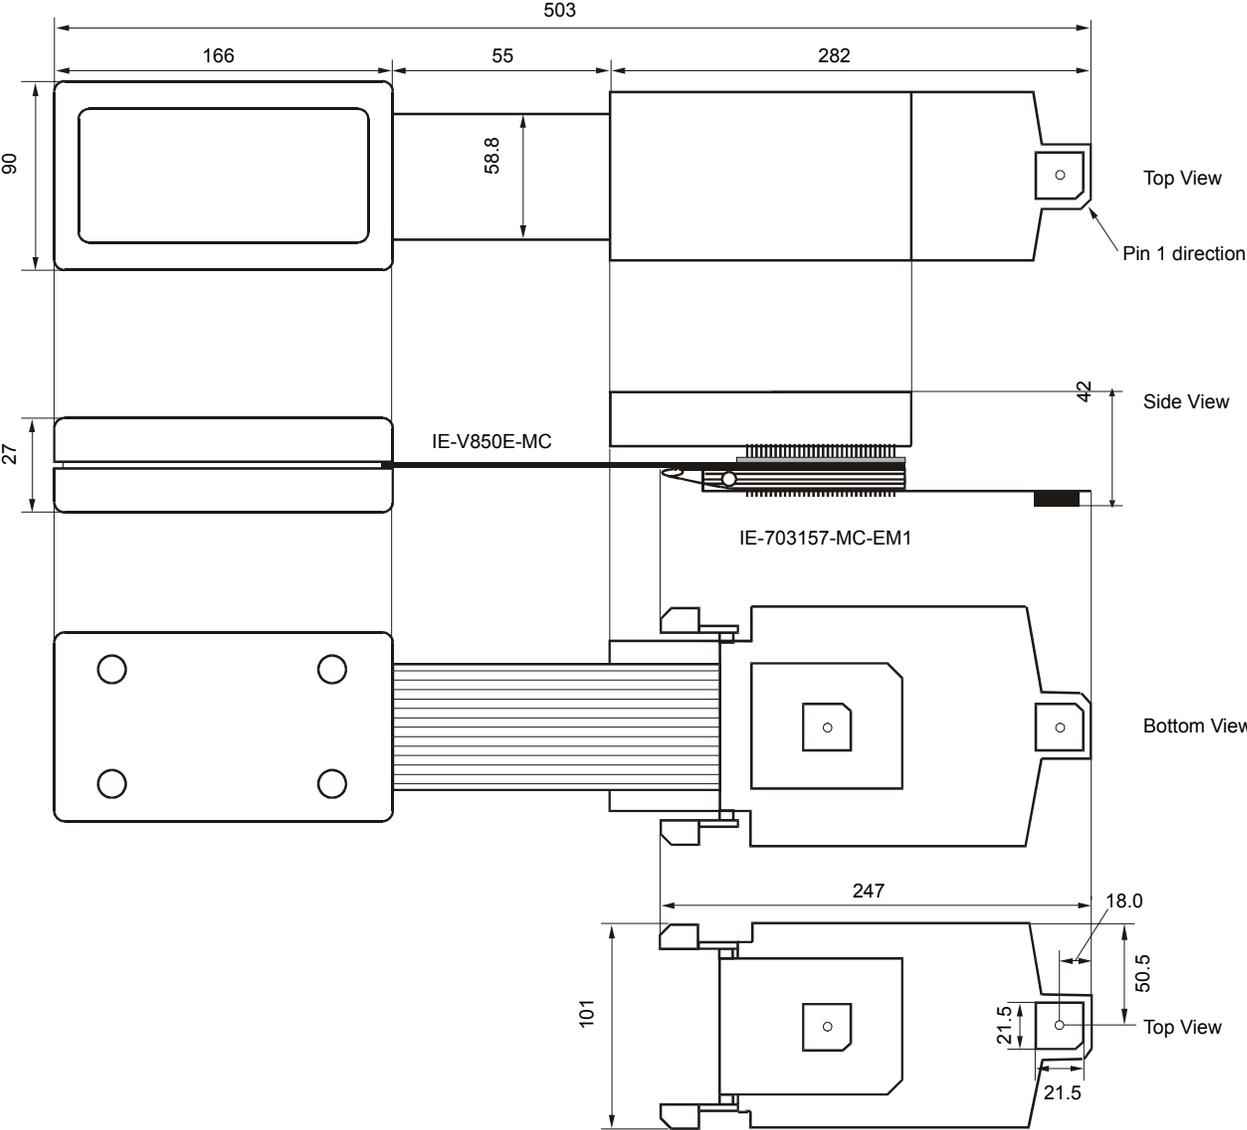

(2) SC-100SD (Unit: mm)

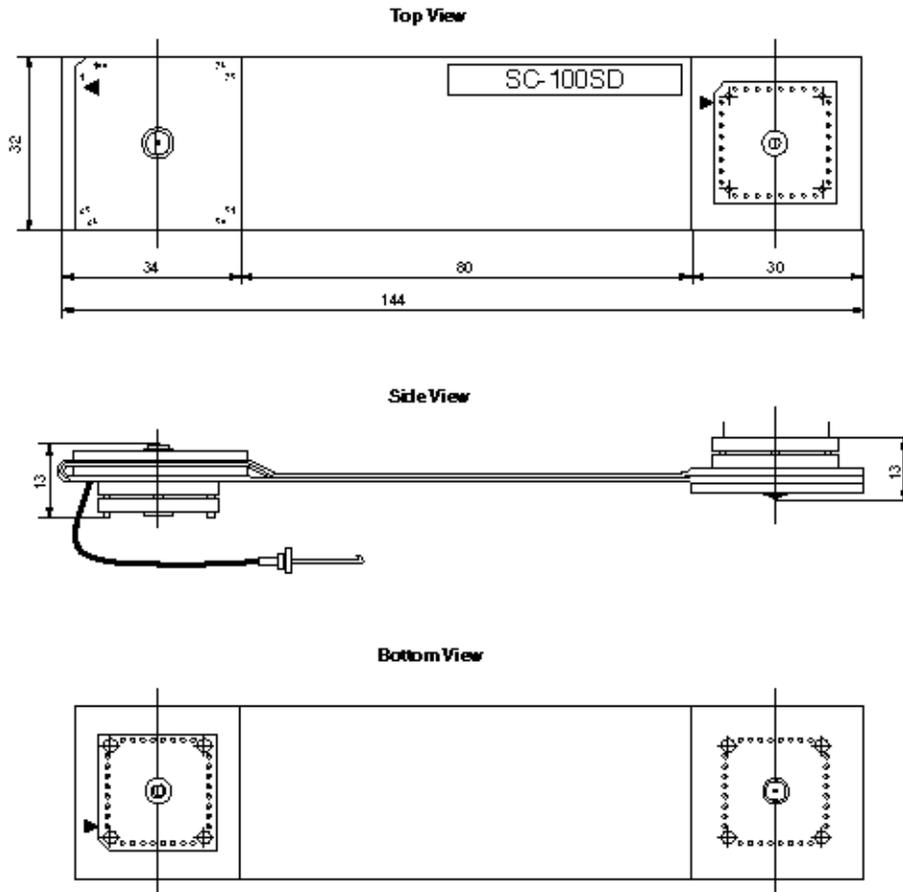


(3) NQPACK100SD (Unit: mm)

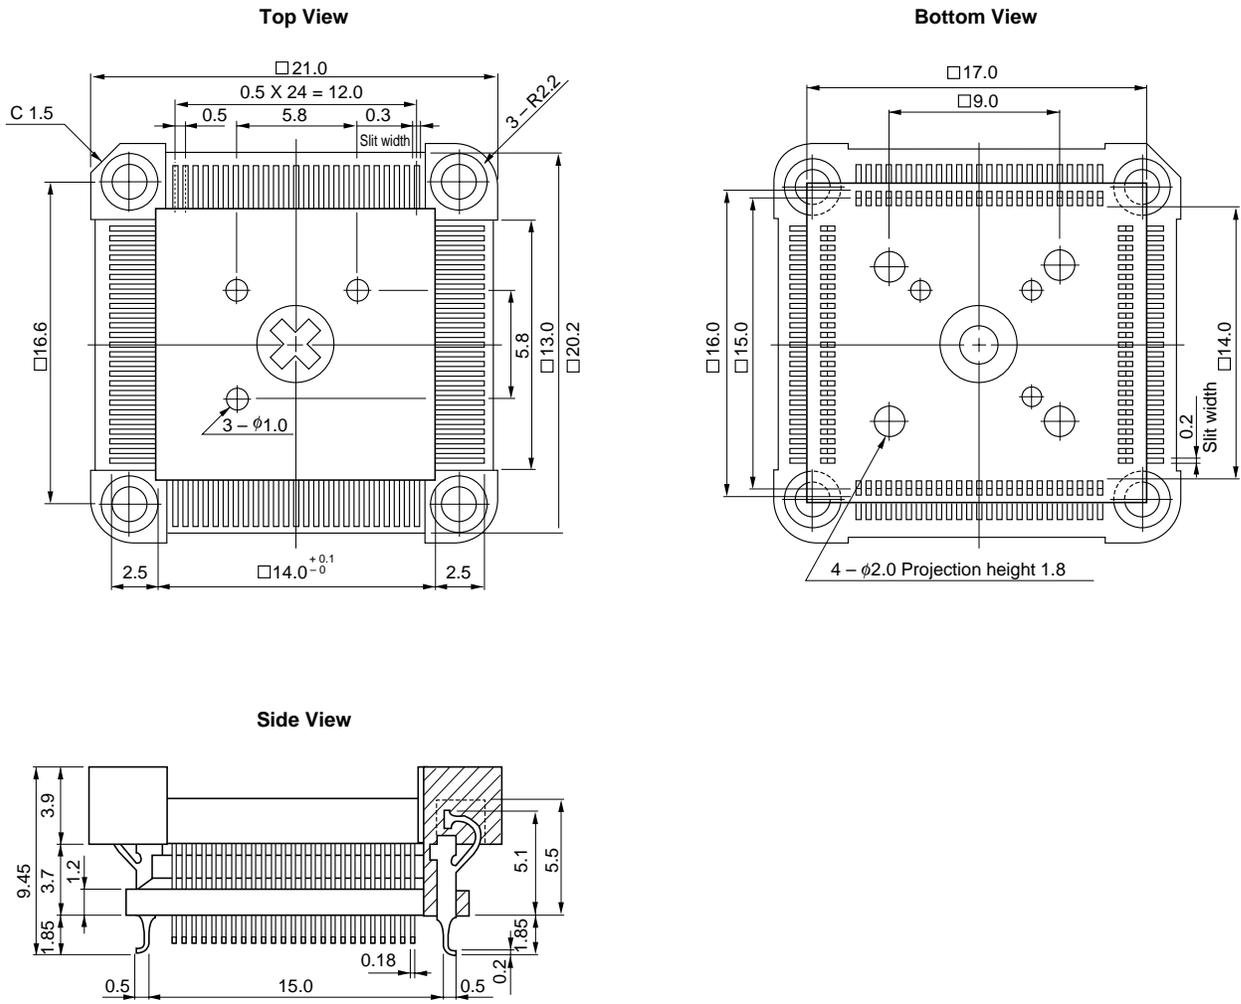


(4) YQPACK100SD (Unit: mm)


Top View

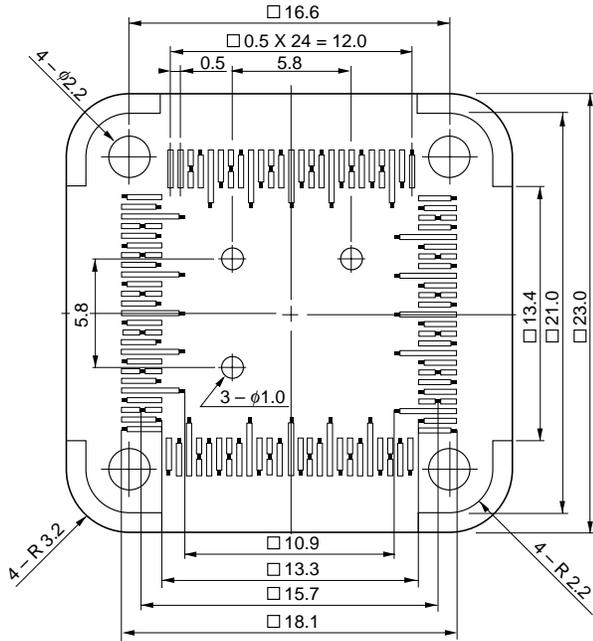

Bottom View

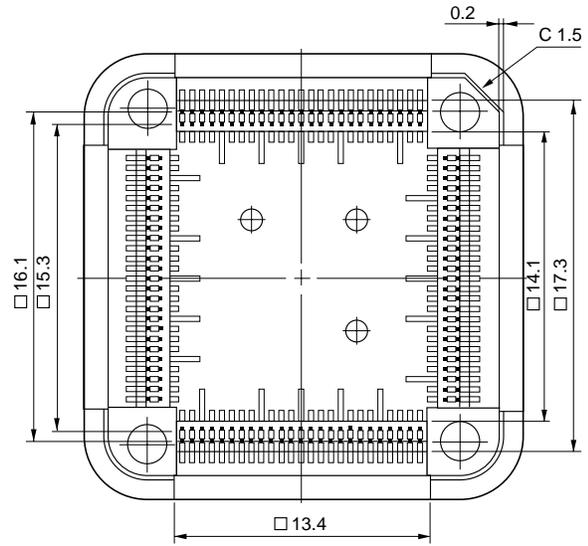


Side View

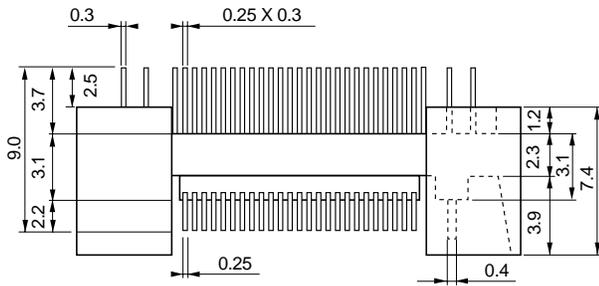


(5) HGPACK100SD (Unit: mm)


Top View

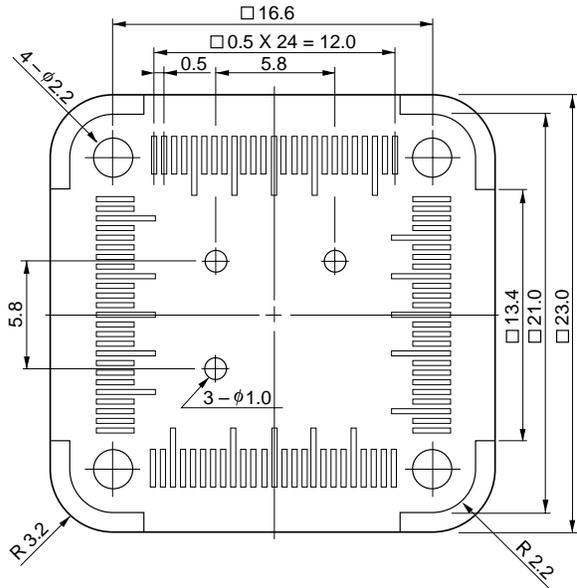

Bottom View

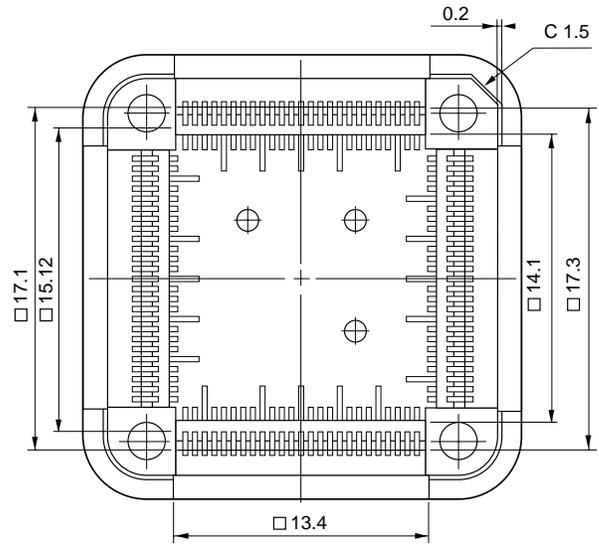


Side View

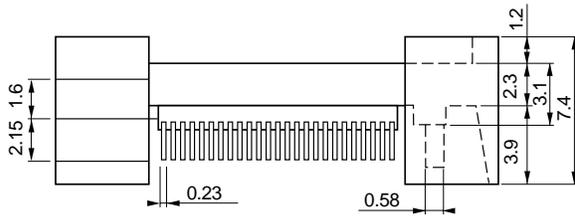


★

(6) YQSOCKET100DN (Unit: mm)

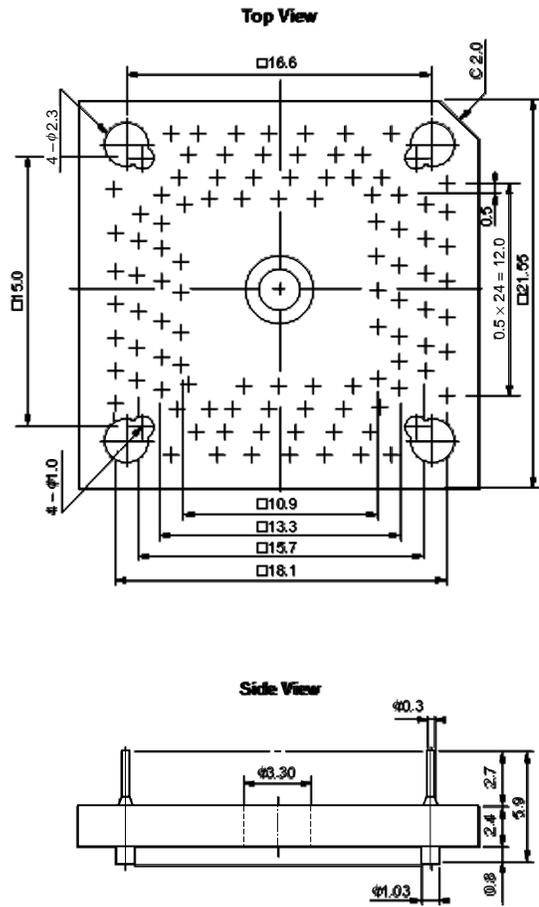


APPENDIX B EXAMPLE OF USE OF CONNECTOR FOR TARGET CONNECTION

(1) When directly connecting device to target system (Connector for target connection is not used)

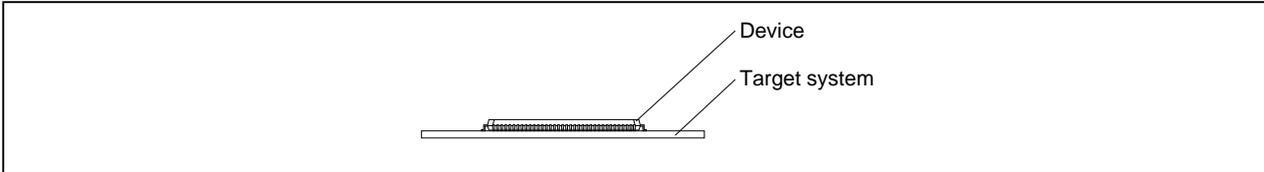


(2) When equipping device by using connector for target connection

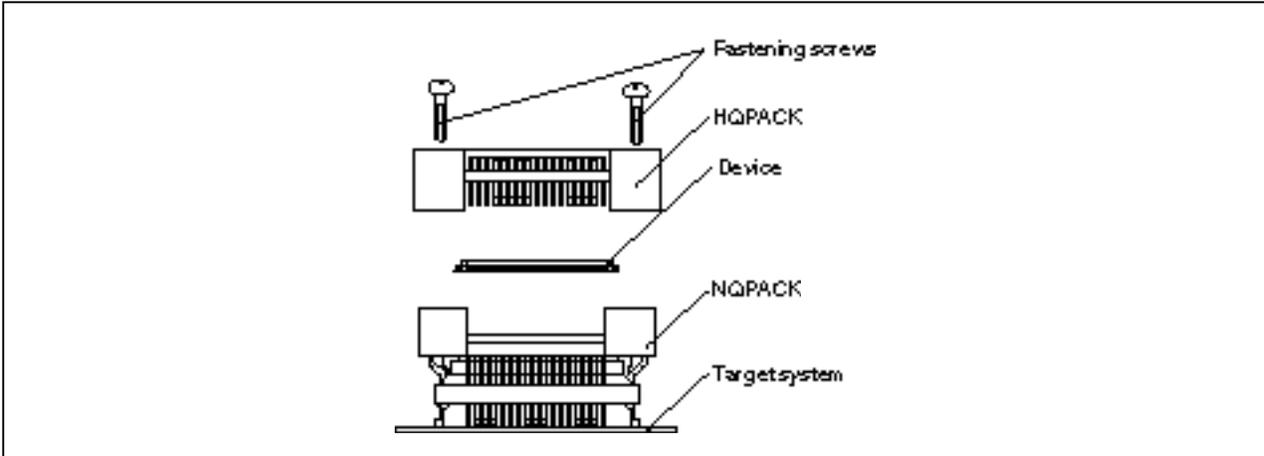


(3) Connection between emulator and target system

(a) When extension probe is not used

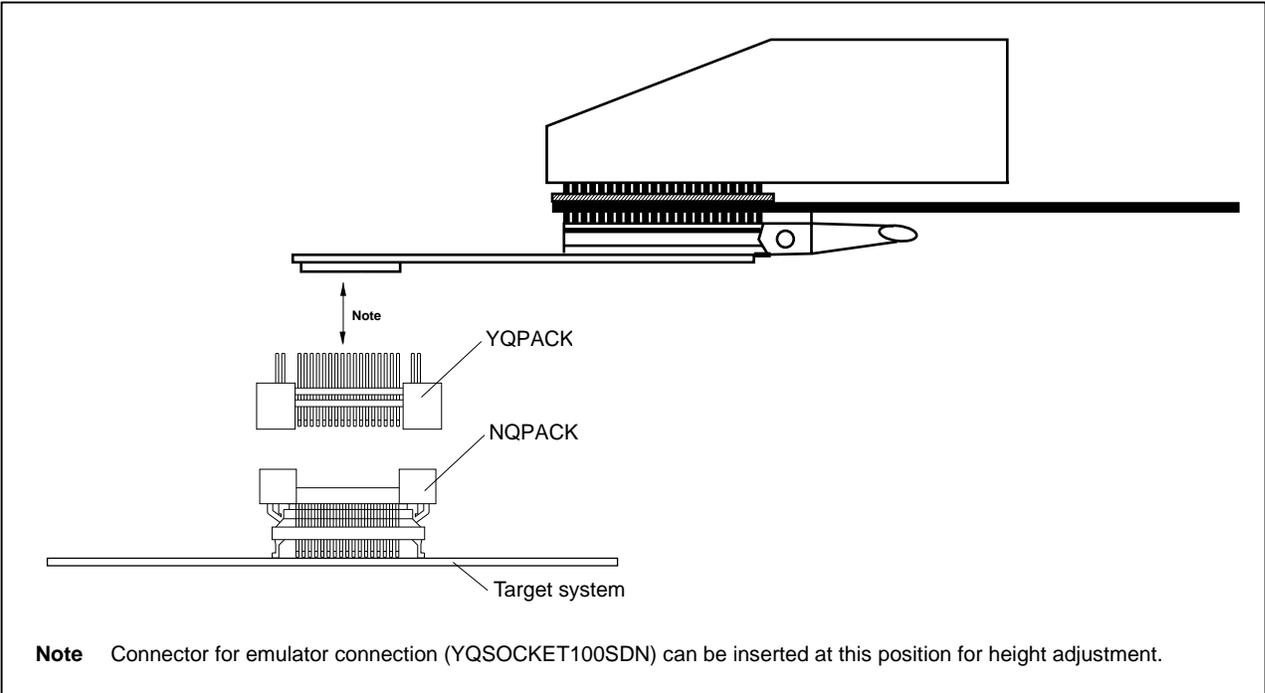

(b) Example of use of extension probe

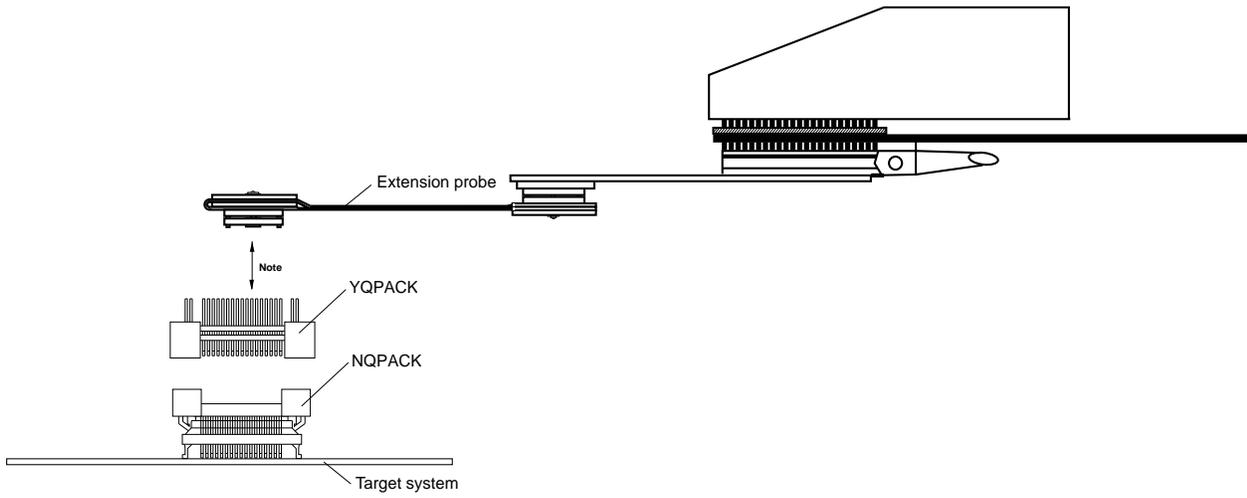

Note Connector for emulator connection (YQSOCKET100SDN) can be inserted at this position for height adjustment.

APPENDIX C CONNECTORS FOR TARGET CONNECTION

C.1 Use


(1) When mounting NQPACK100SD to target system

- <1> Coat the tip of four projections (points) at the bottom of the NQPACK100SD with two-component type epoxy adhesive (cure time longer than 30 min.) and bond the NQPACK100SD to the target system. If not bonded properly, the pad of the printed circuit board may peel off when the emulator is removed from the target system. If the lead of the NQPACK100SD does not coincide with the pad of the target system easily, perform step <2> to adjust the position.
- <2> To adjust the position, insert the guide pins for position-adjustment (NQGUIDE) provided with NQPACK100SD into the pin holes at the upper side of NQPACK100SD (refer to **Figure C-1**). The diameter of a hole is $\phi = 1.0$ mm. There are three non-through holes (refer to **APPENDIX A DIMENSIONS**).
- <3> After setting the HQPACK100SD, solder NQPACK100SD to the target system. By following this sequence, adherence of flux or solder spluttering to contact pins of the NQPACK100SD can be avoided.

Recommended soldering condition... Reflow : 240°C, 20 sec. max.
 Partial heating : 240°C, 10 sec. max. (per pin row)

- <4> Remove the guide pins.

Figure C-1. Mounting of NQPACK100SD

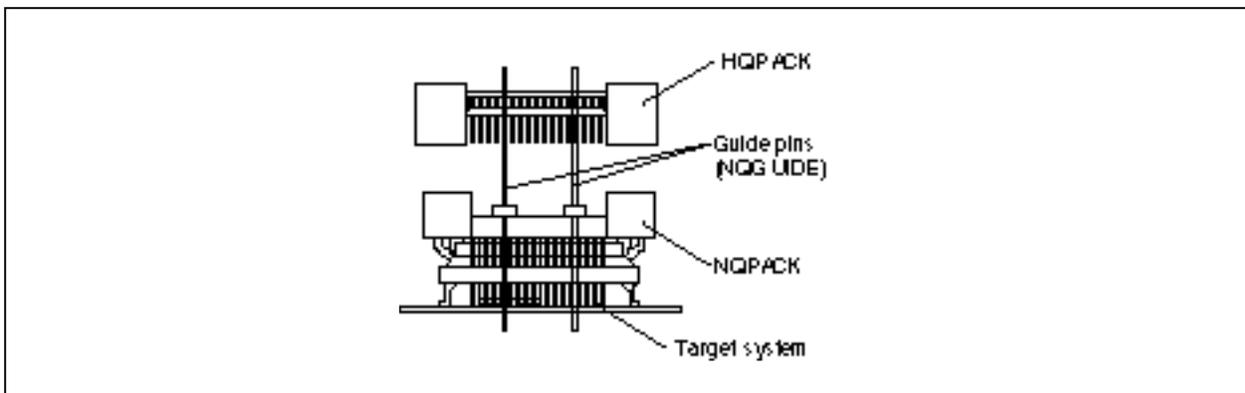

Remark NQPACK100SD: Connector for target connection
 HQPACK100SD: Cover for device installation

(2) When setting device

Caution Check for abnormal conditions such as resin burr or bent pins before setting a device to the NQPACK100SD. Moreover, check that the hold pins of the HQPACK100SD are not broken or bent before setting HQPACK100SD. If there are broken or bent pins, fix them with a thin, flat plate such as a blade.

<1> Make sure that the NQPACK100SD is clean and the device pins are parallel (flat) before setting a device to the NQPACK100SD. Then, after mounting the NQPACK100SD to the target board, set the device and HQPACK100SD (refer to **Figure C-2**).

<2> Using the screws provided with the HQPACK100SD (four locations: M2 × 6 mm), secure the HQPACK100SD, device, and NQPACK100SD.

Tighten the screws in a crisscross pattern with the provided screwdriver or driver with torque gauge (avoid tightening strongly only one screw). Tighten the screws with 0.55 kg-f-cm (0.054 N·m) max. torque. Excessive tightening may diminish conductivity.

At this time, each pin is fixed inside the plastic wall dividers by the contact pin of the NQPACK100SD and the hold pin of the HQPACK100SD (refer to **Figure C-3**). Thus, pins cannot cause a short with pins of neighboring devices.

Figure C-2. Mounting Device


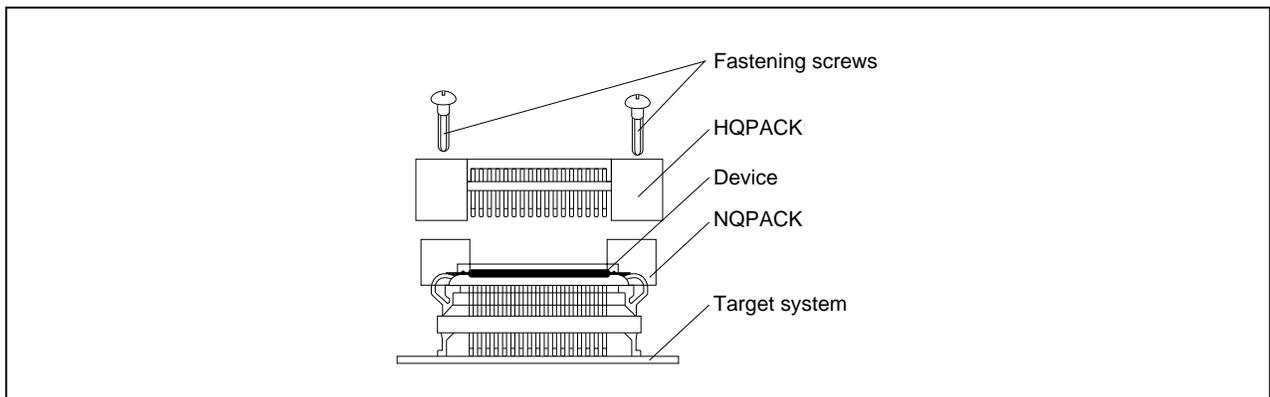


Figure C-3. NQPACK100SD and Device Pin

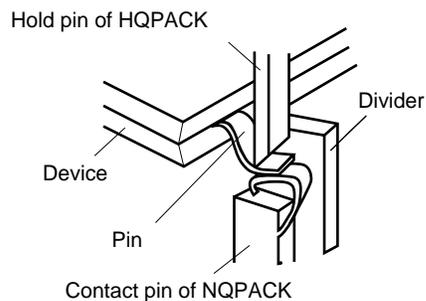

C.2 Cautions on Handling Connectors

- (1) When taking connectors out of the case, remove the sponge while holding the main unit.
- (2) When soldering the NQPACK100SD to the target system, cover the HQPACK100SD to protect it against splashing flux.

Recommended soldering conditions... Reflow : 240°C, 20 sec. max.
Partial heating : 240°C, 10 sec. max. (per pin row)

- (3) Check for abnormal conditions such as resin burr or bent pins before setting a device to the NQPACK100SD. Moreover, check that the hold pins of the HQPACK100SD are not broken or bent before setting HQPACK100SD. If there are broken or bent pins, fix them with a thin, flat plate such as a blade.
- (4) When securing the YQPACK100SD (connector for emulator connection) or HQPACK100SD to the NQPACK100SD with screws, tighten the four screws temporarily with the provided screwdriver or driver with torque gauge, then tighten the screws in a crisscross pattern (with 0.054 N·m max. torque).
Excessive tightening of only one screw may diminish conductivity.
If the conductivity is diminished after screw-tightening, stop tightening, remove the screws and check whether the NQPACK100SD is stained and make sure the device pins are parallel.
- (5) Device pins do not have high strength. Repeatedly connecting to the NQPACK100SD may cause pins to bend. When setting a device to the NQPACK100SD, check and adjust bent pins.

[MEMO]

APPENDIX D MOUNTING OF PLASTIC SPACER


This chapter describes the mounting method for the plastic spacer supplied with the IE-V850E-MC.

When using the emulator connected to the target system, mount the plastic spacer as shown in Figure D-1 to fix the pod horizontally.

(1) Mounting IE-V850E-MC to plastic spacer

- <1> Remove the nylon rivet from the rear part of the pod.
- <2> Tighten the plastic spacer with the supplied plastic screw.
- <3> To adjust the height, use a user spacer or stand.

Figure D-1. Mounting Method of Plastic Spacer

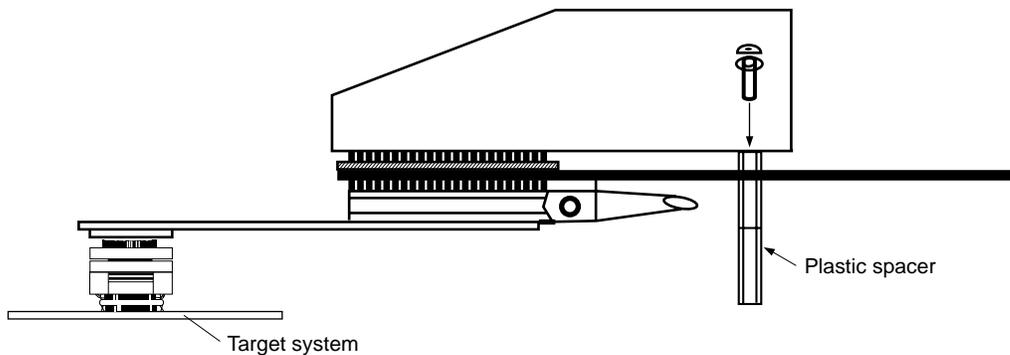

[MEMO]

Facsimile Message

Although NEC has taken all possible steps to ensure that the documentation supplied to our customers is complete, bug free and up-to-date, we readily accept that errors may occur. Despite all the care and precautions we've taken, you may encounter problems in the documentation. Please complete this form whenever you'd like to report errors or suggest improvements to us.

From:

Name

Company

Tel.

FAX

Address

Thank you for your kind support.

North America

NEC Electronics Inc.
Corporate Communications Dept.
Fax: 1-800-729-9288
1-408-588-6130

Hong Kong, Philippines, Oceania

NEC Electronics Hong Kong Ltd.
Fax: +852-2886-9022/9044

Asian Nations except Philippines

NEC Electronics Singapore Pte. Ltd.
Fax: +65-250-3583

Europe

NEC Electronics (Europe) GmbH
Technical Documentation Dept.
Fax: +49-211-6503-274

Korea

NEC Electronics Hong Kong Ltd.
Seoul Branch
Fax: 02-528-4411

Japan

NEC Semiconductor Technical Hotline
Fax: 044-548-7900

South America

NEC do Brasil S.A.
Fax: +55-11-6465-6829

Taiwan

NEC Electronics Taiwan Ltd.
Fax: 02-2719-5951

I would like to report the following error/make the following suggestion:

Document title: _____

Document number: _____ Page number: _____

If possible, please fax the referenced page or drawing.

Document Rating	Excellent	Good	Acceptable	Poor
Clarity	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Technical Accuracy	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Organization	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>