



IDT™ 89EBP0504UB USB3.0 Evaluation Board Manual

(Evaluation Board: 18-701-000)

March 2011

6024 Silver Creek Valley Road, San Jose, California 95138
Telephone: (800) 345-7015 • (408) 284-8200 • FAX: (408) 284-2775
Printed in U.S.A.
©2011 Integrated Device Technology, Inc.

DISCLAIMER

Integrated Device Technology, Inc. reserves the right to make changes to its products or specifications at any time, without notice, in order to improve design or performance and to supply the best possible product. IDT does not assume any responsibility for use of any circuitry described other than the circuitry embodied in an IDT product. The Company makes no representations that circuitry described herein is free from patent infringement or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent, patent rights or other rights, of Integrated Device Technology, Inc.

Boards that fail to function should be returned to IDT for replacement. Credit will not be given for the failed boards nor will a Failure Analysis be performed.

LIFE SUPPORT POLICY

Integrated Device Technology's products are not authorized for use as critical components in life support devices or systems unless a specific written agreement pertaining to such intended use is executed between the manufacturer and an officer of IDT.

1. Life support devices or systems are devices or systems which (a) are intended for surgical implant into the body or (b) support or sustain life and whose failure to perform, when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in a significant injury to the user.
2. A critical component is any components of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.



Table of Contents

Notes

Description of the EBP0504UB USB3.0 Evaluation Board

Introduction	1-1
Board Features	1-1
Hardware	1-1
Revision History	1-1

Installation of the EBP0504UB USB3.0 Evaluation Board

EBP0504UB Installation.....	2-1
Hardware Description	2-1
External Power Source	2-1
1.2V Voltage Regulator.....	2-2
Boot Configuration Vector.....	2-2
LEDs	2-4
USB 3.0 Connectors	2-4
EBP0504UB Board Figures	2-5

Schematics

Schematics	3-1
------------------	-----

Notes



List of Tables

Notes

Table 2.1	External Power Connector — J7	2-1
Table 2.2	Boot Configuration Vector Signals	2-2
Table 2.3	Two Bit 3-Level Input Hexadecimal Notation	2-3
Table 2.4	LED Indicators	2-4

Notes



List of Figures

Notes

Figure 2.1	EBP0504UB Board Topside Figure	2-5
Figure 2.2	EBP0504UB Board Bottom Figure	2-6

Notes



Description of the EBP0504UB USB3.0 Evaluation Board

Notes

Introduction

The 89HP0504UB 5Gbps Signal Repeater (also referred to as P0504UB in this manual) is a member of the IDT Signal Integrity Products family. It is a 4-channel repeater that supports 2 bidirectional USB3.0 channel. The main function of a signal repeater is to extend the reach of USB3.0 signals over a board trace or a cable far beyond that which can be achieved natively by a USB3.0 device.

The 89EBP0504UB (EBP0504UB) evaluation board provides an evaluation platform for the P0504UB signal repeater. The evaluation board provided by IDT can be configured to test the functionality of the P0504UB device in a wide variety of system topologies.

Board Features

Hardware

- ◆ P0504UB Signal Repeater for USB 3.0
 - Single P0504UB device enabling 2 bidirectional USB3.0 channels on a single board
 - USB3.0 connector on each side of the board allows USB3.0 cables plugs into Host and Target devices.
 - Additional USB-SMA breakout cards can be provided upon request for testing purposes.
- ◆ Numerous user-selectable configurations set using onboard jumpers and DIP-switches
 - Channel selection
 - Device power down
 - Receiver equalization
 - Transmitter swing

Revision History

March 18, 2011: Initial publication of evaluation board manual.

Notes



Installation of the EBP0504UB USB3.0 Evaluation Board

Notes

EBP0504UB Installation

This chapter discusses the steps required to configure and install the EBP0504UB evaluation board. All available DIP switches and jumper configurations are explained in detail.

The primary installation steps are:

1. Configure jumper/switch options suitable for the evaluation or application requirements.
2. Connect the USB3.0 cable between the Host and EBP0504UB. Connect the USB3.0 cable between the EBP0504UB and the USB3.0 device, such as an external USB3.0 storage drive.

The EBP0504UB board is typically shipped with all jumpers and switches configured to their default settings. In most cases, the board does not require further modification or setup.

For technical support, please visit the IDT website and fill out the Technical Support Request form at <http://www.idt.com/?app=TechSupport&prodFamily=sigal%20integrity%20products>.

Hardware Description

The IDT 89HP0504UB is a 5Gbps Repeater IC that reconditions high-speed serial data streams. The 89HP0504UB contains four half-duplex data lanes, where each half-duplex lane consists of a differential equalizer, as well as a transmit driver that includes de-emphasis.

The EBP0504UB consists of single P0504UB device.

Basic requirements for the board to run are:

- USB3.0 Host Controller.
- USB3.0 Target.

External Power Source

External power is supplied to the EBP0504UB board through a 15-pin SATA power connector (J7). The external power supply provides +3.3V to the EBP0504UB as described in Table 2.1. The +12V and +5V are unused. Please do not use adapters that can convert a 4-pin Molex connector to a SATA power connector because the 4-pin Molex connectors do not provide +3.3V power, these adapters provide only +5V and +12V power and leave the +3.3V lines unconnected.

Pin	Signal
1	3.3V
2	3.3V
3	3.3V
4	GND
5	GND
6	GND
7	5V
8	5V

Table 2.1 External Power Connector — J7 (Part 1 of 2)

Notes

Pin	Signal
9	5V
10	GND
11	SPIN-UP
12	GND
13	12V
14	12V
15	12V

Table 2.1 External Power Connector — J7 (Part 2 of 2)

1.2V Voltage Regulator

A 3.3V to 1.2V voltage regulator (VR2) provides the 1.2V supply voltage (VDD) to the P0504UB.

Boot Configuration Vector

A boot configuration vector consisting of the signals listed in Table 2.2 is sampled by the P0504UB during power-on. The boot configuration vector defines the essential parameters for repeater operation and is set using DIP switches S2 as defined in Table 2.2.

Signal	Description								
S2[0]: CHSEL	Channel Transfer Mode. <table> <tr> <th><u>CHSEL</u></th><th><u>Setting</u></th></tr> <tr> <td>VSS</td><td>Multi-cast mode</td></tr> <tr> <td>Open</td><td>Direct-connect mode (default)</td></tr> <tr> <td>VDD</td><td>Cross-connect mode</td></tr> </table>	<u>CHSEL</u>	<u>Setting</u>	VSS	Multi-cast mode	Open	Direct-connect mode (default)	VDD	Cross-connect mode
<u>CHSEL</u>	<u>Setting</u>								
VSS	Multi-cast mode								
Open	Direct-connect mode (default)								
VDD	Cross-connect mode								
S2[1]: A[0]RXEQ S2[2]: A[1]RXEQ	Receiver Equalization. Programming of channel A0 via pin is shown below. To program channel A1, use pin for that channel. <table> <tr> <th><u>A0RXEQ</u></th><th><u>Setting</u></th></tr> <tr> <td>VSS</td><td>2dB</td></tr> <tr> <td>Open</td><td>6dB (Default)</td></tr> <tr> <td>VDD</td><td>14dB</td></tr> </table>	<u>A0RXEQ</u>	<u>Setting</u>	VSS	2dB	Open	6dB (Default)	VDD	14dB
<u>A0RXEQ</u>	<u>Setting</u>								
VSS	2dB								
Open	6dB (Default)								
VDD	14dB								
S2[3]: B[0]RXEQ S2[4]: B[1]RXEQ	Receiver Equalization. Programming of channel B0 via pin is shown below. To program channel B1, use pin for that channel. <table> <tr> <th><u>B0RXEQ</u></th><th><u>Setting</u></th></tr> <tr> <td>VSS</td><td>2dB</td></tr> <tr> <td>Open</td><td>6dB (Default)</td></tr> <tr> <td>VDD</td><td>14dB</td></tr> </table>	<u>B0RXEQ</u>	<u>Setting</u>	VSS	2dB	Open	6dB (Default)	VDD	14dB
<u>B0RXEQ</u>	<u>Setting</u>								
VSS	2dB								
Open	6dB (Default)								
VDD	14dB								

Table 2.2 Boot Configuration Vector Signals (Part 1 of 2)

Notes

Signal	Description												
S2[5]: A[0]TXSW S2[6]: A[1]TXSW	Transmitter Voltage Swing (pk-pk). Programming of channel A0 via pin is shown below. To program channel A1, use pin for that channel. <table><tr><td><u>A0TXSW</u></td><td><u>Swing</u></td><td><u>De-Emphasis</u></td></tr><tr><td>VSS</td><td>0.5Vdiff-pkpk</td><td>0dB</td></tr><tr><td>Open</td><td>0.8Vdiff-pkpk (Default)</td><td>-3.5dB</td></tr><tr><td>VDD</td><td>0.95Vdiff-pkpk</td><td>-6.5dB</td></tr></table>	<u>A0TXSW</u>	<u>Swing</u>	<u>De-Emphasis</u>	VSS	0.5Vdiff-pkpk	0dB	Open	0.8Vdiff-pkpk (Default)	-3.5dB	VDD	0.95Vdiff-pkpk	-6.5dB
<u>A0TXSW</u>	<u>Swing</u>	<u>De-Emphasis</u>											
VSS	0.5Vdiff-pkpk	0dB											
Open	0.8Vdiff-pkpk (Default)	-3.5dB											
VDD	0.95Vdiff-pkpk	-6.5dB											
S2[7]: B[0]TXSW S2[8]: B[1]TXSW	Transmitter Voltage Swing (pk-pk). Programming of channel B0 via pin is shown below. To program channel B1, use pin for that channel. <table><tr><td><u>B0TXSW</u></td><td><u>Swing</u></td><td><u>De-Emphasis</u></td></tr><tr><td>VSS</td><td>0.5Vdiff-pkpk</td><td>0dB</td></tr><tr><td>Open</td><td>0.8Vdiff-pkpk (Default)</td><td>-3.5dB</td></tr><tr><td>VDD</td><td>0.95Vdiff-pkpk</td><td>-6.5dB</td></tr></table>	<u>B0TXSW</u>	<u>Swing</u>	<u>De-Emphasis</u>	VSS	0.5Vdiff-pkpk	0dB	Open	0.8Vdiff-pkpk (Default)	-3.5dB	VDD	0.95Vdiff-pkpk	-6.5dB
<u>B0TXSW</u>	<u>Swing</u>	<u>De-Emphasis</u>											
VSS	0.5Vdiff-pkpk	0dB											
Open	0.8Vdiff-pkpk (Default)	-3.5dB											
VDD	0.95Vdiff-pkpk	-6.5dB											
S2[9]: PDB	Power-down Enable. <table><tr><td><u>PDB</u></td><td><u>Setting</u></td></tr><tr><td>VSS</td><td>Powerdown IC. RX terminations are in Hi-Z, TX is disabled</td></tr><tr><td>VDD</td><td>Normal operation (internal 11K ohm minimum pull-up applied)</td></tr></table>	<u>PDB</u>	<u>Setting</u>	VSS	Powerdown IC. RX terminations are in Hi-Z, TX is disabled	VDD	Normal operation (internal 11K ohm minimum pull-up applied)						
<u>PDB</u>	<u>Setting</u>												
VSS	Powerdown IC. RX terminations are in Hi-Z, TX is disabled												
VDD	Normal operation (internal 11K ohm minimum pull-up applied)												

Table 2.2 Boot Configuration Vector Signals (Part 2 of 2)

For the pin list in Table 2.2, two 3-level input pins will have four bit outputs. The 3-level input can be mapped to hexadecimal notation as shown in Table 2.3.

Example [1:0] Input Voltage (VSS, VMI, VDD)	Example[3:0] Hexadecimal Notation
VSS, VSS	4'h0 (0000)
VSS, VMI	4'h1 (0001)
VSS, VDD	4'h3 (0011)
VMI, VSS	4'h4 (0100)
VMI, VMI	4'h5 (0101)
VMI, VDD	4'h7 (0111)
VDD, VSS	4'hC (1100)
VDD, VMI	4'hD (1101)
VDD, VDD	4'hF (1111)

Table 2.3 Two Bit 3-Level Input Hexadecimal Notation

Notes

LEDs

There are LED indicators on the EBP0504UB which convey status feedback. A description of each is provided in Table 2.4.

Location	Color	Definition
DS3	Green	3.3V Power Indicator
DS4	Green	1.2V Power Indicator

Table 2.4 LED Indicators

USB 3.0 Connectors

The P0504UB repeater has no special orientation requirements with respect to the host controller or target device. USB connectors J18, J19, J20, and J21 can be attached via cable to either the host or target device. The channel/trace length between the P0504UB and J19 is 18 inches which is intended to model a typical PC environment. It is important, however, to properly set the receiver equalization and transmitter settings based on the cable/channel length being used.

Notes

EBP0504UB Board Figures

The top and bottom views of the board are shown in Figures 2.1 and 2.2 respectively.

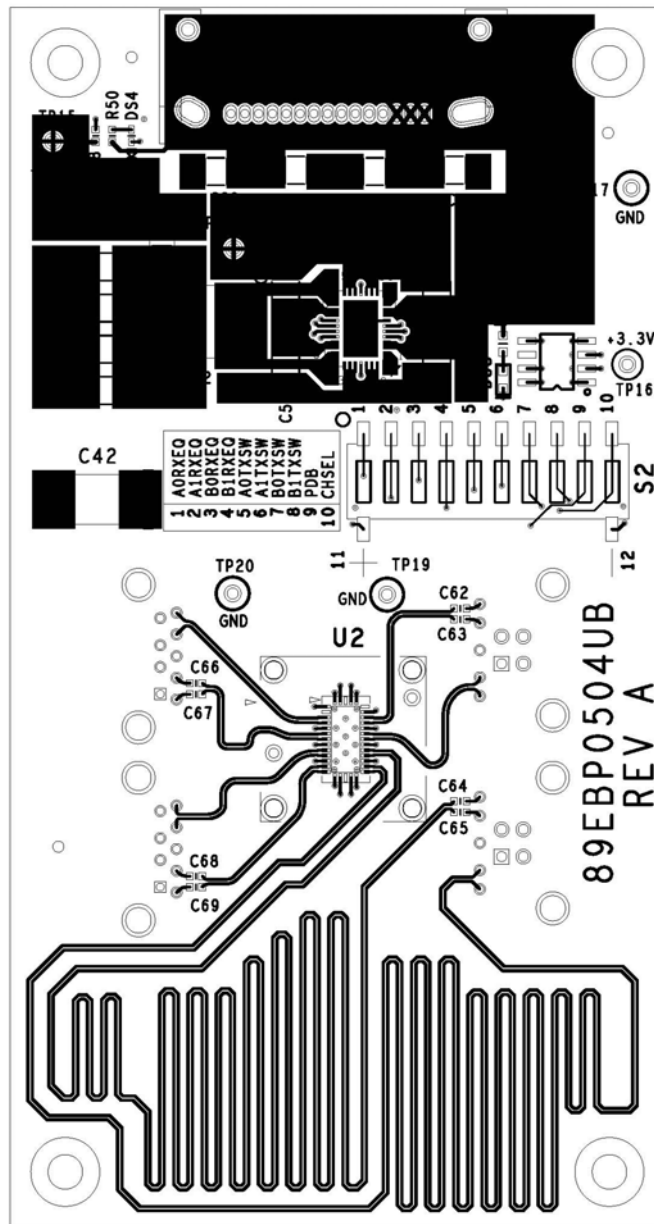


Figure 2.1 EBP0504UB Board Topside Figure

Notes

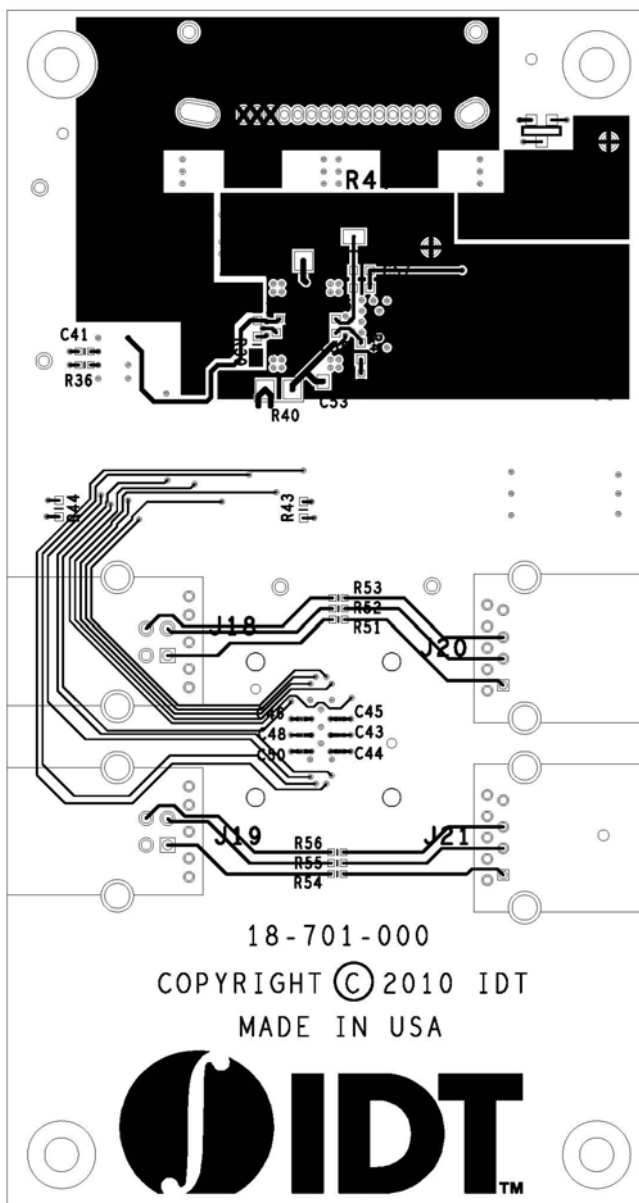


Figure 2.2 EBP0504UB Board Bottom Figure



Schematics

Notes

Schematics

[illegible]

