

ISL94212EVKIT1Z

Multi-Cell Li-Ion Battery Manager Evaluation Kit

Description

The ISL94212EVKIT1Z is a kit that facilitates use of the [ISL94212](#) BMS device. The ISL94212 monitors cell voltage and temperature. It converts the cell voltages and temperatures to 14-bit digital values, provides cell balance control, It provides significant fault detection. The ISL94212 can operate in a single device configuration, or multiple kits can be cascaded using a built-in daisy chain connection. The daisy chain hardware provides robust, redundant board-to-board communications.


Specifications

This board has been configured and optimized for the following operating conditions:

- $V_{BAT} = 6V$ to $60V$
- V_{BAT} daisy chain = $10V$ to $60V$
- VC_n (for $n = 1$ to 12) = $V(VC_{n-1})$ to $V(VC_{n-1}) + 5V$
- CB_n (for $n = 1$ to 9) = $V(VC_{n-1})$ to $V(VC_{n-1}) + 9V$
- CB_n (for $n = 10$ to 12) = $V(VC_n) - 9V$ to $V(VC_n)$
- External inputs $Ext_{1-4} = 0V$ to $2.5V$
- SPI communications refer to ISL94212 Datasheet
- V_{POR} (V_{BAT}) voltage (rising) typical $5.1V$


Features

- Supports both stand alone and daisy chained configurations
- Daisy chaining with both connector only or wire jumper options
- GUI provided export option for generation of detailed register and/or SPI communications log files.
- USB dongle runs HID firmware for driver-less enumeration and communications with Windows platforms
- GUI add-in chart generation tool supports real-time graphing, zoom and export of captured data.
- Software provides checksum requirements associated with daisy chain communications.
- Kit includes "Battery Emulation" board(s) for cell voltages generation.

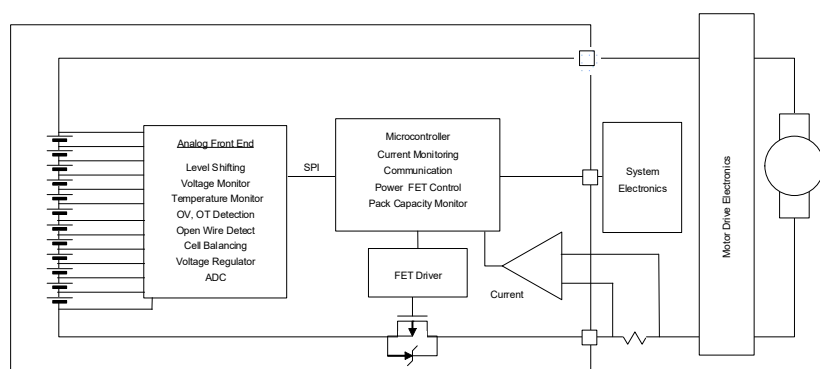

Applications requiring 12 cells or less can operate with a single device as shown.

Figure 1. Single Device Configuration

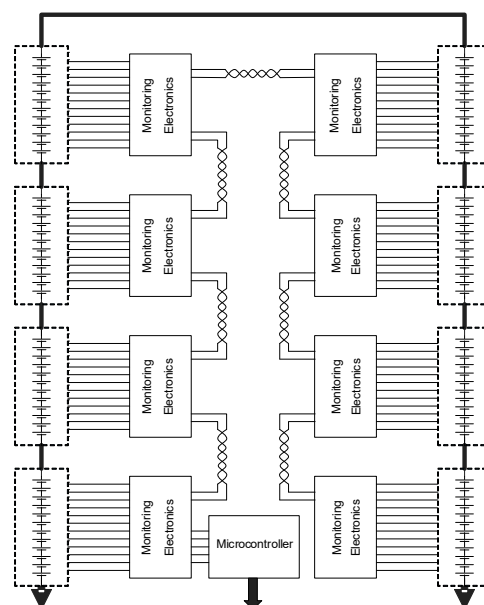

The ISL94212 can also operate in a 2 to 14 device configuration (Daisy Chain).

Figure 2. Daisy Chain Configuration

Contents

1. Document Overview	3
1.1 Software Installation	3
1.2 Quick Hardware Setup Guide	3
1.3 Quick GUI Setup Guide (Using the GUI)	3
2. Functional Description	3
3. Kit Contents	3
4. Required Equipment	4
5. Operating Range	4
6. PCB Layout Guidelines	5
7. Software Installation	5
8. Quick Hardware Setup Guide	7
8.1 Single Board	7
8.2 Daisy Chain	9
9. Quick GUI Setup Guide (Using the GUI)	12
9.1 Chart Window	13
9.2 Monitor Tab	14
9.3 Fault Tab	15
9.4 Command Tab	16
10. Board Design	17
10.1 Schematics	18
10.2 Bill of Materials	21
10.3 Layout	23
11. Default Configuration Settings	24
12. Errata/Q&A	24
13. Typical Performance Curves	26
13.1 Internal Temperature	26
13.2 Voltage Inputs	27
14. Ordering Information	27
15. Revision History	27

1. Document Overview

The following are three key portions of this document:

1.1 Software Installation

The software is necessary to use this evaluation kit. This section guides you through the installation and verification of both the GUI / Windows software and also the USB enumeration of the HID firmware/dongle device for PC to device(s) communication.

1.2 Quick Hardware Setup Guide

This section provides information regarding the connection of the various boards and the settings of the configuration options.

1.3 Quick GUI Setup Guide (Using the GUI)

The section steps the user through fundamental use of the GUI software. Enough information is provided to establish and verify communications are working properly and enable the user to observe measurements in real time and export data as well.

2. Functional Description

The ISL94212 evaluation Kit, coupled with the associated GUI provides the means to familiarize oneself with the various instructions capability and operation of the device. A single ISL94212 Li-ion battery manager IC supervises up to 12 series connected cells. The part provides accurate monitoring, cell balancing and extensive system diagnostics functions.

The kit enables the user to activate and data log voltage and temperature measurements. Cell voltages are supplied via a resistor ladder network in the MCB_PS2_Z multi-cell power supply test board.

The ISL94212 has three cell balancing modes incorporated: Manual Balance mode, Timed Balance mode and Auto Balance mode. The auto balance mode terminates balancing functions when a charge transfer value specified by the host microcontroller has been met. Note: Cell balancing will require the removal of the MCB_PS2_Z multi-cell power supply test board and attachment of Cell devices that are capable of sourcing and sinking current.

The ISL94212 communicates to a host microcontroller via an SPI interface and to other ISL94212 devices using a robust, two-wire daisy chain system. The primary evaluation board provides configuration options that can be set via switches. These are discussed in detail later in this document.

Connecting multiple Renesas boards allows the user to setup communications and measurement capability of many packs and up to 185 battery cells. However, one should review the [Quick Hardware Setup Guide](#). There will be safety concerns as voltage levels increase with multiple packs.

3. Kit Contents

The ISL94212EVKIT1Z evaluation kit contains:

- ISL94212EVZ evaluation board
- MCB_PS2_Z multi-cell power supply test board
- MCB_MICRO_EVZ multi-cell power supply test board
- USB cable, connects PC to evaluation board
- 16 conductor flat cable (connects power supply board to evaluation board)
- One daisy chain cable

4. Required Equipment

The following instruments are required to perform testing:

- 60V/1A adjustable power supply
- Wires to connect power supply to MCB_PS2_Z board
- Precision multimeter
- Oscilloscope (optional)
- Cables and wires (Optional)
- Windows computer with USB port

5. Operating Range

Single device setup (non-daisy chain) mode can operate with a battery voltage of 6V to 60V. When using less than 12 cells, the user should consult the datasheet regarding cell connections.

However, caution should be employed during daisy chain operation. In this mode, up to 14 boards can be connected. While each board is operating on a relative voltage of up to 60V, this “floating” is accomplished using the AC coupling of the daisy chain circuits (see [Figure 3](#)).

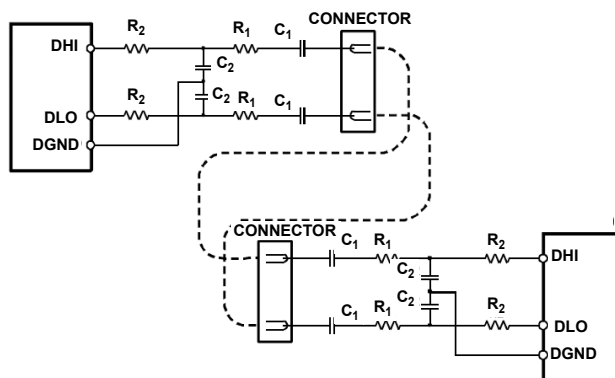


Figure 3.

As mentioned in the [Quick Hardware Setup Guide](#), while each board is operation in 60V range, total voltage across multiple packs can be dangerous.

6. PCB Layout Guidelines

The ISL94212 layout has been optimized for electrical and protection during hot plug conditions.

During layout the designer should consider:


- While the ISL94212 does not dissipate much power itself, the internal temperature sensor might be more functional if a thermal array is incorporated under the QFN thermal slug. The user is invited to review Technical Brief [TB389](#) regarding the thermal vias and the package pad.
- The user should review closely the artwork, component values and routing of the daisy chain circuitry.
- The standard evaluation board accommodates both connector-to-connector or cabled communication paths. If multiple devices are being used, physical placement/size of the cells should be reviewed in starting your product's layout.
- Finally, the mechanical aspects of the battery pack should be considered. Much as been written regarding damaged BMS PCBs as a result of slight shifting of battery cells. (Cells tend to be heavy and therefore can impart significant force)

7. Software Installation


This version of software supports both ISL94212 or ISL78600 devices. It has been tested on XP, Win7, and Win8 platforms.

1. Run the *Intersil_BMS_Vxxx.exe* file. This installs the BMS GUI software to the PC. Depending on your IT department there are a couple of items to address when performing an installation.

Select **Run As Administrator** option when available (Right click in installation program)

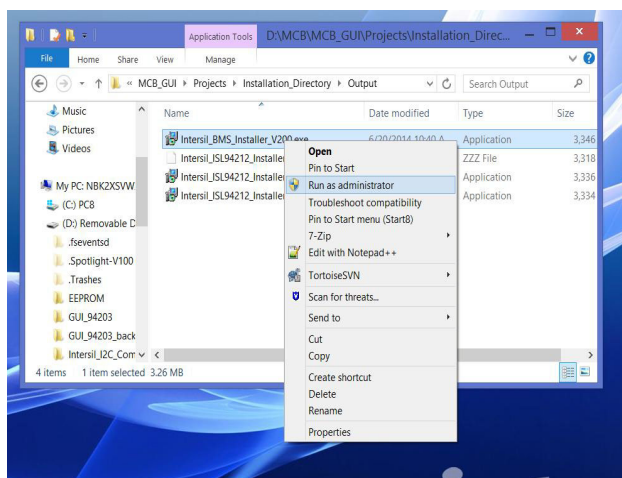

When setting up project installation and shortcut paths, consider using Users\Public instead of program directory.

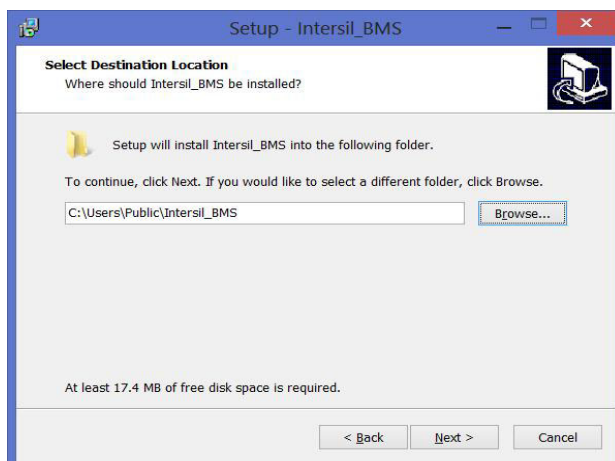

2. Connecting the evaluation board results in automatic USB enumeration under the Human Interface section of the Windows device manager.

8. Quick Hardware Setup Guide

8.1 Single Board

Complete the following steps.

1. Connect the MCB_MICRO_EVZ board (J1) to the ISL94212EVZ board (J2) (see [Figure 4](#)).

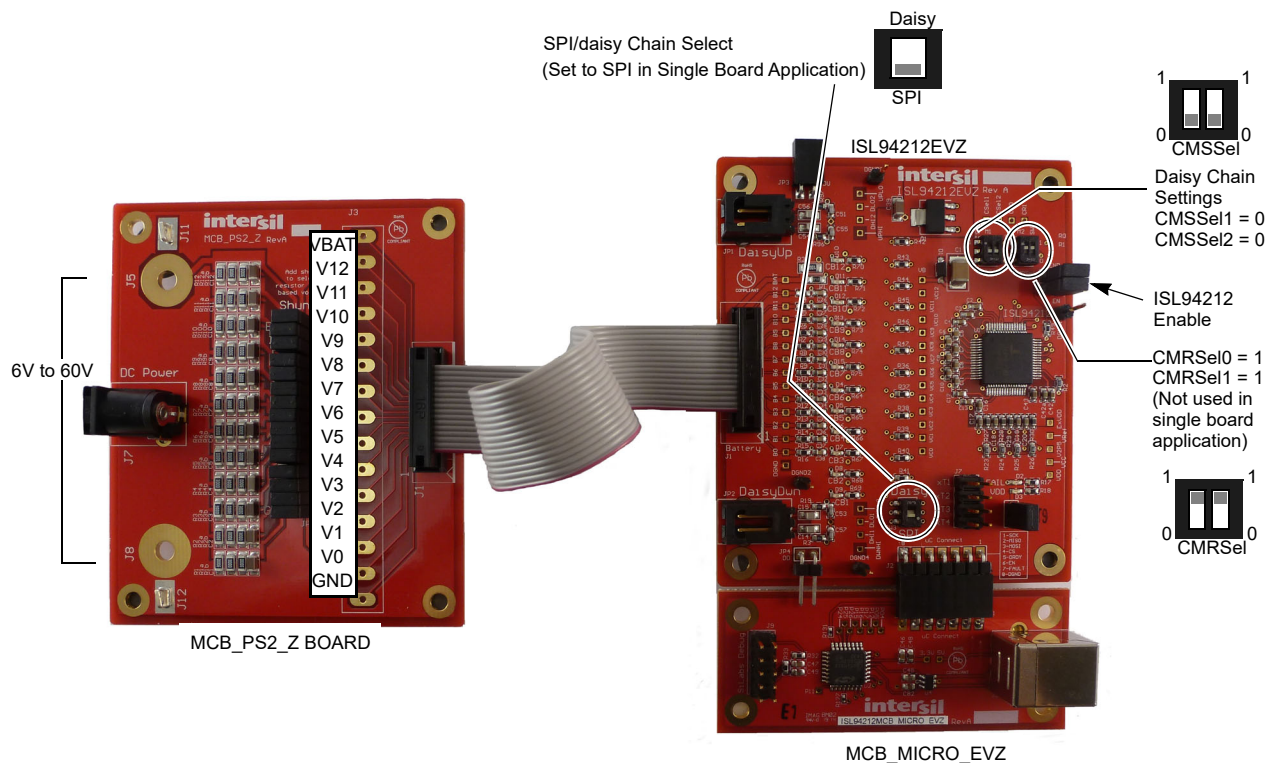


Figure 4. ISL94212EVKIT1Z Single Board Setup

2. Set the power supply voltage to 39.6V (**3.3V per cell**). If there are fewer cells being tested, reduce the power supply voltage such that it equals 3.3V times the number of cells.
3. Connect the power supply to the MCB_PS2_Z board. The positive terminal of the MCB_PS2_Z board is J5/J11 and the negative terminal is J8/J12. Connector J7 can also be used to provide power to the board. The J7 tip is positive and the ring is negative. Check that the voltages on the J3 connector of the board are +3.3V from PIN(n) to Pin(n-1).
4. Turn off the power to the power supply.
5. Connect the flat cable between the MCB_PS2_Z board, connector J1 and the ISL94212EVZ board, connector J1.
6. Check the jumpers and switches on the board. Since this is a single board configuration, the board should be configured as follows:
 - SPI/daisy switch set to SPI.
 - EN0 and ENR should contain jumpers.
 - LEDEN should contain a jumper.
 - CMSSel1 (left) and CMSel2 (right) switches both set to "0". This sets single board operation.
 - CMRSEL1 (left) and CMRSEL0 (right) should have jumpers to "1". These set the daisy chain speed and are not used in the single board operation, but it is OK to leave the jumpers in place.

7. Turn on the power to the supply and notice that there is a green LED (VDD), indicating the LDO regulator on the ISL94212 is operating.

The voltages at various points should be:

- $V_{DD} = 3.3V \pm 3\%$
- $V_{CC} = \sim 3.3V \pm 5\%$ (a little lower than V_{DD})
- $V_{2P5} = 2.5V \pm 2\%$
- $V_{REF} = 2.50V \pm 0.5\%$

8. Connect the USB port of the PC to the USB port of the MCB_MICRO_EVZ board.
9. Open the ISL94212 GUI software, select the **BMS Evaluation Board Connected** in the **Select Option** box as seen in [Figure 5](#). The software automatically takes user to the Configuration Screen. Select **non-daisy chain** and device type, then click **OK**. The GUI returns to the main screen. Use the software to read the cell voltages and registers.

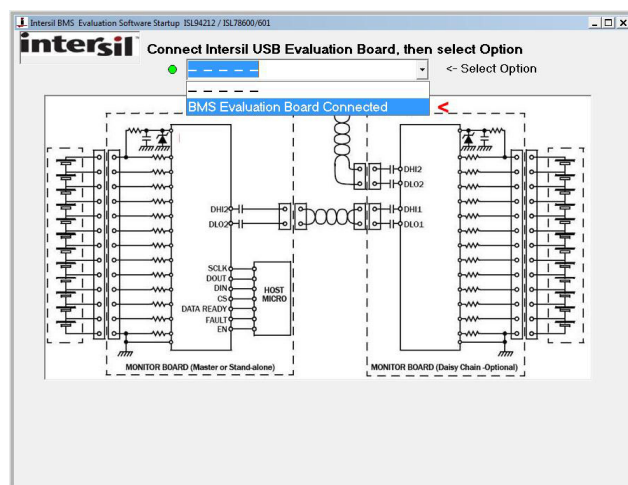


Figure 5. Startup Screen in the GUI

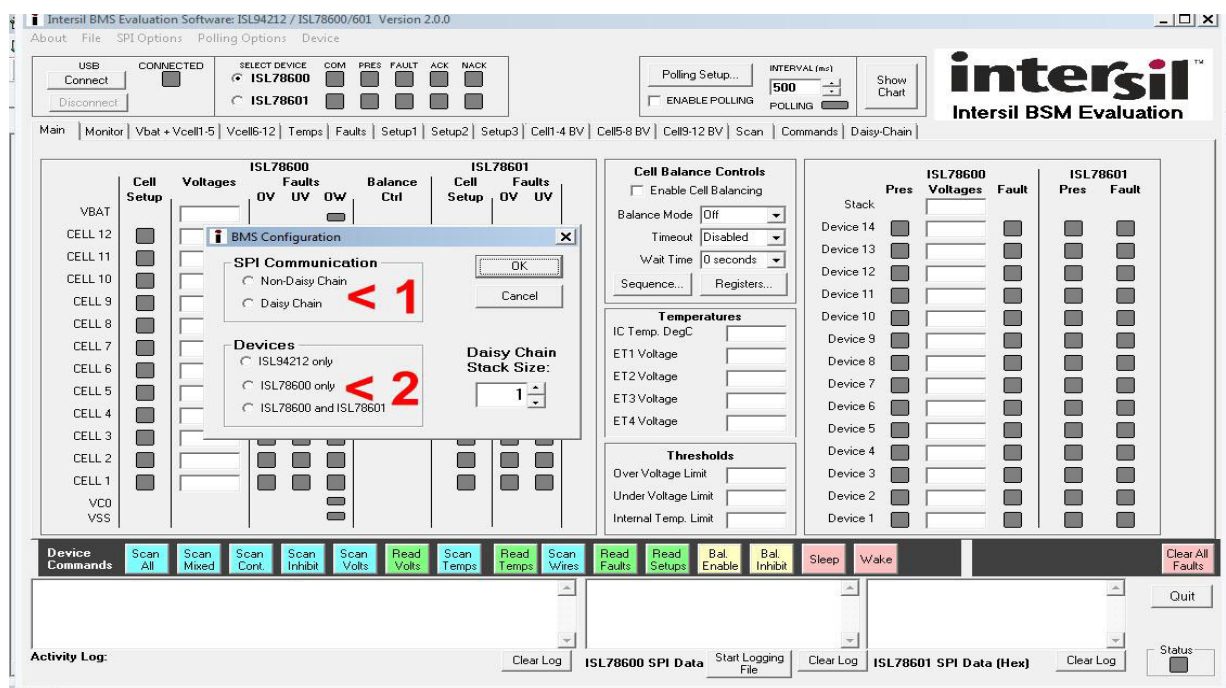


Figure 6. ISL94212EVZ Configuration Screen

8.2 Daisy Chain

1. To Connect all boards, complete steps below. Specify “daisy” chain when configuration screen appears.



2. Connect the MCB_MICRO_EVZ board (J1) to the Daisy Chain Controller ISL94212EVZ board (J2). (See [Figure 7](#))
3. Set the power supply voltage to 39.6V (**3.3V per cell**). If there are fewer cells being tested, reduce the power supply voltage such that it equals 3.3V times the number of cells.)
4. Connect the power supply to all MCB_PS2_Z boards in parallel. There should be one MCB_PS2_Z board for every evaluation board. This connection is not typical of a battery installation, where the ground of one board is the VBAT of another, but it easily facilitates testing of the communication and allows a safer environment for initial testing.
The positive terminal of the MCB_PS2_Z board is J5/J11 and the negative terminal is J8/J12. Connector J7 can also be used to provide power to the board. The J7 tip is positive and the ring is negative. Check that the voltages on the J3 connector of all boards are +3.3V from PIN(n) to Pin(n-1).



USE CAUTION when connecting the MCB_PS2_Z boards in series, since voltages quickly reach hazardous levels.
BE CAREFUL!

5. Turn off the power to the power supply.
6. Connect the flat cable between each MCB_PS2_Z board, connector J1 and an ISL94212EVZ board, connector J1.
7. Check the jumpers and switches on the board. Since this is a daisy chain configuration, the boards should be configured as follows:
 - SPI/Daisy switch set to SPI on the Daisy Chain Controller. For all other boards, this switch should be set to Daisy.
 - EN0 and ENR should contain jumpers.
 - LEDEN should contain a jumper.
 - CMS1 and CMS2 should have switches set as follows:

Table 1. Daisy Chain Communications Data Rate Selection

COMMS Rate 0	COMMS Rate 1	Data Rate (kHz)
0	0	62
0	1	125
1	0	250
1	1	500

This sets daisy chain operation and locates the boards within the daisy chain.

- CMRSel1 and CMRSel0 should have jumpers set to 1. These set the daisy chain speed at the maximum 500kHz.

8. Connect the daisy chain wires. The boards can plug together to complete the daisy chain connections, or the enclosed twisted pair cable can connect the boards. Connect as shown in [Table 2](#). See also the 36-cell daisy chain connection [Figure 7](#). For a 24-cell connection, drop out the Middle board.

Table 2. Communications Mode Control

COMMS Select 1	COMMS Select 2	Port 1 COMM	Port 2 COMM	Communications Configuration
0	0	SPI (Full Duplex)	Disabled	Standalone
0	1	SPI (Half Duplex)	Enabled	Daisy Chain Controller device setting
1	0	Daisy Chain	Disabled	Daisy Chain, Top device setting
1	1	Daisy Chain	Enabled	Daisy Chain Middle device setting

9. Turn on the power to the supply and notice that there is a green LED (VDD) on each board, indicating the LDO regulators on the ISL94212 are operating.

The voltages at various points should be:

- VDD = 3.3V $\pm$ 3%
- VCC = $\sim$ 3.3V $\pm$ 5% (a little lower than VDD)
- V2P5 = 2.5V $\pm$ 2%
- VREF = 2.50V $\pm$ 0.5%



If boards are connected in series, be aware of the voltage potentials between the different boards when measuring and monitoring signals with a meter or a scope.

10. Connect the USB port of the PC to the USB port of the ISL94212EVZ daisy chain controller board.
11. Open the ISL94212 GUI software. Select **Daisy Chain Mode** in the Device Menu at the top left of the screen. **Click Connect**. Use the software to read the cell voltages and other register content.

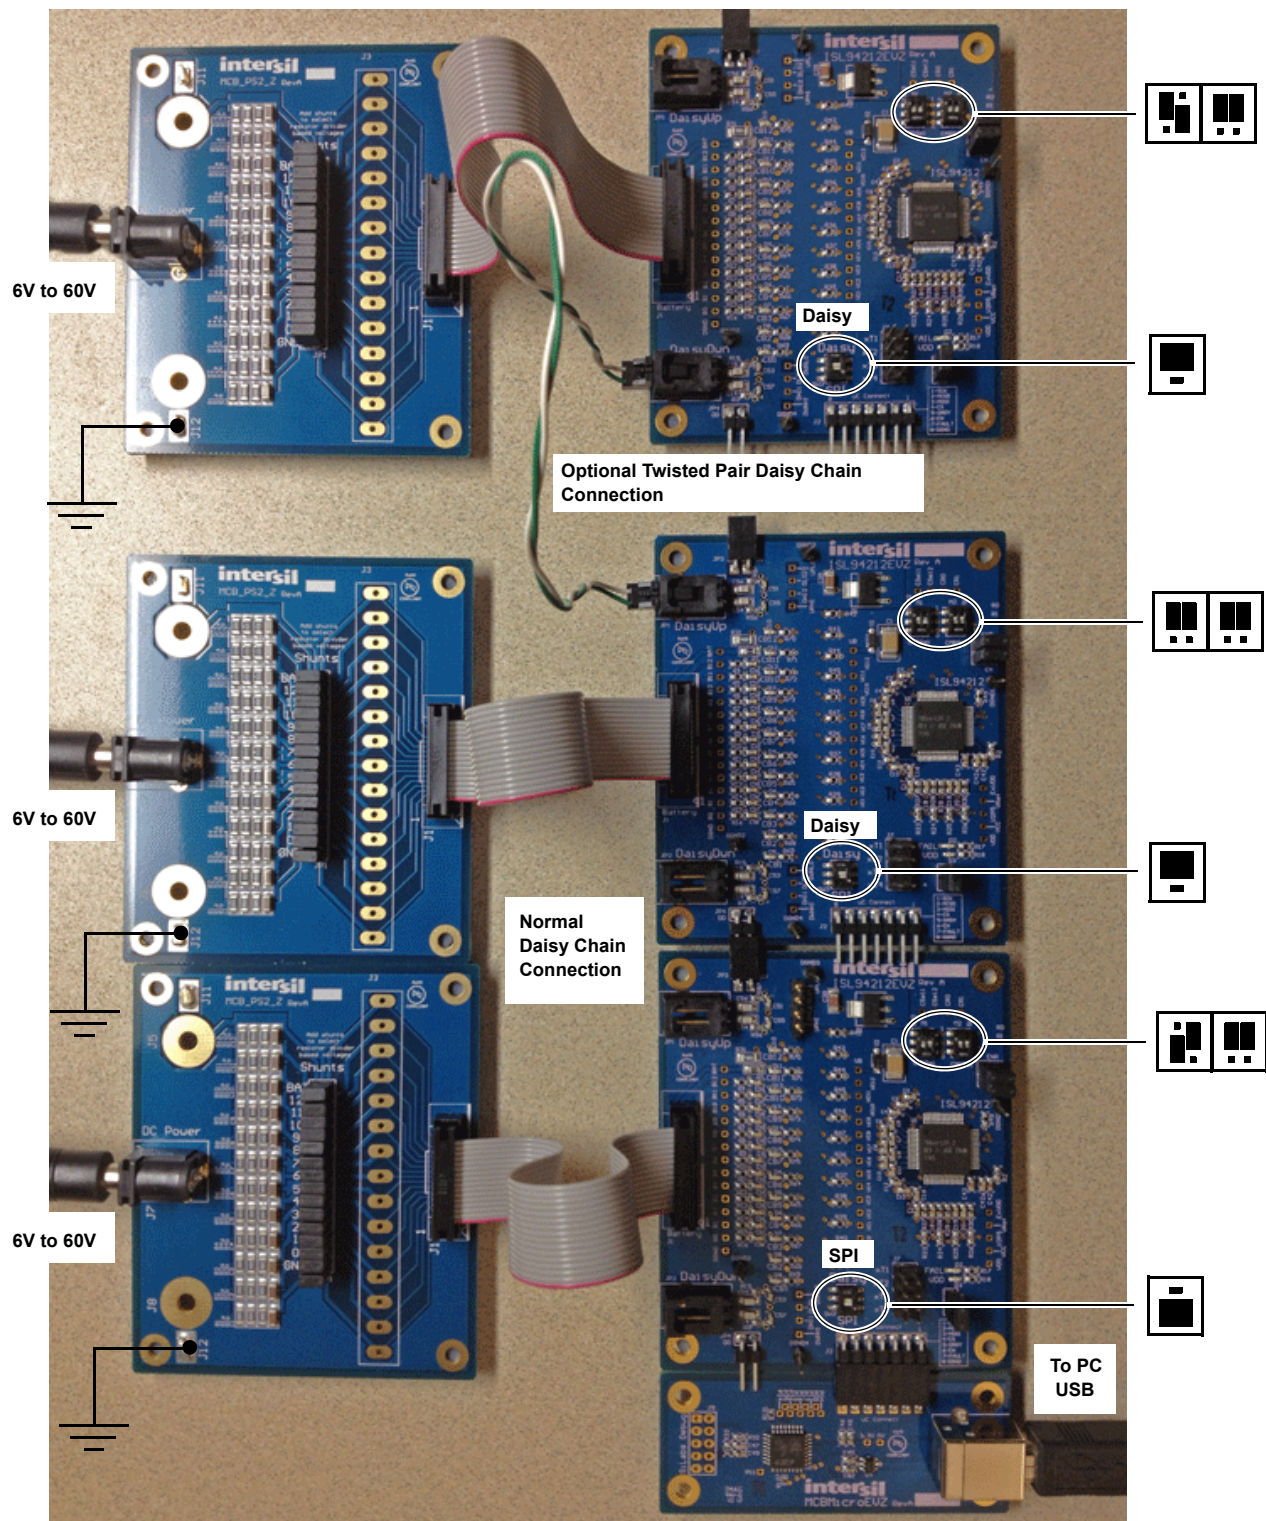


Figure 7. ISL94212EVZ in 36-Cell Daisy Chain Configuration

9. Quick GUI Setup Guide (Using the GUI)

1. When the board is powered up and connected to the PC through the USB cable, start the GUI program.
2. Choose the communication mode (stand-alone or daisy chain). If the GUI is already running, select the operating mode in the device menu (upper left of the screen.)
3. The GUI program identifies the devices connected, either in a single board, or a daisy chain configuration, (See [Figure 8](#)). *Note:* [Figure 7](#) shows the daisy chain configuration.
4. In a daisy chain configuration, the top bar provides an indication of the boards connected and allows selection of any ISL94212EVZ board for monitoring and control. Select the specific device in the daisy chain. Device 15 selects all devices. Device 0 selects devices that are not yet identified. For a single board, these boxes are not shown.
5. Use the various tabs and buttons to monitor and control the operation of the device.
6. The **Device Commands** buttons along the bottom of the main tab are commands sent to all boards in the system. So, selecting **Scan Volts** then **Read Volts** causes all boards to read the cell voltages, temperatures and update the ISL94212 register values and the GUI display boxes. (*Note:* these buttons send separate commands to each board. It does not send a **Scan All** or **Read All** command.)
7. At the bottom of the screen there are activity logs showing the USB communications and the SPI communications to the Daisy Chain Controller board.
8. To clear fault indications, the fault first must be cleared. When the fault is no longer active, do a **Read Faults** command, then read the Faults register and click on each individual bit to change the setting (or write 0 to the register value). Then click on Write to send the value to the device. Using the **Read Group** or **Write Group** button sends commands to all registers on the page.
9. Use the **Show Chart** button to view various voltages and status in real time (See [Figure 9](#)).

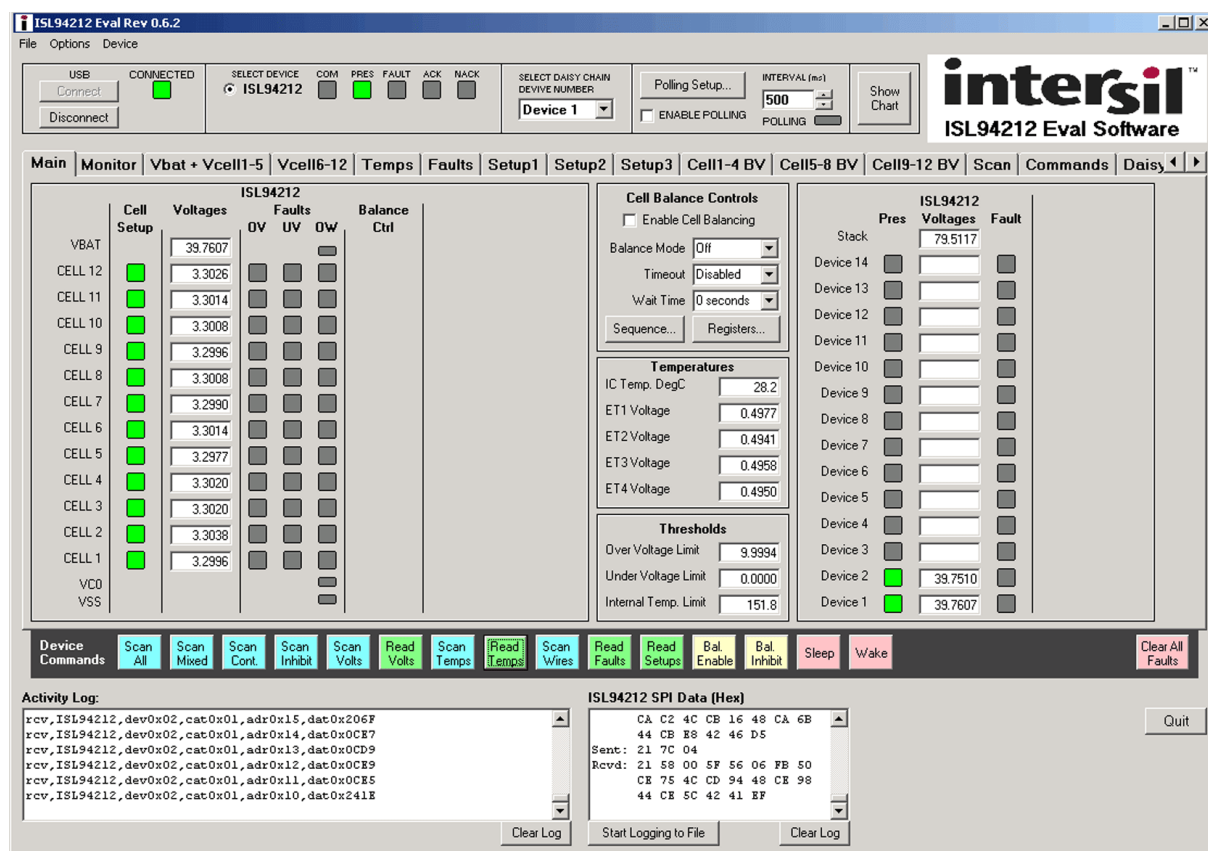


Figure 8. Main GUI Window - Two Cascaded Devices

9.1 Chart Window

The charting function of the GUI provides real time viewing of the critical voltages in the battery pack. The chart updates results as long as the GUI is polling. If the GUI stops polling (or there is a communication interruption) the chart maintains the last valid value.

At the end of a sample period, the captured data can be exported to a file that can be loaded into Excel for further analysis by clicking on the **Export** button.

Using the controls at the left of the screen, various charts can be turned off and the specific cells being monitored can be chosen. At this time, the cell voltages of only two packs can be monitored on one screen and only the temperatures of board 1 can be monitored.

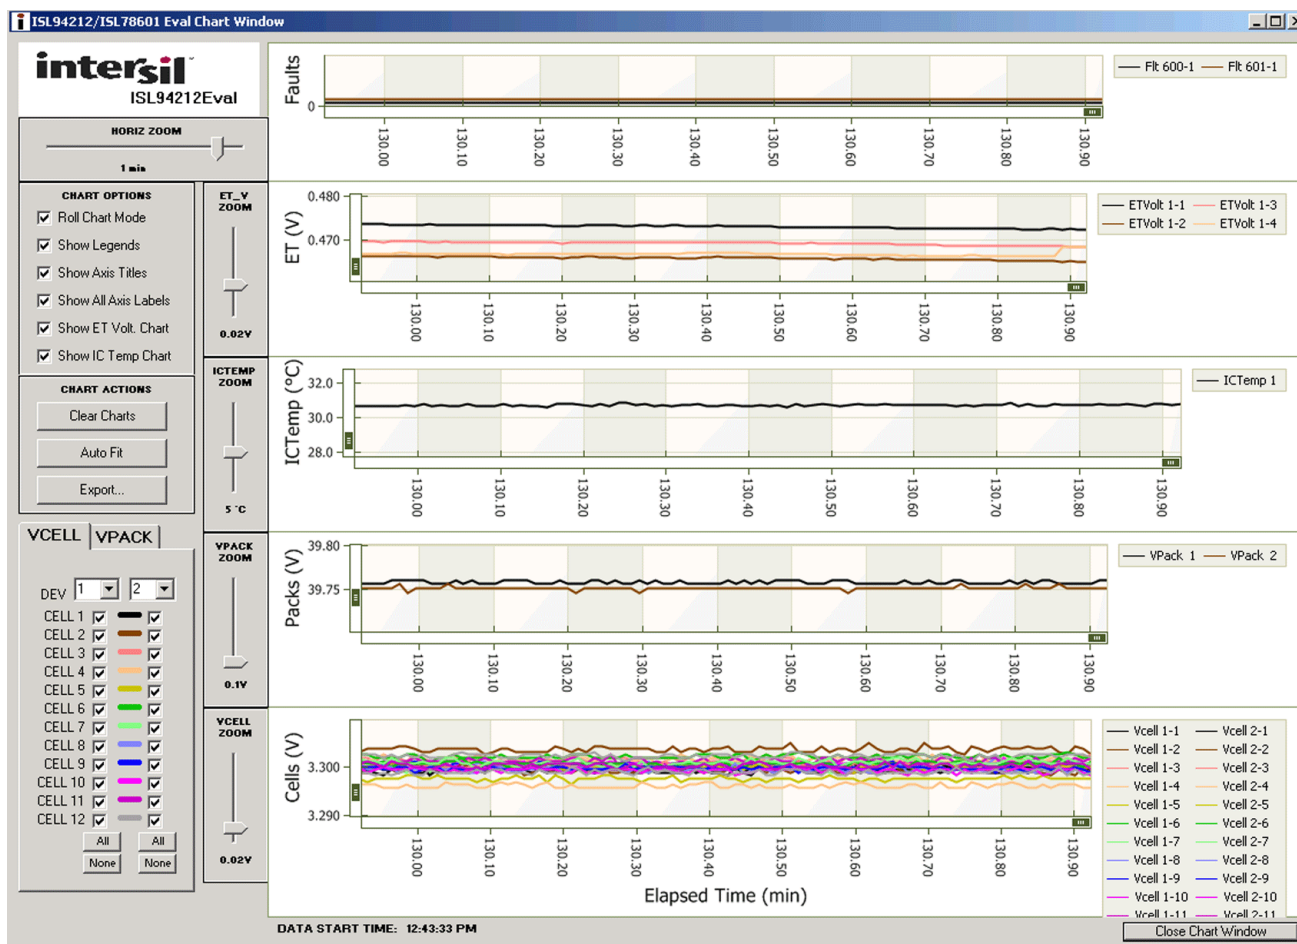


Figure 9. Chart Window

9.2 Monitor Tab

The **monitor** tab shows the voltages and status of the first four boards in the daisy chain (See [Figure 10](#)). At this time, it is not possible to select the results for any other boards in the stack. Individual boards can be monitored in the main window, one board at a time. If there are more than four boards, only boards 1 through 4 are shown in this tab.

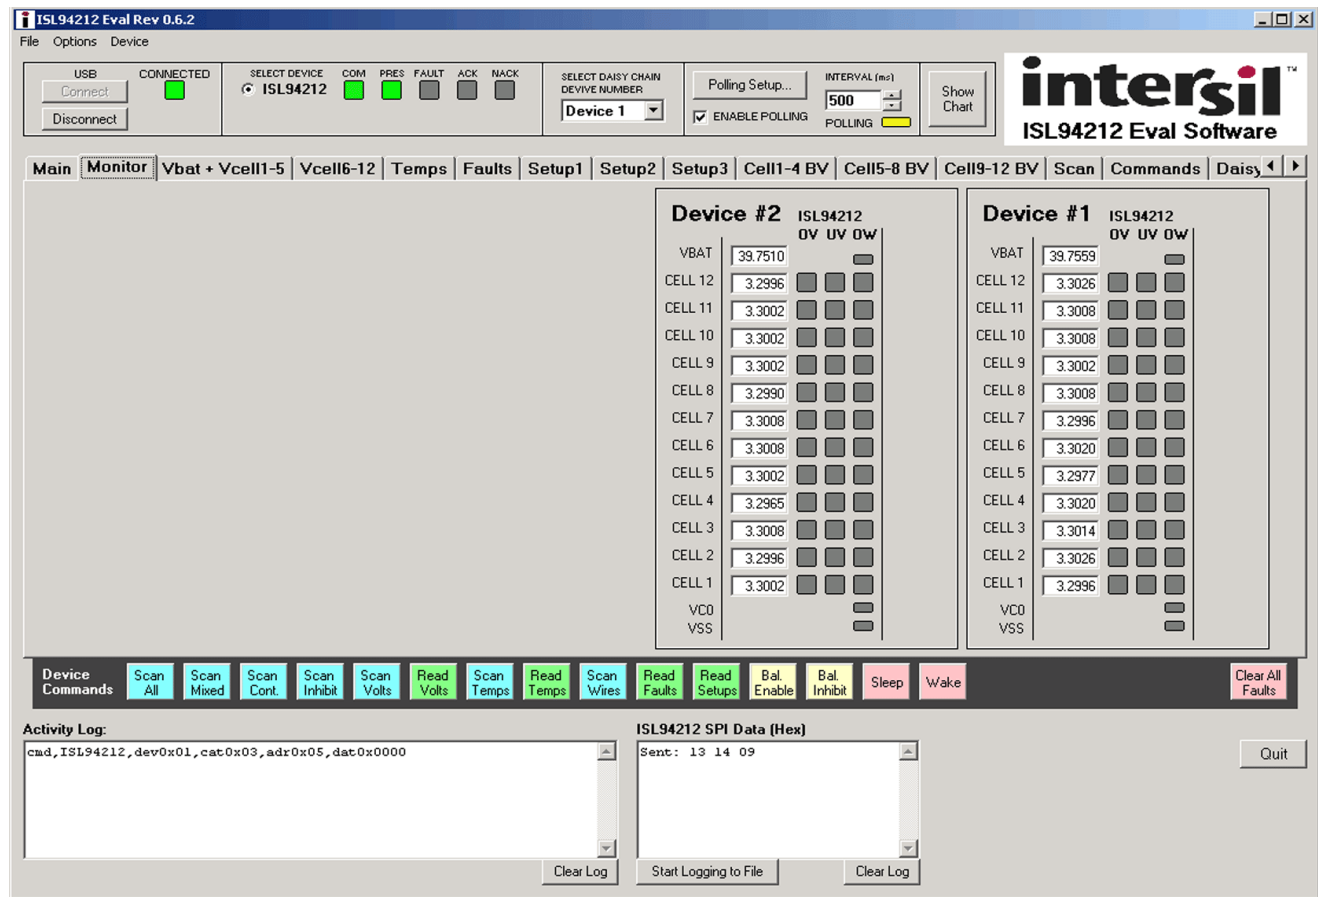


Figure 10. Monitor Tab

9.3 Fault Tab

The fault tab shows the status of the fault register of the selected device (See [Figure 11](#)). To update the display, click on the individual **Read** buttons at the end of each fault register, or click on the **Read Group** button on the device command line (toward the bottom of the window) to read all registers in the Tab.

To clear a bit, click on the bit that is set (or write a 0 in the box at the right to reset all bits.) Then, click on the **Write** button at the end of each fault register, or click on the **Write Group** button on the device command line to write to all of the registers in the Tab.

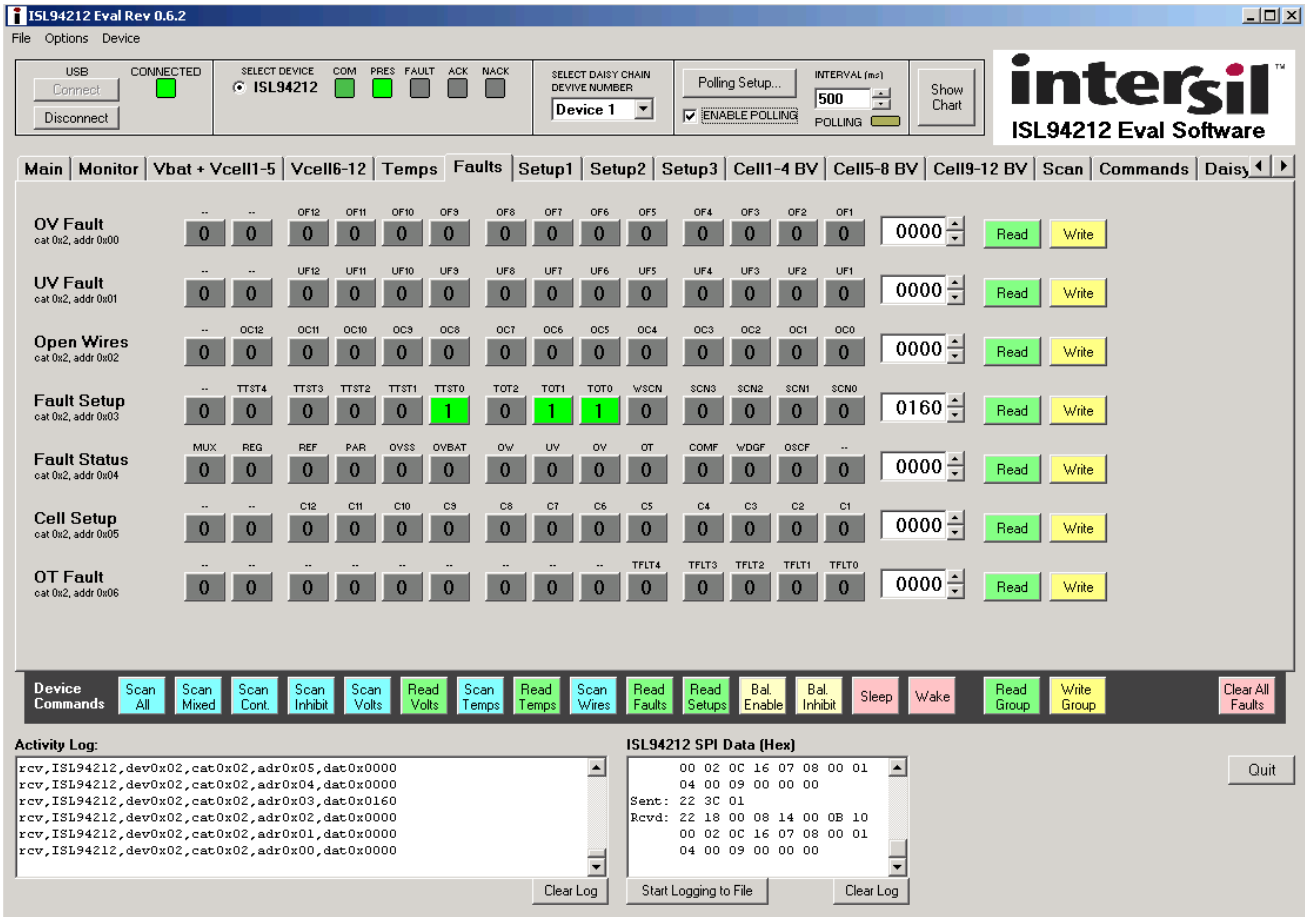


Figure 11. Fault Registers

9.4 Command Tab

The **command** tab allows individual commands to be sent to any device in the stack (or all devices, if device 15 is chosen.) This tab includes a raw message sender and CRC4 calculator. By entering in the device address, data type, data address and data, the GUI calculates the CRC4 value and shows the resulting encoded command. This command can then be sent to the chosen device. The image in [Figure 12](#) shows the command for SLEEP.

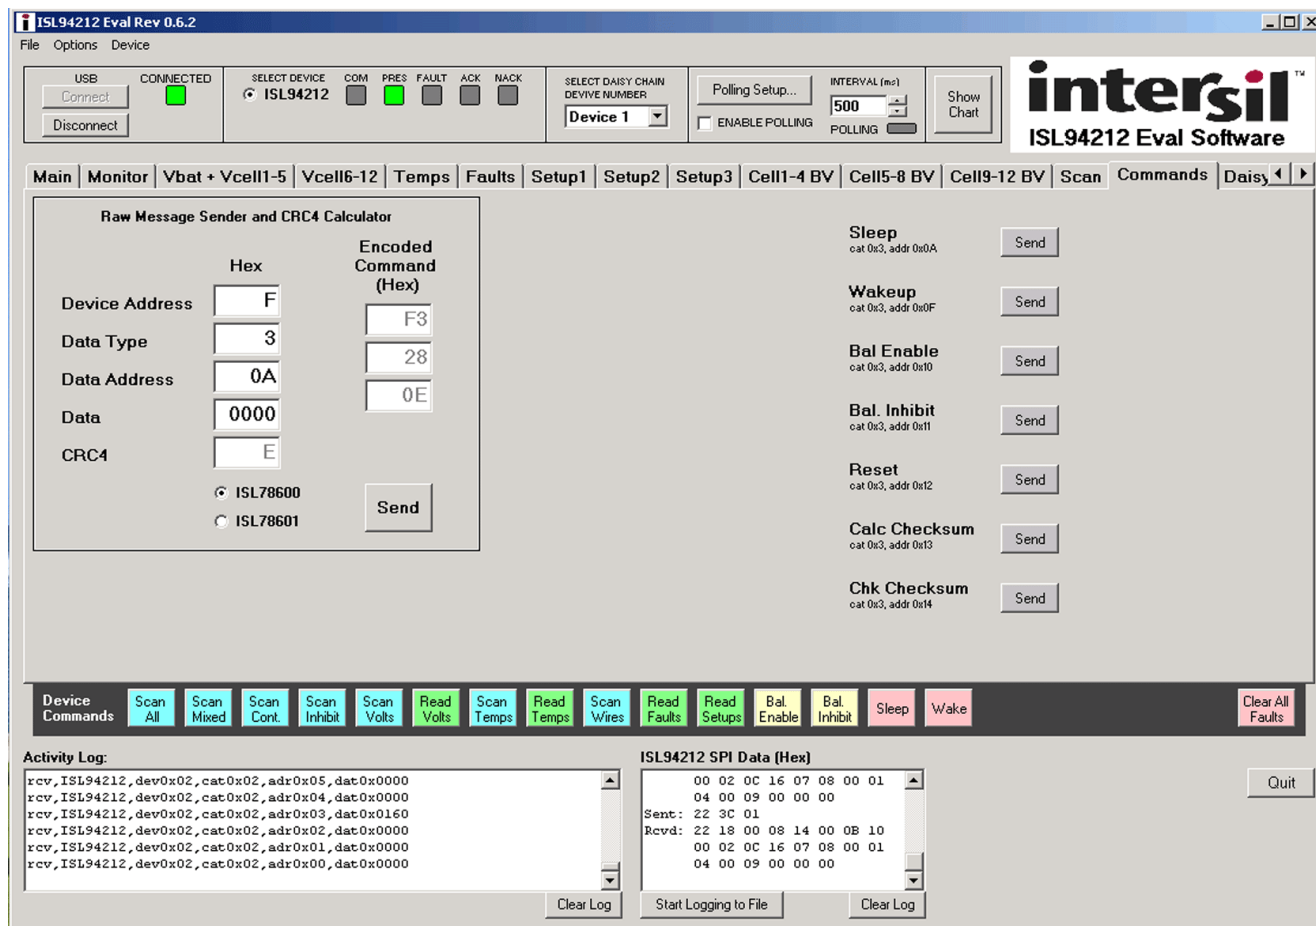


Figure 12. Commands

Note: This screen shows a selection for ISL78600 and ISL78601. This is an error in the 0.6.2 release of the software. For the ISL94212, use the selection for the ISL78600. The selection for ISL78601 has no function.

10. Board Design

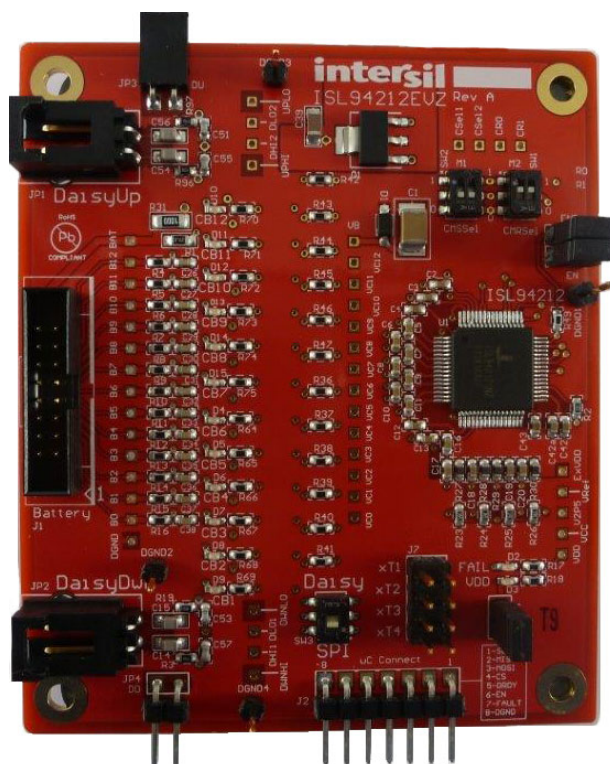


Figure 13. ISL94212 Evaluation Board - Top Side

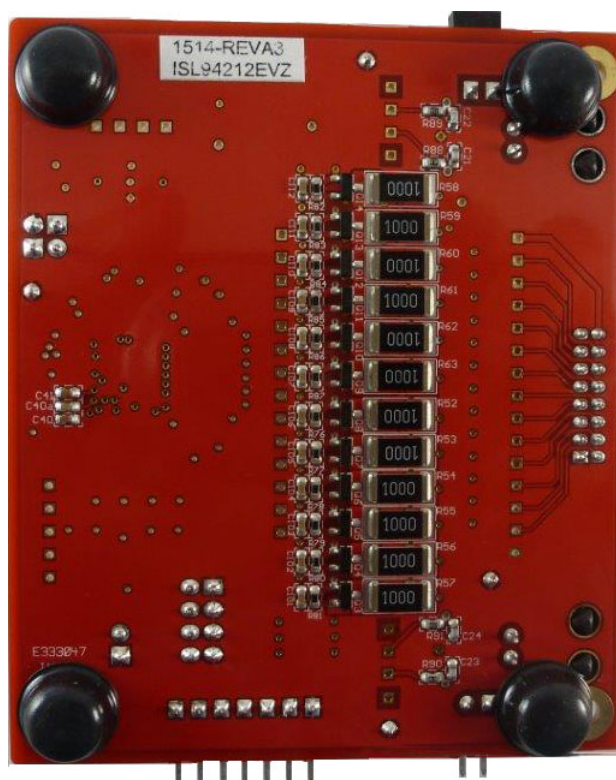


Figure 14. Bottom Side

10.1 Schematics

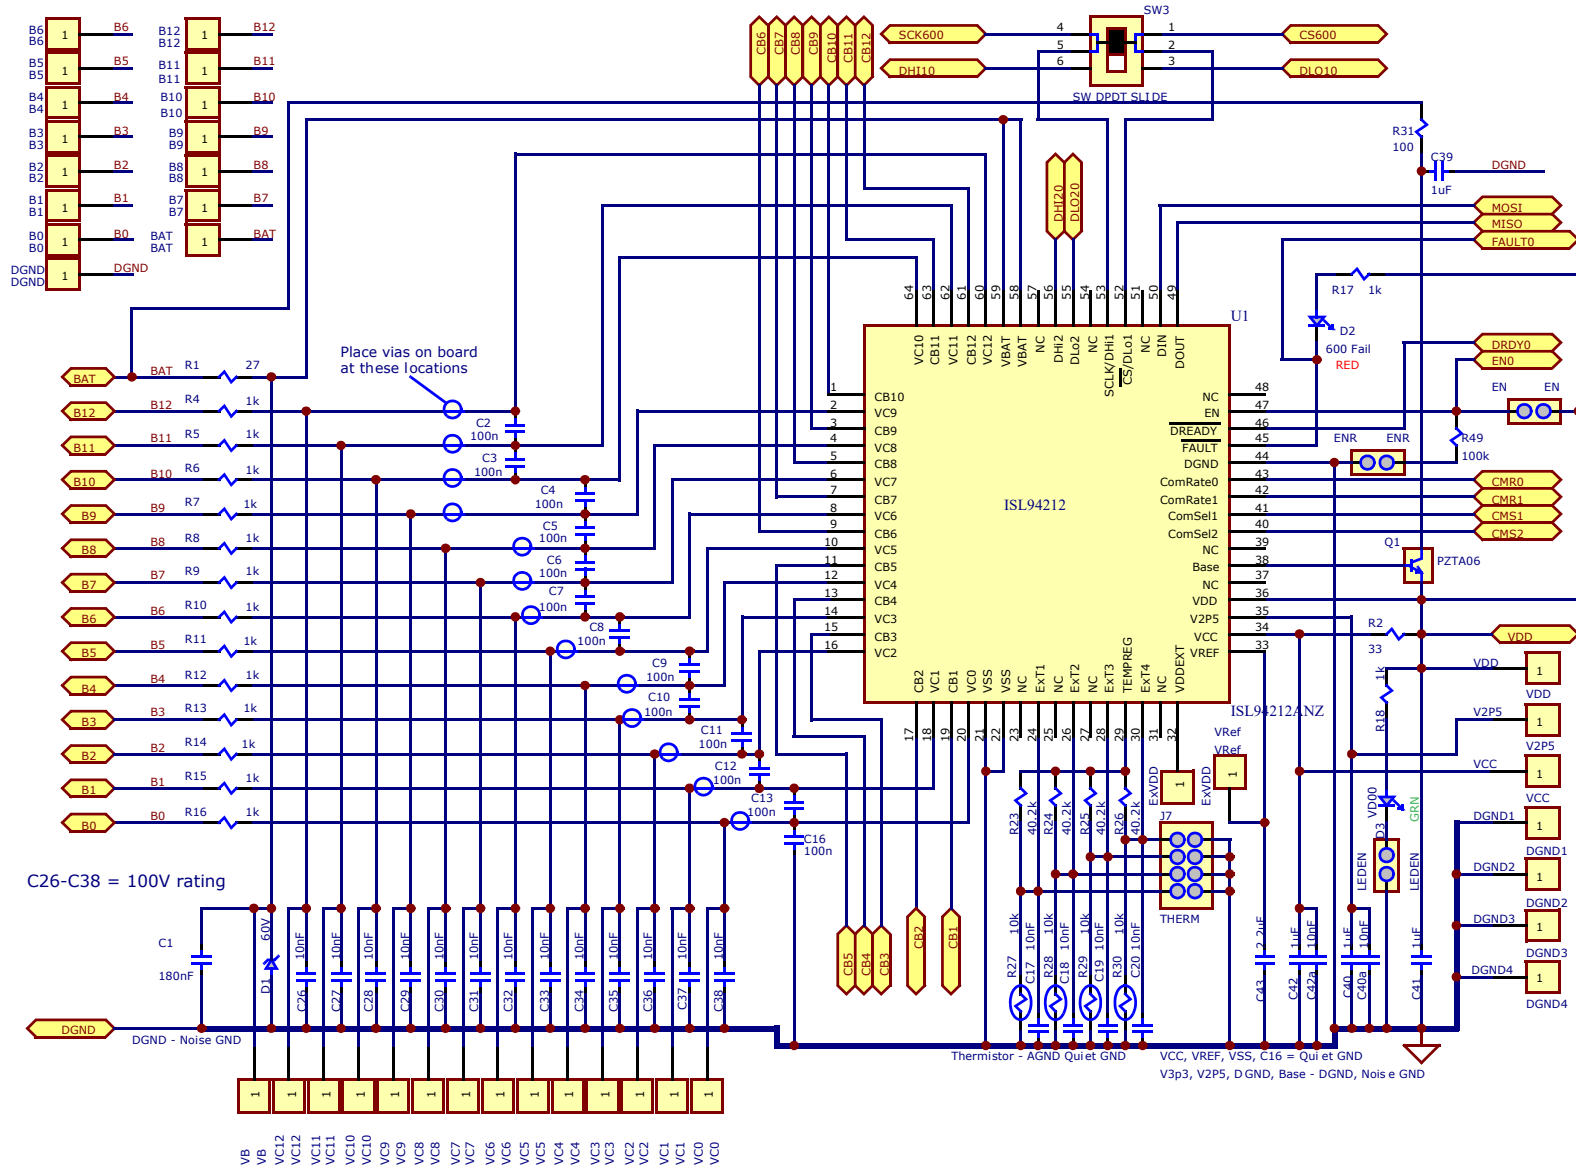


Figure 15. Schematic - Page 1


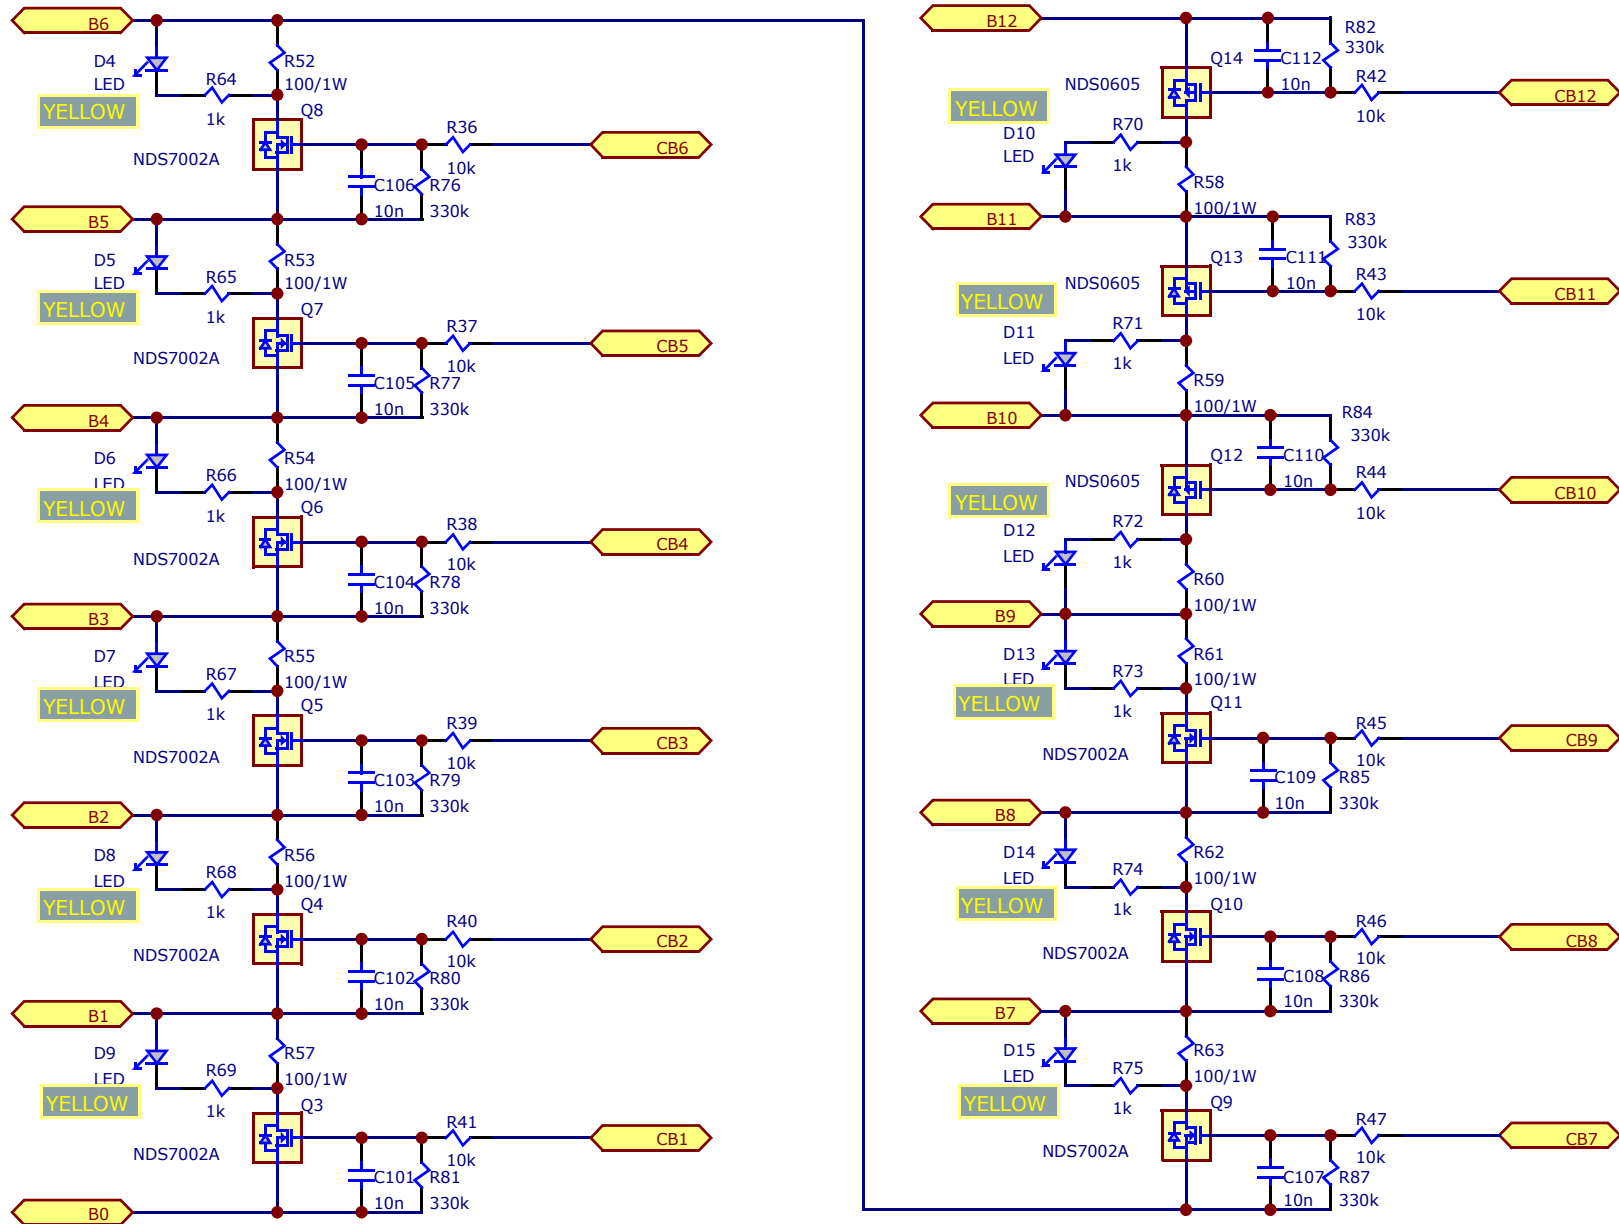


Figure 16. Schematic - Page 2

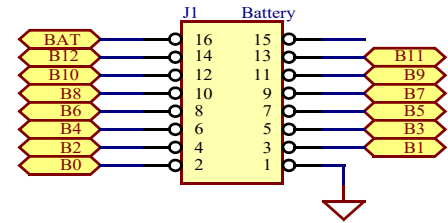

Add jumpers to JP5 to communicate through the USB port and on-board μ C. Remove jumpers and use even numbered pins to communicate to ISL78600/601 via external μ C.

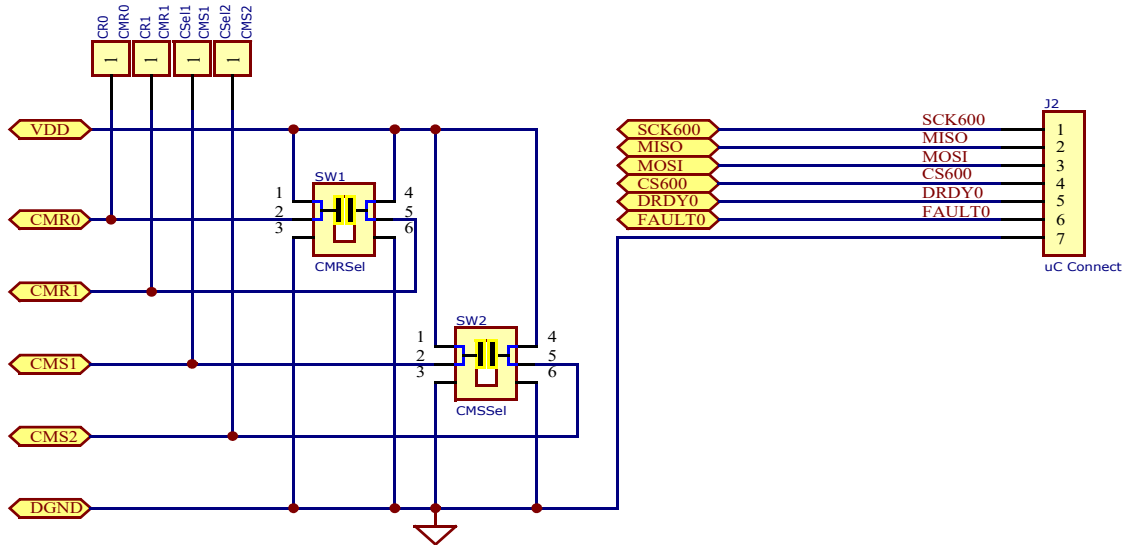
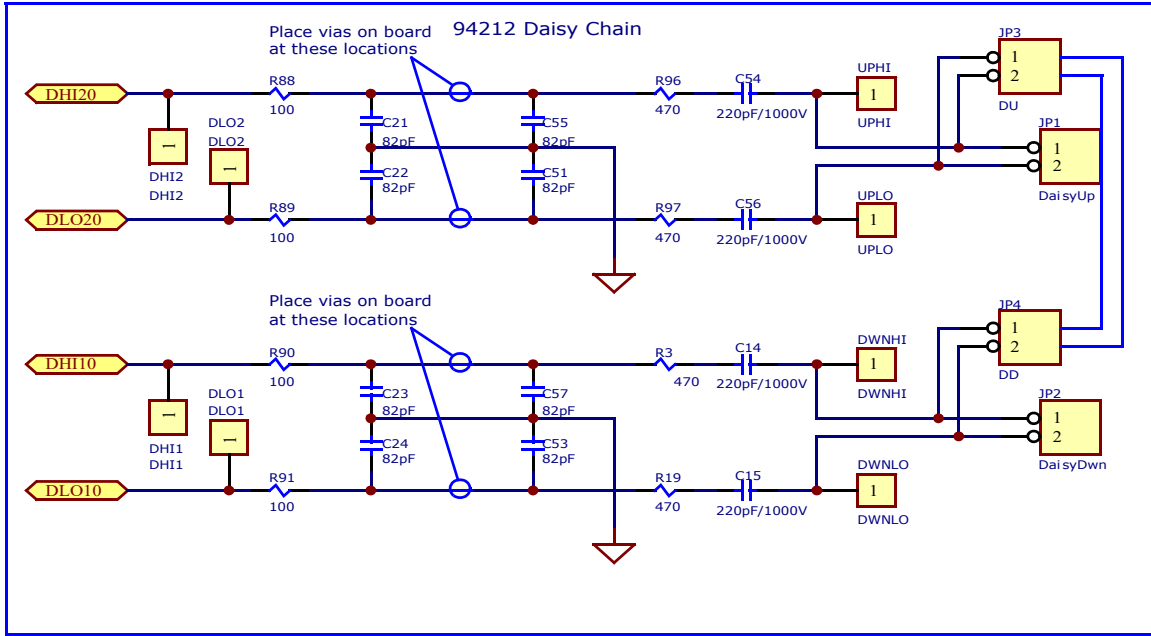


Figure 17. Schematic - Page 3

10.2 Bill of Materials

Qty	Reference Designator	Description	Manufacturer	Manufacturer Part
1	C1	CAP, SMD, 1812, 0.18 μ F, 100V, 10%, X7R, ROHS	MURATA	GRM43RR72A184KA01L
4	C14, C15, C54, C56	CAP, SMD, 0805, 220pF, 1kV, 5%, C0G, ROHS	VISHAY/VITRAMON	VJ0805A221JXGAT5Z
18	C17-C20, C40a, C42a, C101-C112	CAP, SMD, 0603, 0.01 μ F, 16V, 1 0%, X7R, ROHS	Venkel	C0603X7R160-103KNE
13	C2-C13, C16	CAP, SMD, 0603, 0.1 μ F, 16V, 10%, X7R, ROHS	Murata	GRM39X7R104K016AD
8	C21-C24, C51, C53, C55, C57	CAP, SMD, 0603, 82pF, 100V, 5%, C0G, ROHS	Murata	GRM1885C2A820JA01D
13	C26-C38	CAP, SMD, 0603, 0.01 μ F, 100V, 5%, X7R, ROHS	Kemet	C0603C103J1RACTU
1	C39	CAP, SMD, 1206, 1 μ F, 100V, 10%, X7R, ROHS	Venkel	C1206X7R101-105KNE
3	C40, C41, C42	CAP, SMD, 0603, 1.0 μ F, 10V, 10%, X7R, ROHS	AVX	0603ZC105KAT2A
1	C43	CAP, SMD, 0603, 2.2 μ F, 10V, 10%, X7R, ROHS	Murata	GRM188R71A225KE15D
2	CABLE ASSY	CONN SOCKET IDC 16POS W/KEY GOLD, ROHS	Assman	SFH41-PPPB-D08-ID-BK
6	CABLE ASSY	CABLE-FLAT RIBBON, 16CIRCUIT, 28AWG STRANDED, 300V, ROHS	Assmann	AWG28-16/G-1/300-R
1	D1	DIODE-ZENER, SMD, 2P, SOD-123, 60V, 500mW, 2.1mA, ROHS	On Semiconductor	MMSZ5264BT1G
1	D2	LED-SMART, SMD, 0603, 2P, RED, 1.8V, 2mA, 630nm, 4.5mcd, ROHS	Osram	LSL29K-G1J2-1-0-2-R18-Z
1	D3	LED-SMART, SMD, 0603, GREEN, 1.7V, 2mA, 570nm, 3.9mcd, ROHS	Osram	LGL29K-G2J1-24-Z
12	D4-D15	LED-SMART, SMD, 0603, YELLOW, 1.8V, 2mA, 587nm, 7.9mcd, ROHS	Osram	LY L29K-J1K2-26-Z
4	DGND1-DGND4	CONN-HEADER, 1x1, BREAKAWAY 1X36, 2.54mm, ROHS	BERG/FCI	68000-236HLF
3	EN, ENR, LEDEN	CONN-HEADER, 1x2, BREAKAWAY 1X36, 2.54mm, ROHS	BERG/FCI	68000-236HLF
3	EN, ENR, LEDEN	CONN-JUMPER, SHORTING, 2PIN, BLACK, GOLD, ROHS	Sullins	SPC02SYAN
1	J1	CONN HEADER LO-PRO 2MM 16PS VERT ROHS	Assman	AWHW2-16G-0202-T-R
1	J2	CONN-HEADER, 1X7, BRKAWY-1X36, R/A, 2.54mm, ROHS	FCI/BERG	68015-436HLF
1	J7	CONN-HEADER, 2X4, BRKAWY-2X36, 2.54mm, ROHS	BERG/FCI	67996-272HLF
2	JP1-JP2	CONN-HEADER, SHROUDED, TH, 2POS, 2.54mm, R/A, ROHS	Molex	70555-0036
1	JP3	CONN-RECEPTACLE, TH, 1X2, 2.54mm, R/A, TIN, ROHS	Sullins	PPTC021LGBN-RC
1	JP4	CONN-HEADER, 1X2, BRKAWY-1X36, R/A, 2.54mm, ROHS	FCI/BERG	68015-436HLF
1	Q1	TRANSISTOR, NPN, 4P, SOT-223, 80V, 1A, 1W, ROHS	Diodes, Inc.	DCP56-16-13
3	Q12, Q13, Q14	TRANSISTOR, P-CHANNEL, SMD, SOT23, -60V, -180mA, ROHS	Fairchild	NDS0605
9	Q3-Q11	TRANSISTOR-MOS, N-CHANNEL, SMD, SOT23, 60V, 280mA, ROHS	Fairchild	NDS7002A
1	R1	RES, SMD, 0805, 27 Ω , 1/8W, 1%, TF, ROHS	Panasonic	ERJ-6ENF27R0V
1	R2	RES, SMD, 0603, 33 Ω , 1/10W, 1%, TF, ROHS	Venkel	CR0603-10W-33R0FT

Qty	Reference Designator	Description	Manufacturer	Manufacturer Part
4	R23-R26	RES, SMD, 0603, 40.2k, 1/10W, 1%, TF, ROHS	Yageo	RC0603FR-0740K2L
4	R27-R30	THERMISTOR-NTC, SMD, 0603, 10k, 1%, - 40 +125°C, ROHS	Murata	NCP18XH103F03RB
4	R3, R19, R96, R97	RES, SMD, 0603, 470Ω, 1/10W, 1%, TF, ROHS	Rohm	MCR03EZPFX4700
1	R31	RES, SMD, 1206, 100Ω, 1/4W, 1%, TF, ROHS	Stackpole	RMC1/8 100R 1% T/R
12	R36-R47	RES, SMD, 0603, 10k, 1/10W, 1%, TF, ROHS	KOA	RK73H1JT1002F
27	R4-R18, R64-R75	RES, SMD, 0603, 1k, 1/10W, 1%, TF, ROHS	Panasonic	ERJ-3EKF1001V
1	R49	RES, SMD, 0603, 100k, 1/10W, 1%, TF, ROHS	Venkel	CR0603-10W-1003FT
12	R52-R63	RES, SMD, 2512, 100Ω, 1W, 1%, TF, ROHS	VISHAY/DALE	CRCW2512100RFKEG
12	R76-R87	RES, SMD, 0603, 330k, 1/10W, 1%, TF, ROHS	YAGEO	RC0603FR-07330KL
4	R88-R91	RES, SMD, 0603, 100Ω, 1/10W, 1%, TF, ROHS	VENKEL	CR0603-10W-1000FT
2	SW1, SW2	SWITCH-SLIDE, SMD, 5.4X5.2, 2POS, SPDT, ROHS	Copal Electronics	CAS-D20TA
1	SW3	SWITCH-SLIDE, SMD, 5.4X5.2, 2POS, SPDT, ROHS	Copal Electronics	CAS-220TA
1	U1	IC-MULTI-CELL BATTERY MANAGER, 14P, TQFP, 10X10, ROHS	Renesas	ISL94212ANZ
0	DGND, B0-B12, BAT	DO NOT POPULATE	-	-
0	DWNHI-DHI1-DLO1-DWNLO, UPHI-DHI2-DLO2-UPLO	DO NOT POPULATE	-	-
0	ExVDD-VREF-V2P5-VCC-VDD	DO NOT POPULATE	-	-
0	VC0-VC12, VB	DO NOT POPULATE	-	-

10.3 Layout

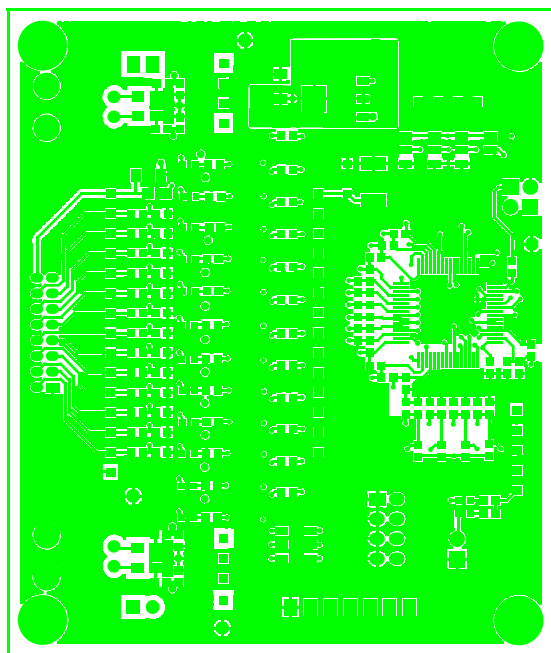


Figure 18. Top Layer

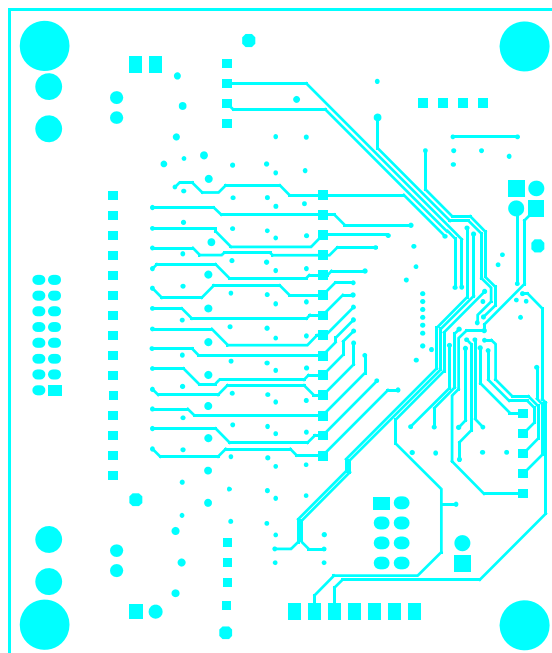


Figure 19. Middle Layer 1

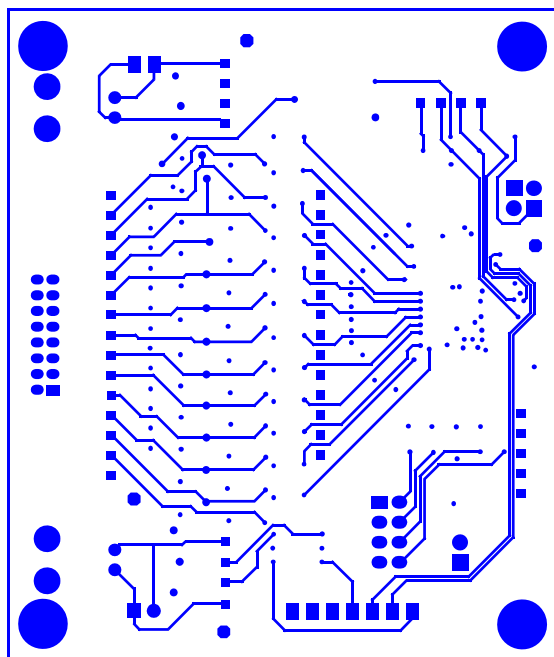


Figure 20. Middle Layer 2

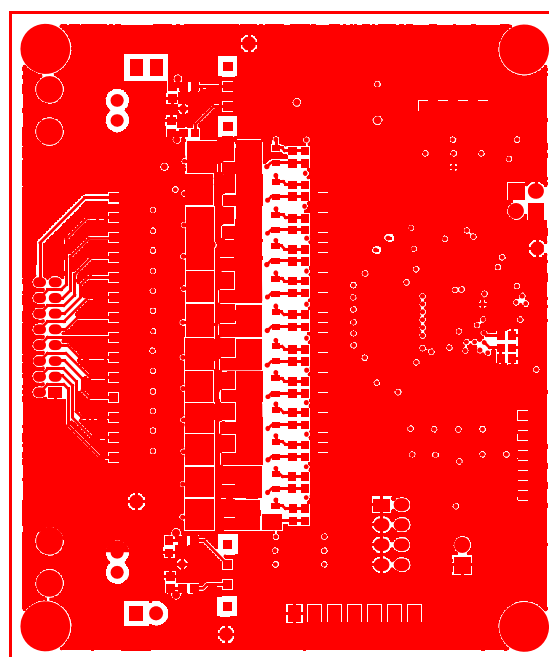


Figure 21. Bottom Layer

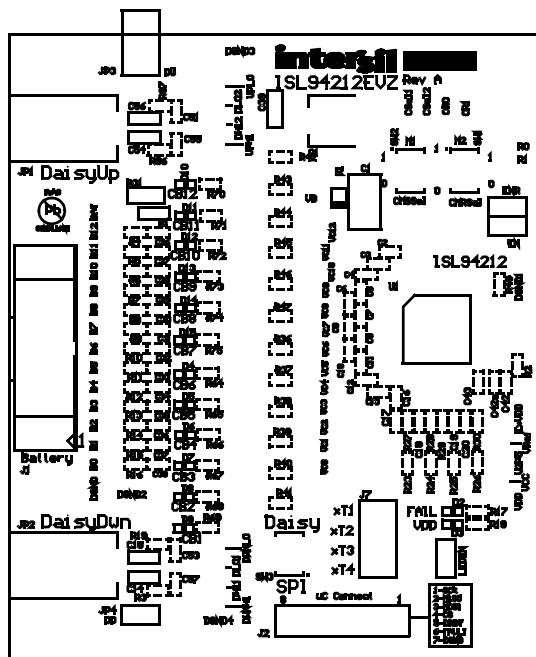


Figure 22. Silk Top Layer

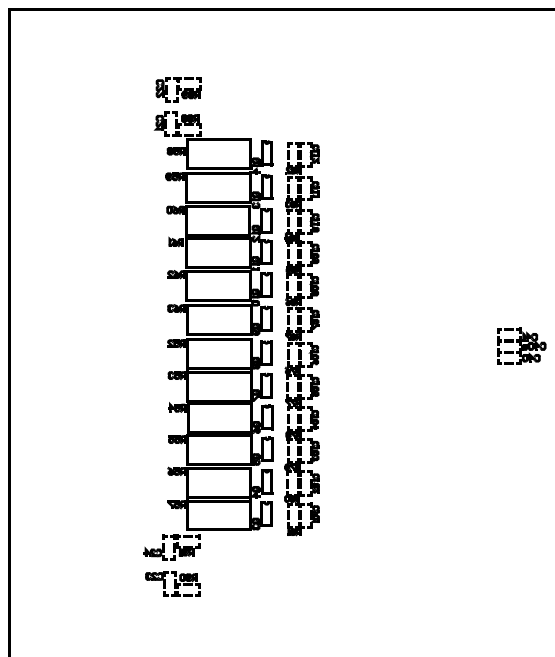


Figure 23. SILK Bottom Layer

11. Default Configuration Settings

Configuration settings for this design are set by switch settings. See [Figure 4](#) and [Figure 7](#) for switch setting information.

- The ISL94212EVKIT1Z kit is set for non-daisy chain operation. It is intended to operate as a stand-alone for single device ([Figure 4](#)) or as Controller, Middle or Top Device in a daisy chain configuration ([Figure 7](#)).
- In daisy chain mode, chain circuitry component values are specified to operate in 500kHz rate. All devices receive a unique serial number when ATE testing in manufacturing. Consult datasheet regarding serial number register locations.

12. Errata/Q&A

1. When I click on Connect, nothing happens.

- The most common problem encountered when setting up the boards is a “connection’ or switch error. This is seen after clicking on the connect button and Device Present “PRES” indicators do not turn green. The Activity Log at the bottom of the screen also indicates that one or more of the devices cannot be found.
- If this happens, check that all of the cables are connected properly and that the wires are not broken.
- Ensure that the daisy chain cables or boards connect as shown in [Figure 7](#).
- Check that the USB cable is plugged in and that the ISL94212 driver was installed properly before clicking on Connect.
- Ensure the switches are set as shown in [Figure 7](#).
- Inspect the LEDs to identify if all boards are powered properly. This is not always a good indication, since a board in sleep mode has an LED on, but at a lower voltage. It would be a good idea, if there is a communication problem not solved by the above, to check the voltage on the VDD and VREF pins. VDD should be 3.3V. If the board is in sleep mode, the voltage on VDD will drop to about 2.8V and VCC should equal VDD. The the VREF should be 2.5V in normal operation and drop to 0V in sleep. If the voltages do not match these values, then there could be a board problem and you should contact your Intersil representative.

- You could try to shuffle the boards. If this works, then this indicates that one of the daisy channels is not working properly.
 - If these suggestions still do not work, configure the Daisy Chain Controller board as a stand-alone board and try this. If it works, set up a stack of two boards. Then try three boards, and so on, until there is an error in communications. This identifies the point of communication failure. It could be a bad daisy chain cable or some problem with that particular device. Replace the cable or the board and try again.
2. When I enable polling, the voltages do not update.
 - When the GUI starts, there are no items selected for polling. Click on the **Polling Setup** button and click on the **Quick Setup** button. This enables the most common measurement operations.
 3. The Label for the J2 connector on the ISL94212EVZ board is incorrect. It should read as follows (i.e. there is no EN signal between the two boards.)

1 - SCK
2 - MISO
3 - MOSI
4 - CS
5 - DRDY
6 - FAULT
7 - DGND

4. When contacting the factory with questions click on the **About** menu item and click on read firmware version and send the GUI and firmware version with your question. See example below.



13. Typical Performance Curves

Unless noted: V_{Batt} 24V or 48V as designated, $T_A = +25^\circ\text{C}$. Curves provided below are based on exported data from the ISL94212 GUI software. Measurements are captured from three ISL94212 devices operating in daisy chain mode. Charts are based on either 24V or 48V battery voltage. Measurements are taken with time being the x-axis. This provides information regarding typical subsystem reading variation. Some graphs provide device to device comparisons as well.

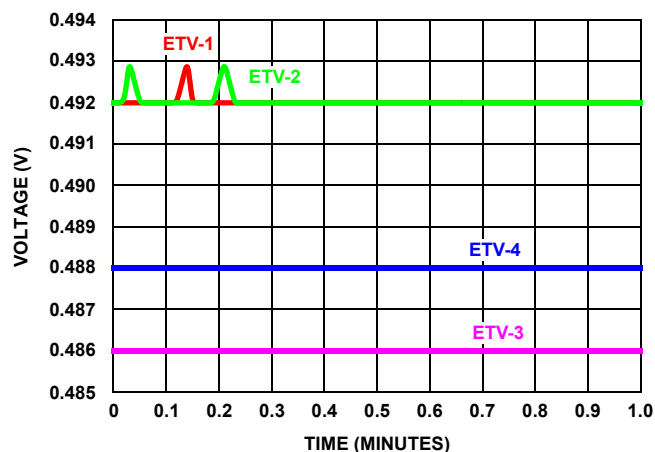


Figure 24. ETV1-4 Device 1 48V

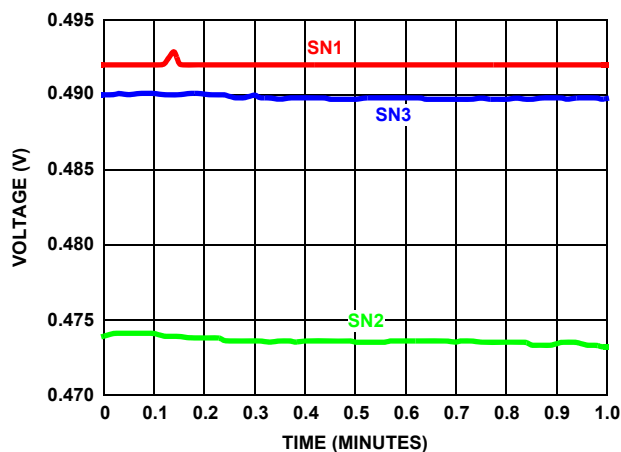


Figure 25. ETV1 Device to Device Spread 48V

13.1 Internal Temperature

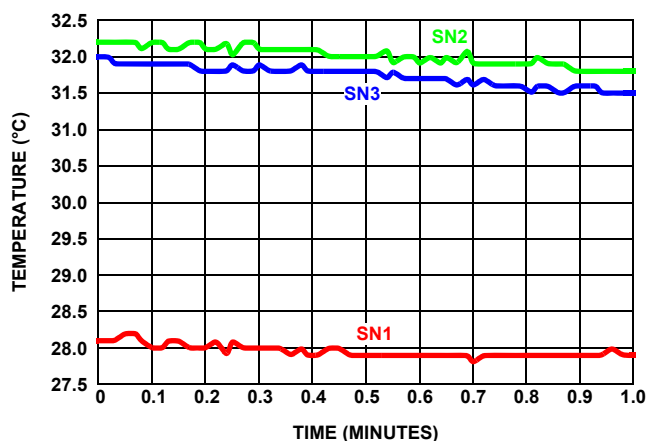


Figure 26. Internal Temperature Device to Device Spread
24V

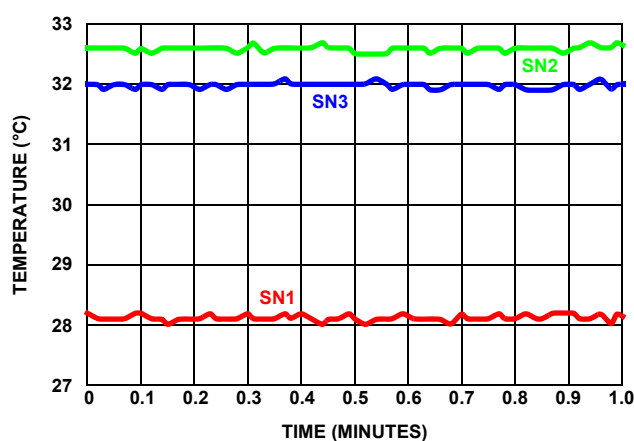
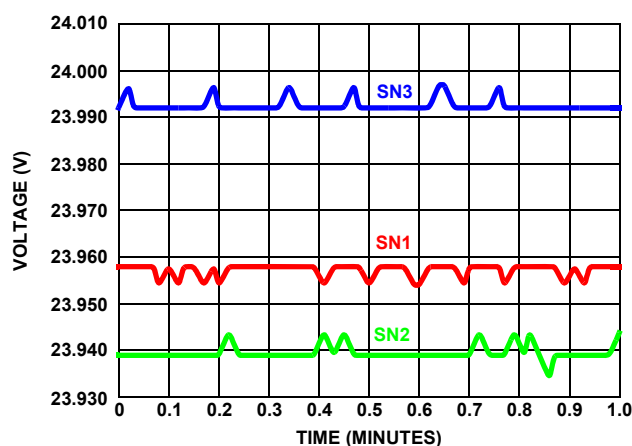
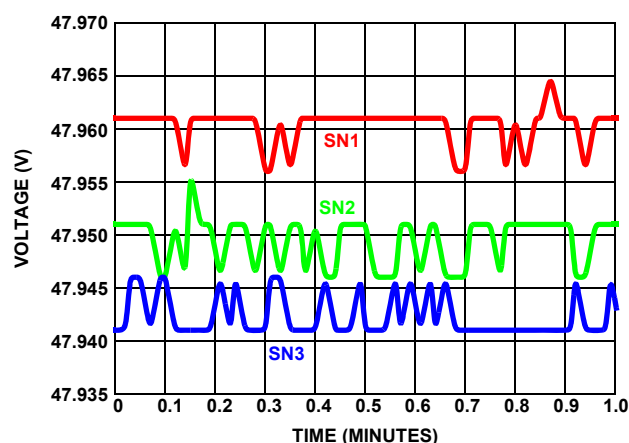
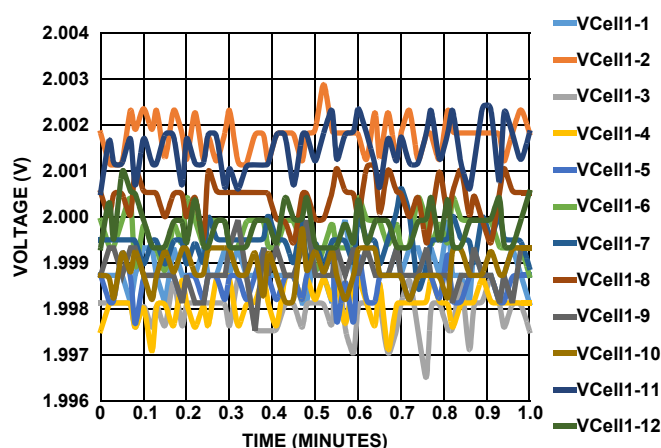
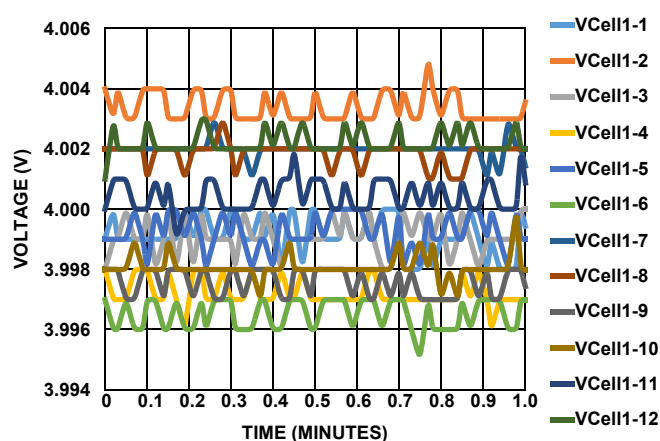


Figure 27. Internal Temperature Device to Device Spread
48V

13.2 Voltage Inputs

Figure 28. V_{BAT} Device to Device 24VFigure 29. V_{BAT} Device to Device 48VFigure 30. SN1 V_{CELLS} V_{BAT} 24VFigure 31. SN1 V_{CELLS} V_{BAT} 24V

14. Ordering Information

Part Number	Description
ISL94212EVKIT1Z	Multi-Cell Li-Ion Battery Manager Evaluation Kit

15. Revision History

Revision	Date	Description
1.00	Oct 16, 2025	Applied the latest template. Corrected links throughout. Corrected board numbers throughout. Added the Revision History section.
0.00	Aug 26, 2015	Initial release

IMPORTANT NOTICE AND DISCLAIMER

RENESAS ELECTRONICS CORPORATION AND ITS SUBSIDIARIES ("RENESAS") PROVIDES TECHNICAL SPECIFICATIONS AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT OF THIRD-PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for developers who are designing with Renesas products. You are solely responsible for (1) selecting the appropriate products for your application, (2) designing, validating, and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements. These resources are subject to change without notice. Renesas grants you permission to use these resources only to develop an application that uses Renesas products. Other reproduction or use of these resources is strictly prohibited. No license is granted to any other Renesas intellectual property or to any third-party intellectual property. Renesas disclaims responsibility for, and you will fully indemnify Renesas and its representatives against, any claims, damages, costs, losses, or liabilities arising from your use of these resources. Renesas' products are provided only subject to Renesas' Terms and Conditions of Sale or other applicable terms agreed to in writing. No use of any Renesas resources expands or otherwise alters any applicable warranties or warranty disclaimers for these products.

(Disclaimer Rev.1.01)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,
Koto-ku, Tokyo 135-0061, Japan
www.renesas.com

Contact Information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit www.renesas.com/contact-us/.

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.