

QE for Display[RX,RA] V3.7.0, QE for Camera[RA] V1.2.0

Release Note

Thank you very much for your interest in QE for Display[RX,RA] V3.7.0, QE for Camera[RA] V1.2.0.

This document describes this product installation, restrictions and so on. Please read this document before using the product.

Contents

1.	About QE for Display[RX,RA] V3.7.0, QE for Camera[RA] V1.2.0.....	3
1.1	Summary	3
1.2	New Functions / Changes	4
1.2.1	Support Graphics LCD Controller (GLCDC) for RA8D2 MCU	4
1.2.2	Support Capture Engine Unit (CEU) for RA8D2 MCU	5
1.2.3	Support MIPI PHY, MIPI CSI Interface and Video Input Module (VIN) for RA8P1 and RA8D2 MCU ..	6
1.2.4	Fixed the issue that the GUI can't be reloaded after modifying custom LCD parameters	6
1.2.5	Change the license applied to the sample code	8
1.3	Supported Environment.....	8
1.4	Supported Microcontroller	9
1.5	Supported Software.....	9
1.6	Supported LCD Controller for Serial Connection	9
1.7	Supported Evaluation Board	10
2.	Installation and Uninstallation	12
2.1	Installing This Product.....	12
2.1.1	Installing the Plug-in Version.....	12
2.1.2	Installing the Standalone Version.....	13
2.2	Updating This Product.....	13
2.3	Uninstalling This Product.....	14
2.3.1	Uninstalling the Plug-in Version	14
2.3.2	Uninstalling the Standalone Version	14
3.	Notes / Restrictions.....	15
3.1	Usage Considerations	15
3.1.1	About additional installation of the RA family environment	15
3.1.2	About compatibility with the previous version of sample program	15
3.1.3	How to transfer the data of the previous version (when using plug-in version)	15
3.1.4	How to transfer the data from plug-in version to standalone version	15
3.1.5	About the preset values of the evaluation board.....	16
3.1.6	About PLLCLK and panel clock frequency setting of standalone version	16
3.1.7	Note on using the Aeropoint GUI (Library Setting).....	16

3.1.8	Note on parameter setting (when using RA family).....	16
3.1.9	Note on TrustZone projects usage (when using RA family).....	16
3.1.10	Note on display settings of PC monitor	17
3.1.11	Note on “LCD/Camera Workflow (QE)” view.....	18
3.1.12	Note on baud rate setting when using standalone version	21
3.1.13	Note on pin configuration settings of FSP modules (EK-RA8D1 board setting)	21
3.1.14	Note on pin configuration setting of FSP module (EK-RA8D2 board setting).....	22
3.1.15	Note on pin configuration settings of FSP modules (EK-RA8E2 board setting)	28
3.1.16	Note on pin configuration settings of FSP modules (EK-RA8P1 board setting)	29
3.1.17	Note on settings of captured image size	34
3.1.18	Note on real-time adjustment settings for parallel camera (EK-RA8D1 board setting).....	35
3.1.19	Note on real-time adjustment settings for using MIPI camera (EK-RA8P1 and EK-RA8D2 board setting).....	35
3.1.20	Note on opening adjustment view	35
3.1.21	Note on changing board operation	36
3.2	Functional Restrictions	37
	Revision History.....	38

1. About QE for Display[RX,RA] V3.7.0, QE for Camera[RA] V1.2.0

1.1 Summary

QE for Display[RX,RA] V3.7.0 and QE for Camera[RA] V1.2.0 are one of several Solution Toolkit which operate under the e² studio integrated development environment.

In the following embedded system development, this product allows for easy initial adjustment of display connection (display timing adjustment and image quality adjustment) and create GUI. It also allows for easy initial adjustment of camera image capture (the size and starting position of the image capture) and display it on LCD. This shortens the development period.

- Display GUI on LCD using Graphic LCD Controller (a display controller mounted on the RX family and RA family* of MCUs) image display function, emWin GUI software package and Aeropoint GUI for RX. (* The standalone version does not support RA family of MCUs.)
- Display GUI on a serial-connected LCD using serial communication in the RX family and the emWin GUI software package.
- Capture external images using Capture Engine Unit or Video Input Module (capture modules mounted on the RA family) and display them on LCD or save them in memory.

QE for Display[RX,RA] V3.7.0 and QE for Camera[RA] V1.2.0 are the same plug-in. Therefore, you can install both items by installing either one of the two. The software would be installed in e² studio as "Renesas QE for Display[RX,RA]/QE for Camera[RA]".

1.2 New Functions / Changes

1.2.1 Support Graphics LCD Controller (GLCDC) for RA8D2 MCU

This product supports the adjustment of Graphics LCD Controller (GLCDC) for RA8D2 MCU. You can use the emWin GUI tool to create an image to display on the LCD, and adjust the GLCDC settings in real time to adjust the image display effect.

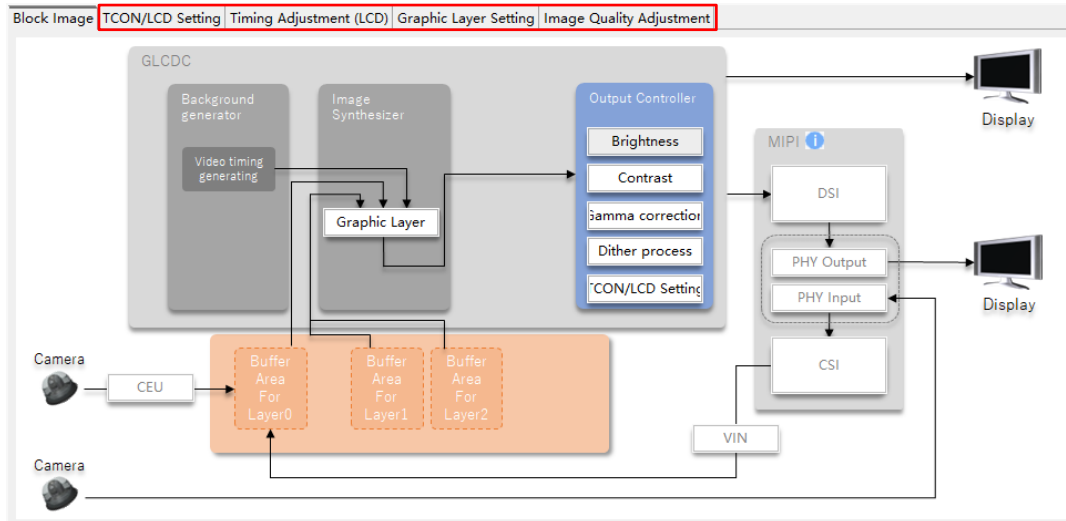


Figure 1-1 RA8D2 Graphics LCD Controller (GLCDC) Setting

1.2.2 Support Capture Engine Unit (CEU) for RA8D2 MCU

This product supports the adjustment of Capture Engine Unit (CEU) for RA8D2 MCU. You can use the parallel mode camera to capture external image data through the CEU module within the RA8D2 MCU and store the image data in memory. The size and starting position of the captured image can be adjusted dynamically.

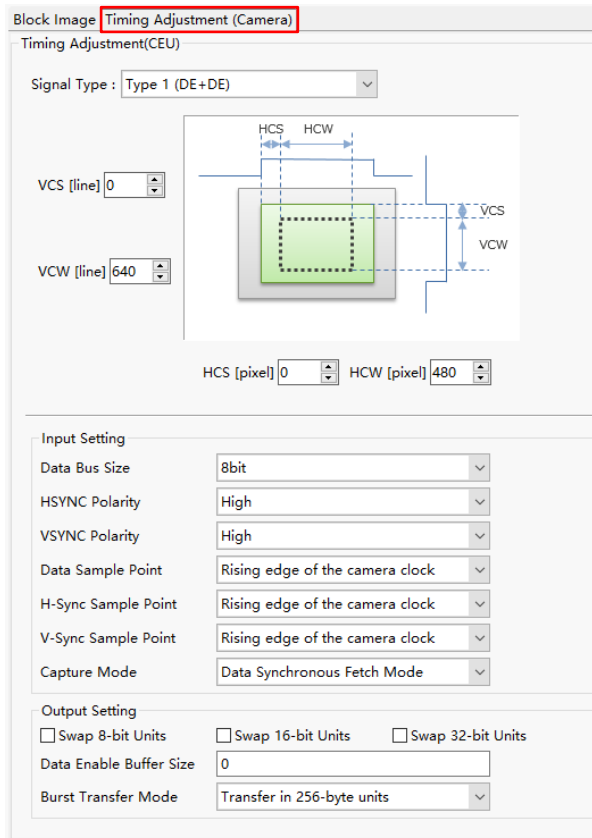


Figure 1-2 RA8D2 Capture Engine Unit (CEU) Setting

1.2.3 Support MIPI PHY, MIPI CSI Interface and Video Input Module (VIN) for RA8P1 and RA8D2 MCU

This product supports the adjustment of MIPI PHY, MIPI CSI Interface and Video Input Module (VIN) for RA8P1 and RA8D2 MCU. You can use the MIPI mode camera to capture external image data through the VIN module within the RA8P1, RA8D2 MCU and store the image data in memory. The size, starting position, and image data format of the captured image can be adjusted dynamically.

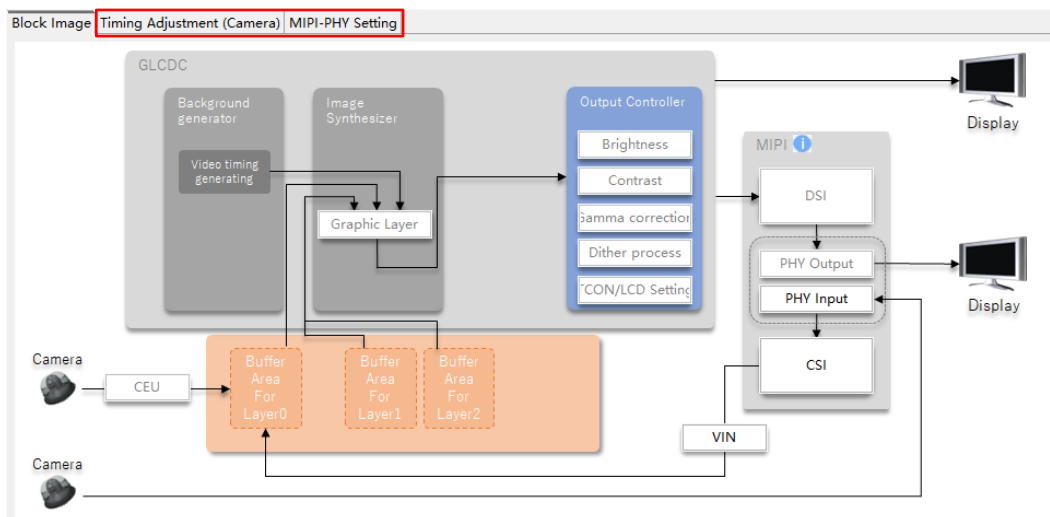


Figure 1-3 RA8P1 and RA8D2 MIPI PHY, MIPI CSI and Video Input Module (VIN) Setting

1.2.4 Fixed the issue that the GUI can't be reloaded after modifying custom LCD parameters

This product fixes the issue that the GUI can't be reload after modifying custom LCD parameters.

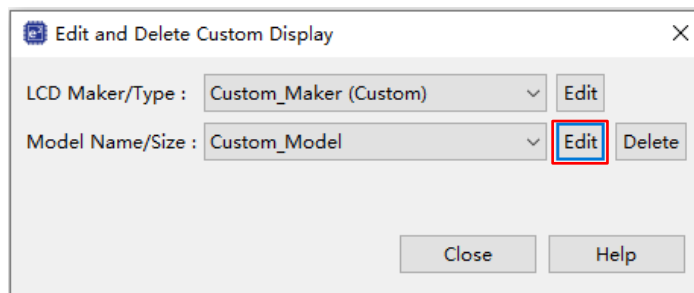


Figure 1-4 Edit the Custom LCD

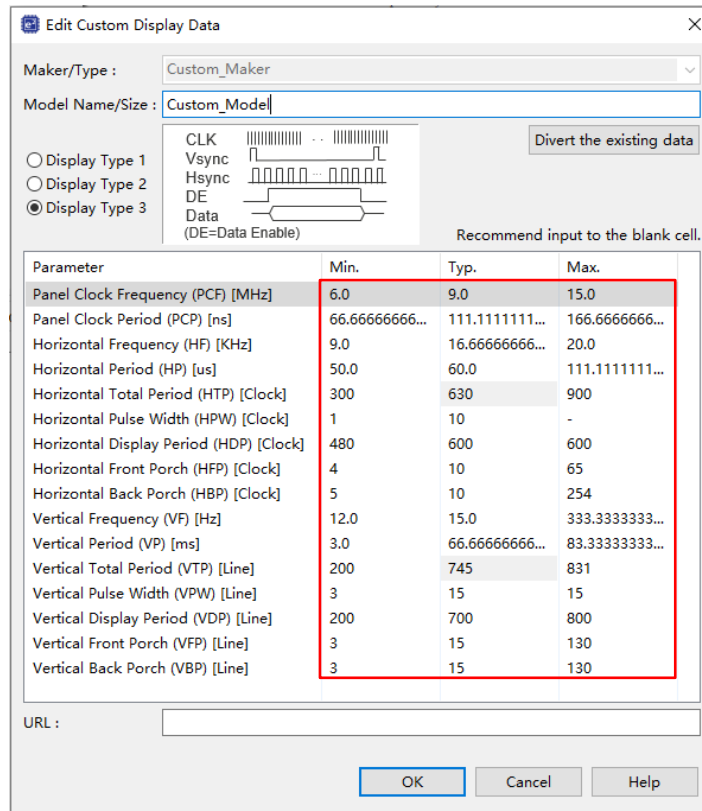


Figure 1-5 Edit the Custom LCD Parameters

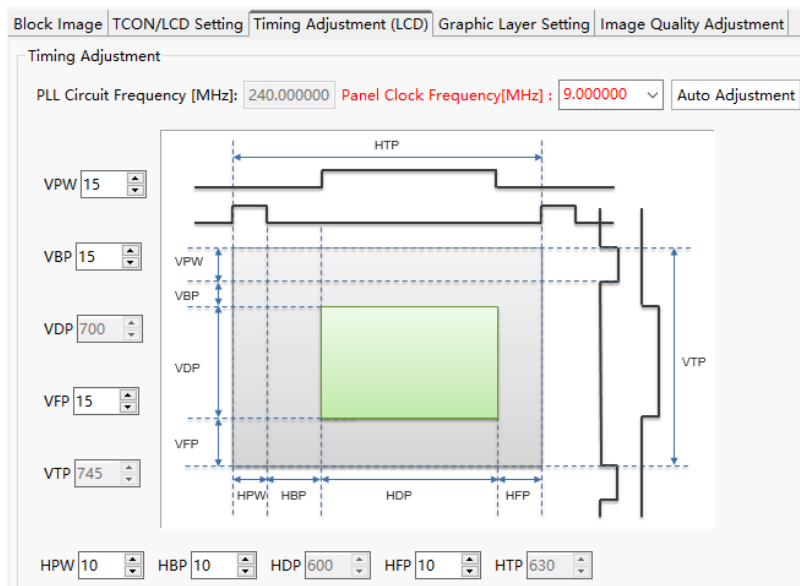


Figure 1-6 Reload Custom LCD Parameters in GUI

1.2.5 Change the license applied to the sample code

The license applied to the sample code generated by this tool has been changed to BSD-3-Clause in this product.

```
BSD 3-Clause License
-----
Copyright 2025, Renesas Electronics Corporation and/or its affiliates

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

Neither the name of the copyright holder nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.
```

Figure 1-7 BSD-3-Clause License Content

1.3 Supported Environment

- Windows 10, Windows 11
- Renesas e² studio 2025-10 (or later)
- CS+ for CC V8.12.00 (or later)
- IAR EW for Renesas RX V5.10.1 (or later)
- RX Smart Configurator V2.22.0 (or later)

1.4 Supported Microcontroller

The following table describes the supported microcontrollers and their functions.

Function	RX Family	RA Family
GLCDC	<ul style="list-style-type: none"> ➤ RX600 Series RX65N groups*, RX651 groups*, RX66N groups (* ROM capacity: 1.5 MB to 2 MB only) ➤ RX700 Series RX72M groups*, RX72N groups (* 100-pin is not supported) 	<ul style="list-style-type: none"> ➤ RA6 Series RA6M3 groups ➤ RA8 Series RA8D1 groups, RA8D2 groups, RA8E2 groups, RA8P1 groups
CEU	-	<ul style="list-style-type: none"> ➤ RA8 Series RA8D1 groups, RA8D2 groups, RA8P1 groups
VIN	-	<ul style="list-style-type: none"> ➤ RA8 Series RA8D2 groups, RA8P1 groups
MIPI-PHY	-	<ul style="list-style-type: none"> ➤ RA8 Series RA8D1 groups, RA8D2 groups, RA8P1 groups
MIPI-DSI	-	<ul style="list-style-type: none"> ➤ RA8 Series RA8D1 groups
MIPI-CSI	-	<ul style="list-style-type: none"> ➤ RA8 Series RA8D2 groups, RA8P1 groups
Serial Connection	All RX family* (*Only microcontrollers supported by Smart Configurator)	-

Table 1-1 Supported Microcontrollers and Functions

1.5 Supported Software

- RX Firmware Integration Technology (FIT)
 - Graphic LCD Controller Module: r_glcdc_rx V1.60 (or later)
 - QE for Display Middleware Module: r_qe_display_rx V1.10 (or later)
 - emWin v6.34 Module: r_emwin_rx V1.20 (V6.34.g.1.20) (or later)
 - Aeropoint Module: r_aeropoint_rx V1.00 (or later)
- RA Flexible Software Package (FSP) V6.2.0 (or later)

1.6 Supported LCD Controller for Serial Connection

- ST7715
- ILI9341

1.7 Supported Evaluation Board

Function	RX Evaluation Board	RA Evaluation Board
GLCDC	<ul style="list-style-type: none"> ➤ Renesas Starter Kit+ for RX65N-2MB ➤ Renesas Starter Kit+ for RX72N ➤ RX65N Envision Kit ➤ RX72N Envision Kit ➤ Graphics Evaluation Kit for RA6M3 ➤ Evaluation Kit for RA8D1 ➤ Evaluation Kit for RA8D2 ➤ Evaluation Kit for RA8E2 ➤ Evaluation Kit for RA8P1 	<ul style="list-style-type: none"> ➤ Graphics Evaluation Kit for RA6M3 ➤ Evaluation Kit for RA8D1 ➤ Evaluation Kit for RA8D2 ➤ Evaluation Kit for RA8E2 ➤ Evaluation Kit for RA8P1
CEU ^{*1}	-	<ul style="list-style-type: none"> ➤ Evaluation Kit for RA8D1 ➤ Evaluation Kit for RA8D2 ➤ Evaluation Kit for RA8P1
VIN ^{*2}		<ul style="list-style-type: none"> ➤ Evaluation Kit for RA8P1 ➤ Evaluation Kit for RA8D2
MIPI-PHY ^{*2}	-	<ul style="list-style-type: none"> ➤ Evaluation Kit for RA8D1 ➤ Evaluation Kit for RA8D2 ➤ Evaluation Kit for RA8P1
MIPI-DSI	-	<ul style="list-style-type: none"> ➤ Evaluation Kit for RA8D1
MIPI-CSI ^{*2}	-	<ul style="list-style-type: none"> ➤ Evaluation Kit for RA8P1 ➤ Evaluation Kit for RA8D2
Serial Connection ^{*3}	<ul style="list-style-type: none"> ➤ Renesas Starter Kit for RX130-512KB ➤ Renesas Starter Kit for RX140 ➤ Renesas Starter Kit for RX231 ➤ Renesas Solution Starter Kit for RX23W ➤ Renesas Starter Kit+ for RX64M ➤ Renesas Starter Kit for RX660 ➤ Renesas Starter Kit+ for RX671 ➤ Renesas Starter Kit+ for RX71M ➤ Target Board for RX130 ➤ Target Board for RX231 ➤ Target Board for RX23W ➤ Target Board for RX23W module ➤ Target Board for RX65N ➤ Target Board for RX660 ➤ Target Board for RX671 ➤ Evaluation Kit for RX261 ➤ Fast Prototyping Board for RX261 	-

Table 1-2 Supported Evaluation Boards and Functions

Note 1: The camera module related to this function is connected to the board below.

- Evaluation Kit for RA8D1: ArduCam B0156

Note 2: The camera module related to this function is connected to the board below.

- Evaluation Kit for RA8D2: ArduCam CU450_OV5640
- Evaluation Kit for RA8P1: ArduCam CU450_OV5640

Note 3: The LCD module related to this function is connected to the board below.

- Renesas Starter Kit / Renesas Solution Starter Kit: OKAYA - RH128128T-1X44WN-B2 (Included in Starter Kit.)
- Evaluation Kit / Fast Prototyping Board / Target Board: Kuongshun Electronic - MSP2807 (OEM products are also available.)

2. Installation and Uninstallation

2.1 Installing This Product

The following describes the installation methods of the plug-in version and the standalone version respectively.

2.1.1 Installing the Plug-in Version

Use either of the following procedures to install the plug-in version.

2.1.1.1 Install from the "Renesas Software Installer" menu of e² studio

1. Start e² studio.
2. Select the [Renesas Views] – [Renesas Software Installer] menu of e² studio to open the [Renesas Software Installer] dialog box.
3. Select the [Renesas QE] and click the [Next>] button
4. Select the [QE for Display[RX,RA] (v3.7.0)/QE for Camera[RA] (v1.2.0)] check box, and click the [Finish] button.
5. Check that [Renesas QE for Display[RX,RA]/QE for Camera[RA]] is selected in the [Install] dialog box, and click the [Next>] button.
6. Check that [Renesas QE for Display[RX,RA]/QE for Camera[RA]] is selected as the target of installation, and click the [Next>] button.
7. After confirming the license agreements, if you agree to the license, select the [I accept the terms of the license agreements] radio button, and click the [Finish] button.
8. If the dialog of the trust certificate is displayed, check that certificate, and click the [OK] button to continue installation.
9. When prompted to restart e² studio, restart it.
10. Start this product from the [Renesas Views] - [Renesas QE] menu of e² studio. For details about how to use this product, see the [Help] menu of e² studio.

2.1.1.2 Install using QE (zip file) downloaded from the Renesas website

1. Start e² studio.
2. From the [Help] menu, select [Install New Software...] to open the [Install] dialog box.
3. Click the [Add...] button to open the [Add Repository] dialog box.
4. Click the [Archive] button, select "RenesasQE_Display_RXRA_V370.zip" or "RenesasQE_Camera_RA_V120.zip" in the opened dialog box, and click the [Open] button.
5. Click the [OK] button in the [Add Repository] dialog box.
6. Expand the [Renesas QE] item shown in the [Install] dialog box, select the [Renesas QE for Display[RX,RA] /QE for Camera[RA]] check box, and then click the [Next>] button.
* If you check off the [Contact all update sites during install to find required software] checkbox, you can shorten the installation time.
7. Check that [Renesas QE for Display[RX,RA]/QE for Camera[RA]] is selected as the target of installation, and click the [Next>] button.
8. After confirming the license agreements, if you agree to the license, select the [I accept the terms of the license agreements] radio button, and click the [Finish] button.
9. If the dialog of the trust certificate is displayed, check that certificate, and click the [OK] button to continue installation.
10. When prompted to restart e² studio, restart it.
11. Start this product from the [Renesas Views] - [Renesas QE] menu of e² studio. For details about how to use this product, see the [Help] menu of e² studio.

2.1.2 Installing the Standalone Version

1. Extract “.zip” file to a user-specified location on the PC.
Note: Please do not put the tool under OS program folder (C:\Program Files)
2. Start this product by double clicking “\QE-Display\eclipse\qe-display.exe”.
3. For the first time this product starts, there is a dialog of license agreement. After checking the license, you can select “Agree” or “Disagree”.

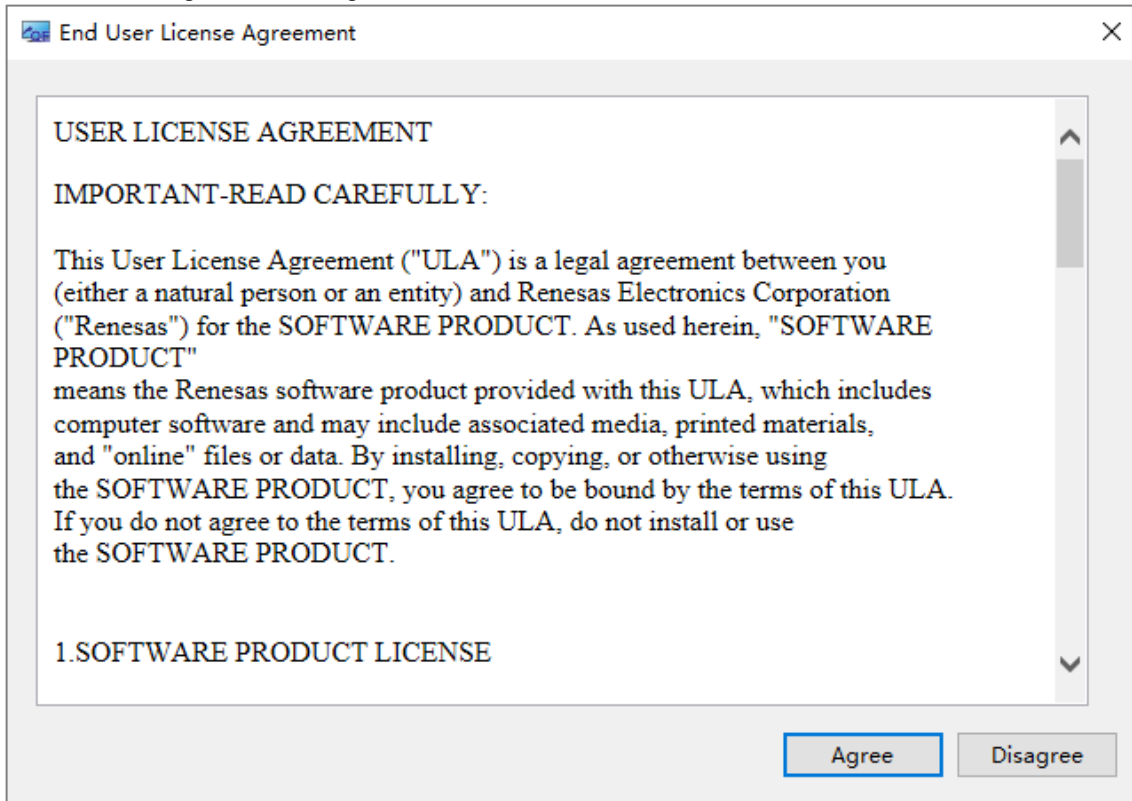


Figure 2-1 License Agreement Dialog

4. If “Agree” is selected in above step, the product is launched then you can use it; if “Disagree” is selected in above step, the product won’t be launched.

2.2 Updating This Product

If you have already installed the plug-in version, you can update it in the same way as the procedure for installation 2.1.1.2

If you have already installed the standalone version, you can update it in the same way as the procedure for installation 2.1.2

2.3 Uninstalling This Product

The following describes how to uninstall the plug-in version and the standalone version respectively.

2.3.1 Uninstalling the Plug-in Version

Use the following procedure to uninstall this product.

1. Start e² studio.
2. Select [Help -> About e² studio] to open the [About e² studio] dialog box.
3. Click the [Installation Details] button to open the [e² studio Installation Details] dialog box.
4. Select [Renesas QE for Display[RX,RA]/QE for Camera[RA]] displayed on the [Installed Software] tabbed page and click the [Uninstall...] button to open the [Uninstall] dialog box.
5. Check the displayed information and click the [Finish] button.
6. When prompted to restart e² studio, restart it.

2.3.2 Uninstalling the Standalone Version

Delete the entire folder which .zip package is extracted.

3. Notes / Restrictions

3.1 Usage Considerations

3.1.1 About additional installation of the RA family environment

If you wish to install the RA family environment additionally to your e² studio development environment, please uninstall this product once and install it again after the RA family environment installation is completed

3.1.2 About compatibility with the previous version of sample program

V2.0.0 or later is not compatible with the previous version (QE for Display[RX] V1.1.0 or below) of the sample program because V2.0.0 or later has many new items to set and macros to output to the header file. When updating to V2.0.0 or later, also update the Graphic LCD Controller Module (r_glcdc_rx) to V1.40 or later.

For your information, the relationship between the previous version of QE for Display[RX] and the Graphic LCD Controller Module is as follows.

- QE for Display[RX] V1.0.0 : r_glcdc_rx V1.00 - V1.30
- QE for Display[RX] V1.1.0 : r_glcdc_rx V1.30

3.1.3 How to transfer the data of the previous version (when using plug-in version)

To transfer the configuration data from the previous version, copy the configuration file from the workspace location below to the project-specific location.

- Storage location of the previous version's configuration data

<workspace>/metadata/.plugins/com.renesas.apltool.glcdc

- Storage location of the V2.0.0 or later configuration data

<project>/settings/.plugin/com.renesas.apltool.glcdc

3.1.4 How to transfer the data from plug-in version to standalone version

To transfer the configuration data from the plug-in version, copy the configuration file from the plug-in version project's storage location below to the standalone version project's storage location.

Plug-in version side:

- Storage location of the previous version's configuration data

<workspace>/metadata/.plugins/com.renesas.apltool.glcdc

- Storage location of the V2.0.0 or later configuration data

<project>/settings/.plugin/com.renesas.apltool.glcdc

Standalone version side:

- Storage location of configuration data

<project>/settings/.plugin/com.renesas.apltool.glcdc

3.1.5 About the preset values of the evaluation board

When using the evaluation board, preset values are set for each setting item in QE for Display [RX,RA]/QE for Camera[RA].

Please configure the GLCDC input clock frequency according to the following requirements.

- RX evaluation boards: Set PLL circuit frequency to 240MHz
- RA evaluation boards: Set LCDCLK value according to the prompts

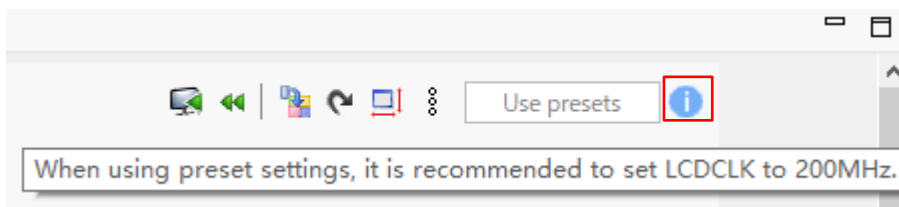


Figure 3-1 LCDCLK Setting Value Prompt

Please configure GPT input clock frequency according to the following requirements.

- EK-RA8D1 board: Set PCLKD frequency to 100MHz
- EK-RA8D2 board: Set GTCLK frequency to 240MHz
- EK-RA8P1 board: Set GTCLK frequency to 240MHz

3.1.6 About PLLCLK and panel clock frequency setting of standalone version

In the standalone version, you need to enter the value of "PLL Circuit Frequency [MHz]" in the "Timing Adjustment" page according to the setting in the Smart Configurator clock page. Also, select the value of "Panel Clock Frequency [MHz]" according to the prompt after the control.

3.1.7 Note on using the Aeropoint GUI (Library Setting)

When you use the RXv2 instruction set architecture on RX66N, RX72M, and RX72N, change the library set in the linker options to the following.

1. libcri_AeropointLite_RXv2_CCRX.lib
2. libcri_Atom_Multiplayer_RXv3_CCRX.lib

3.1.8 Note on parameter setting (when using RA family)

The maximum values of the following parameters differ between QE and FSP, if the maximum value is set in QE, it cannot be reflected in FSP

- QE : HTP (Max 2048) -> FSP : Horizontal total cycles (Max 2047)
- QE : VTP (Max 2048) -> FSP : Vertical total lines (Max 2047)
- QE : VDP (Max 2044) -> FSP : Vertical active video lines (Max 2043)

3.1.9 Note on TrustZone projects usage (when using RA family)

When selecting RA projects, the real-time display adjustment result of TrustZone projects is not guaranteed. It is recommended to use Non-TrustZone project.

3.1.10 Note on display settings of PC monitor

If the GUI text is overlapped or blocked as shown in the figure below on your PC, please set up your PC monitor according to the following recommended settings.

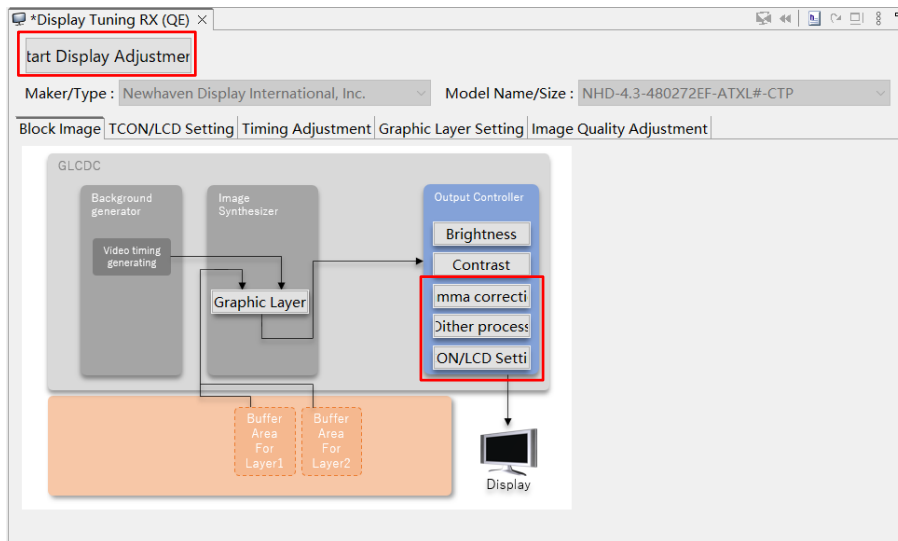


Figure 3-2 GUI with Overlapped or Blocked Text

Recommended monitor settings:

- Scale: 100%
- Display resolution: 1920 x 1080

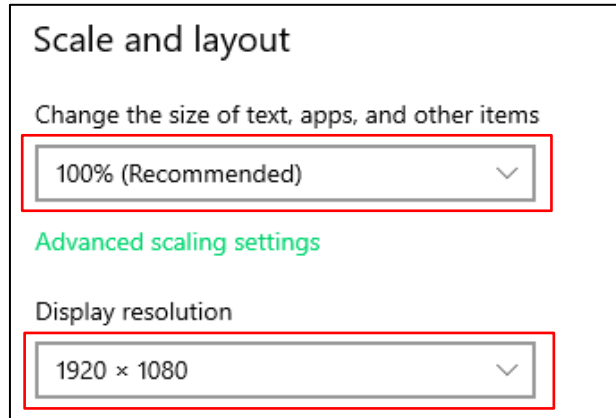


Figure 3-3 Recommended Monitor Settings

3.1.11 Note on “LCD/Camera Workflow (QE)” view

1. If you press the "Maximize"/"Restore" button in the e² studio window while playing a tutorial video with the video window maximized, you will not be able to maximize the video window again.

[Workaround]

Close and re-open the LCD/Camera Workflow (QE) view

2. The workflow cannot be opened if WebView2 Runtime is not installed on your PC.

[Workaround]

Download and install WebView2 (x64 version) from the Microsoft web page.(FAQ:[3000670](#))

3. When workflow is opened, the theme colors may be missing.

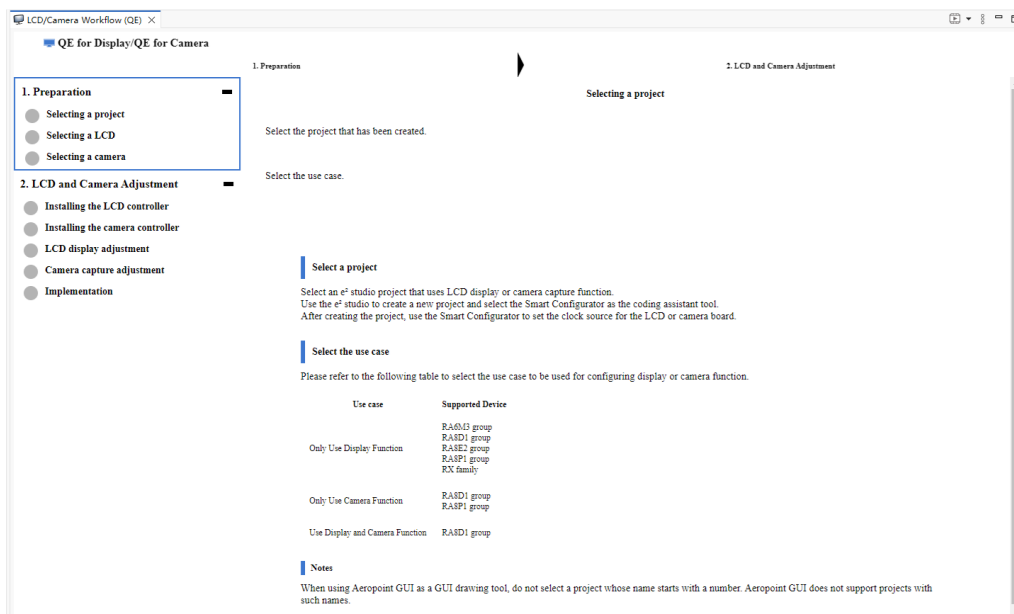


Figure 3-4 Theme Color is Missing in Workflow

[Workaround]

Close and re-open the LCD/Camera Workflow (QE) view

- The workflow may not be displayed properly when clicking on the workflow view again during the views refresh process.

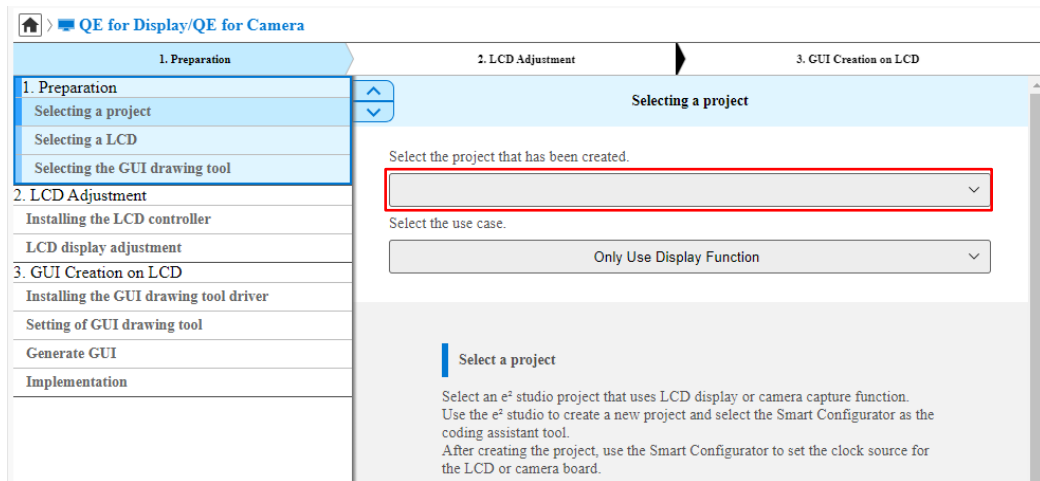


Figure 3-5 Project Selected is Missing in Workflow

[Workaround]

Reselect the project in the "Select a project" step.

- When you click the button below in the workflow, the help contents of e² studio (2025-07 or later) may not be opened.

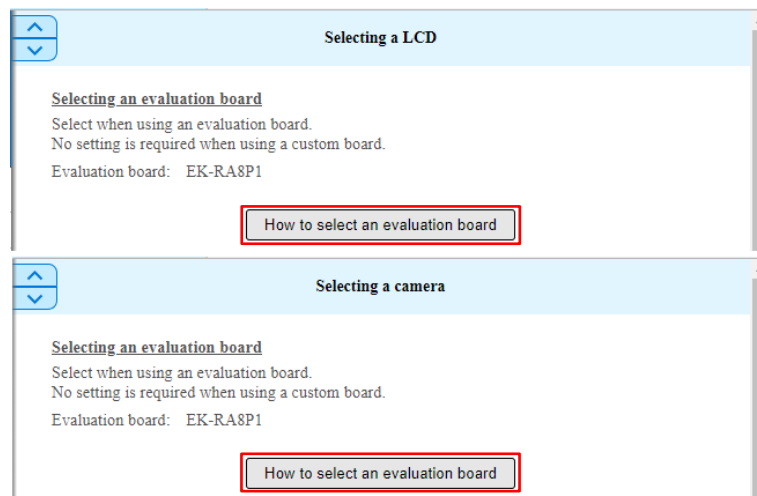


Figure 3-6 “How to select an evaluation board” Button

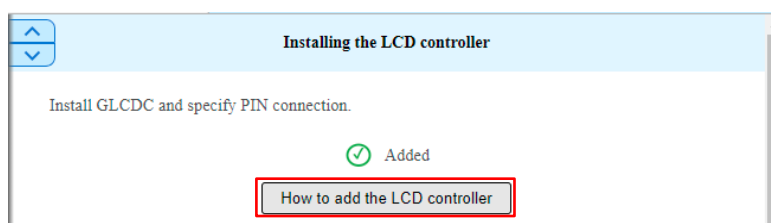


Figure 3-7 “How to add the LCD controller” Button

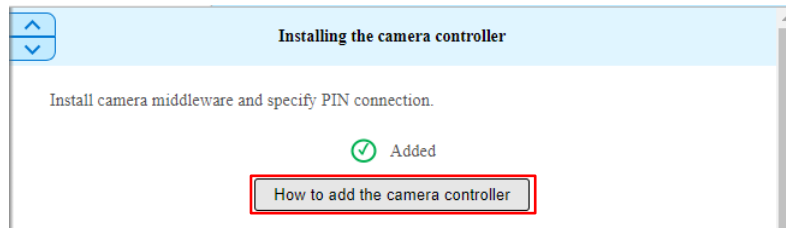


Figure 3-8 “How to add the camera controller” Button

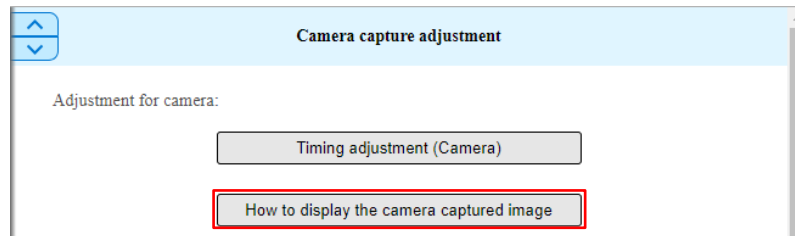


Figure 3-9 “How to display the camera captured image” Button

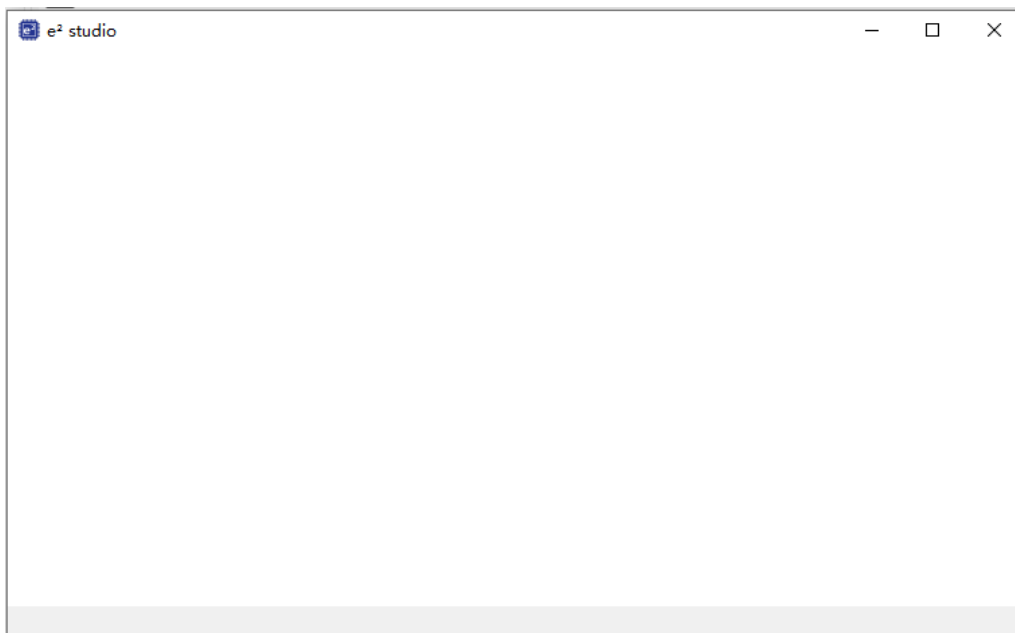


Figure 3-10 Help Content Can’t Open Properly

[Workaround] *

1. Restart e² studio, click [Help] → [Help Contents] menu. (Help cannot be opened at this time, and this step is required)
2. Close all open FSP Configuration views.
3. If there is an open welcome page or workflow view, close them and click [Help] → [Help Contents] menu (Help can be opened normally at this time)
 If there is no open welcome page or workflow view, click [Help] → [Welcome] menu to open the welcome page, and then click [Help] → [Help Contents] menu (Help can be opened normally at this time)
 If clicking [Help] → [Help Contents] menu opens help contents normally, other help contents entries can open the help contents normally.

* This operation needs to be performed every time we start e² studio.

3.1.12 Note on baud rate setting when using standalone version

Due to the limitation of the communication speed of the USB-to-serial IC (RL78G1C) installed on the Renesas Starter Kit and Envision Kit boards, for projects using these two types of Evaluation boards, if you use the USB-to-serial resources on the board, the maximum communication baud rate set in the standalone version cannot exceed 115200.

3.1.13 Note on pin configuration settings of FSP modules (EK-RA8D1 board setting)

When using camera module, you need to do the following pin configuration settings.

1. Set the “Operation Mode” of “ETHER_RMII” as “Disabled” in the Pins page of FSP Configuration. *

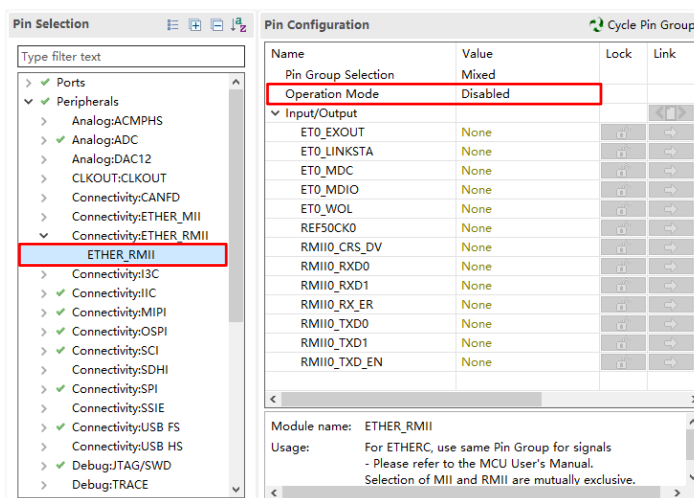


Figure 3-11 ETHER_RMII Pin Configuration for EK-RA8D1

* Due to the conflict with CEU pin resources, the pins of ETHER_RMII are not used.

2. Set the pin configuration of “CEU” in the Pins page of FSP Configuration. *

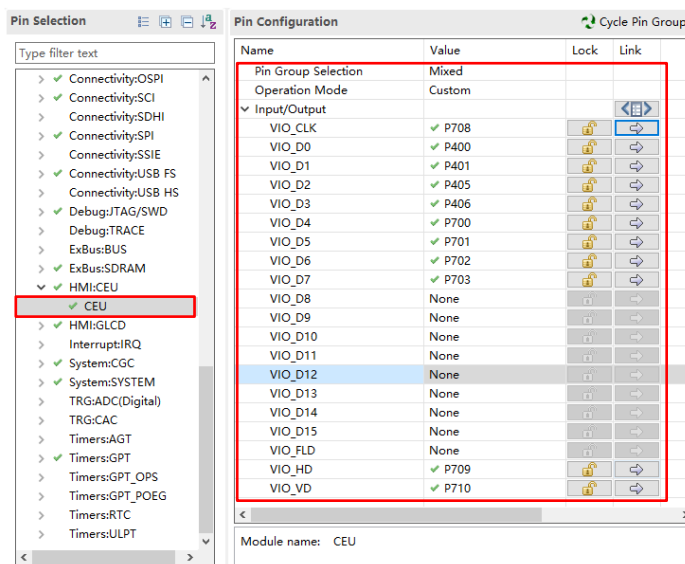


Figure 3-12 CEU Pin Configuration for EK-RA8D1

* Due to the conflict with SDRAM pin resources, the upper 8-bit data pins of CEU are not used.

- Set the pin configuration of “GPT3” in the Pins page of FSP Configuration.

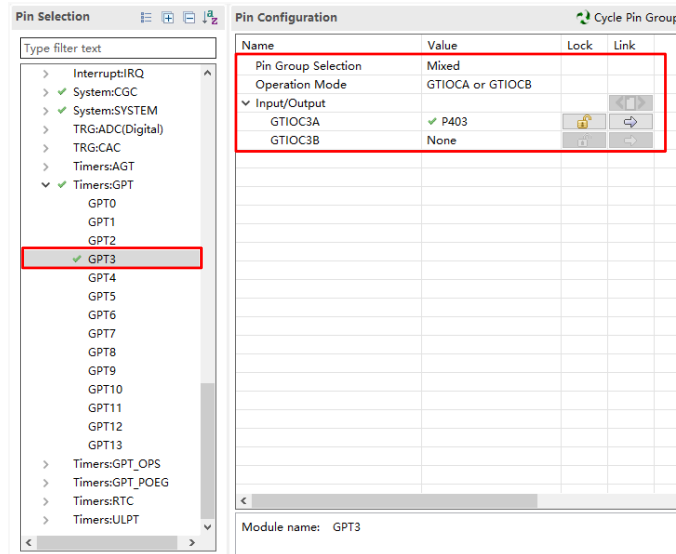


Figure 3-13 GPT3 Pin Configuration for EK-RA8D1

3.1.14 Note on pin configuration setting of FSP module (EK-RA8D2 board setting)

When using LCD module, you need to do the following pin configuration settings.

- Set the “Operation Mode” of “GPT13” as “Disabled” in the Pins page of FSP Configuration. *

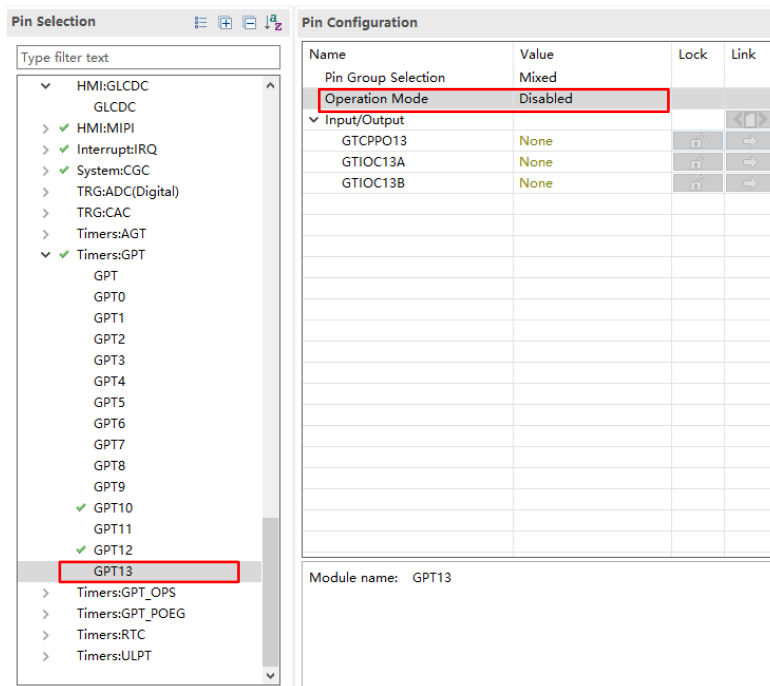


Figure 3-14 GPT13 Pin Configuration for LCD Module of EK-RA8D2

* Due to the conflict with P514 pin resources, the pins of GPT13 are not used.

- Set "P514" pin of "Ports" module as "Output mode (Initial High)" in the Pins page of FSP Configuration.

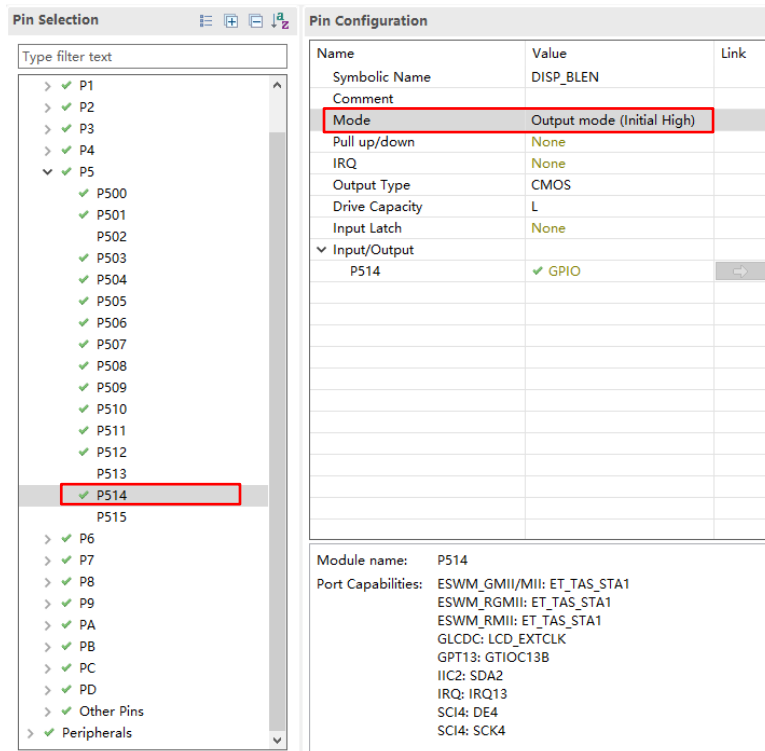


Figure 3-15 "DISP_BLEN" Pin Configuration for EK-RA8D2

- Set "P606" pin of "Ports" module as "Output mode (Initial High)" in the Pins page of FSP Configuration.

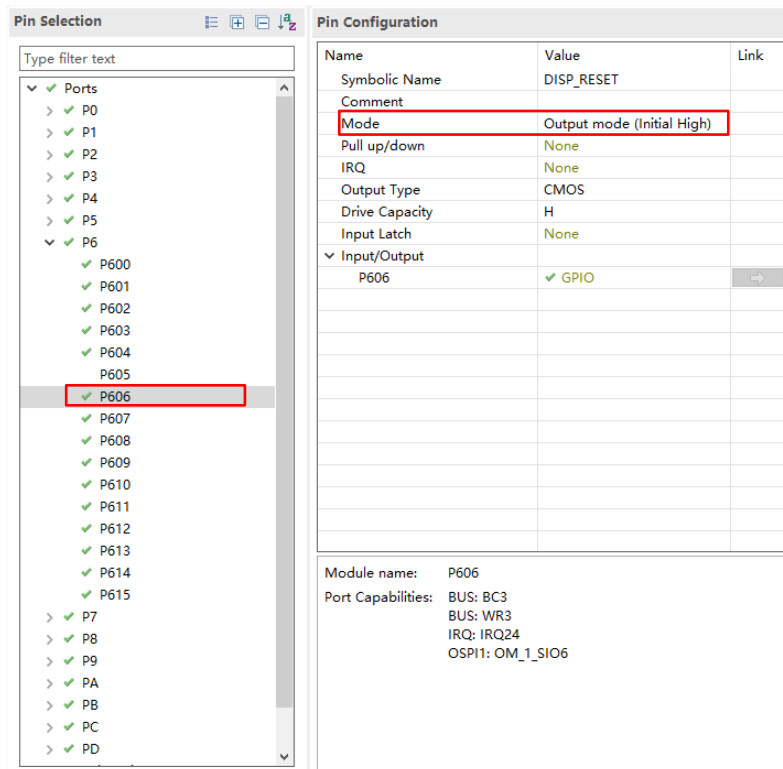


Figure 3-16 "DISP_RESET" Pin Configuration for EK-RA8D2

- Set the “Operation Mode” of “CEU” as “Disabled” in the Pins page of FSP Configuration. *

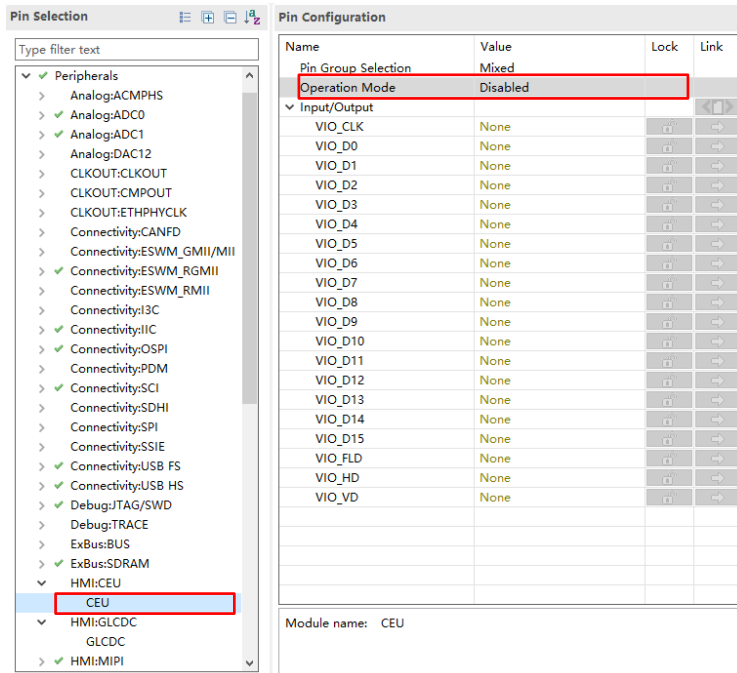


Figure 3-17 CEU Pin Configuration for LCD Module of EK-RA8D2

* Due to the conflict with GLCDC pin resources, the pins of CEU are not used.

- Set the pin configuration of “GLCDC” in the Pins page of FSP Configuration.

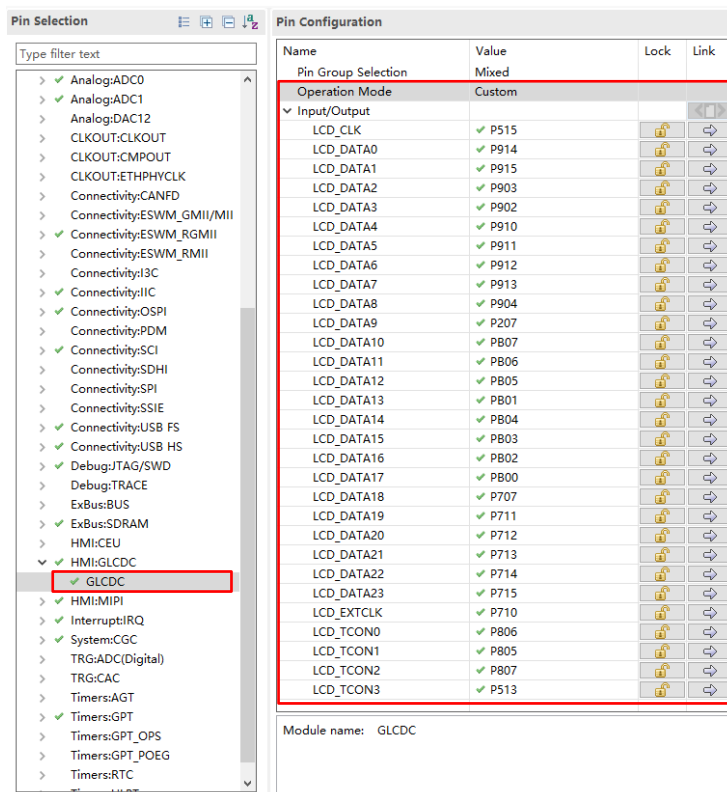


Figure 3-18 GLCDC Pin Configuration for EK-RA8D2

When using camera module with parallel connection, you need to do the following pin configuration settings.

1. Set the pin configuration of “CEU” in the Pins page of FSP Configuration.

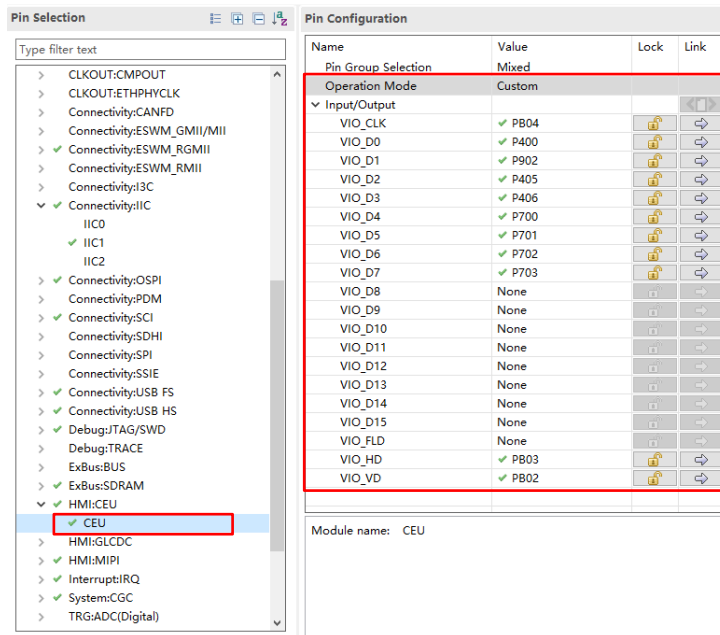


Figure 3-19 CEU Pin Configuration for Parallel Camera of EK-RA8D2

2. Set the pin configuration of “IIC1” in the Pins page of FSP Configuration.

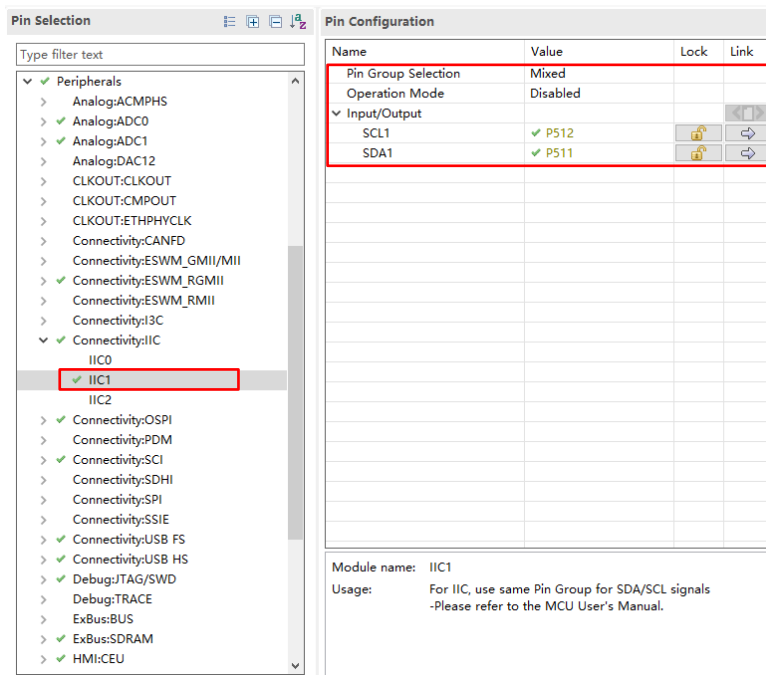


Figure 3-20 IIC1 Pin Configuration for Parallel Camera of EK-RA8D2

- Set the pin configuration of “GPT12” in the Pins page of FSP Configuration.

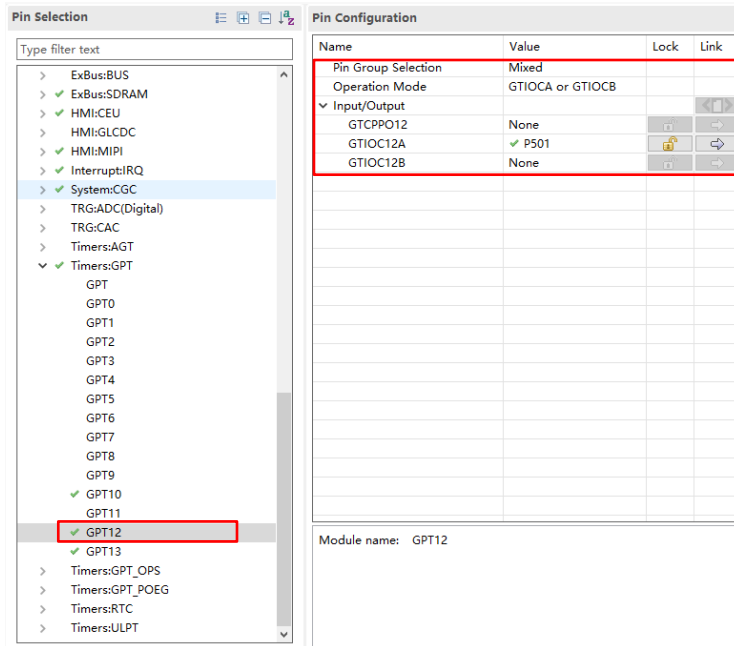


Figure 3-21 GPT12 Pin Configuration for Parallel Camera of EK-RA8D2

When using camera module with MIPI connection, you need to do the following pin configuration settings.

- Set “P108” pin of “Ports” module as “Output mode (Initial High)” in the Pins page of FSP Configuration.

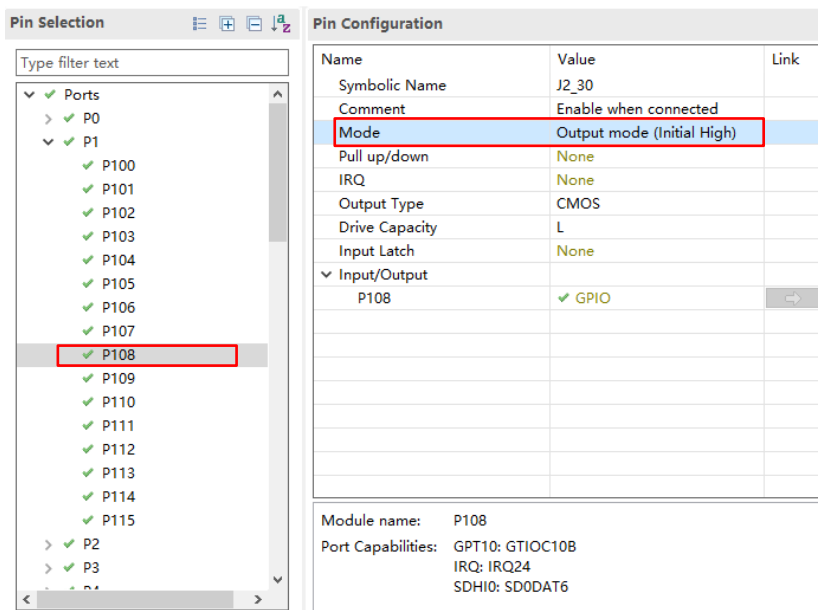


Figure 3-22 P108 Pin Configuration for MIPI camera of EK-RA8D2

2. Set the pin configuration of “IIC1” in the pin page of FSP Configuration

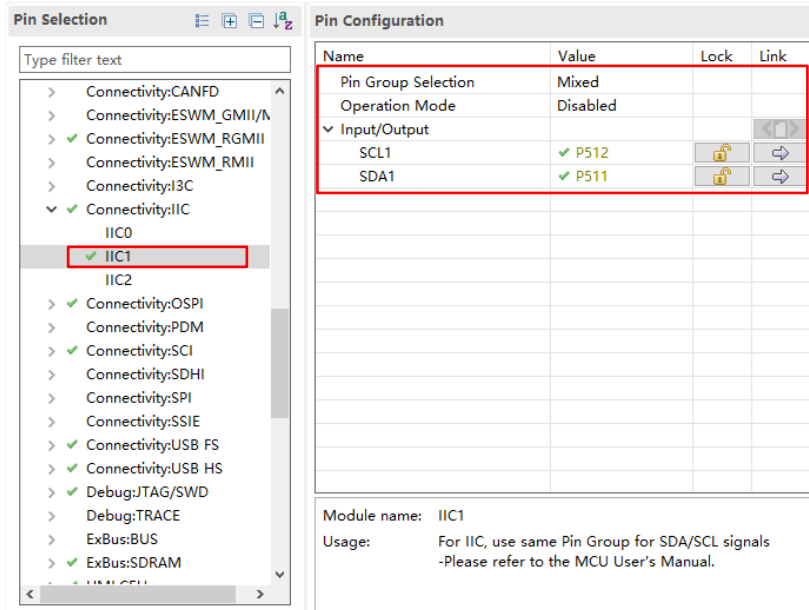


Figure 3-23 IIC1 Pin Configuration for MIPI camera of EK-RA8D2

3. Set the pin configuration of “GPT12” in the pin page of FSP Configuration

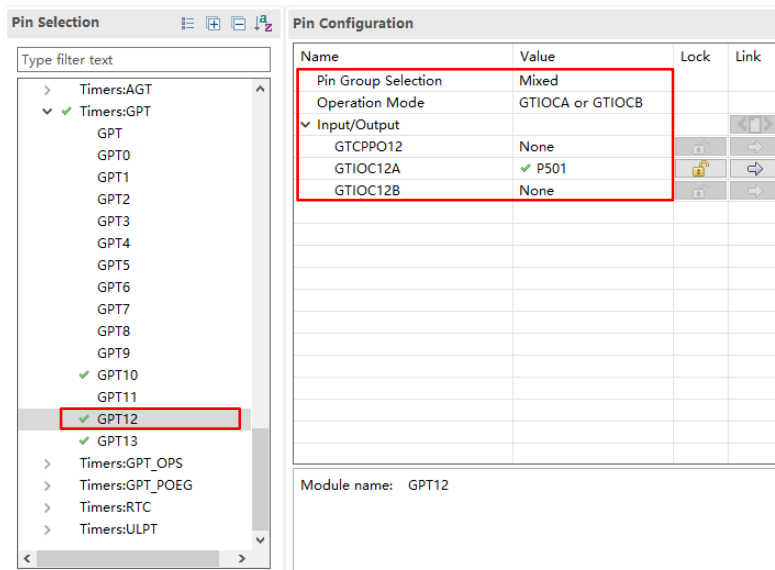


Figure 3-24 GPT12 Pin Configuration for MIPI camera of EK-RA8D2

3.1.15 Note on pin configuration settings of FSP modules (EK-RA8E2 board setting)

When using LCD module, you need to do the following pin configuration settings.

1. Set "LCD_TCON3" pin of "GLCD" module as "None" in the Pins page of FSP Configuration.

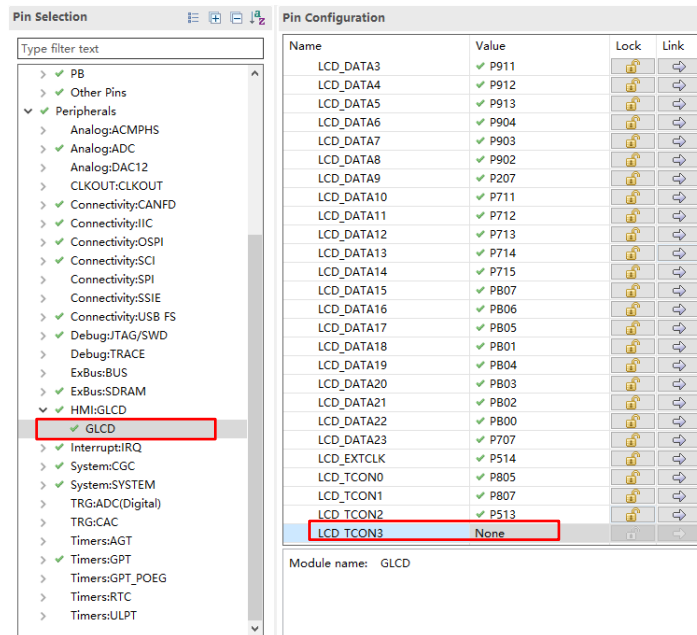


Figure 3-25 GLCD Pin Configuration for EK-RA8E2

2. Set "P515" pin of "Ports" module as "Output mode (Initial High)" in the Pins page of FSP Configuration.

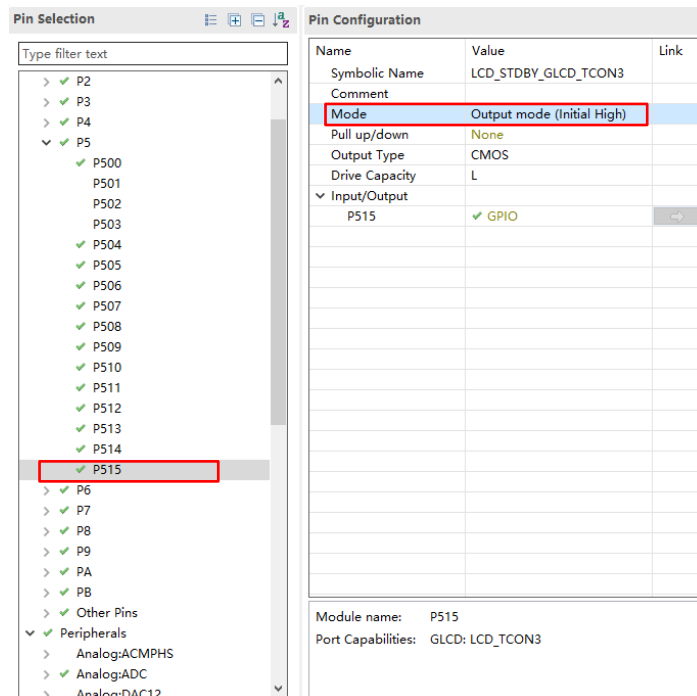


Figure 3-26 "LCD_TCON3" Pin Configuration for EK-RA8E2

3.1.16 Note on pin configuration settings of FSP modules (EK-RA8P1 board setting)

When using LCD module, you need to do the following pin configuration settings.

1. Set "P514" pin of "Ports" module as "Output mode (Initial High)" in the Pins page of FSP Configuration.

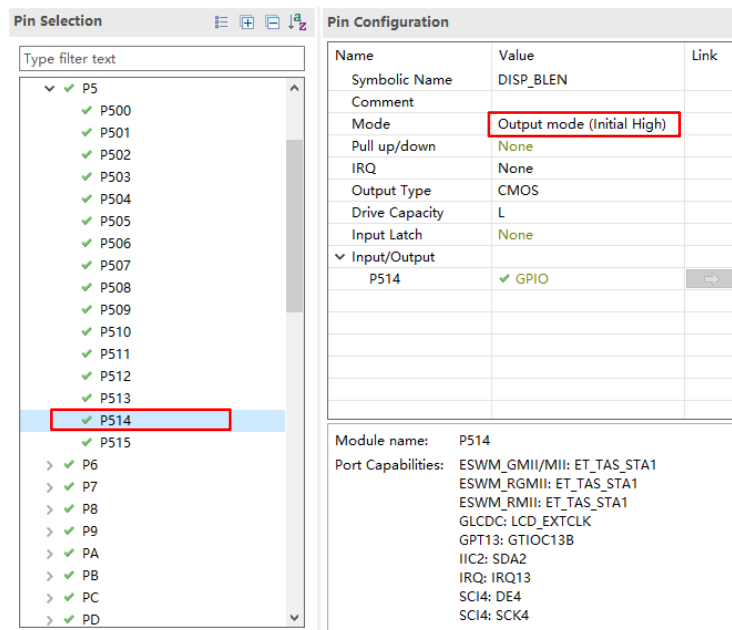


Figure 3-27 "DISP_BLEN" Pin Configuration for EK-RA8P1

2. Set "P606" pin of "Ports" module as "Output mode (Initial High)" in the Pins page of FSP Configuration.

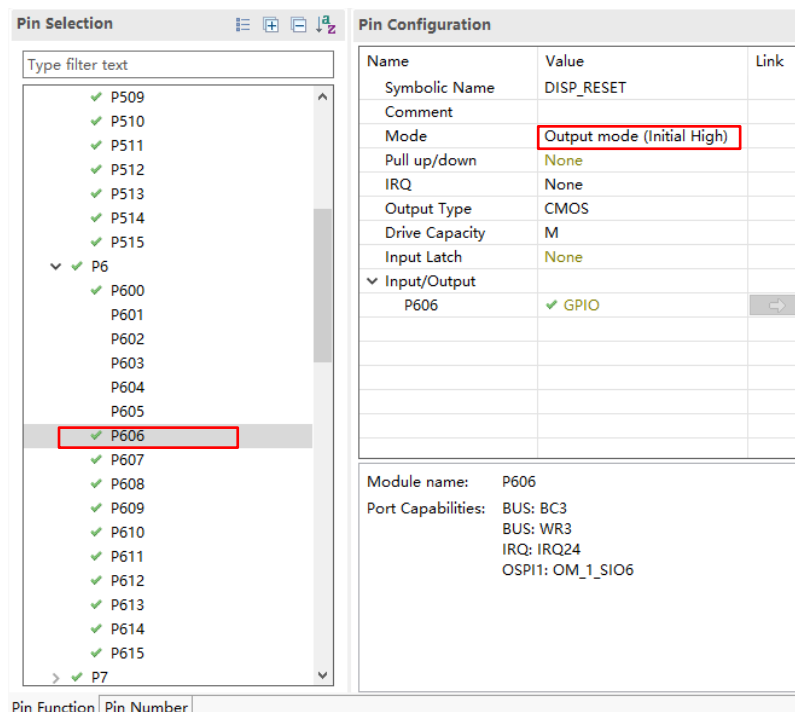


Figure 3-28 "DISP_RESET" Pin Configuration for EK-RA8P1

When using camera module with parallel connection, you need to do the following pin configuration settings.

1. Set the “Operation Mode” of “I3C0” as “Disabled” in the Pins page of FSP Configuration. *

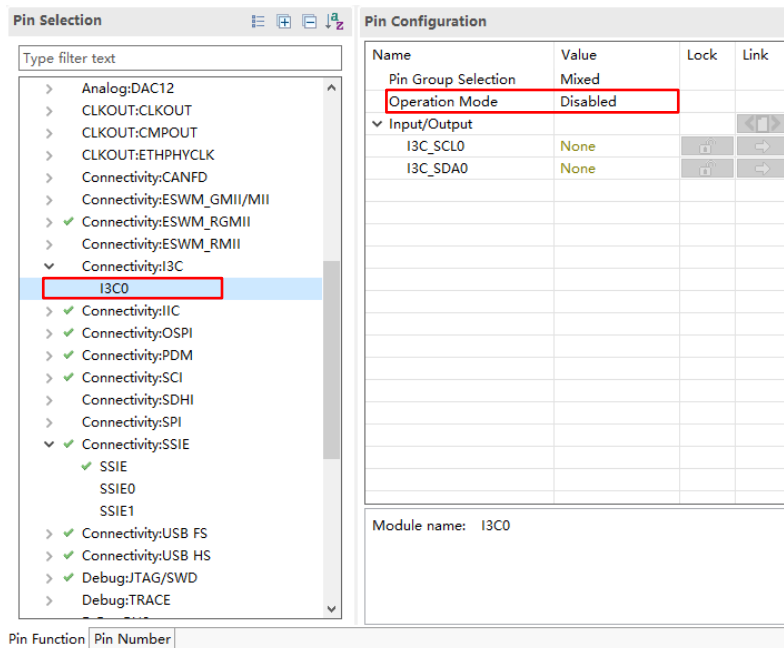


Figure 3-29 I3C0 Pin Configuration for Parallel Camera of EK-RA8P1

* Due to the conflict with CEU pin resources, the pins of I3C0 are not used.

2. Set the “Operation Mode” of “SSIE0” as “Disabled” in the Pins page of FSP Configuration. *

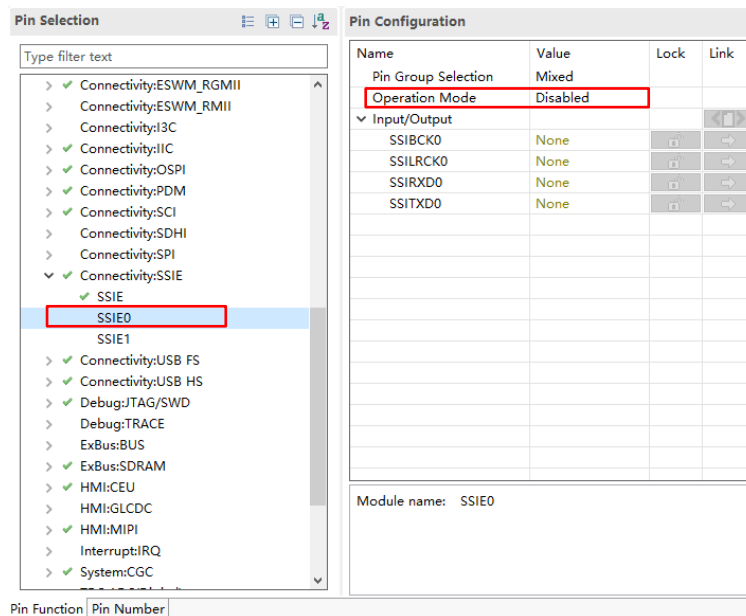


Figure 3-30 SSIE0 Pin Configuration for Parallel Camera of EK-RA8P1

* Due to the conflict with CEU pin resources, the pins of SSIE0 are not used.

- Set the “Operation Mode” of “GLCDC” as “Disabled” in the Pins page of FSP Configuration. *

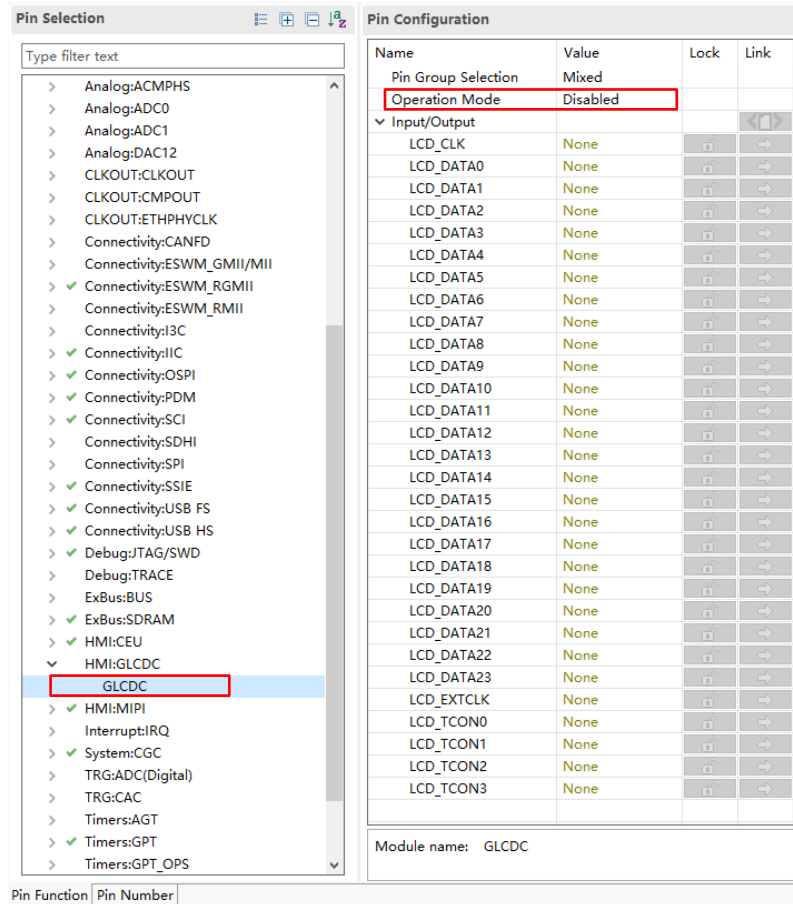


Figure 3-31 GLCDC Pin Configuration for Parallel Camera of EK-RA8P1

* Due to the conflict with CEU pin resources, the pins of GLCDC are not used.

- Set the pin configuration of “CEU” in the Pins page of FSP Configuration.

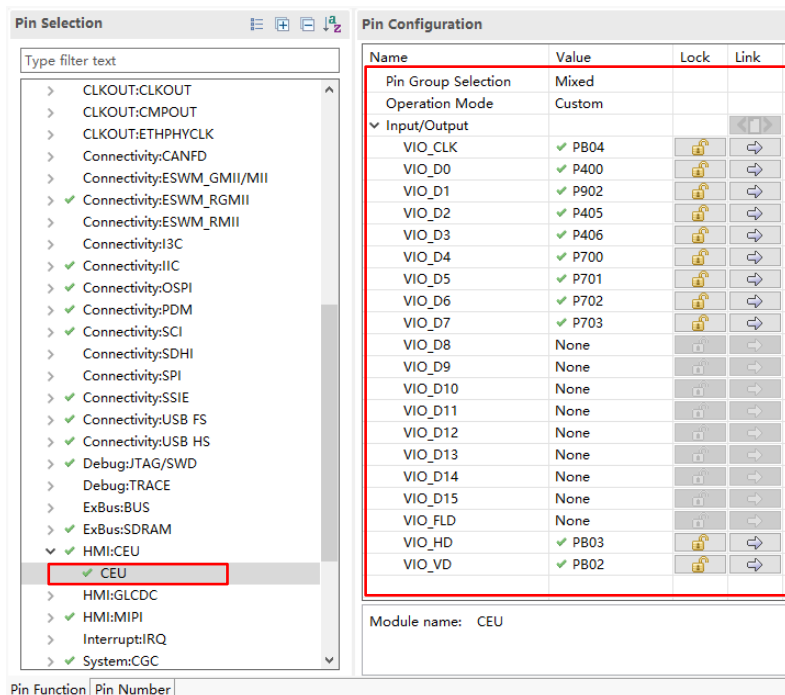


Figure 3-32 CEU Pin Configuration for Parallel Camera of EK-RA8P1

- Set the pin configuration of “IIC1” in the Pins page of FSP Configuration.

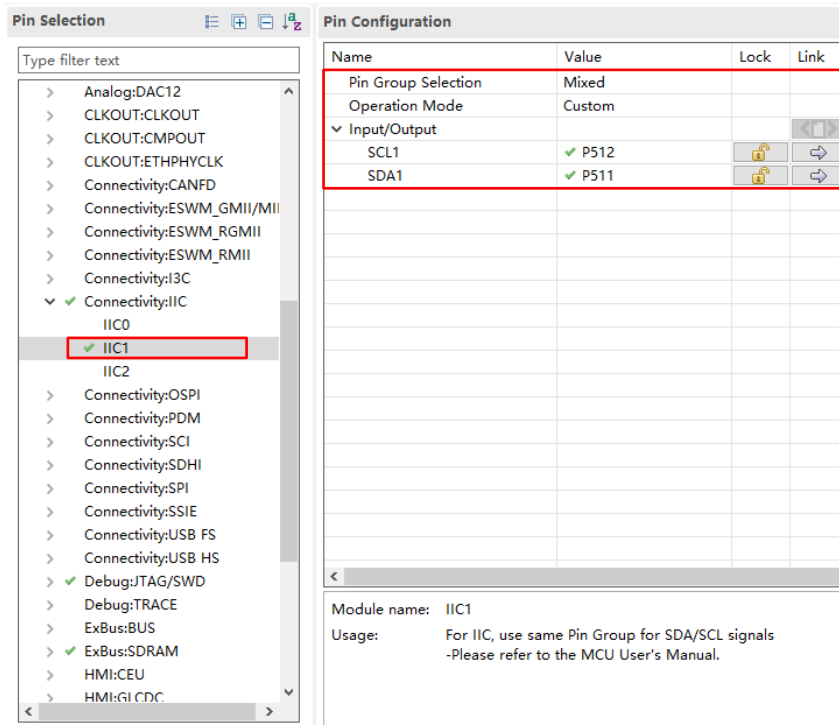


Figure 3-33 IIC1 Pin Configuration for Parallel Camera of EK-RA8P1

- Set the pin configuration of “GPT12” in the Pins page of FSP Configuration.

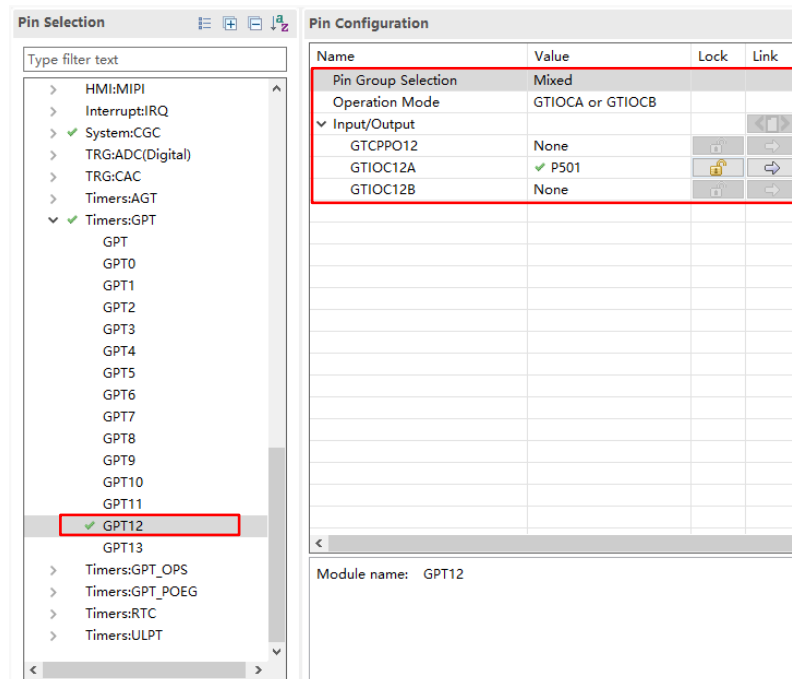


Figure 3-34 GPT12 Pin Configuration for parallel camera of EK-RA8P1

When using camera module with MIPI connection, you need to do the following pin configuration settings.

1. Set "P108" pin of "Ports" module as "Output mode (Initial High)" in the Pins page of FSP Configuration.

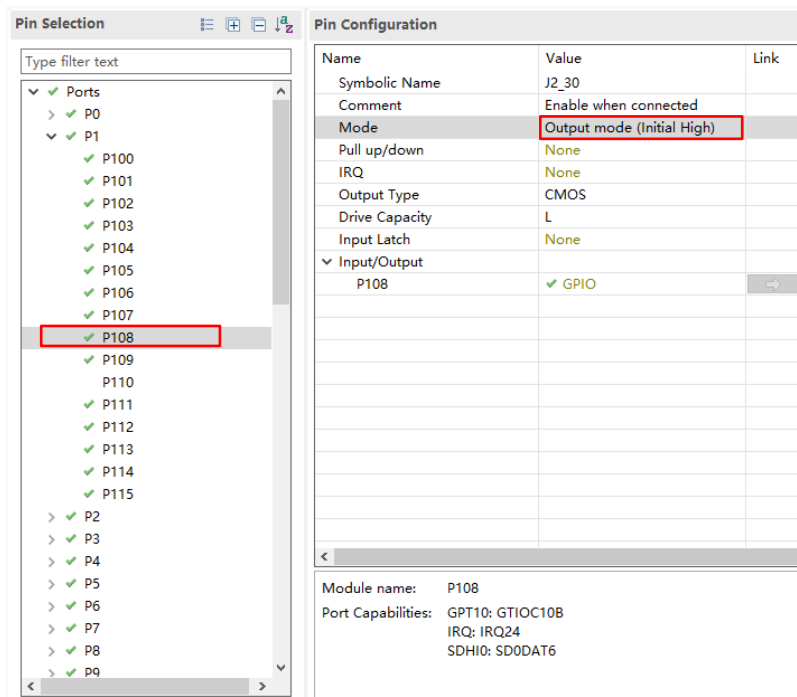


Figure 3-35 P108 Pin Configuration for MIPI camera of EK-RA8P1

2. Set the pin configuration of "IIC1" in the pin page of FSP Configuration

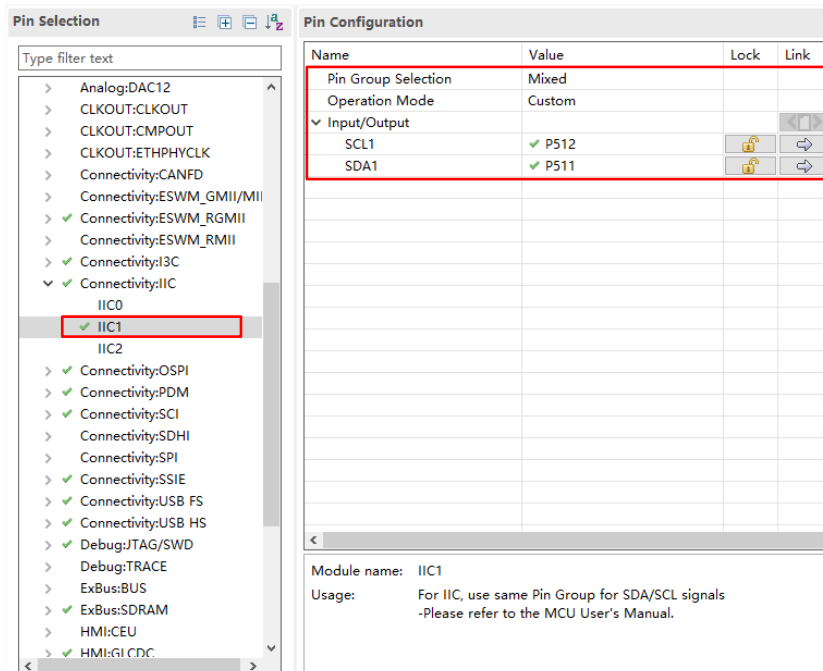


Figure 3-36 IIC1 Pin Configuration for MIPI camera of EK-RA8P1

3. Set the pin configuration of “GPT12” in the pin page of FSP Configuration

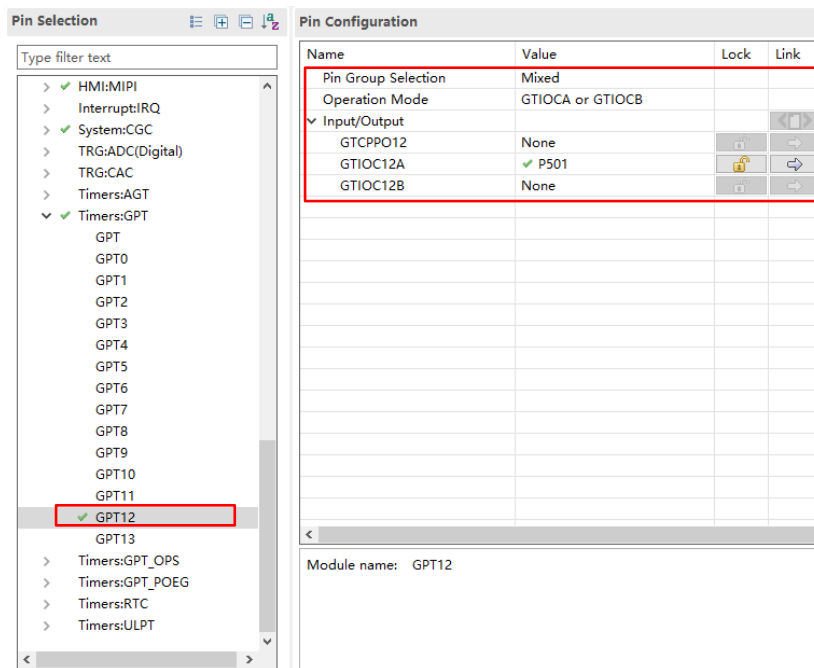


Figure 3-37 GPT12 Pin Configuration for MIPI camera of EK-RA8P1

3.1.17 Note on settings of captured image size

When using CEU to capture camera images, please set the captured image size according to the following table.

Evaluation Board	Use Case	Maximum Captured Image Size
EK-RA8D1	Only Use Camera Function	1280*960 pixels
	Use Display and Camera Function	480*852 pixels
EK-RA8D2	Only Use Camera Function	480*640 pixels
EK-RA8P1		

Table 3-1 CEU Maximum Captured Image Size

When using VIN to capture camera images, please set the captured image size according to the following table.

Evaluation Board	Use Case	Maximum Captured Image Size
EK-RA8D2	Only Use Camera Function	1024*600 pixels
EK-RA8P1	Use Display and Camera Function	1024*600 pixels

Table 3-2 VIN Maximum Captured Image Size

3.1.18 Note on real-time adjustment settings for parallel camera (EK-RA8D1 board setting)

When selecting the “Use Display and Camera Function” use case, please make the following settings in “Graphic Layer Setting”.

- Please use “Graphic Layer1” to make real time adjustments to the captured image.
- Set the value of "Width of Image Data" of “Graphic Layer1 Setting” to be no less than the width of the captured image.
- Set the selection of “Output Data Format” of “Graphic Layer1 Setting” as “RGB888 (GLCDC_IN_FORMAT_32BITS_RGB888)”.

3.1.19 Note on real-time adjustment settings for using MIPI camera (EK-RA8P1 and EK-RA8D2 board setting)

When selecting the “Only Use Camera Function” use case, please pay attention to the following settings.

- Please set the “HCW [pixel]” value according to the unit required by the image format of the actual VIN output.

Table 68.6 Image stride setting unit

Output format	Setting unit (pixel)	In Image Stride Bytes per pixel
YCbCr422 8 bit	64	2
YCbCr422 10 bit	32	4
YC separation YCbCr422 Y (8 bit)/C (8 bit)	128	Y:1 C:1
YC separation YCbCr422 Y (10 bit)/C (10 bit)	64	Y:2 C:2
YC separation YCbCr422 Y (10 bit)/C (8 bit)	128	Y:2 C:1
RGB565	64	2
ARGB1555	64	2
RGB888	32	4
ARGB8888	32	4
RAW8 ¹⁾	64	2

Note 1. RAW8 output is 1 byte/pixel, but the image stride is the number of pixels set in this bit × 2 bytes.

Figure 3-38 Image Stride Setting Unit

When selecting the “Use Display and Camera Function” use case, please pay attention to the following settings.

- Please use “Graphic Layer1” to make real time adjustments to the captured image.
- Set the “Output Data Format” in “Graphic Layer1 Setting” to match the image format VIN stores in memory.
- Set the "Width of Image Data" in “Graphic Layer1 Setting” to match the width of the image VIN stores in memory.
- Please set the "Width of Image Data" in “Graphic Layer1 Setting” value according to the unit required by the image format of the actual VIN output.
- When VIN outputs ARGB8888-32Bits or RGB888-32Bits format images, if the image on the LCD flickers severely, please adjust the "Panel Clock Frequency [MHz]" value in the "Timing Adjustment (LCD)" tab to a lower value. (You can choose 16.666666MHz)

3.1.20 Note on opening adjustment view

When creating an RA device project using QE for Display[RX,RA] V3.5.0, QE for Camera[RA] V1.0.0 or later, the adjustment view will not be displayed even if the “r_glcdc” component is selected. The “Display User Interface Application” component needs to be added to open adjustment view.

3.1.21 Note on changing board operation

To use a different evaluation board, it is advised not to change the board selection in FSP or Smart Configurator within the current project. Instead, please create a new project for the new target board.

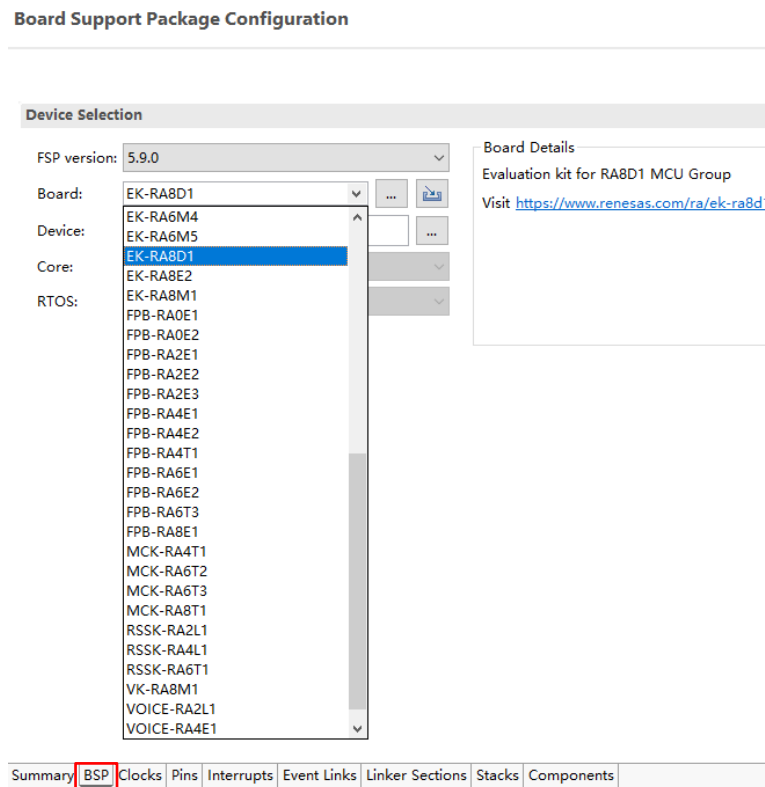


Figure 3-39 [Change Board] Operation in FSP

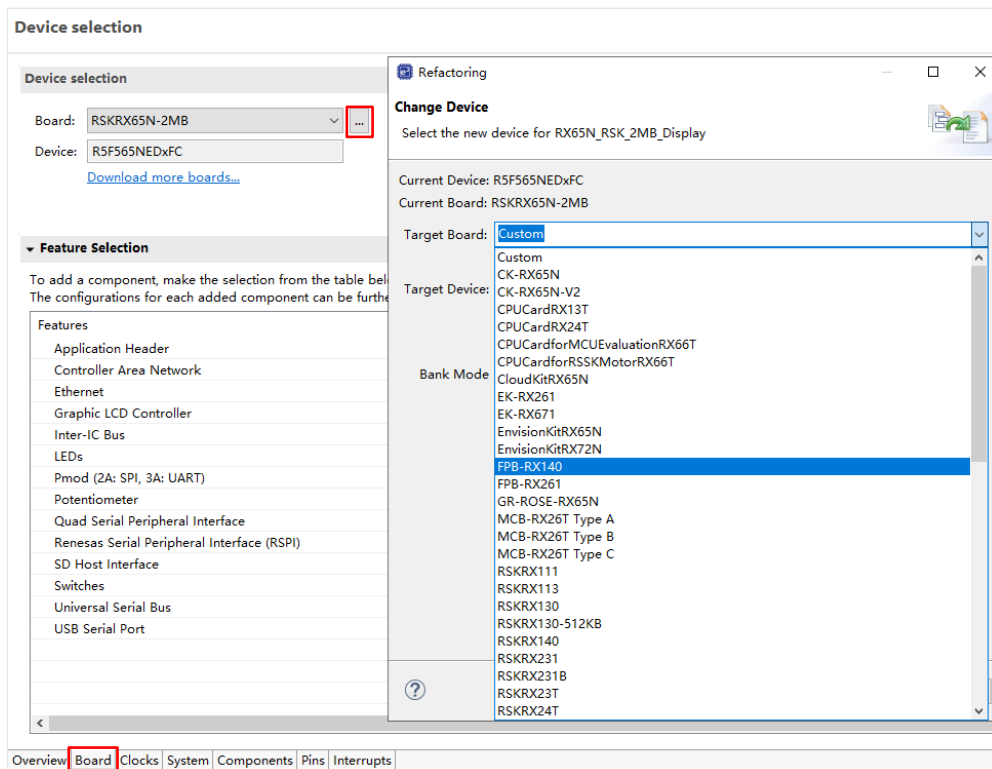


Figure 3-40 [Change Board] Operation in Smart Configurator

3.2 Functional Restrictions

There is no restriction in QE for Display[RX,RA] V3.7.0, QE for Camera[RA] V1.2.0.

Revision History

Rev.	Date	Description	
		Page	Summary
1.00	Oct.22.25	-	First edition issued.

General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

1. Precaution against Electrostatic Discharge (ESD)

A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity. Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.

2. Processing at power-on

The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.

3. Input of signal during power-off state

Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.

4. Handling of unused pins

Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.

5. Clock signals

After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.

6. Voltage application waveform at input pin

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between V_{IL} (Max.) and V_{IH} (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between V_{IL} (Max.) and V_{IH} (Min.).

7. Prohibition of access to reserved addresses

Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not guaranteed.

8. Differences between products

Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.
 - "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.
 - "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
8. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
13. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
14. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,
Koto-ku, Tokyo 135-0061, Japan
www.renesas.com

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:
www.renesas.com/contact/.